



USER'S MANUAL

ES10203 Shoe and Boot Dryer

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:


1. Read all instructions.
2. This appliance is designed for drying shoes that have gotten wet or that have been washed. Use a towel or cloth to absorb the excess water on the shoe surface before putting the shoes on the appliance.
Never use this appliance for drying items washed with any chemical ingredient.
3. If this appliance has a polarized plug (one blade is wider than the other), to reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
4. Do not turn on or leave on without shoe or boot in place.
5. Place the appliance on a solid, flat surface.
6. Keep the appliance away from other heater sources.
7. Keep air intake vents not to be blocked for proper circulation.
8. Minimum of 6-8 inches clearance from top of boot to base of the appliance.
9. To avoid electric shock, never immerse the shoe dryer, cord or plug in water or other liquid.
10. Never use damaged dryer, get it checked or repaired.
11. Never take apart the unit, it may cause injury, fire or malfunctions.
12. Don't use the appliance outdoors. Avoid moisture and water when using.
13. No use by children intended and not allowed at all.

Save These Instructions

> > Technical Data

110V~, 60Hz, 200W

Main Parts

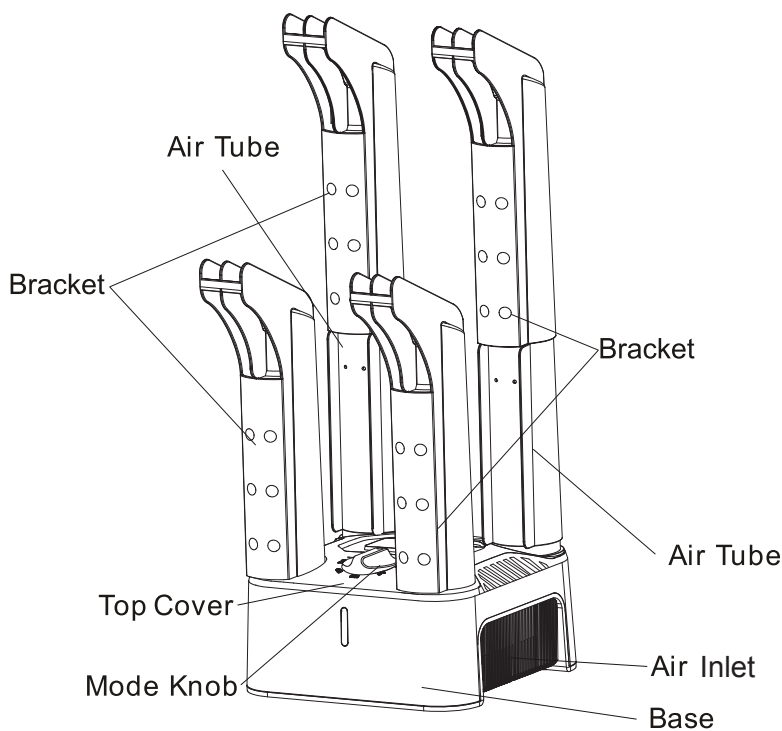


> > Recommended drying timer selection


Shoe Type	Recommended operating time (Minutes)	
	Washed shoe	Wet shoe
Leather	60	20
Sneaker	100	40
Boot	120	60

NOTE:

Mode selection and operation time are varied due to different sizes, materials and operation conditions. Monitor your shoes carefully to avoid any damage due to over-dry.

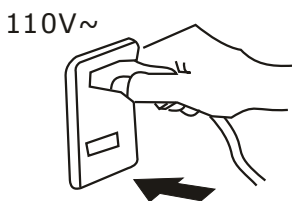

(Fig.1)

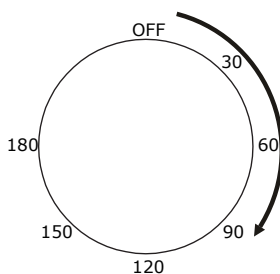

(Fig.2)

> > Operation

- Plug the power cord into an exact AC power outlet. (Fig.1)
- Rotate the knob clockwise, the appliance will work by timer of 30, 60, 90, 120, 150 or 180 minutes. (Fig.2)
- If the knob directs to OFF position, the appliance will stop.

> > Cleaning

- Turn off and unplug the unit.
- Mix one ounce of soap or detergent with five ounces of water and apply sparingly with a moist sponge to wipe the outer case surfaces.
- Do not allow any water to slip into the internal parts of the appliance as this could damage its functioning and may result in injury to you.
- Allow the unit to dry for at least 24 hours before resuming use.

> > Trouble Shooting Tips

If the product shuts off unexpectedly, safety features may have been activated to prevent damage or injury. If this happens:

- Be sure the product is plugged into a working electrical outlet;
- Check to be sure the air inlet grills are not blocked;
- Turn the knob to the OFF position, the appliance will stop.

NOTE:

Do not attempt to take apart the unit by yourself.

Doing so may cause damage to the product or personal injury.

EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

ES

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

PL

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

US office: Fontana

UK office: Ipswich

AU office: Truganina

DE office: FDS GmbH, Neuer Hölzigbaum 36, 22143 Hamburg, Deutschland

FR office: Saint Vigor d'Ymonville

PL office: Gdańsk