



**COSTWAY**



**Appliance Specifications:**

- KC52908US 120V 60Hz 250W
- Working Temperature: 130°C +/-10°C
- Stainless Steel Top Tray

**USER'S MANUAL**

**Food Warming Plate  
KC52908US**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Please give us a chance to make it right and do better!**

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

**Follow Costway**

Visit us: [www.costway.com](http://www.costway.com)



## FOR HOUSEHOLD USE ONLY

### PLEASE KEEP THIS INSTRUCTION MANUAL

Read the following instructions before using the electric warming plate

1. Never immerse the electrical base, plugs or power supply cord in water or other liquid.
2. Never leave the appliance unattended if used near children, The appliance should not be operated by children.
3. The handles and parts which are easy to touch may become hot, keep out of reach of children and use safety pot holders
4. Never use a scouring pad on the warming plate and never use an abrasive sponge or harsh cleaning products on the warming plate. Clean with a soft and wet rags.
5. Never use for anything other than what this item was intended for.
6. Do not place the appliance in dishwasher.
7. Do not insulate pots or food items with towels or rags.
8. Do not place the warming plate on a wet surface, near any flammable objects, hot gas, electric burner or in a heated oven.
9. Do not move the warming plate or touch while it is in use.
10. Do not operate the appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
11. The appliance is not designed to be used outdoors.

12.Unplug from outlet when not in use and before cleaning. Allow to cool before storing or handling.

13.The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

14.Do not let cord hang over edge of table or counter, or touch hot surfaces.

### **SAFETY INSTUCTIONS**

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. Longer detachable power-supply cord or extension cords are available and may be used if care is exercised in their use. If a longer detachable power-supply extension cord is used:

- The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.

- The cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

- Never pull or yank on cord or the appliance.

- To insert plug, grasp it firmly and guide it into outlet.

- To disconnect appliance, grasp plug and remove it from outlet

- Before each use, inspect the line cord for cuts and /or abrasion marks.if any are found, this indicates that the appliance should be serviced and the line cord replaced. Please return it to an authorized service representative.

- Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

**Welcome to visit our website and purchase our quality products!**

With your inspiring rating, COSTWAY will be more consistent to offer you  
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History

*5 Star Rating*



We would like to extend our heartfelt thanks to  
all of our customers for taking time to assemble  
this product and giving us valuable feedbacks.

THANK  
you  
😊