 


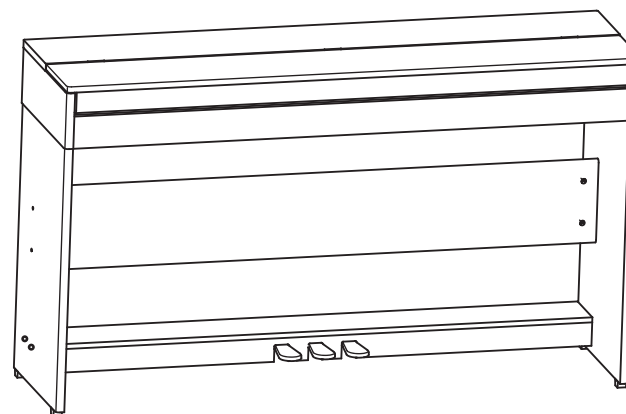

Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana **UK** office: Ipswich **AU** office: Truganina
DE office: Hamburg **FR** office: Saint Vigor d'Ymonville **PL** office: Gdańsk



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



US: cs.us@costway.com
UK: cs.uk@costway.com
AU: cs.au@costway.com

USER'S MANUAL

88-Key Digital Piano MU10082US

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

FEATURES

Thank you for choosing our digital piano. The digital piano is elegant and exquisite, and it is the perfect combination of the latest electronic technology.

◆ Before using this instrument, you must read the instructions in detail.

MULTIMEDIA MP3 PLAY

With MP3 multimedia playback functions providing full music entertainment.

SPECIAL REMINDER

Stay away from radio, TV, antenna receiver, router, refrigerator and all RF electrical interference sources such as motorized appliances.

PRODUCT CARE

Careful maintenance and protection of this product plays an important role in prolonging the service life of the product and reducing failure.

1. AVOID HEATING, DAMPNESS OR DIRECT SUNLIGHT

Do not over expose the product to direct sunlight, or place it near air conditioning or extremely hot place.

2. DO NOT USE NEAR THE TV OR RADIO.

This product may cause video or audio interference to the reception of TV and radio. If this happens, the product should be removed from the TV or radio.

 
3. NO PAINT, DILUENT OR SIMILAR CHEMICALS SHALL BE USED FOR CLEANING.

Clean the product with a soft cloth wetted with weak water solution and neutral detergent. Soak the cloth in a solution and wring it dry until it approaches drying.

4. DO NOT SHAKE, AVOID COLLISION

When moving, the product should be handled carefully and lightly. Violent vibration and collision are strictly prohibited in order to avoid damage to the shell or internal electronic components.

JACK SOCKET

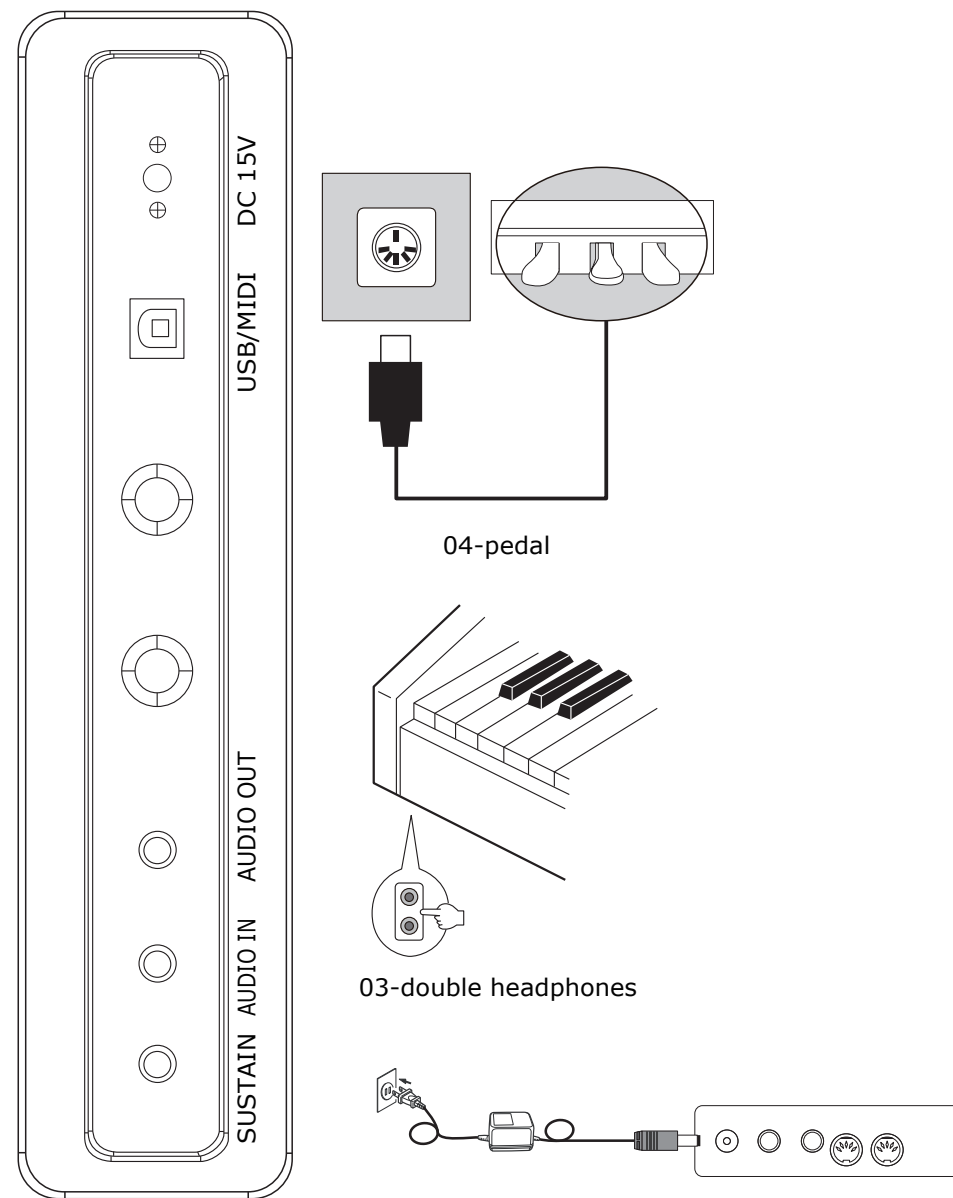

1. POWER LINE CONNECTION

1. When used according to the access power line, one end is inserted into the socket at the bottom of the piano operation plate. The other end is inserted into the 110V household power socket.
2. If you do not use this product for a long time, unplug the power cord and keep it properly.

2. AUDIO INPUT/OUTPUT PLUG

1. The audio output socket can be connected to large sound box equipment.
2. The audio input socket connects the external sound source to the electric piano for playback.

3. MIDI INPUT AND OUTPUT SOCKET

The MIDI interface of this digital piano can be connected to music equipment with MIDI.

4. USB TRANSPORT INTERFACE

Use the USB port of this digital piano to connect to a computer. Through pre-installed music software on the computer, you can play the keyboard to perform music performance, composition, editing, storage and other functions. The edited music and the built-in accompaniment of the music software can be connected to the digital piano through the software for playback, or play according to the accompaniment music.

 
5. DOUBLE HEADSET SOCKET

Connecting the headset will automatically cut off the output of the built-in loudspeaker, so it won't disturb others when playing *This product has two headphone sockets, which can be inserted two headphones at the same time.

6. PEDAL SOCKET

Insert the end of the pedal line into the circular socket on the bottom of the piano, and you can connect the 3 pedal sound effects, in turn, weak tone, posterior extension and portamento.

INSTALLATION

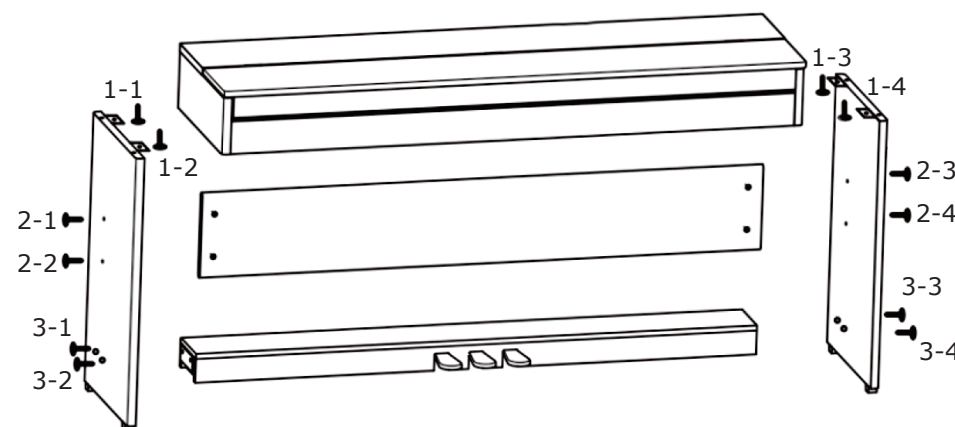


1-1 to 1-4 plastic handle screws M6X25(4)

2-1 to 2-4 tips M5x60(4)

3-1 to 3-4 M6X60(4)



 OPERATION GUIDE

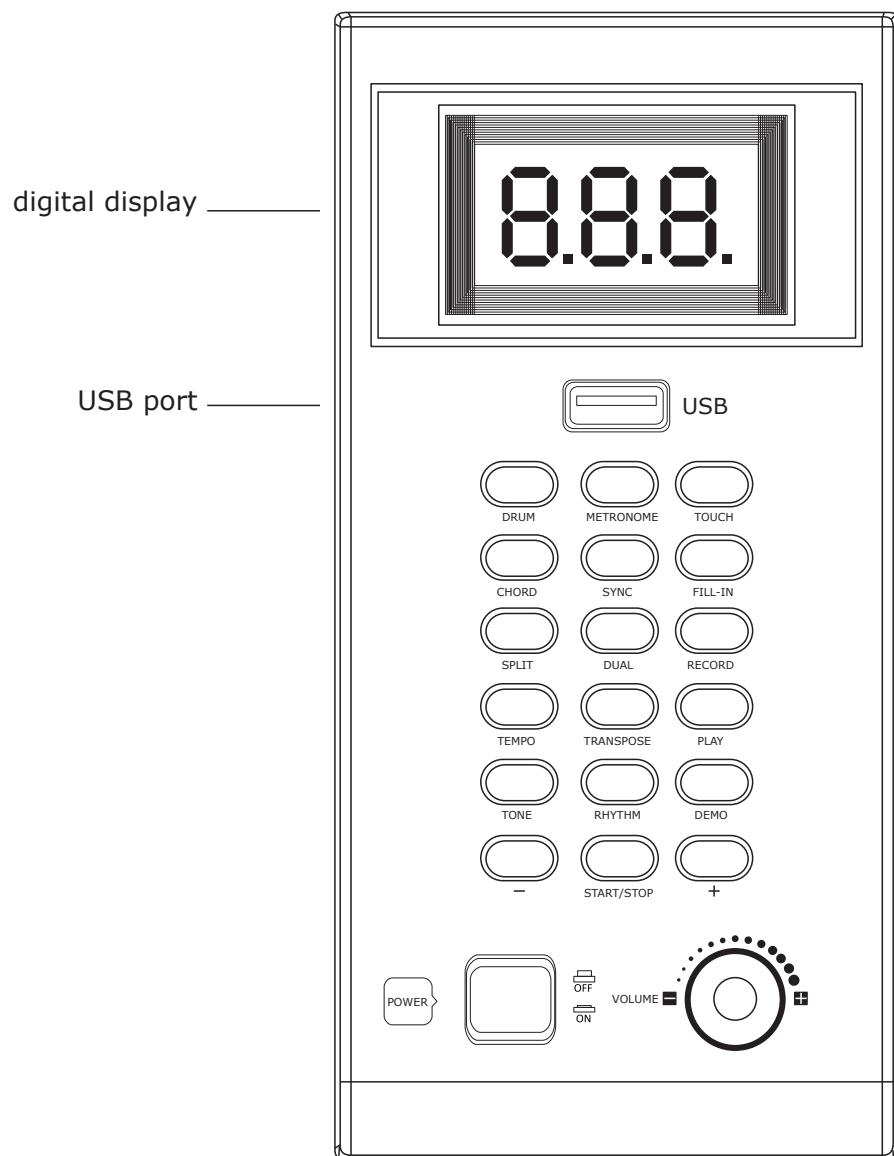

Function Panel

Basic operation

Preparatory work

This section introduces you to the basic operating knowledge of digital piano

How to play

1. switch the "power supply" switch to the on state, the display screen is lit up, and enter the normal playing state.
2. adjust the volume potentiometer and adjust the volume to the appropriate position.
3. play music on the keyboard.

The choice of timbre

There are 800 timbres in this product (see TONE list).

Please follow the following steps to select the desired timbre

How to select tone color

1. Find the TONE you need in the timbre list and remember its timbre number.
2. Press the tone key to enter timbre mode.
3. Select the desired timbre by selecting the "+" / "-" key, the timbre number is (001-800).

The convenience of chord accompaniment

The following steps describe how to use the chord functionality of this product. Before you begin, you should first select the rhythm you want to use and set the speed value.

Automatic accompaniment

The choice of rhythm

 
This product has 600 built-in rhythms (see the RHYTHM list), please follow the steps below to select the desired rhythm.

How to choose rhythm

1. Press the rhythm key to enter the rhythm mode.
2. Select the desired rhythm by selecting the "+" / "-" key, the rhythm number is (001-600).
3. Press the "start / stop" key to start playing the rhythm.
4. To stop the rhythm to play, and then press the "start / stop" key.

Synthetic chord accompaniment

1. Press the start / stop button to start broadcasting the currently selected rhythm.
2. Press the "chord" button to enter the chord state. If the chord mode of single multi-finger reuse conforms to the multi-finger chord playing method, the piano responds to the multi-finger chord; where the single-finger chord method is not in accordance with the multiple-finger chord method, the response is recognized according to the single-finger chord.
3. To play a chord, press different fingerings to perform different performances on the accompaniment keyboard (1-22 keys from the left).
4. Press the "chord" button again to turn off the chord state.

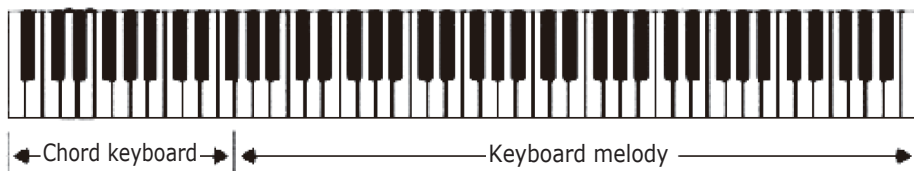

Synchronous start

You can set this product to start playing rhythmically while you play accompaniment on the keyboard. The following steps describe how to use synchronous startup.

Before you begin, you should first select the rhythm to use, set the speed value, and select the chord accompaniment.

Using synchronous startup

1. In the chord state, press the synchronize button to enter the synchronous start standby state.
2. When you play the chord, the accompaniment will automatically start broadcasting.
3. To cancel synchronization, press the start / stop button.

Use of Music Library

The built-in music library of this product contains 80 pieces of music (see list of demonstration songs), and the built-in music is used for playback and appreciation.

The playing of music in a library

1. find the music to be played in the library list and record its number.
2. press the key of "DEMO" to enter the mode of demonstration song.
3. select the song by selecting the "+" "-" key Number (01-80)
4. Press the DEMO key or start / stop the key to stop playing to exit this mode.

The music will continue to play in order until you stop it.

The use of keyboard strength tactile function

When the keyboard of this product is opened for the strength tactile keyboard "strength" function, the relative volume of the electronic output music will vary according to the intensity that the keyboard is pressed, and can play music with different volume and different feelings.

1. press the strength TOUCH button, and the strength touch function is activated.
2. press "TOUCH" again and turn off the tactile function.

When booting, it is automatically in the state of starting the strength tactile function.

The use of keyboard Drum instrument function

Press the "Drum" button, switch the keyboard of the digital piano to the drum key board, press the DRUM button again, and turn off the function.

The use of Dual Voice function

 
When using the Dual Voice function to play the keyboard, you can emit two different timbres at the same time, showing the resonance effect of the two musical instruments.

How to use Dual Voice function

1. first enter the timbre mode, choose a musical instrument as the main timbre.
2. press the "DUAL" button to enter the second timbre selection mode.
3. use the "+/-" button to select a musical instrument as the second timbre.

The use of keyboard split function

Using the keyboard split function, you can assign two different timbre (main tone and split tone) to both ends of the keyboard, so that you can play one timbre with your left hand and another with your right hand to play an ensemble effect.

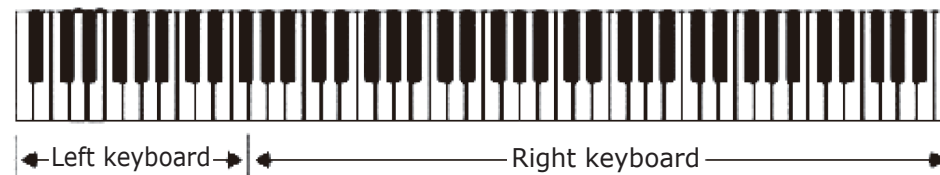

Use of metronome function

Press the "metronome" button, the metronome function is activated, you can follow the beat sound to play. Press the metronome button again, and the metronome function is turned off.

Please use the "Tempo" button and "+/-" button to set the speed.

Recording

1. Press the recording key to enter recording mode.
2. The maximum number of recordings is 585, and when the recording is full, there will be no room for new recording.
3. Each time you press this key, you erase the last memory, and re-enter recording mode.

Play sound

1. Press the PLAY key to play the recorded notes and drums, and play them in the timbre selected for the recording at that time
2. Press the PLAY key, and if there is no previous memory value, no action occurs.

Transpose effect control

1. Press the "Transpose" key to enter the transposition control mode, and then press the "+" and "-" keys to set the range of transposition.
2. There are 25 segments (-12-12) for the transposition control, and the power-on preset value is in the seventh segment.
3. In the transposition mode, press the "+" and "-" keys for more than one second to continuously increase/decrease the transposition.

MP3 function

1. Connect to the U disk and go directly into MP3 mode.
2. Select songs from MP3. Press the "+" "-" key to select the song.
3. Press the start / stop key to start and pause playback.

APPENDIX

TONE

T001	Acoustic Grand Piano	T012	Vibraphone
T002	Bright Acoustic Piano	T013	Marimba
T003	Electric Grand Piano	TOM	Xylophone
T004	Honky-tonk Piano	T015	Tubular Bell
T005	Rhodes Piano	T016	Dulcimer
T006	Chorused Piano	T017	Drawbar Organ
T007	Harpsichord	T018	Percussive Organ
T008	Clavichord	T019	Rock Organ
T009	Celesta	T020	Church Organ
T010	Glockenspiel	T021	Reed Organ
T011	Music box	T022	Accordion

T023	Harmonica	T052	Synth Strings 2
T024	Tango Accordion	T053	Choir Aahs
T025	Acoustic Guitar (nylon)	T054	Voice Oohs
T026	Acoustic Guitar (steel)	T055	Synth Voice
T027	Electric Guitar (jazz)	T056	Orchestra Hit
T028	Electric Guitar (clean)	T057	Trumpet
T029	Electric Guitar (muted)	T058	Trombone
T030	Overdriven Guitar	T059	Tuba
T031	Distortion Guitar	T060	Muted Trumpet
T032	Guitar Harmonics	T061	French Horn
T033	Acoustic Bass	T062	Brass Section
T034	Electric Bass(finger)	T063	Synth Brass 1
T035	Electric Bass (pick)	T064	Synth Brass 2
T036	Fretless Bass	T065	Soprano Sax
T037	Slap Bass 1	T066	Alto Sax
T038	Slap Bass 2	T067	Tenor Sax
T039	Synth Bass 1	T068	Baritone Sax
T040	Synth Bass 2	T069	Oboe
T041	Violin	T070	English Horn
T042	Viola	T071	Bassoon
T043	Cello	T072	Clarinet
T044	Contrabass	T073	Piccolo
T045	Tremolo Strings	T074	Flute
T046	Pizzicato Strings	T075	Recorder
T047	Orchestral Harp	T076	Pan Flute
T048	Timpani	T077	Bottle Blow
T049	String Ensemble 1	T078	Shakuhachi
T050	String Ensemble 2	T079	Whistle
T051	Synth Strings 1	T080	Ocarina

T081	Lead 1 (square)	T110	Bagpipe
T082	Lead 2 (sawtooth)	T111	Fiddle
T083	Lead 3 (calliope lead)	T112	Shanai
T084	Lead 4 (chiff lead)	T113	Tinkle Bell
T085	Lead 5 (charang)	T114	Agogo
T086	Lead 6 (voice)	T115	Steel Drums
T087	Lead 7 (fifths)	T116	Woodblock
T088	Lead 8 (bass+lead)	T117	Taiko Drum
T089	Pad 1 (new age)	T118	Melodic Tom
T090	Pad 2 (warm)	T119	Synth Drum
T091	Pad 3 (polysynth)	T120	Reverse Cymbal
T092	Pad 4 (choir)	T121	Guitar Fret Noise
T093	Pad 5 (bowed)	T122	Breath Noise
T094	Pad 6 (metallic)	T123	Seashore
T095	Pad 7 (halo)	T124	Bird Tweet
T096	Pad 8 (sweep)	T125	Telephone Ring
T097	FX 1 (rain)	T126	Helicopter
T098	FX 2 (soundtrack)	T127	Applause
T099	FX 3 (crystal)	T128	Gunshot
T100	FX 4 (atmosphere)	T129	Acoustic Grand Piano 1
T101	FX 5 (brightness)	T130	Bright Acoustic Piano 1
T102	FX 6 (goblins)	T131	Electric Grand Piano 1
T103	FX 7 (echoes)	T132	Honky-tonk Piano 1
T104	FX 8 (sci-fi)	T133	Rhodes Piano 1
T105	Sitar	T134	Chorused Piano 1
T106	Banjo	T135	Harpsichord 1
T107	Shamisen	T136	Clavichord 1
T108	Koto	T137	Celesta 1
T109	Kalimba	T138	Glockenspiel 1

T139	Music box 1	T168	Synth Bass 4
T140	Vibraphone 1	T169	Violin 1
T141	Marimba 1	T170	Viola 1
T142	Xylophone 1	T171	Cello 1
T143	Tubular Bell 1	T172	Contrabass 1
T144	Dulcimer 1	T173	Tremolo Strings 1
T145	Drawbar Organ 1	T174	Pizzicato Strings 1
T146	Percussive Organ 1	T175	Orchestral Harp 1
T147	Rock Organ 1	T176	Timpani 1
T148	Church Organ 1	T177	String Ensemble 3
T149	Reed Organ 1	T178	String Ensemble 4
T150	Accordion 1	T179	Synth Strings 3
T151	Harmonica 1	T180	Synth Strings 4
T152	Tango Accordion 1	T181	Choir Aahs 1
T153	Acoustic Guitar (nylon) 1	T182	Voice Oohs 1
T154	Acoustic Guitar (steel) 1	T183	Synth Voice 1
T155	Electric Guitar (jazz) 1	T184	Orchestra Hit 1
T156	Electric Guitar (clean) 1	T185	Trumpet 1
T157	Electric Guitar (muted) 1	T186	Trombone 1
T158	Overdriven Guitar 1	T187	Tuba 1
T159	Distortion Guitar 1	T188	Muted Trumpet 1
T160	Guitar Harmonics 1	T189	French Horn 1
T161	Acoustic Bass 1	T190	Brass Section 1
T162	Electric Bass(finger) 1	T191	Synth Brass 3
T163	Electric Bass (pick) 1	T192	Synth Brass 4
T164	Fretless Bass 1	T193	Soprano Sax 1
T165	Slap Bass 3	T194	Alto Sax 1
T166	Slap Bass 4	T195	Tenor Sax 1
T167	Synth Bass 3	T196	Baritone Sax 1

T197	Oboe 1	T226	FX 2 (soundtrack 1)
T198	English Horn 1	T227	FX 3 (crystal 1)
T199	Bassoon 1	T228	FX 4 (atmosphere 1)
T200	Clarinet 1	T229	FX 5 (brightness 1)
T201	Piccolo 1	T230	FX 6 (goblins 1)
T202	Flute 1	T231	FX 7 (echoes 1)
T203	Recorder 1	T232	FX 8 (sci-fi 1)
T204	Pan Flute 1	T233	Sitar 1
T205	Bottle Blow 1	T234	Banjo 1
T206	Shakuhachi 1	T235	Shamisen 1
T207	Whistle 1	T236	Koto 1
T208	Ocarina 1	T237	Kalimba 1
T209	Lead 1 (square 1)	T238	Bagpipe 1
T210	Lead 2 (sawtooth 1)	T239	Fiddle 1
T211	Lead 3 (calliope lead 1)	T240	Shanai 1
T212	Lead 4 (chiff lead 1)	T241	Tinkle Bell 1
T213	Lead 5 (charang 1)	T242	Agogo 1
T214	Lead 6 (voice 1)	T243	Steel Drums 1
T215	Lead 7 (fifths 1)	T244	Woodblock 1
T216	Lead 8 (bass+lead 1)	T245	Taiko Drum 1
T217	Pad 1 (new age 1)	T246	Melodic Tom 1
T218	Pad 2 (warm 1)	T247	Synth Drum 1
T219	Pad 3 (polysynth 1)	T248	Reverse Cymbal 1
T220	Pad 4 (choir 1)	T249	Guitar Fret Noise 1
T221	Pad 5 (bowed 1)	T250	Breath Noise 1
T222	Pad 6 (metallic 1)	T251	Seashore 1
T223	Pad 7 (halo 1)	T252	Bird Tweet 1
T224	Pad 8 (sweep 1)	T253	Telephone Ring 1
T225	FX 1 (rain 1)	T254	Helicopter 1

T255	Applause 1	T284	Electric Guitar (clean) 2
T256	Gunshot 1	T285	Electric Guitar (muted) 2
T257	Acoustic Grand Piano 2	T286	Overdriven Guitar 2
T258	Bright Acoustic Piano 2	T287	Distortion Guitar 2
T259	Electric Grand Piano 2	T288	Guitar Harmonics 2
T260	Honky-tonk Piano 2	T289	Acoustic Bass 2
T261	Rhodes Piano 2	T290	Electric Bass(finger) 2
T262	Chorused Piano 2	T291	Electric Bass (pick) 2
T263	Harpsichord 2	T292	Fretless Bass 2
T264	Clavichord 2	T293	Slap Bass 5
T265	Celesta 2	T294	Slap Bass 6
T266	Glockenspiel 2	T295	Synth Bass 5
T267	Music box 2	T296	Synth Bass 6
T268	Vibraphone 2	T297	Violin 2
T269	Marimba 2	T298	Viola 2
T270	Xylophone 2	T299	Cello 2
T271	Tubular Bell 2	T300	Contrabass 2
T272	Dulcimer 2	T301	Tremolo Strings 2
T273	Drawbar Organ 2	T302	Pizzicato Strings 2
T274	Percussive Organ 2	T303	Orchestral Harp 2
T275	Rock Organ 2	T304	Timpani 2
T276	Church Organ 2	T305	String Ensemble 5
T277	Reed Organ 2	T306	String Ensemble 6
T278	Accordion 2	T307	Synth Strings 5
T279	Harmonica 2	T308	Synth Strings 6
T280	Tango Accordion 2	T309	Choir Aahs 2
T281	Acoustic Guitar (nylon) 2	T310	Voice Oohs 2
T282	Acoustic Guitar (steel) 2	T311	Synth Voice 2
T283	Electric Guitar (jazz) 2	T312	Orchestra Hit 2

T313 Trumpet 2
 T314 Trombone 2
 T315 Tuba 2
 T316 Muted Trumpet 2
 T317 French Horn 2
 T318 Brass Section 2
 T319 Synth Brass 5
 T320 Synth Brass 6
 T321 Soprano Sax 2
 T322 Alto Sax 2
 T323 Tenor Sax 2
 T324 Baritone Sax 2
 T325 Oboe 2
 T326 English Horn 2
 T327 Bassoon 2
 T328 Clarinet 2
 T329 Piccolo 2
 T330 Flute 2
 T331 Recorder 2
 T332 Pan Flute 2
 T333 Bottle Blow 2
 T334 Shakuhachi 2
 T335 Whistle 2
 T336 Ocarina 2
 T337 Lead 1 (square 2)
 T338 Lead 2 (sawtooth 2)
 T339 Lead 3 (calliope lead 2)
 T340 Lead 4 (chiff lead 2)
 T341 Lead 5 (charang 2)

T342 Lead 6 (voice 2)
 T343 Lead 7 (fifths 2)
 T344 Lead 8 (bass+lead 2)
 T345 Pad 1 (new age 2)
 T346 Pad 2 (warm 2)
 T347 Pad 3 (polysynth 2)
 T348 Pad 4 (choir 2)
 T349 Pad 5 (bowed 2)
 T350 Pad 6 (metallic 2)
 T351 Pad 7 (halo 2)
 T352 Pad 8 (sweep 2)
 T353 FX 1 (rain 2)
 T354 FX 2 (soundtrack 2)
 T355 FX 3 (crystal 2)
 T356 FX 4 (atmosphere 2)
 T357 FX 5 (brightness 2)
 T358 FX 6 (goblins 2)
 T359 FX 7 (echoes 2)
 T360 FX 8 (sci-fi 2)
 T361 Sitar 2
 T362 Banjo 2
 T363 Shamisen 2
 T364 Koto 2
 T365 Kalimba 2
 T366 Bagpipe 2
 T367 Fiddle 2
 T368 Shanai 2
 T369 Tinkle Bell 2
 T370 Agogo 2

T371 Steel Drums 2
 T372 Woodblock 2
 T373 Taiko Drum 2
 T374 Melodic Tom 2
 T375 Synth Drum 2
 T376 Reverse Cymbal 2
 T377 Guitar Fret Noise 2
 T378 Breath Noise 2
 T379 Seashore 2
 T380 Bird Tweet 2
 T381 Telephone Ring 2
 T382 Helicopter 2
 T383 Applause 2
 T384 Gunshot 2
 T385 Acoustic Grand Piano 3
 T386 Bright Acoustic Piano 3
 T387 Electric Grand Piano 3
 T388 Honky-tonk Piano 3
 T389 Rhodes Piano 3
 T390 Chorused Piano 3
 T391 Harpsichord 3
 T392 Clavichord 3
 T393 Celesta 3
 T394 Glockenspiel 3
 T395 Music box 3
 T396 Vibraphone 3
 T397 Marimba 3
 T398 Xylophone 3
 T399 Tubular Bell 3

T400 Dulcimer 3
 T401 Drawbar Organ 3
 T402 Percussive Organ 3
 T403 Rock Organ 3
 T404 Church Organ 3
 T405 Reed Organ 3
 T406 Accordion 3
 T407 Harmonica 3
 T408 Tango Accordion 3
 T409 Acoustic Guitar (nylon) 3
 T410 Acoustic Guitar (steel) 3
 T411 Electric Guitar (jazz) 3
 T412 Electric Guitar (clean) 3
 T413 Electric Guitar (muted) 3
 T414 Overdriven Guitar 3
 T415 Distortion Guitar 3
 T416 Guitar Harmonics 3
 T417 Acoustic Bass 3
 T418 Electric Bass(finger) 3
 T419 Electric Bass (pick) 3
 T420 Fretless Bass 3
 T421 Slap Bass 7
 T422 Slap Bass 8
 T423 Synth Bass 7
 T424 Synth Bass 8
 T425 Violin 3
 T426 Viola 3
 T427 Cello 3
 T428 Contrabass 3

T429 Tremolo Strings 3
 T430 Pizzicato Strings 3
 T431 Orchestral Harp 3
 T432 Timpani 3
 T433 String Ensemble 7
 T434 String Ensemble 8
 T435 Synth Strings 7
 T436 Synth Strings 8
 T437 Choir Aahs 3
 T438 Voice Oohs 3
 T439 Synth Voice 3
 T440 Orchestra Hit 3
 T441 Trumpet 3
 T442 Trombone 3
 T443 Tuba 3
 T444 Muted Trumpet 3
 T445 French Horn 3
 T446 Brass Section 3
 T447 Synth Brass 7
 T448 Synth Brass 8
 T449 Soprano Sax 3
 T450 Alto Sax 3
 T451 Tenor Sax 3
 T452 Baritone Sax 3
 T453 Oboe 3
 T454 English Horn 3
 T455 Bassoon 3
 T456 Clarinet 3
 T457 Piccolo 3

T458 Flute 3
 T459 Recorder 3
 T460 Pan Flute 3
 T461 Bottle Blow 3
 T462 Shakuhachi 3
 T463 Whistle 3
 T464 Ocarina 3
 T465 Lead 1 (square 3)
 T466 Lead 2 (sawtooth 3)
 T467 Lead 3 (calliope lead 3)
 T468 Lead 4 (chiff lead 3)
 T469 Lead 5 (charang 3)
 T470 Lead 6 (voice 3)
 T471 Lead 7 (fifths 3)
 T472 Lead 8 (bass+lead 3)
 T473 Pad 1 (new age 3)
 T474 Pad 2 (warm 3)
 T475 Pad 3 (polysynth 3)
 T476 Pad 4 (choir 3)
 T477 Pad 5 (bowed 3)
 T478 Pad 6 (metallic 3)
 T479 Pad 7 (halo 3)
 T480 Pad 8 (sweep 3)
 T481 FX 1 (rain 3)
 T482 FX 2 (soundtrack 3)
 T483 FX 3 (crystal 3)
 T484 FX 4 (atmosphere 3)
 T485 FX 5 (brightness 3)
 T486 FX 6 (goblins 3)

T487 FX 7 (echoes 3)
 T488 FX 8 (sci-fi 3)
 T489 Sitar 3
 T490 Banjo 3
 T491 Shamisen 3
 T492 Koto 3
 T493 Kalimba 3
 T494 Bagpipe 3
 T495 Fiddle 3
 T496 Shanai 3
 T497 Tinkle Bell 3
 T498 Agogo 3
 T499 Steel Drums 3
 T500 Woodblock 3
 T501 Taiko Drum 3
 T502 Melodic Tom 3
 T503 Synth Drum 3
 T504 Reverse Cymbal 3
 T505 Guitar Fret Noise 3
 T506 Breath Noise 3
 T507 Seashore 3
 T508 Bird Tweet 3
 T509 Telephone Ring 3
 T510 Helicopter 3
 T511 Applause 3
 T512 Gunshot 3
 T513 Acoustic Grand Piano 4
 T514 Bright Acoustic Piano 4
 T515 Electric Grand Piano 4

T516 Honky-tonk Piano 4
 T517 Rhodes Piano 4
 T518 Chorused Piano 4
 T519 Harpsichord 4
 T520 Clavichord 4
 T521 Celesta 4
 T522 Glockenspiel 4
 T523 Music box 4
 T524 Vibraphone 4
 T525 Marimba 4
 T526 Xylophone 4
 T527 Tubular Bell 4
 T528 Dulcimer 4
 T529 Drawbar Organ 4
 T530 Percussive Organ 4
 T531 Rock Organ 4
 T532 Church Organ 4
 T533 Reed Organ 4
 T534 Accordion 4
 T535 Harmonica 4
 T536 Tango Accordion 4
 T537 Acoustic Guitar (nylon) 4
 T538 Acoustic Guitar (steel) 4
 T539 Electric Guitar (jazz) 4
 T540 Electric Guitar (clean) 4
 T541 Electric Guitar (muted) 4
 T542 Overdriven Guitar 4
 T543 Distortion Guitar 4
 T544 Guitar Harmonics 4

T545	Acoustic Bass 4	T574	Brass Section 4
T546	Electric Bass(finger) 4	T575	Synth Brass 9
T547	Electric Bass (pick) 4	T576	Synth Brass 10
T548	Fretless Bass 4	T577	Soprano Sax 4
T549	Slap Bass 9	T578	Alto Sax 4
T550	Slap Bass 10	T579	Tenor Sax 4
T551	Synth Bass 9	T580	Baritone Sax 4
T552	Synth Bass 10	T581	Oboe 4
T553	Violin 4	T582	English Horn 4
T554	Viola 4	T583	Bassoon 4
T555	Cello 4	T584	Clarinet 4
T556	Contrabass 4	T585	Piccolo 4
T557	Tremolo Strings 4	T586	Flute 4
T558	Pizzicato Strings 4	T587	Recorder 4
T559	Orchestral Harp 4	T588	Pan Flute 4
T560	Timpani 4	T589	Bottle Blow 4
T561	String Ensemble 9	T590	Shakuhachi 4
T562	String Ensemble 10	T591	Whistle 4
T563	Synth Strings 9	T592	Ocarina 4
T564	Synth Strings 10	T593	Lead 1 (square 4)
T565	Choir Aahs 4	T594	Lead 2 (sawtooth 4)
T566	Voice Oohs 4	T595	Lead 3 (calliope lead 4)
T567	Synth Voice 4	T596	Lead 4 (chiff lead 4)
T568	Orchestra Hit 4	T597	Lead 5 (charang 4)
T569	Trumpet 4	T598	Lead 6 (voice 4)
T570	Trombone 4	T599	Lead 7 (fifths 4)
T571	Tuba 4	T600	Lead 8 (bass+lead 4)
T572	Muted Trumpet 4	T601	Pad 1 (new age 4)
T573	French Horn 4	T602	Pad 2 (warm 4)

T603	Pad 3 (polysynth 4)	T632	Reverse Cymbal 4
T604	Pad 4 (choir 4)	T633	Guitar Fret Noise 4
T605	Pad 5 (bowed 4)	T634	Breath Noise 4
T606	Pad 6 (metallic 4)	T635	Seashore 4
T607	Pad 7 (halo 4)	T636	Bird Tweet 4
T608	Pad 8 (sweep 4)	T637	Telephone Ring 4
T609	FX 1 (rain 4)	T638	Helicopter 4
T610	FX 2 (soundtrack 4)	T639	Applause 4
T611	FX 3 (crystal 4)	T640	Gunshot 4
T612	FX 4 (atmosphere 4)	T641	Acoustic Grand Piano 5
T613	FX 5 (brightness 4)	T642	Bright Acoustic Piano 5
T614	FX 6 (goblins 4)	T643	Electric Grand Piano 5
T615	FX 7 (echoes 4)	T644	Honky-tonk Piano 5
T616	FX 8 (sci-fi 4)	T645	Rhodes Piano 5
T617	Sitar 4	T646	Chorused Piano 5
T618	Banjo 4	T647	Harpsichord 5
T619	Shamisen 4	T648	Clavichord 5
T620	Koto 4	T649	Celesta 5
T621	Kalimba 4	T650	Glockenspiel 5
T622	Bagpipe 4	T651	Music box 5
T623	Fiddle 4	T652	Vibraphone 5
T624	Shanai 4	T653	Marimba 5
T625	Tinkle Bell 4	T654	Xylophone 5
T626	Agogo 4	T655	Tubular Bell 5
T627	Steel Drums 4	T656	Dulcimer 5
T628	Woodblock 4	T657	Drawbar Organ 5
T629	Taiko Drum 4	T658	Percussive Organ 5
T630	Melodic Tom 4	T659	Rock Organ 5
T631	Synth Drum 4	T660	Church Organ 5

T661	Reed Organ 5	T690	String Ensemble 12	T719	Whistle 5	T748	Koto 5
T662	Accordion 5	T691	Synth Strings 11	T720	Ocarina 5	T749	Kalimba 5
T663	Harmonica 5	T692	Synth Strings 12	T721	Lead 1 (square 5)	T750	Bagpipe 5
T664	Tango Accordion 5	T693	Choir Aahs 5	T722	Lead 2 (sawtooth 5)	T751	Fiddle 5
T665	Acoustic Guitar (nylon) 5	T694	Voice Oohs 5	T723	Lead 3 (calliope lead 5)	T752	Shanai 5
T666	Acoustic Guitar (steel) 5	T695	Synth Voice 5	T724	Lead 4 (chiff lead 5)	T753	Tinkle Bell 5
T667	Electric Guitar (jazz) 5	T696	Orchestra Hit 5	T725	Lead 5 (charang 5)	T754	Agogo 5
T668	Electric Guitar (clean) 5	T697	Trumpet 5	T726	Lead 6 (voice 5)	T755	Steel Drums 5
T669	Electric Guitar (muted) 5	T698	Trombone 5	T727	Lead 7 (fifths 5)	T756	Woodblock 5
T670	Overdriven Guitar 5	T699	Tuba 5	T728	Lead 8 (bass+lead 5)	T757	Taiko Drum 5
T671	Distortion Guitar 5	T700	Muted Trumpet 5	T729	Pad 1 (new age 5)	T758	Melodic Tom 5
T672	Guitar Harmonics 5	T701	French Horn 5	T730	Pad 2 (warm 5)	T759	Synth Drum 5
T673	Acoustic Bass 5	T702	Brass Section 5	T731	Pad 3 (polysynth 5)	T760	Reverse Cymbal 5
T674	Electric Bass(finger) 5	T703	Synth Brass 11	T732	Pad 4 (choir 5)	T761	Guitar Fret Noise 5
T675	Electric Bass (pick) 5	T704	Synth Brass 12	T733	Pad 5 (bowed 5)	T762	Breath Noise 5
T676	Fretless Bass 5	T705	Soprano Sax 5	T734	Pad 6 (metallic 5)	T763	Seashore 5
T677	Slap Bass 11	T706	Alto Sax 5	T735	Pad 7 (halo 5)	T764	Bird Tweet 5
T678	Slap Bass 12	T707	Tenor Sax 5	T736	Pad 8 (sweep 5)	T765	Telephone Ring 5
T679	Synth Bass 11	T708	Baritone Sax 5	T737	FX 1 (rain 5)	T766	Helicopter 5
T680	Synth Bass 12	T709	Oboe 5	T738	FX 2 (soundtrack 5)	T767	Applause 5
T681	Violin 5	T710	English Horn 5	T739	FX 3 (crystal 5)	T768	Gunshot 5
T682	Viola 5	T711	Bassoon 5	T740	FX 4 (atmosphere 5)	T769	Acoustic Grand Piano 6
T683	Cello 5	T712	Clarinet 5	T741	FX 5 (brightness 5)	T770	Bright Acoustic Piano 6
T684	Contrabass 5	T713	Piccolo 5	T742	FX 6 (goblins 5)	T771	Electric Grand Piano 6
T685	Tremolo Strings 5	T714	Flute 5	T743	FX 7 (echoes 5)	T772	Honky-tonk Piano 6
T686	Pizzicato Strings 5	T715	Recorder 5	T744	FX 8 (sci-fi 5)	T773	Rhodes Piano 6
T687	Orchestral Harp 5	T716	Pan Flute 5	T745	Sitar 5	T774	Chorused Piano 6
T688	Timpani 5	T717	Bottle Blow 5	T746	Banjo 5	T775	Harpsichord 6
T689	String Ensemble 11	T718	Shakuhachi 5	T747	Shamisen 5	T776	Clavichord 6

T777 Celesta 6
 T778 Glockenspiel 6
 T779 Music box 6
 T780 Vibraphone 6
 T781 Marimba 6
 T782 Xylophone 6
 T783 Tubular Bell 6
 T784 Dulcimer 6
 T785 Drawbar Organ 6
 T786 Percussive Organ 6
 T787 Rock Organ 6
 T788 Church Organ 6

T789 Reed Organ 6
 T790 Accordion 6
 T791 Harmonica 6
 T792 Tango Accordion 6
 T793 Acoustic Guitar (nylon) 6
 T794 Acoustic Guitar (steel) 6
 T795 Electric Guitar (jazz) 6
 T796 Electric Guitar (clean) 6
 T797 Electric Guitar (muted) 6
 T798 Overdriven Guitar 6
 T799 Distortion Guitar 6
 T800 Guitar Harmonics 6

R025 16Beat 7
 R026 16Beat 8
 R027 Pop 1
 R028 Pop 2
 R029 Pop 3
 R030 Pop 4
 R031 Pop 5
 R032 Pop 6
 R033 Pop 7
 R034 Pop 8
 R035 Pop 9
 R036 Pop 10
 R037 Pop 11
 R038 Pop 12
 R039 Pop 13
 R040 Pop 14
 R041 Pop Bolero
 R042 Pop BossaNova
 R043 Pop Waltz
 R044 Pop Dance
 R045 Motown
 R046 British Pop 1
 R047 British Pop 2
 R048 British Pop 3
 R049 Guitar Pop
 R050 Slow Pop
 R051 50's Pop
 R052 80's Pop
 R053 Rock 1

R054 Rock 2
 R055 Rock 3
 R056 Rock 4
 R057 50's Rock
 R058 60's Rock 1
 R059 60's Rock 2
 R060 70's Rock
 R061 80's Rock
 R062 Big Rock
 R063 Power Rock
 R064 Dark Rock
 R065 Jazz Rock
 R066 Soft Rock
 R067 Pop Rock 1
 R068 Pop Rock 2
 R069 Funky Rock 1
 R070 Funky Rock 2
 R071 Ballad Rock
 R072 Folk Rock
 R073 Slow Rock 1
 R074 Slow Rock 2
 R075 Slow Rock 3
 R076 Slow Rock 4
 R077 Rock&Roll 1
 R078 Rock&Roll 2
 R079 Shuffle 1
 R080 Shuffle 2
 R081 Boogie 1
 R082 Boogie 2



APPENDIX

RHYTHM

R001 8Beat 1
 R002 8Beat 2
 R003 8Beat 3
 R004 8Beat 4
 R005 8Beat 5
 R006 8Beat 6
 R007 8Beat 7
 R008 8Beat 8
 R009 8Beat 9
 R010 8Beat 10
 R011 8Beat 11
 R012 8Beat 12
 R013 8Beat 13
 R014 8Beat 14
 R015 8Beat 15
 R016 8Beat 16
 R017 8Beat 17
 R018 8Beat 18
 R019 16Beat 1
 R020 16Beat 2
 R021 16Beat 3
 R022 16Beat 4
 R023 16Beat 5
 R024 16Beat 6

R083 Boogie 3
 R084 Twist
 R085 Ballad 1
 R086 Ballad 2
 R087 Ballad 3
 R088 Ballad 4
 R089 Ballad 5
 R090 Soul Ballad
 R091 6/8 Ballad
 R092 Acoustic Ballad
 R093 Colour Ballad
 R094 Guitar Ballad
 R095 Piano Ballad
 R096 Organ Ballad
 R097 Groove 1
 R098 Groove 2
 R099 Groove 3
 R100 Groove 4
 R101 Groove 5
 R102 Groove 6
 R103 Groove 7
 R104 Groove 8
 R105 Groove 9
 R106 Piano 1
 R107 Piano 2
 R108 Piano 3
 R109 Piano 4
 R110 Piano 5
 R111 Piano 6

R112 Piano 7
 R113 Piano 8
 R114 Piano 9
 R115 Piano 10
 R116 Unplugged 1
 R117 Unplugged 2
 R118 Unplugged 3
 R119 Unplugged 4
 R120 Unplugged 5
 R121 Unplugged 6
 R122 Unplugged 7
 R123 Unplugged 8
 R124 Dance 1
 R125 Dance 2
 R126 Disco
 R127 House
 R128 Euro Beat
 R129 Funky Dance
 R130 80's Dance
 R131 Techno
 R132 Fusion
 R133 Blues 1
 R134 Blues 2
 R135 Blues 3
 R136 Funky 1
 R137 Funky 2
 R138 Funky 3
 R139 Gospel
 R140 Rap 1

R141 Rap 2
 R142 Soul 1
 R143 Soul 2
 R144 Soul 3
 R145 Soul 4
 R146 Country 1
 R147 Country 2
 R148 Country 3
 R149 Country 4
 R150 Country 5
 R151 Jazz 1
 R152 Jazz 2
 R153 Jazz Waltz
 R154 Jazz Ballad
 R155 Lounge
 R156 Jive
 R157 Ragtime
 R158 Charlston
 R159 Big Band
 R160 Swing
 R161 Caribbean
 R162 Reggae
 R163 Cha Cha
 R164 Rumba
 R165 Samba
 R166 BossaNova
 R167 Mambo
 R168 Salsa
 R169 Beguine

R170 Cumbia
 R171 Latin
 R172 Baroque
 R173 Bolero
 R174 Holly Wood
 R175 Foxtrot
 R176 Paso Doble
 R177 Quick Step
 R178 Bachata
 R179 Boston
 R180 Tango
 R181 Waltz
 R182 March
 R183 Polka
 R184 80's Pop
 R185 Fusion
 R186 Techno
 R187 Acoustic Rock
 R188 RockShuffle
 R189 Classical 1
 R190 Classical 2
 R191 China Folk 1
 R192 China Folk 2
 R193 China Opera 1
 R194 China Opera 2
 R195 China Ballad
 R196 China Pop
 R197 Xin Jiang
 R198 Shan Bei

R199	Yun Nan	R228	Big Band Fast2
R200	He Nan	R229	Midnight Swing
R201	J-Pop Hit	R230	German Rock
R202	16 Beat Ballad2	R231	Schlager Beat
R203	70's Pop Ballad	R232	Mellow Hip Hop
R204	EP Ballad	R233	Classic Hip Hop
R205	Power Ballad	R234	New Hip Hop
R206	Guitar Ballad2	R235	Duranguense
R207	New R&B Ballad	R236	Laff
R208	Guitar Serenade	R237	Ober Walzer
R209	Organ Ballad2	R238	Bhangra
R210	Joropo	R239	Zouk
R211	Reggaeton	R240	German March
R212	French Waltz	R241	Enka
R213	Merengue	R242	Bolero Lento
R214	12-8 Ballad	R243	Sherif fReggae
R215	Norteno	R244	Beguine2
R216	Jig	R245	Latin Disco
R217	Hawaiian	R246	Tango4
R218	Electronica	R247	Tango5
R219	Funky House	R248	Rock &Roll
R220	Club Beat	R249	Rock & Roll Shfl
R221	Retro Club	R250	Oldies R & R
R222	Mod Chart Pop	R251	Detroit Pop1
R223	MOR Swing	R252	Detroit Pop2
R224	Retro Pop	R253	Worship Med
R225	Rumba Flamenco	R254	Worship Fast
R226	Trance Pop	R255	Piano Boogie
R227	Orch Big Band2	R256	Lovely Shuffle

R257	60's Rock & Roll	R286	Soul Brothers
R258	Kool Funk	R287	Happy Reggae
R259	Blueberry Blues	R288	Pop Latin
R260	Shuffle Blues	R289	6-8Slow Rock
R261	Mambo 4	R290	6-8 Modern
R262	Mambo 5	R291	6-8 Orchestral
R263	Pop Classics	R292	Schlager Shuffle
R264	Live 8 Beat	R293	Schlager Pop
R265	Power Rock2	R294	Schlager Rumba
R266	Acoustic Rock2	R295	Euro Pop Organ
R267	Cool 8 Beat	R296	70's French Hit
R268	Uptempo 8Beat	R297	Italian Mazurka
R269	90's Rock Ballad	R298	Bohemian Waltz
R270	Chart Rock Shfl2	R299	Schlager Samba1
R271	Brit Pop	R300	Schlager Samba2
R272	Brazilian Samba	R301	Scand Slow Rock
R273	Brit Pop Swing	R302	Schlager 6-8
R274	60's 8 Beat	R303	Schlager Fox
R275	Fast Bossa	R304	Highland Waltz
R276	60's Guitar Pop	R305	Italian Polka
R277	70's 8 Beat	R306	Grupera
R278	90's Guitar Pop	R307	Danzon
R279	Soft Rock2	R308	Schlager Alp
R280	Chart Guita rPop	R309	Saeidy
R281	Guijira	R310	Bhajan
R282	Modern Pop Bld	R311	Hip Hop Groove
R283	Soul	R312	Chart Pop1
R284	Skiffle2	R313	Organ Groove
R285	6-8Soul	R314	Chart Pop2

R315 New R&B
 R316 Pop R&B
 R317 Chart R&B
 R318 Modern Shuffle
 R319 Blues Rock
 R320 Dream Dance
 R321 US Chart Hit
 R322 Soul R&B
 R323 R&B Soul Ballad
 R324 Euro Hip Hop
 R325 Trip Hop
 R326 Ibiza 2004
 R327 Mod Big Band Shfl
 R328 Modern Big Band
 R329 Pop Gtr Ballad
 R330 Ibiza 2002
 R331 Euro Trance
 R332 6-8 Trance
 R333 Latin DJ's
 R334 Bomba
 R335 Chillout Cafe
 R336 70's Glam Piano
 R337 French House
 R338 English Waltz
 R339 8 Beat Ballad1
 R340 Club House
 R341 House2
 R342 Jazz Gtr Club
 R343 Modern Jazz

R344 Acoustic Jazz
 R345 Cool Jazz Ballad
 R346 Modern Jazz Bld
 R347 Easy Listening
 R348 Bebop
 R349 Orch Big Band1
 R350 Big Band Fast1
 R351 Orchestra Swing1
 R352 Orchestra Swing2
 R353 70's Ranking Country
 R354 West Coast Pop
 R355 Acoustic Jazz
 R356 Euro Trance
 R357 Blues Rock
 R358 Rock & Roll Shfl
 R359 Jazz Waltz Fast
 R360 70's Country Pop
 R361 Dixieland
 R362 40's Big Band
 R363 Easy Country
 R364 Country Hits
 R365 Country 8 Beat
 R366 Sci-fi March
 R367 Tap Dance Swing
 R368 Orchestral Bolero
 R369 Gospel Sisters
 R370 Italian Waltz
 R371 6-8 March
 R372 Bluegrass

R373 Mod Cntry Bld1
 R374 Scand Country1
 R375 Scand Country2
 R376 Scand Shuffle
 R377 Worship Slow
 R378 Disco Teens
 R379 Scand Bugg
 R380 Rock Cha Cha
 R381 Organ Swing
 R382 Secret Service
 R383 Animation Bld
 R384 Christmas Waltz
 R385 Movie Swing
 R386 Movie Ballad
 R387 Bubblegum Pop
 R388 Rock Shuffle
 R389 West Coast Pop
 R390 Classic 16 Beat
 R391 Jazz Pop
 R392 Kool Shuffle
 R393 8 Beat Ballad2
 R394 Chillout
 R395 16 Beat Ballad1
 R396 Epic Ballad
 R397 Easy Ballad
 R398 Cuban Son
 R399 Bachata2
 R400 Forro
 R401 70's Chart Ballad

R402 Romantic Ballad
 R403 90's Cool Ballad
 R404 Alp Ballad1
 R405 Alp Ballad2
 R406 E_Ballad
 R407 Unplugged 9
 R408 Pop Ballad
 R409 Pop New Age
 R410 8 Beat Modern
 R411 Country Ballad1
 R412 Love Song
 R413 Modern Country Pop
 R414 Electro Pop
 R415 Acoustic Ballad 2
 R416 Piano Ballad 1
 R417 R&B Ballad
 R418 Rock Ballad
 R419 Slow & Easy
 R420 Analog Ballad
 R421 Slow Rock 5
 R422 Slow Rock 6
 R423 Slow Rock 7
 R424 Slow Soul
 R425 8 Beat Adria
 R426 Classic Piano
 R427 80's EP Ballad
 R428 80's Boy Band
 R429 Country Ballad2
 R430 Country Two Step

R431 Country 6
 R432 Country 7
 R433 Finger Pickin
 R434 Country Brothers
 R435 New Country
 R436 Easy Country
 R437 70's Chart Cntry
 R438 Hoedown
 R439 Country Shuffle
 R440 Waltz2
 R441 Cha Cha2
 R442 Rumba2
 R443 Jive2
 R444 Pasodoble
 R445 Samba1
 R446 Samba2
 R447 Schlager Rock 1
 R448 Schlager Rock 2
 R449 Foxtrot2
 R450 Viennese Waltz
 R451 Tango2
 R452 Tango3
 R453 German Waltz
 R454 Carnival
 R455 Organ Samba
 R456 Reel
 R457 Gay Gordons
 R458 Scand Waltz
 R459 60's RockN

R460 Standard Rock
 R461 Brit Rock Pop
 R462 60's Vintage Rock
 R463 Chart Rock Shfl
 R464 60's Pop Rock
 R465 Rock Billy
 R466 Rock Boogie
 R467 Rock Cha Cha
 R468 Rock Classical
 R469 Rock Shuffle
 R470 Rock Pop
 R471 Rock'n Roll 1
 R472 Rock'n Roll 2
 R473 Straight Rock
 R474 Jazz Rock2
 R475 Fast Gospel
 R476 Folk Rock2
 R477 Skiffle
 R478 Funk Pop Rock
 R479 Contemp Rock
 R480 Acoustic Rock
 R481 50's Pop2
 R482 Cool Pop
 R483 Groovy Pop
 R484 60's Vintage Pop
 R485 80's Pop2
 R486 Rap Pop
 R487 Pop Rock 3
 R488 60's Soul

R489 70's Soul
 R490 Funk
 R491 16 Beat Shuffle
 R492 Twist2
 R493 British Pop1
 R494 British Pop2
 R495 Hard Rock1
 R496 Hard Rock2
 R497 Classic 16 Beat
 R498 Modern Jazz Bld
 R499 Latin DJ's
 R500 German Rock
 R501 Schlager Shuffle
 R502 Fusion Shuffl 2
 R503 Club Pop1
 R504 Club Pop2
 R505 16 Beat Pop1
 R506 16 Beat Pop2
 R507 8 Beat Pop1
 R508 8 Beat Pop2
 R509 8 Beat Soul1
 R510 8 Beat Soul2
 R511 8 Beat Rock1
 R512 8 Beat Rock2
 R513 Classic 8Beat
 R514 Vintage Gtr Pop
 R515 Schlager Italia
 R516 70's Disco1
 R517 70's Disco2

R518 Funky Disco
 R519 Saturday Night
 R520 Club Latin
 R521 Disco Chocolate
 R522 Disco Fox
 R523 Disco Funk
 R524 Disco Hands
 R525 Disco Party
 R526 Disco Samba
 R527 UK Pop
 R528 Club Dance
 R529 Modern R&B
 R530 Hip Shuffle
 R531 Charleston
 R532 Disco Pop
 R533 Disco Soul
 R534 Disco Trot
 R535 Euro Beat2
 R536 Rap 3
 R537 Rave
 R538 Techno2
 R539 Techno3
 R540 70's Disco Funk
 R541 Disco Philly
 R542 Disco House
 R543 80's Disco
 R544 Schlager Polka
 R545 Polka Pop
 R546 Blue Grass 1

R547	Blue Grass 2	R574	Tijuana
R548	Blue Grass 3	R575	Reggae2
R549	Pop Waltz2	R576	Salsa2
R550	USA March	R577	Calypso
R551	Hully Gully	R578	Guad Dance
R552	Tarantella	R579	Reggae 12Beat
R553	Limbo Rock	R580	Reggae 16Beat
R554	Swing Waltz	R581	Swing Fox
R555	Pub Piano	R582	Slow Fox
R556	Jazz Waltz2	R583	Organ Cha Cha
R557	Jazz Waltz3	R584	Organ Quick Step
R558	Show Tune	R585	Cat Groove
R559	Polka2	R586	Dixie Jazz
R560	Ober Polka	R587	Medium Jazz
R561	Party Polka	R588	Jazz Big Band
R562	Pop Mambo	R589	Jazz Club
R563	Latin Party Pop	R590	Ragtime2
R564	Cumbia2	R591	Big Band Shuffle 1
R565	Parranda	R592	Big Band Shuffle 2
R566	Carnival2	R593	Big Band Shuffle 3
R567	BossaNova2	R594	Fast Band 1
R568	Mambo 2	R595	Fast Band 2
R569	Mambo 3	R596	Frankly Soul
R570	Bolero2	R597	Jazz Funk
R571	Cumbia3	R598	Classic Big Band
R572	Latin Rock	R599	French Jazz
R573	Disco Latin	R600	Jump Jive

**APPENDIX****SONG**

S001	Inventions by Bach	S026	Schubert Serenade
S002	Arabesque	S027	Wedding March
S003	Doll's Dream	S028	Minuet in G Major
S004	The Happy Farmer	S029	Minute Waltz Op.64/1
S005	On Wing of Songs	S030	Lullaby Schubert
S006	Garvotte	S031	In E Minor Op. 72-1
S007	Fantaisie-Impromptu	S032	Serenade
S008	For Elice	S033	Op. 10, No. 5
S009	Mozart's Sonata	S034	Polonaise
S010	Mariage d'amour	S035	Mary Had A Little Lamb
S011	Hungarian Dances	S036	Waltzes No.7 in c#, Op.64 No.2
S012	The Blue Danube	S037	Jingle Bells
S013	A comme amour	S038	Rhythm of the Rain
S014	Humoresque	S039	Ecossaise
S015	THE BARBER OF SEVILLE	S040	Twinkle, Twinkle, Little Star
S016	Beethoven: Symphonie Nr.5 Op.67	S041	Bourree
S017	Oh! Susanna	S042	Pachelbel's Canon -
S018	Chopin Nocturne	S043	Canon in D Major Geschichten aus dem Wienerwald
S019	The Bumble-Bee	S044	Minuet
S020	Four Seasons	S045	Sunshine
S021	Pastoral Symphony	S046	L.C Daquin. Le Coucou
S022	American Patrol	S047	Clair de Lune
S023	Ode to Joy		
S024	Musical Moments		
S025	Spanish Bullfight		

S048	Carmen	S065	Mendelssohn Jagerlied op.19b-3
S049	Mozart Symphony	S066	Traumerei
S050	Ballade pour Adeline	S067	Ping Pong sous les arbres
S051	Happy Birthday	S068	Top of the world
S052	Yesterday	S069	Sicilienne
S053	Auld Lang Syne	S070	My Way
S054	Piano Sonata	S071	Heaven Blue
S055	The Fountain A drawing room piece	S072	Mendelssohn Frühlingslied
S056	La fille aux cheveux de lin	S073	Merry Christmas
S057	Red River Valley	S074	Schubert Impromptus
S058	Scherzo	S075	Castle in the Sky
S059	Antal Doráti	S076	Military March
S060	Wonder Girl	S077	Equal Temperaments
S061	Liebestraum	S078	A maiden's Prayer
S062	Eva's Polka	S079	Radetzky Marsch
S063	William Tell Overture	S080	Edelweiss
S064	The Legend of 1900		
S065	Mendelssohn Jagerlied op.19b-3		

ITEMS INCLUDED

Power adapter	1PC	MIDI line	1PC
Piano cover	1PC	Manual	1PC

 
MUSICAL INSTRUMENT PARAMETERS

Keyboard: 88 key	Pitch: ≤ 3 tones.
Voice range: A2-C5	Output power: > 20W*2
Style: Upright piano	Power parameters: DC 15V 50/60Hz

PRECAUTIONS

POWER SUPPLY

This product can be powered by standard indoor wall sockets. Please only use the power cord specified in this product. When not in use, please turn off the power supply. When not in use for a long time, pull out the power cord and keep it properly.

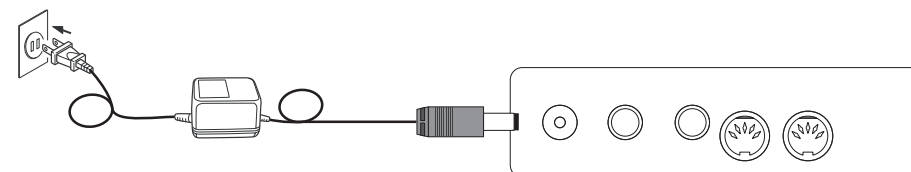

MARKING MAP

To ensure that you use this product safely and correctly, to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs. The various signs and their meaning are as follows:

WARNING

This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled.

⚠ BE CAREFUL

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated incorrectly.

EXAMPLE OF LOGO



This triangle sign (△) indicates what users should pay attention to. (The left picture shows a cautious electric shock)



A circular sign (⊘) with an oblique line indicates prohibitions. The icons in or beside the logo indicate the contents specifically prohibited. (No disassembly is allowed on the left)



Black dots (●) indicate what must be observed. The diagrams in this sign indicate the contents of the specific matters that must be observed. (The left picture shows that the power plug must be pulled out of the socket)

⚠ WARNING

Smoke, odor, overheating:

When the product smokes, smells or overheats, there is a danger of fire and electric shock when it is used continually.

In case of the above situation, the following operations should be performed immediately.

1. turn of the power.
2. Pull the plug out of the power outlet.
3. Contact us.

Power cord:

• Improper use of power cord may cause fire and electric shock. The following precautions must be observed.

- The special power cord designated for this product must be used.
- The AC power supply with output voltage within the rated voltage range for household use must be used.
- Do not overload power sockets and extension lines.

• The improper treatment of power line will lead to damage or breakage, which will lead to fire and electric shock hazards.

The following precautions must be observed.

- Do not place or heat heavy objects on power lines.
- Do not attempt to alter or bend the power cord too much.
- Do not twist or pull the power cord.
- If the power cord or plug is damaged, please replace the same type of power cord.

• Do not touch the power cord and plug with wet hands, otherwise there is a danger of electric shock.

• Please use the power cord where it won't splash. Water is in danger of causing fire and electric shock.

• Never place vases or any other Container containing water on this product. Water is dangerous of causing fire and electric shock.

• Do not allow minors to unplug and touch power lines or connection boards, minors do not have electricity safety common sense, there is a risk of electric shock.



⚠ BE CAREFUL

- Improper use of power cord may cause fire and electric shock. The following precautions must be observed.
- Do not put the power cord near the furnace or other heat source.
- Do not pull the power cord when unplugging the power socket, but must grasp the plug body.
- The power cord plug must be inserted in the socket to the end.
- Make sure the power supply is off before connecting or disconnecting it.
- When thunderstorms occur or before traveling or other long-term departure, disconnect the power cord from the wall outlet.
- Remove the power cord from the wall outlet at least once a year and clean the dust accumulated around the plug.

**Do not burn down this product**

Do not put this product in the fire.

Otherwise, it will lead to the burning of wood products and the explosion of internal electronic components, which will cause fire and personnel injury.

Water and foreign bodies

Water, other liquids and (metal sheets, etc.) entering this product are in danger of causing fire and electric shock. In case of the above situation, the following operations should be performed immediately.

1. turn off the power.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact us.

**Don't dismantle and transform**

Do not dismantle or transform this product in any way. Otherwise, there is a risk of electric shock, scald or other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to qualified technicians.

**Fall or impact**

This product is in danger of fire and electric shock after falling or being damaged by strong impact. In case of the above situation, the following operations should be performed immediately.

1. turn off the power.
2. If you are using a power cord for power supply, unplug it from the wall outlet.
3. Contact us.

**Plastic bag**

Do not let anyone put plastic bags for this product on his head or in his mouth. Otherwise, there is a risk of asphyxia. Families with young children should pay special attention to it.



Do not climb piano or bracket

Climbing on the piano body or its support is dangerous of overturning or damage. Families with young children should pay special attention to it.



Placing products

Avoid placing the product on an uneven surface or any other unstable place. Otherwise, it will cause the product to fall down, which will lead to the risk of injury.



Move this product

Before moving this product, you must unplug the power cord plug from the wall outlet and pull out all other cables and connecting wires.



Otherwise, it will lead to wire damage, fire and electric shock.

Clean this product

Before cleaning this product, you must unplug the power cord plug from the wall outlet, otherwise there is a risk of fire and electric shock.



Socket connection

Only designated devices can be connected to the sockets of this product.



Connecting non-designated equipment or devices is dangerous of causing fire and electric shock.

Location selection

Avoid placing this product in the following places. Otherwise, there is a danger of fire and electric shock.

- High temperature or dusty places.
- Kitchen or other place with lampblack.
- Where the product is exposed to direct sunlight, or any other place where the product will produce high temperature.



Volume

Don't play music long and loud. Pay special attention when using headphones. Excessive volume can damage your hearing.



Heavy objects

Do not place heavy objects on this product. Otherwise, the top of the product will be overweight, causing the product to overturn or drop objects on it, which will lead to the risk of injury.



Correct assembly of scaffolds

The incorrect installation of the bracket will cause the product to fall Over, and there is a risk of injury to the personnel.

Therefore, it must be assembled in accordance with the instructions attached to the user manual to ensure that the product is properly mounted on its bracket.

