 




COSTWAY

WHERE THERE IS COSTWAY THERE IS HOME

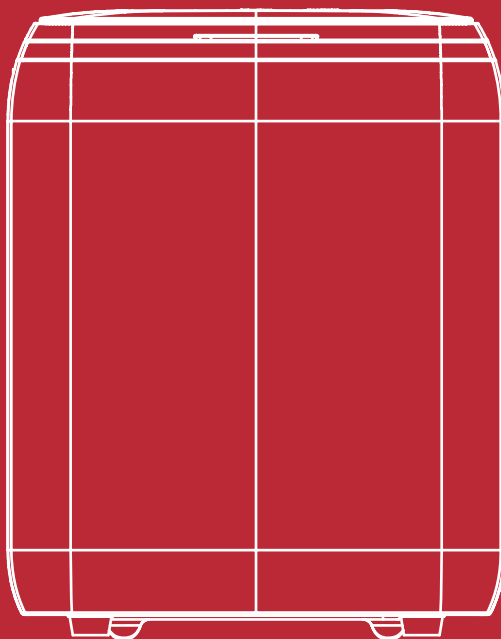

USER'S MANUAL

Ice Maker
EP24228

Important Notices:

When using an electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Remove all packing material and carefully check your ice maker to ensure it is in good condition and that there is no damage to the ice maker or power cord and plug.
3. Before using the Ice maker for the first time, please wait 2 hours after positioning it, and keep the transparent lid open for at least 2 hours.
4. Pure water is not allowed to be used on this unit, spring water is recommended.
5. Ensure the voltage is compliant with the voltage range stated on the rating label, and ensure the earthing of the socket is in good condition.
6. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
7. Do not tilt the machine more than 45° during transport, and do not invert the machine. This may damage the compressor and the sealing system.
8. To protect against risk of electric shock, do not pour water on cord, plug and ventilation, immerse the appliance in water or any other liquid.
9. Unplug the appliance after using or before cleaning.
10. Keep the appliance 8cm from other objects to ensure the good heat releasing.
11. Do not use the accessories which are not recommended by Manufacturer.
12. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or

mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children should be supervised to ensure that they do not play with the appliance.

13. Do not use the appliance close by flames, hot plates or stoves.
14. Do not switch on the power button frequently (ensure 5min. interval at least) to avoid the damage of compressor.
15. Metal sheet or other electric objects are not allowed to be inserted into the appliance to avoid fire and short circuit.
16. Do not use outdoors.
17. Never clean with scouring powders or hard implements.
18. Please keep the instruction manual.
19. Warning: Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
20. This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications
21. The refrigerant and insulation blowing gas is flammable, when disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.



Is fire warning sign. Caution risk of fire.

Specifications:

Model Number: EP24228

Water Reservoir Capacity: 2.6L

Daily Ice Output: 20kg / 24 hours

Voltage: AC 120V

Ice Sizes: small、large

Frequency:

Ice Storage Capacity: 2.0L/900g (ice basket covered with ice)

Power Consumption: 150 W

 
Refrigerant: R600a (31g)

Climate Type:

Unit Dimensions: 365 (W) X 270(D) X 327 (H)mm

Packing Dimensions: 435(L)X330(W)X380(H) (mm) (single color box)

Description:

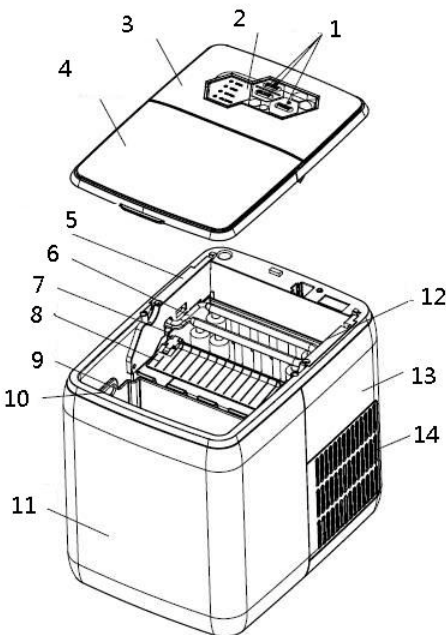


Ice shovel

- | | |
|-------------------------|---------------------|
| 1. Buttons | 8. Ice shovel board |
| 2. Control panel | 9. Ice Basket |
| 3. Top Cover | 10. Water Reservoir |
| 4. Transparent lid | 11. Front big body |
| 5. Micro switch bracket | 12. Motor bracket |
| 6. Evaporator | 13. Rear big body |
| 7. Water box | 14. Cooling port |

Feature:

- ✧ Quick ice making
- ✧ Two different sizes of ice can be made
- ✧ Ice full prompt, when the water is insufficient
- ✧ Bullet ice
- ✧ More than 9 minutes to make 12pcs ice
- ✧ Automatic cleaning function

 Control Panel Operation:

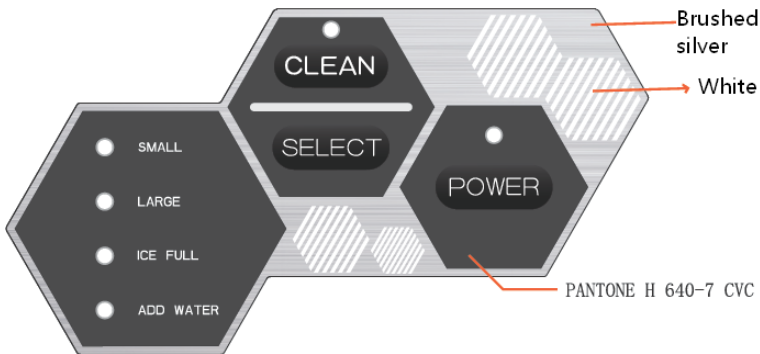

POWER: Power switch

SELECT: Mode selection

CLEAN: Cleaning button

SMALL : small ice selection

LARGE big ice selection

ICE FULL ice full alarm

ADD WATER : water shortage alarm

1) **POWER:** Plug in the power and the source indicator flashes. Press the **POWER** button, the power indicator light is always on, the machine will start the de-icing function first, then the ice block will be automatically produced according to the selected mode. After the ice-making is completed, the ice will be removed, and then the ice-scraping function will be entered.

2) **SELECT:** Select the ice size mode. Each time you start the machine, the default mode is big ice making mode, and the indicator light of the selected mode is on. It takes more than eight minutes to make small ice, and more than nine minutes to make large ice. It is recommended to use

large ice mode for ambient temperature above 77°F and small ice mode for ambient temperature below 68°F.

- 3) CLEAN: The clean button, after pressing the clean button, start the motor, after that start the water pump to draw water, repeat this cycle, more than 4 minutes to stop.
- 4) ADD WATER: Water shortage alarm: When this red is on, it means there is water shortage in the water tank. You need to add water and press the POWER button to restart the machine.
- 5) ICE FULL ice alarm: When the ice reaches the maximum amount of ice storage container, the “ICE FULL” light flashes and the machine stops. At this time, the ice needs to be poured out. When the ice position is lower than the full sensor position, the machine automatically Restart

Operating Instructions:

1. Step 1

Open the lid and take out the basket and add water to the reservoir.

Note: There is a maximum scale MAX in the reservoir. The water should not exceed the MAX position. If the water exceeds the maximum scale MAX, you need to open the bottom drain plug, release the excess water, and cover with a transparent cover.

2. Step 2

Plug in the power, and press the POWER button to start the machine.

3. Step 3

Select the size of the ice you want to make, default big ice

Note: 1. When the indoor temperature is below 68°F, choose small ice.

Large ice is recommended for indoor temperatures above 77°F.

2. The three cycles used for the first time, the ice produced is small and irregular.

3. When the ice basket is full, please take out the ice immediately, do not let the ice overflow the ice basket

Cleaning & Use Guidance:

1. Clean the inner liner, ice collecting tray, water box, ice shovel and evaporator frequently. When cleaning, unplug the unit and remove the ice cubes. Use a diluted solution of water and vinegar to clean the inside and the outside surface of the Ice maker. Do not spray Ice maker with chemicals or diluted agents such as acids, gasoline or oil. Rinse thoroughly before starting.
2. Keep ventilation openings in the appliance enclosure, or in the built-in structure, clear of obstruction. Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
3. Reuse the machine after being idled for a period of time, it may not have enough water to pump for air retard, and the indicator of "ADD WATER" will keep lighting. At this time, you just need to press POWER button again, the machine can enter normal state.
4. To ensure the cleanness of ice, please change water for water reservoir at least once one day. If do not use for a long time, please drain the water out and clean it up.
5. If the compressor does not work due to water shortage, ice is too full, power failure, and other reasons, if the machine is started again, the

compressor will delay 3 minutes to start.

- Please use edible water, distilled water is not allowed, mineral water is recommended, no matter before ice making or after initial installation or after long time without use.

Troubleshooting:

- Please note, if a power failure occurs due to disconnection of the power cord, or the power button has been pushed off during an ice making cycle, small ice chips may formed and lodge in the automatic shovel causing it to jam. If this occurs, the ice chips may be removed by disconnecting the power cord and gently pushing the shovel to the rear of the cabinet and removing the ice chips, then restarting.
- Please check if the water reservoir is flat when the ice shovel can not remove the ice to ice basket. If not, please push the ice shovel gently by finger, then press POWER button to restart.

PROBLEM	POSSIBLE CAUSE	SUGGESTED SOLUTIONS
The compressor works abnormally with a Buzzer Noise	The voltage is lower than recommended	Stop the Ice maker and do not restart until the voltage is normal.
Water shortage indicator light is on	1. There is no water 2. The pump is full of air	1. Add some water until it reaches MAX position 2. Press POWER button to restart

Indicator lights on display are not on	Blown fuse/ No power	Replace fuse / Turn power on
The Ice made is too large and with pieces sticking together.	1.Choose the wrong ice cube size 2.Ice of previous cycles left in the water tray	1.Select small size 2.Take out the ice under the standby state
The ice making procedure is correct, but there is no ice coming out.	1. The compressor has no refrigerant. 2. Compressor damage 3. The fan motor is damaged.	Call the service hotline.
All indicators twinkle simultaneously	1. The water box was blocked by ice. 2. The motor is stuck, or the motor is off, or the motor is damaged. 3. Micro switch damage	1.Unplug the power to take out the ice which blocking the tray, then plug the power and press the P O W E R button, the machine will restart 3 mins later. 2. Call the service hotline.
The machine is always working, but the water is always warming	The solenoid valve has failed.	Replace the solenoid valve.

When the ice is full, the machine does not prompt ICE FULL.	1. Ice full sensor damage. 2. Solar ray interference	1. Replace the red ice full sensor 2. Move indoors to make ice 3. Call the service hotline
---	---	--

WARNING

If the power panel is damaged, it must be replaced by the manufacturer's service organization or a person qualified to repair it in order to avoid danger.

Ice must be made from drinkable water or drinks.

It is normal for the compressor and condenser surface to reach temperatures between 158°F and 194°F during operation and surrounding areas may be very hot.

Due to fast freezing, ice cubes may appear “Cloudy”. This is air trapped in the water and will not affect quality or taste of ice.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should use this product under adult supervision.

Do not immerse in water

1) Warning –keep ventilation openings, in the appliance enclosure or in the built-in structure clear of obstruction.

2) Warning – do not use mechanical devices or other means to accelerate to defrosting process, other than those recommended by the manufacturer.

3)Warning – do not damage the refrigerant circuit.

4)Warning – do not use electrical appliance inside the food storage compartments of the appliance ,unless they are of the type recommended by the manufacture.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other house hold wastes throughout t he E U. To pr event possi ble XXXXXX harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.



TIPS:

Your suggestions and comments for Costway are really important to us!

We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2018

Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office:Fontana

UK office:Ipswich



COSTWAY

WHERE THERE IS COSTWAY THERE IS HOME

