



## USER'S MANUAL

### Tent

## CARTON CONTENTS:

- 1 Hunting Blind
- 1 Backpack Carrying Case
- 8 Ground Stakes
- 1 Ground Stake Bag
- 4 Tie-Down Cords

### WARNING!

- FOR YOUR SAFETY BE SURE TO READ ALL INSTRUCTIONS CAREFULLY.
- THIS HUNTING BLIND USES FIRE RESISTANT MATERIAL. THIS MATERIAL IS NOT FLAME PROOF.
- DO NOT ALLOW ANY HEAT OR OPEN FLAMES TO COME IN CONTACT WITH THE MATERIAL OF THIS HUNTING BLIND.
- DO NOT USE A HEATER IN BLIND. UNVENTED FUMES CAN CAUSE SICKNESS OR DEATH.
- DO NOT SHOOT A FIREARM THROUGH THE SHOOT THROUGH SCREENS. THE MUZZLE FLASH COULD IGNITE THE SCREEN MATERIAL.
- DO NOT USE EXPANDABLE BROADHEADS WITH SHOOT-THROUGH SCREENS. THE BLADES MAY OPEN PREMATURELY. USE FIXED BLADE BROADHEADS ONLY.
- DO NOT ALLOW CHILDREN TO PLAY WITH THIS BLIND WITHOUT ADULT SUPERVISION.
- NEVER COVER YOUR FACE WITH THE BLIND MATERIAL. IT CAN CAUSE SUFFOCATION AND DEATH.
- REMOVE ALL GROUND STAKES BEFORE ATTEMPTING TO FOLD UP BLIND. GROUND STAKES MAY TEAR THE BLIND OR CARRYING CASE.

# SET UP

## STEP 1: Unpack and locate hubs

Remove the blind from carrying case and lay it on the ground. Locate hubs.

## STEP 2: Push out wall

Locate any one of the four wall hubs around the roof hub in center. Hold the hub in one hand and place your foot on the other hubs. With your other hand, grab the center stake loop between the poles at the edge of the fabric. Push the hub out firmly until the wall pops open.

## STEP 3: Push out roof

Locate the hub for the roof in the center of the hubs. Be sure hubs for walls not opened are close together. While holding hub of wall already opened in one hand, firmly push the roof hub outward with your other hand until it pops open. Swing wall overhead and remain inside blind.

## STEP 4: Push out remaining walls

Now pop out the remaining three walls by firmly pushing the hubs outward from the inside of the blind.


## STEP 5: Connect tie-down cord

For windy conditions it is recommended that you use the adjustable tie-down cords and stakes to secure the blind. Loop tie-down cord through buckle as shown in diagram. Tie the single end of cord to the eyebolt on the outside center of wall. Put the looped end of cord around the ground stake and push the stake into the ground. Slide buckle to increase tension of cord.


## STEP 6: Fasten ground stakes

Poke the ground stakes through the loops around the outside edge of blind then press them into the ground.

## Step 1: Unpack and locate hubs

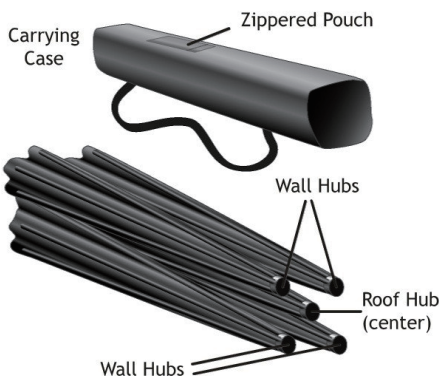


## Step 2: Push out wall

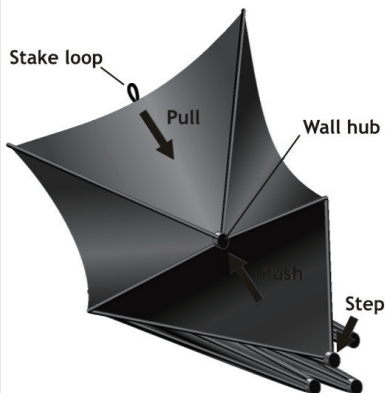





### Step 3: Push out roof

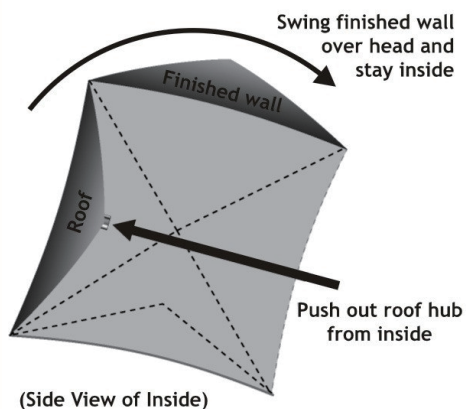


### Step 4: Push out remaining walls

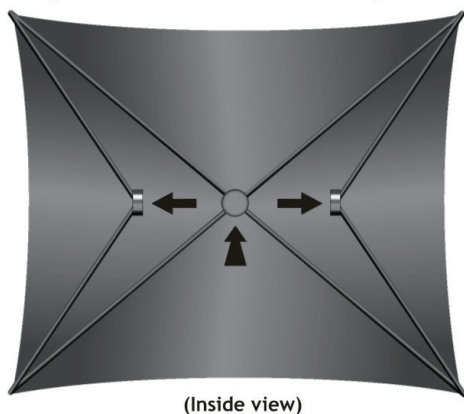

### Step 5: Connect tie-down cord

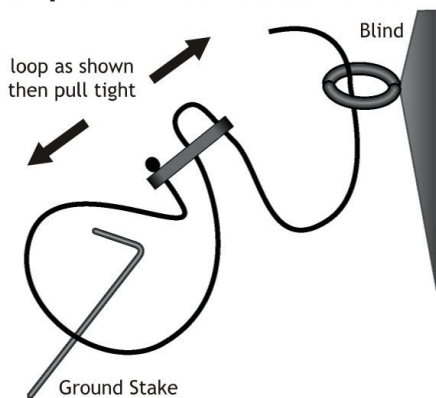

### Step 6: Fasten ground stakes

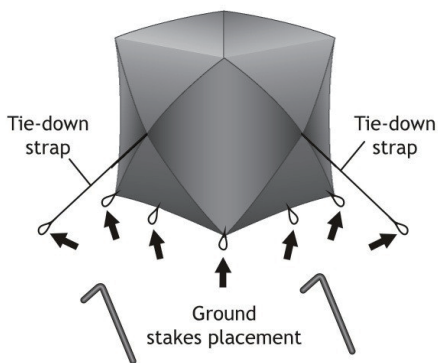

# TEAR DOWN

---

## **STEP 1: Disconnect then collapse three walls**

Remove all stakes and tie-down cords. Stand inside blind and pull in the hubs for three of the walls.

## **STEP 2: Collapse roof**

Grab the hub of the roof with one hand and the hub of the wall still standing with the other hand for support. Pull in on the hub for the roof until it collapses, then swing the wall hub over your head.

## **STEP 3: Collapse last wall**


Pull hub of last wall and fold all walls together with the black side out.

## **STEP 4: Pack and store**

Pack ground stakes into ground stake bag and place inside zippered pouch of carrying case along with the tie-down cords. Be sure blind is free of debris and completely dry before inserting into carrying case for storage. Never store a wet or damp blind in carrying case. Store blind in a dry and cool place.


### Step 1: Disconnect & collapse three walls

Pull in three walls from inside

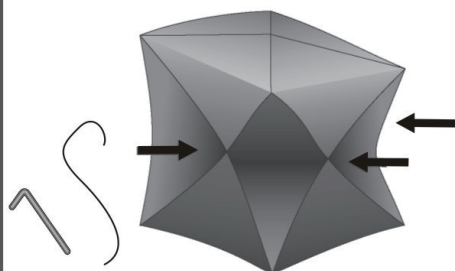


Remove stakes  
and tie-down straps


### Step 2: Collapse roof

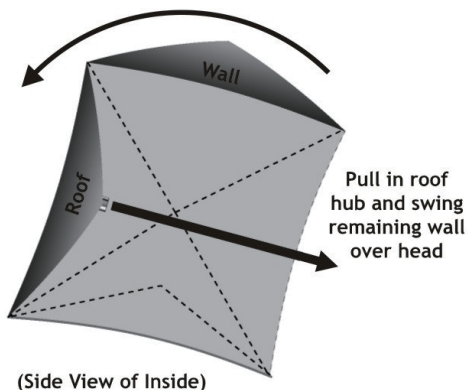

### Step 3: Collapse last wall

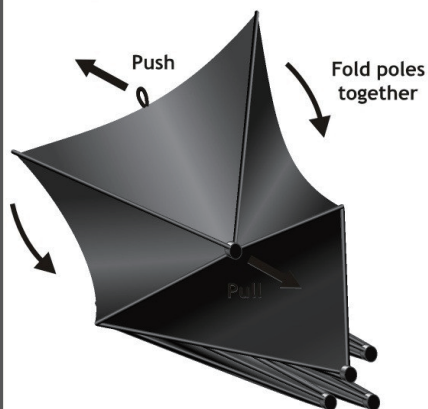

### Step 4: Pack and store

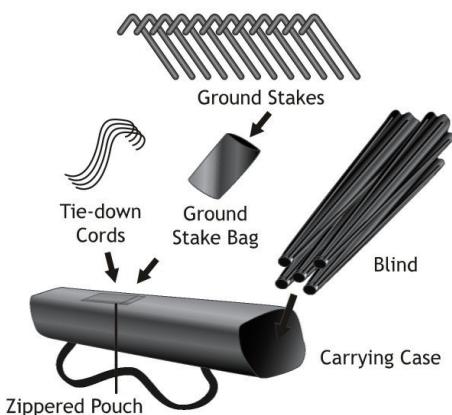

### Storage

- Blind must never be rolled-up or packed while damp, as mildew will form within a few days.
- Allow blind to completely dry before rolling and storing.

Mesh for Shooting window

Mesh for Viewing window

Carrying bag

Poles

Hubs

Hub washer

Hub Eye Bolt

Ground Stakes

Ground Stake bag

Tie Down Cord



**With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

**Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!**

**Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !**

**Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.**

**Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!**

**Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.**

**US office: Fontana**

**UK office: Ipswich**

**DE office: FDS GmbH, Neuer Höltingbaum 36, 22143 Hamburg, Deutschland**

**FR office : 26 RUE DU VERTUQUET, 59960 NEUVILLE EN FERRAIN, FRANCE**

