

**USER'S MANUAL**  
**BABY HIGH CHAIR**  
**BB5692**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Please give us a chance to make it right and do better!**

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

**Follow Costway**



# Contact Us!

## Do NOT return this item.

Contact our friendly customer service department for help first.








 
 







# Before You Start

Please read all instructions carefully and keep it for future reference.
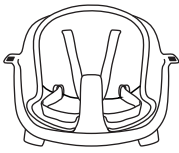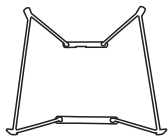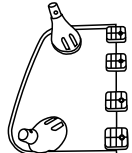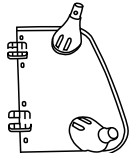
### General Warnings:

 - ⚠ **Danger!** Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.
- ⚠ The product must be installed and used under the supervision of an adult.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ Remove all Packaging, separate and count all parts and hardware before Installation.
- ⚠ Please ensure that all parts are correctly installed, incorrect Installation can lead to a Danger.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.

## Spare parts list:


					
A	B	C	D		
					
E	Fx4	Gx4	H		
					
I	Jx12	Kx8	Lx4	※ M	※ N

(A)Seat (B)Desktop holder (C)Desktop left (D)Desktop right (E)Dinner plate  
(F)Upper seat legs (G)Lower seat legs (H)Hex wrench (I)Cross wrench  
(J)M6\*25Bolts (K)M5\*15Self-tapping screws (L)Pad tube  
※ (M) Guard plug ※ (N) Plug card

The accessories (M) and (N) with the※ mark are stored in the guard when they are shipped from the factory. When the guard is not used, the plug is removed and blocked in the retaining hole.


## Installation steps:

- 1.Reverse the seat on a clean flat ground, insert the upper seat foot into the bottom of the seat according to the corresponding number, tighten it with 8 bolts(M6\*25), and then support the seat.

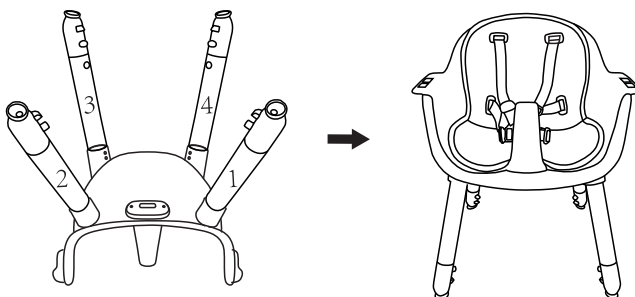


**Instructions for use :**


1. The dinner plate can be adjusted in two steps.

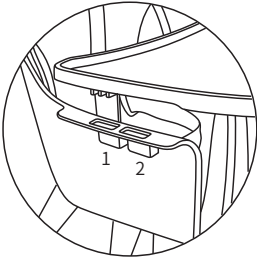


2. When not using the guard, take out the guard, and then put (M) into the seat.

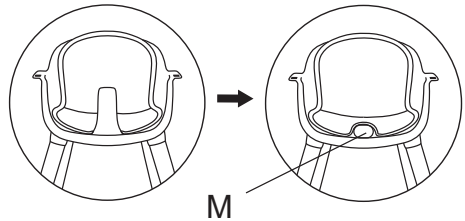

3. The seat and table can be used separately to become a study table and chair.

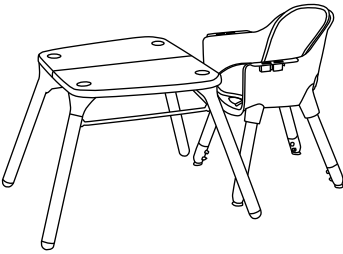


4. The dinner plate can be removed, which is convenient for children and adults to eat at the same table.

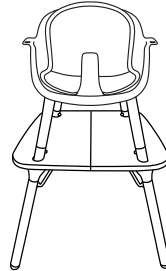
**Warning:**

1. Failure to follow these instructions may affect the safety of children.
2. When a child uses a dining chair, the caregiver may not leave.
3. Do not use any part of the dining chair if it is damaged or missing.
4. Before using the dining chair, please check carefully that all parts are installed correctly.
5. When the child is eating, a seat belt must be used to prevent the baby from falling or slipping out of the dining chair and causing serious injury.
6. Please do not use this product when your baby can't start it alone.
7. Do not disassemble or adjust any part of the dining chair while your baby is in the dining chair.
8. Do not use this product on roads, poolsides, stairs, etc. where it is dangerous.
9. Keep the accessories out of reach of children. Plastic bags and small parts pose a choking hazard to children.
10. The maximum carrying capacity of this dining chair is 33 lbs.


2. After buckling the table top left and right, tighten it with 4 self-tapping screws(M5\*15), and then put the lower seat foot (Undistinguished number).

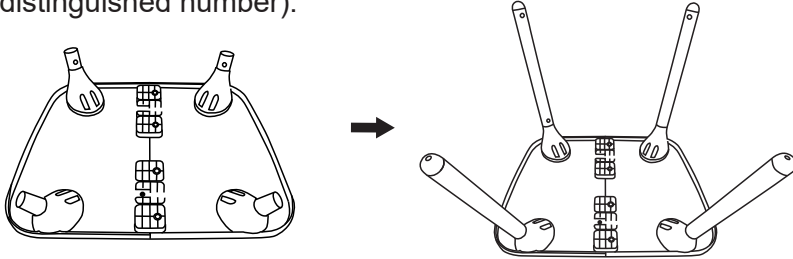

3. Place the desktop fixing frame on the bottom of the desktop board, and then tighten it on the lower seat foot with 4 bolts(M6\*25) , then put 4 support tubes on the connection between the fixing frame and the desktop, and then use 4 self-tapping screws(M5\*15)to tighten the fixing frame and at the connection point of the table top board, and then support the desktop.

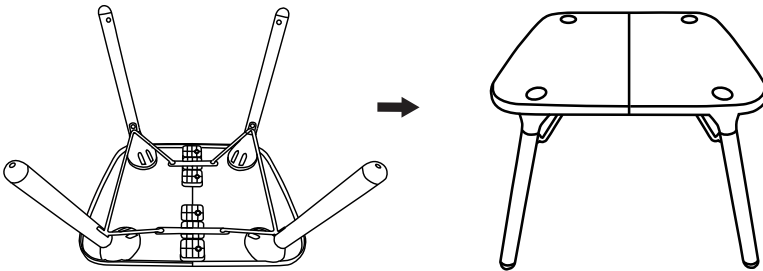

4. Connect the seat and the desktop board according to the corresponding number, press the middle part of the seat to click into the desktop, then install the dinner plate, and the dining chair is installed.

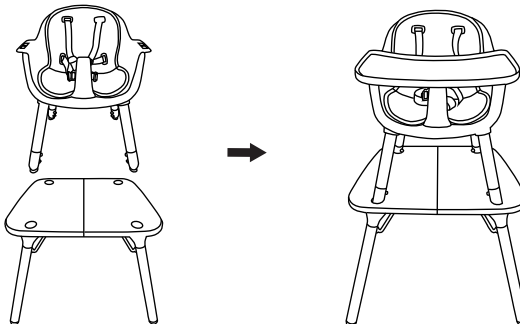


**Welcome to visit our website and purchase our quality products!**

With your inspiring rating, COSTWAY will be more consistent to offer you  
**EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

US office: Fontana, California

UK office: Ipswich

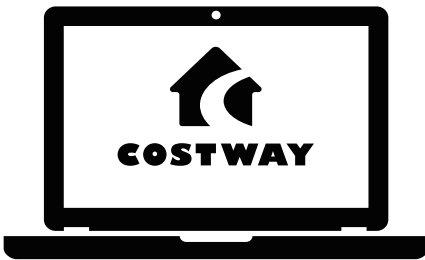

- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History

*5 Star Rating*



We would like to extend our heartfelt thanks to  
all of our customers for taking time to assemble  
this product and giving us valuable feedbacks.

THANK  
YOU  
☺

