




COSTWAY®

Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana UK office: Ipswich AU office: Truganina

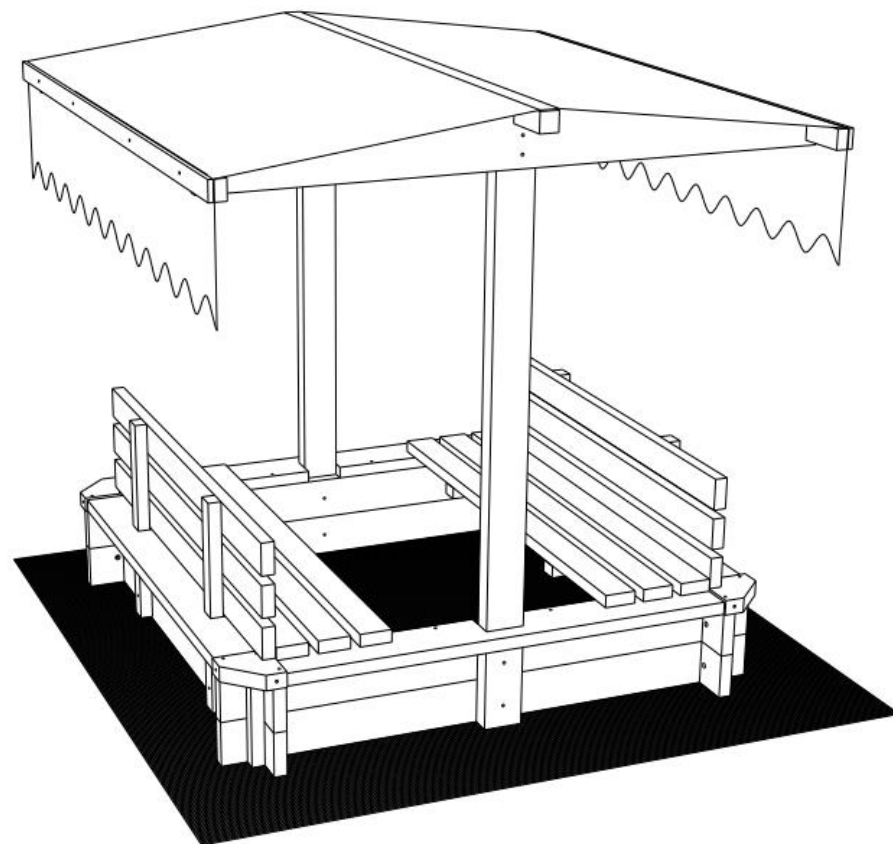

Contact Us !

Do NOT return this item.

Contact our friendly customer service department for help first.



US: cs.us@costway.com
UK: cs.uk@costway.com
AU: cs.au@costway.com

USER'S MANUAL

Kids Wooden Boat Sandbox TS10037

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Before You Start

Please read all instructions carefully and keep it for future reference.

General Security Warning

Caution: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

Danger: Lack of attachment may cause a risk of tipping.




WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

Warning for Assembly


- ⚠ Assembled only by adults
- ⚠ Remove all Packaging, separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.


Parts and Hardware List

Not actual size

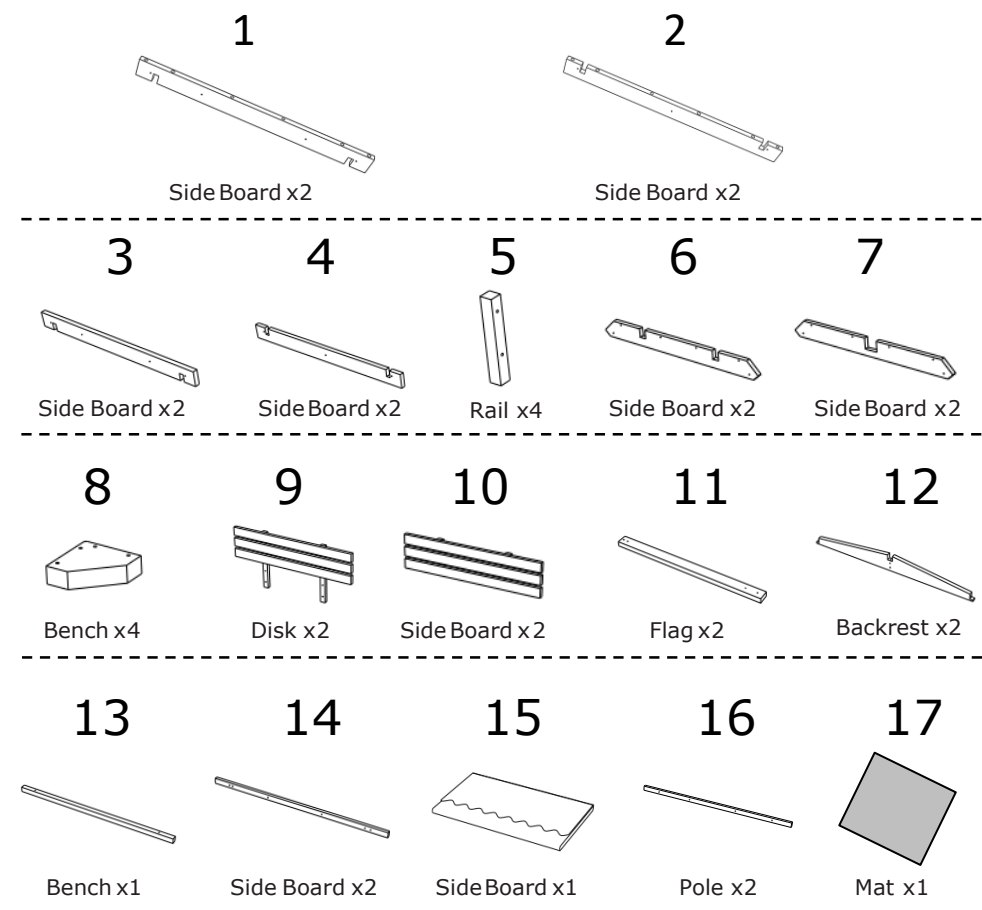


Actual size

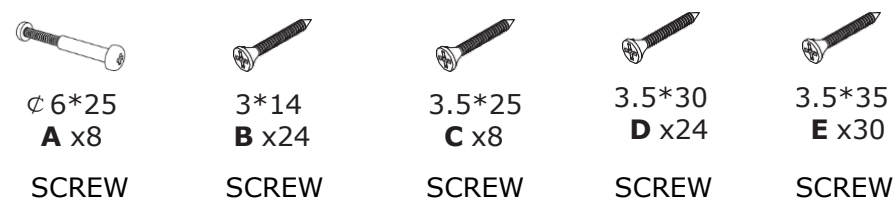


 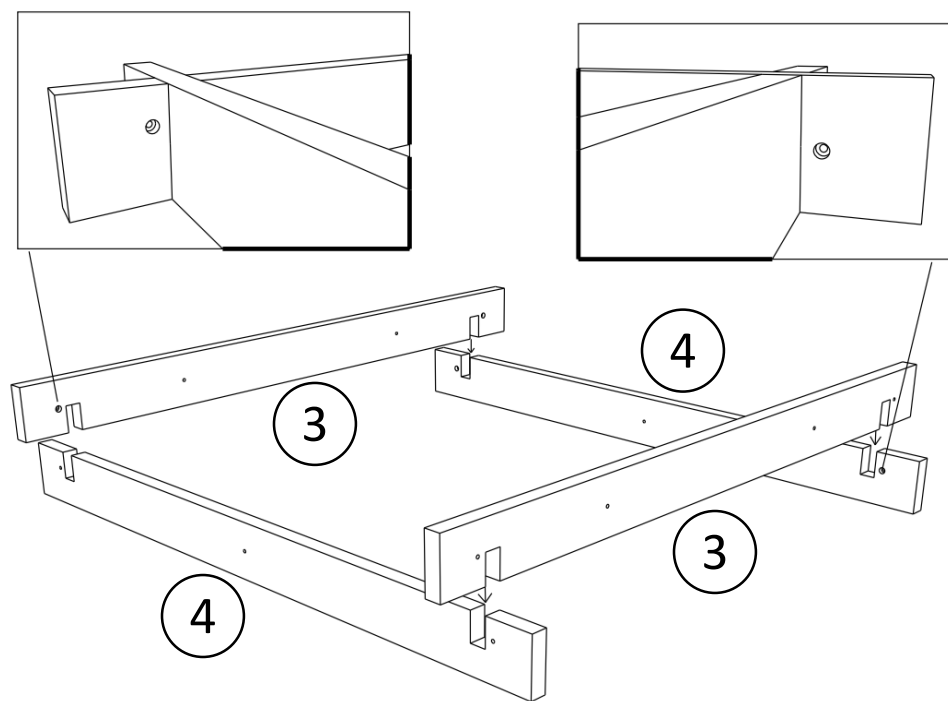
01

Fasten side board 3 and side board 4 tightly, and pay attention to the direction of the screw holes as shown in the figure.

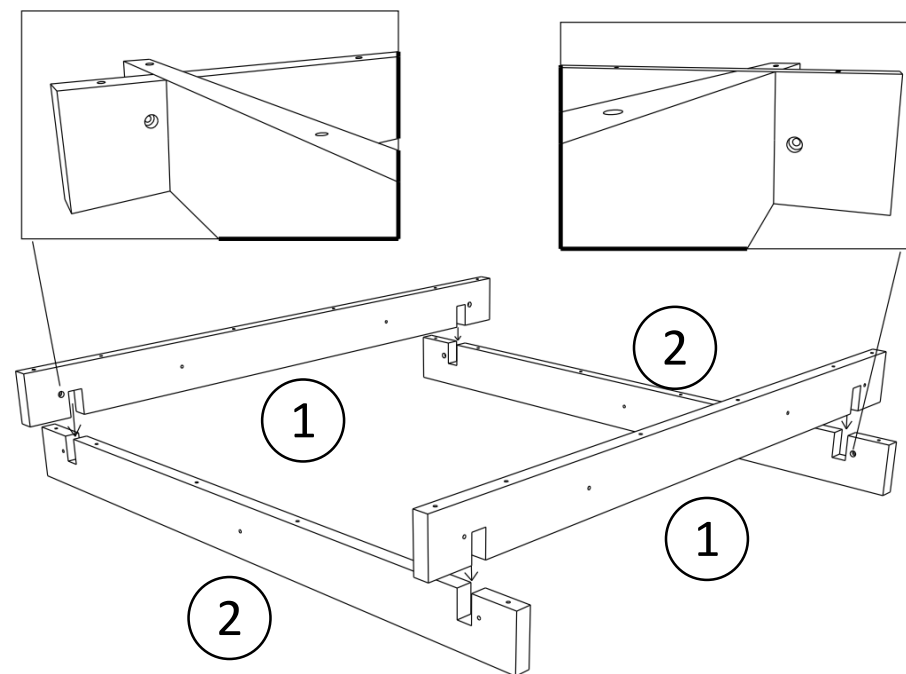02


 
Fasten side board 1 and side board 2 tightly, and pay attention to the direction of the screw hole and the upward screw holes as shown in the figure.

03

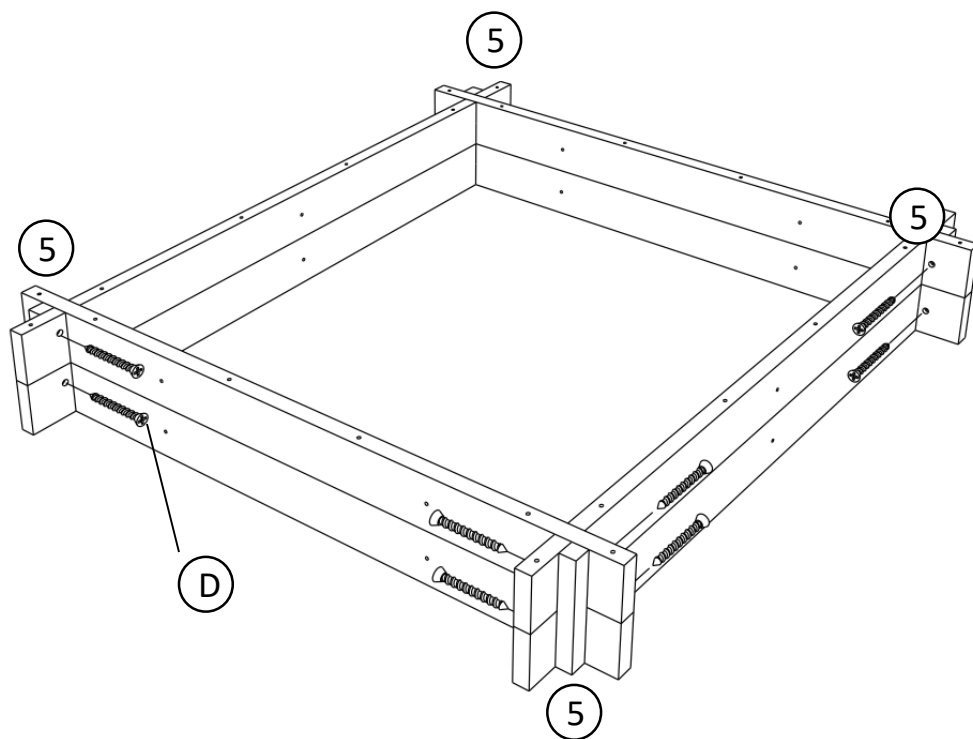


Stack Figure of step 2 on top of Figure of step 1, the upper side board 2 to the lower side board 4, the upper side board 1 to the lower side board 3. Use 8 PCS D screws to fix rail 5 as shown in the figure.

04

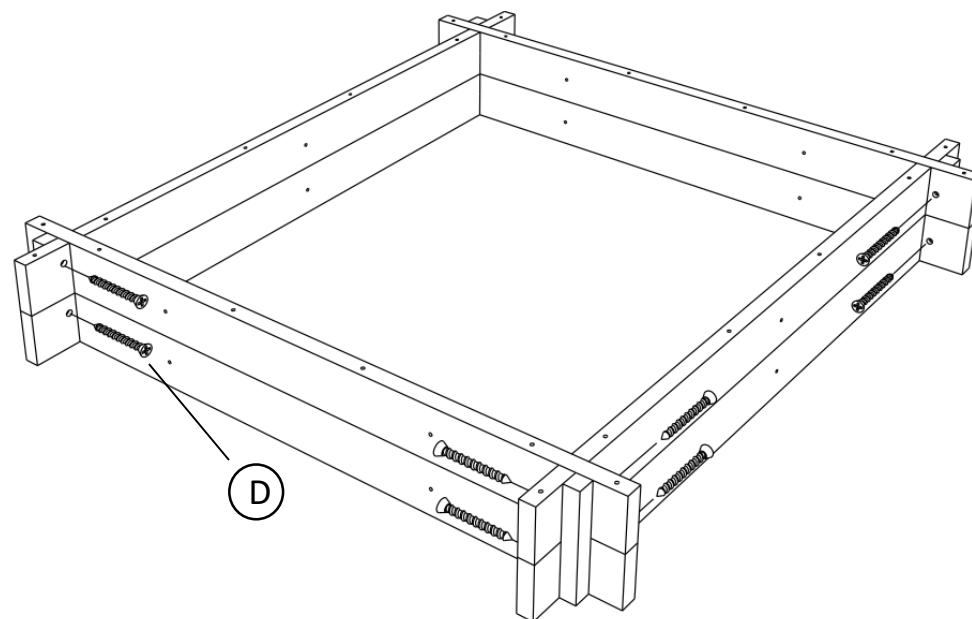

Use 8 PCS D screws to fix the other side rail 5.


 
05

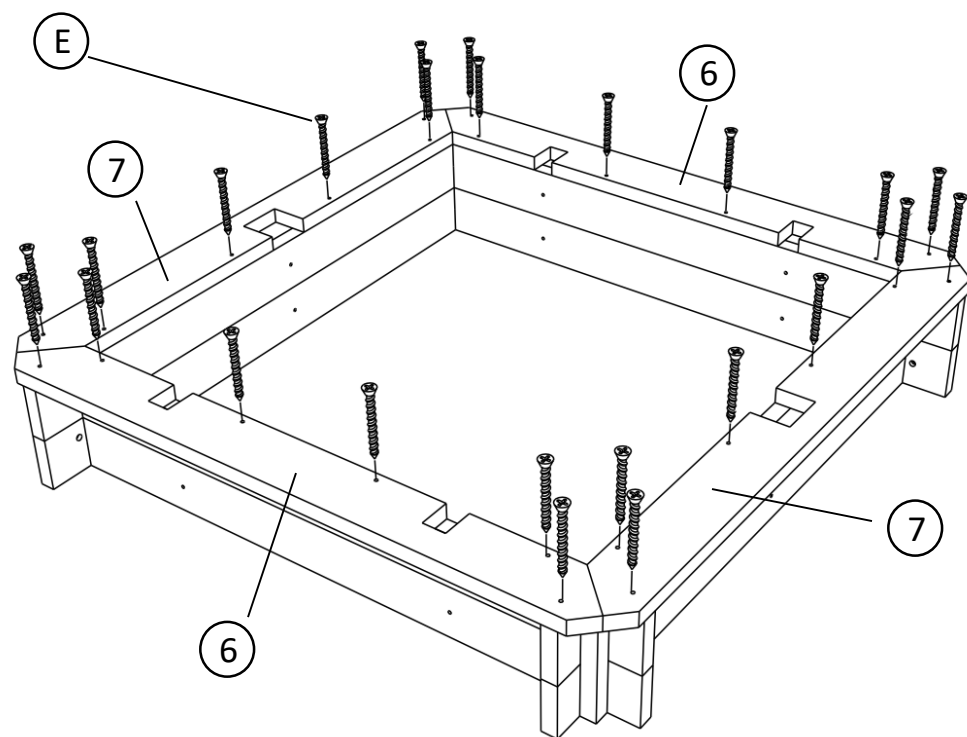

Stack side board 6 to side board 2, side board 7 to side board 1 with the concave holes facing upwards. Use 24 PCS E screws to fit into the holes and tighten.

08


 
06

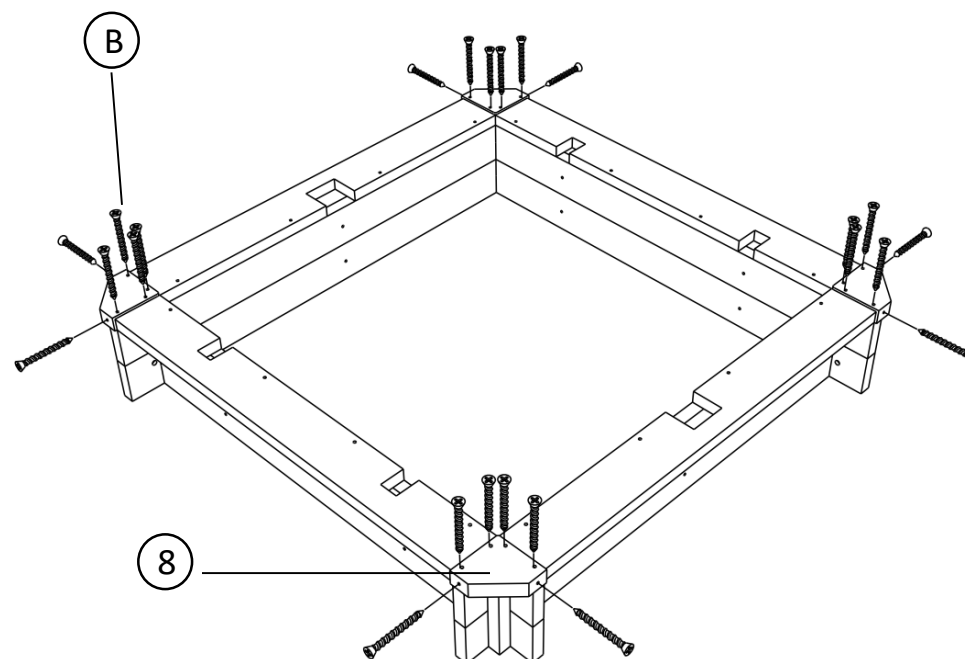

Fix bench 8 on the four corners with 24 PCS B screws.


09

07

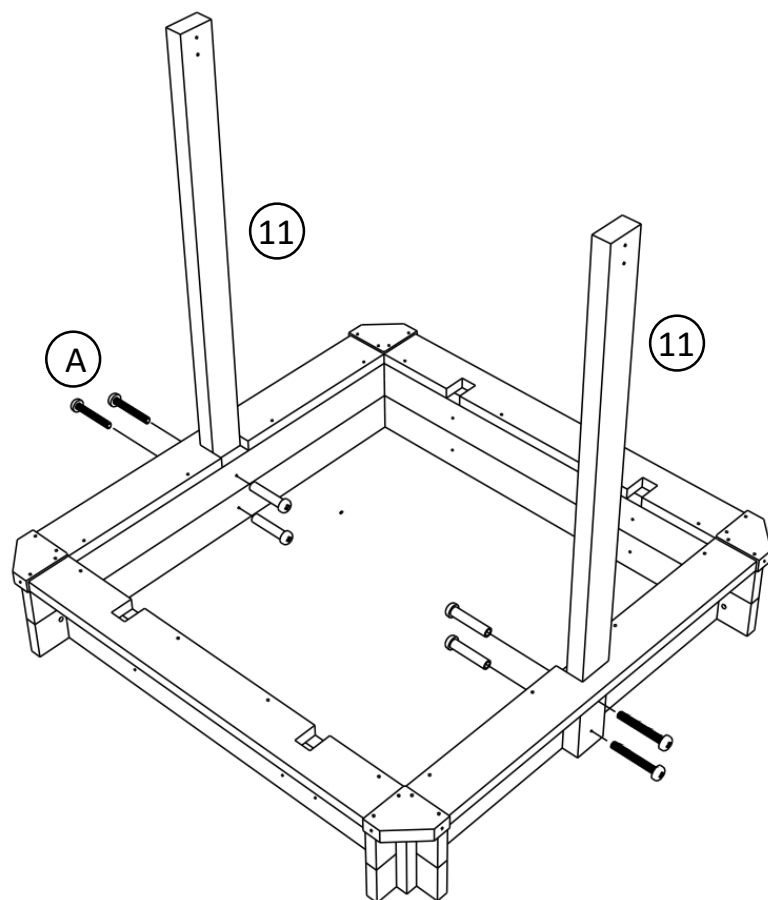
 


Fix flag 11 on the both sides with 4 PCS A screws.

08

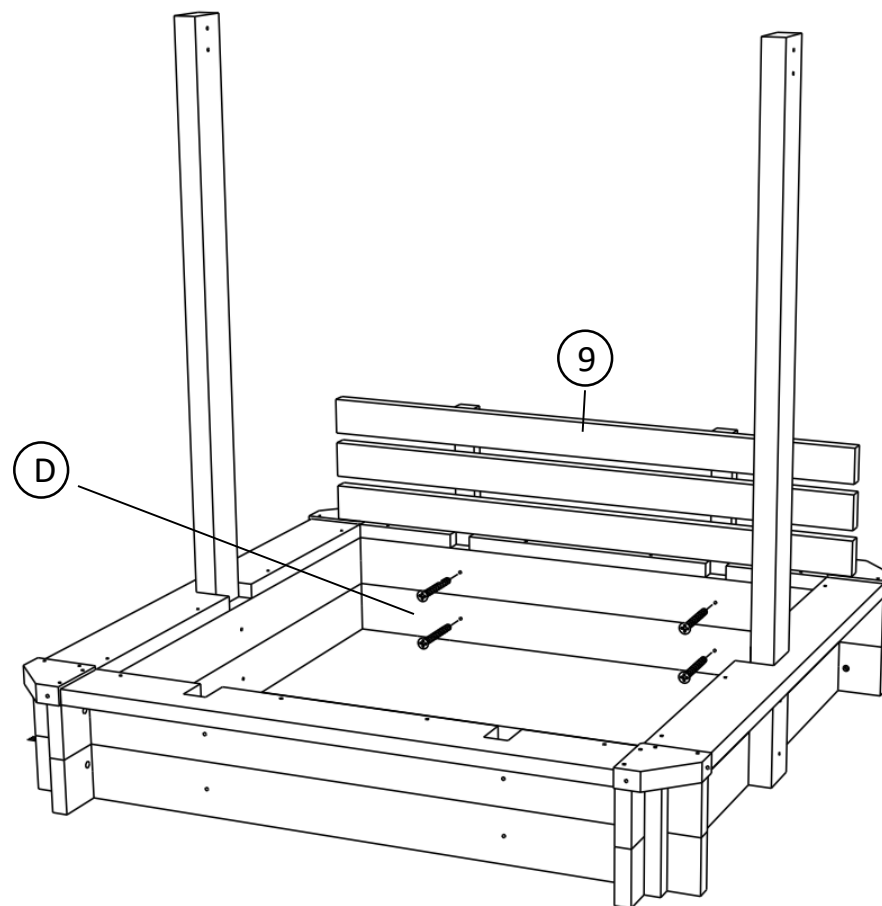


Fix disk 9 on the one side with 4 PCS B screws.

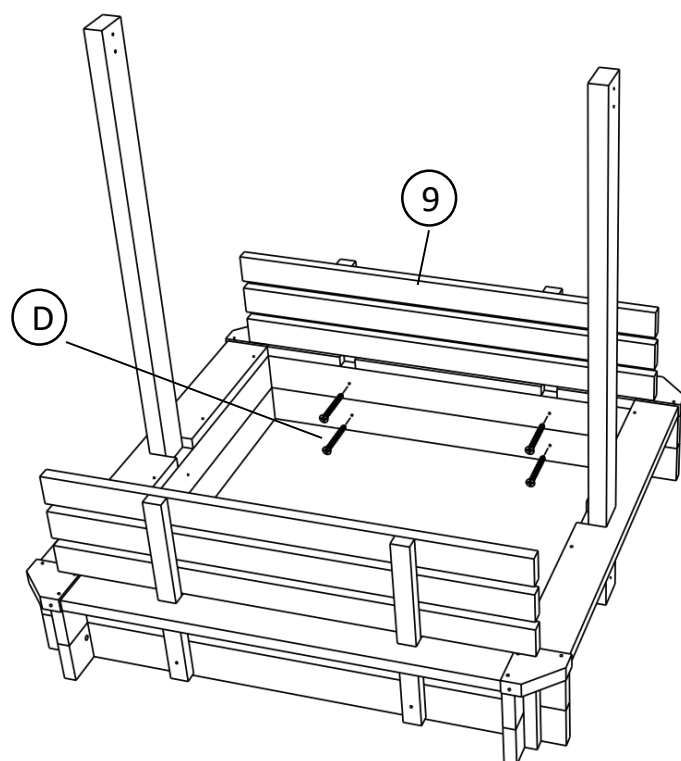09


 
Fix disk 9 on the other side with 4 PCS B screws.

12

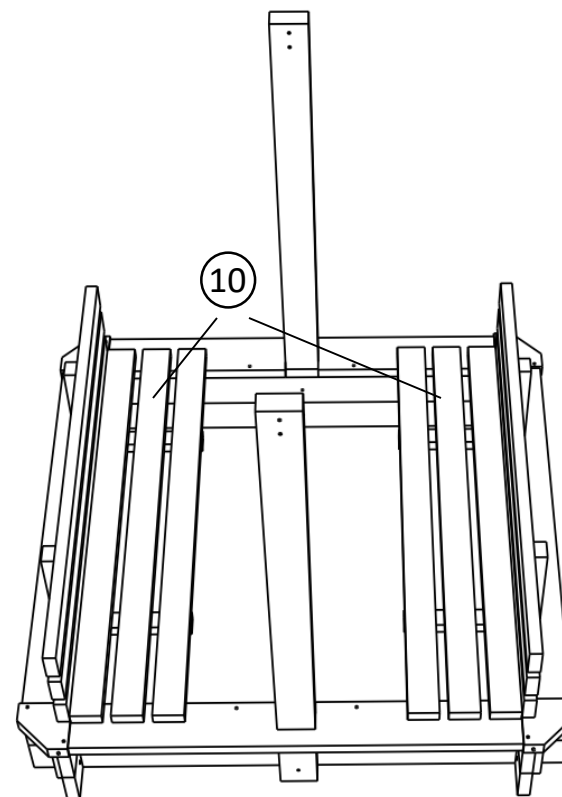10


Fix side board 10 on the both sides.

13

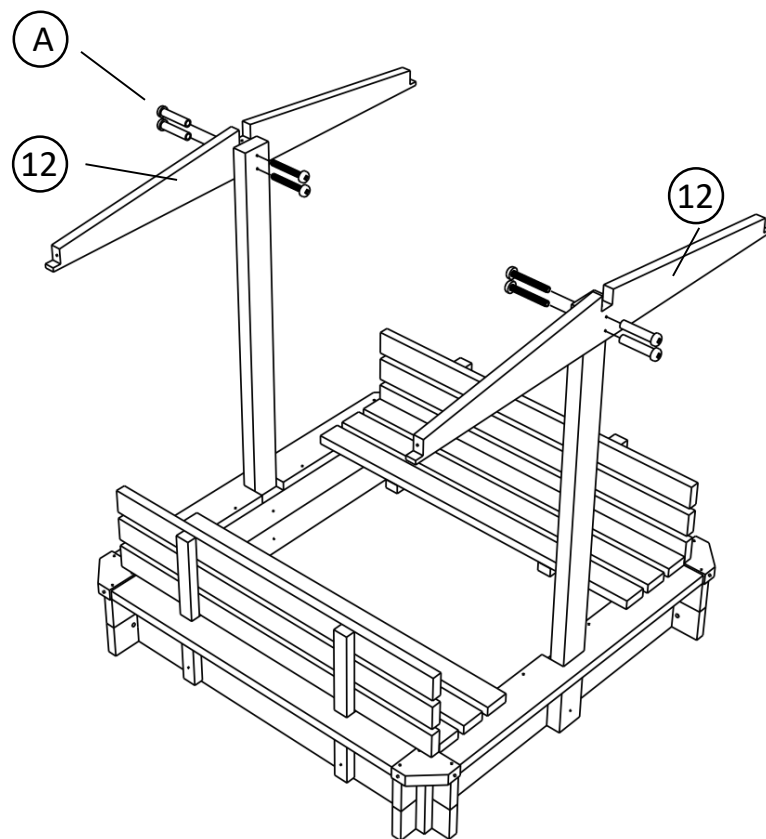11


Fix backrest 12 to flag 11 tightly with 4 PCS A screws.

14

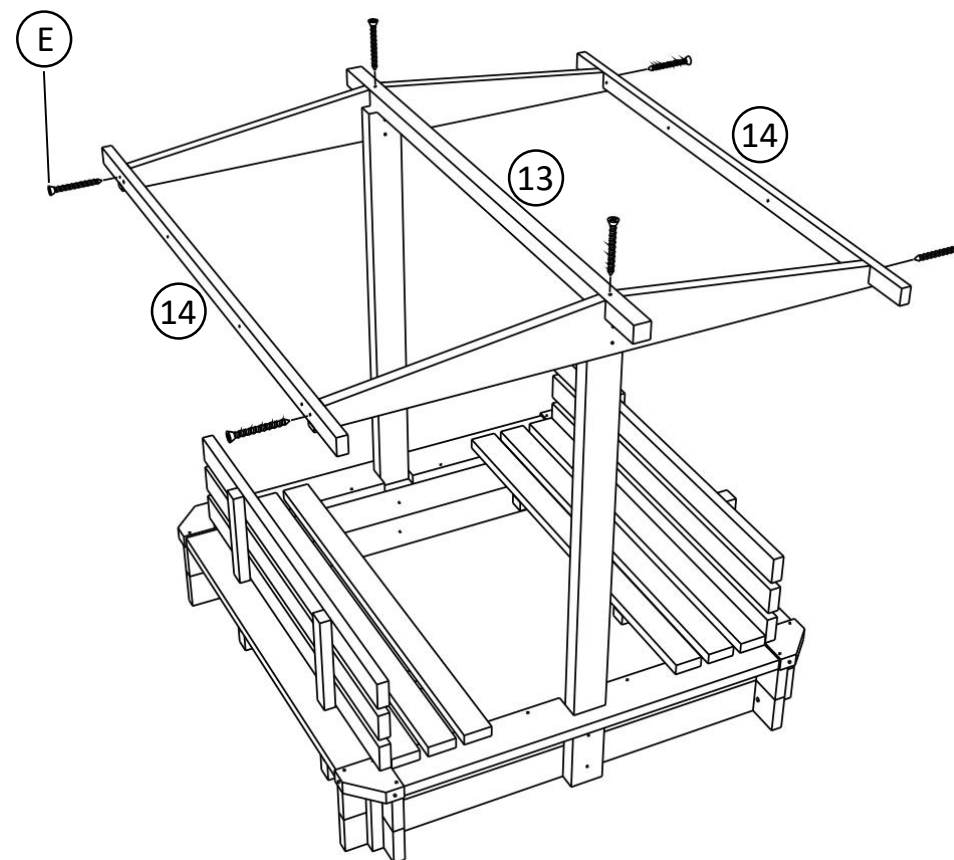12


 
Use 6 PCS E screws to fix bench 13 and side board 14 as shown.

15

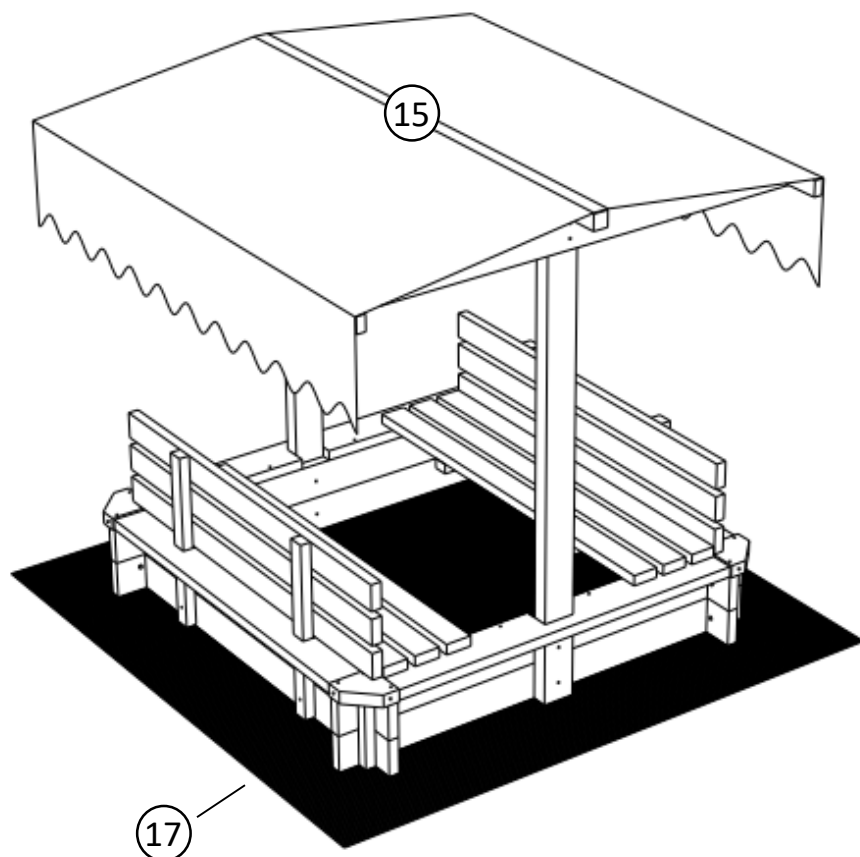13

Place the assembled components on mat 17 and lay out parts 15 evenly as shown.

16

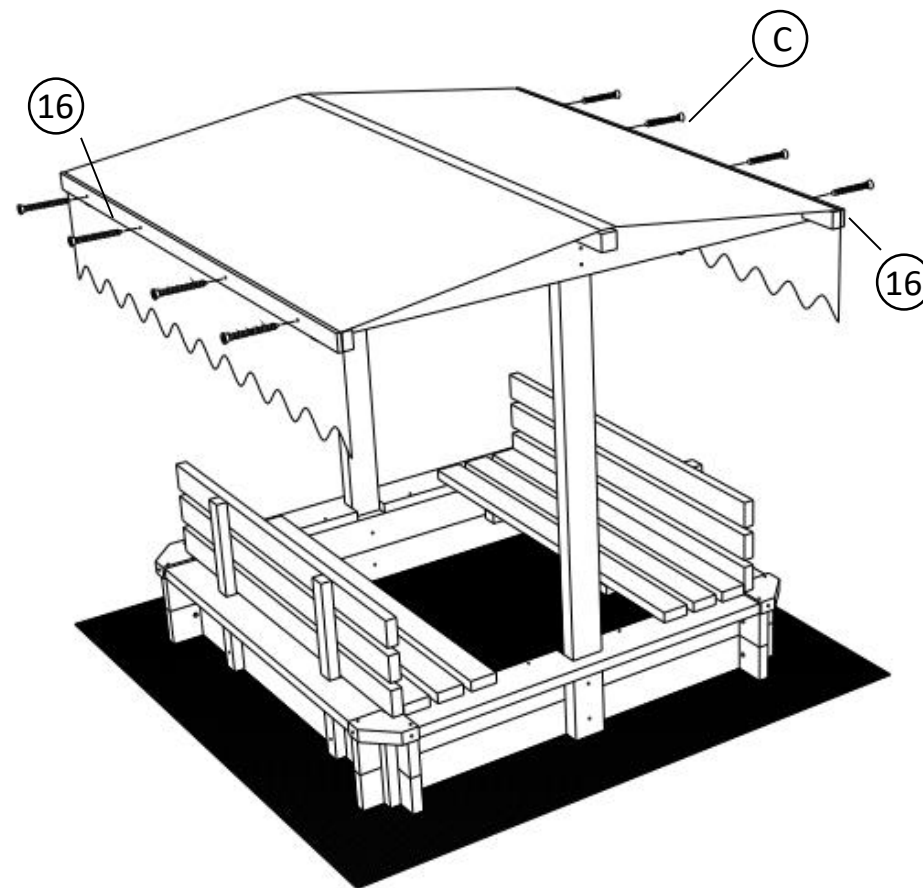14

Fix pole 16 on the both sides with 8 PCS C screws.

17