



61-Key Lighting Electric Keyboard

MU10084US

USA office: Fontana

GBR office: Ipswich

AUS office: Truganina

If you're having difficulty, our friendly customer team is always here to help.



USA:cs.us@costway.com AUS:cs.au@costway.com GBR:cs.uk@costway.com

03





# **Before You Start**

Please read all instructions carefully and keep it for future reference.

#### Warning

Attention: Children should use this product under the parental supervision.

**Danger:** Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.






# WARNING: CHOKING HAZARD

-Small parts.

Not for children under 3 years.

#### **General Warnings**

- ↑ The product must be installed and used under the supervision of an adult.
- Remove all packaging, separate and count all parts and hardware.
- Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- Me recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ★ Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.

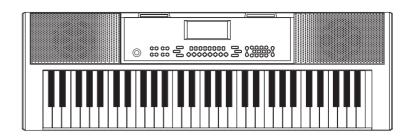


#### **NOTICE**

#### Please read over the NOTICE before use!

- Dedicated power adapter shall be used, and in case of adaptor damage, replace it immediately.
- The keyboard can only be disassembled by professionals, and no change can be made to the internal structure. In case of any functional abnormality during performance, stop performing immediately and send the keyboard to professionals for maintenance.
- When connecting the keyboard to other device, ensure both the keyboard and the device to be connected are powered off before connection.
- Do not turn and keep the volume to the maximum or to an uncomfortable degree for a long time when performing.
- Keep the keyboard away from heat source to protect its parts from damage.
- Prevent liquid, dust, small particle and other foreign matters from entering the case of the keyboard, which may result in element short circuit.
- Pull out the plug before cleaning the keyboard, and do not pull out the plug with wet hand.
- Please use dry and soft cloth to clean the keyboard. Paint, alcohol or other chemical solvents shall not be used for cleaning, which may damage the keyboard surface.
- Please pull out the plug after performing or when the keyboard is left unused for a long time.

### I. Panel Control and External Ports

# Top panel control

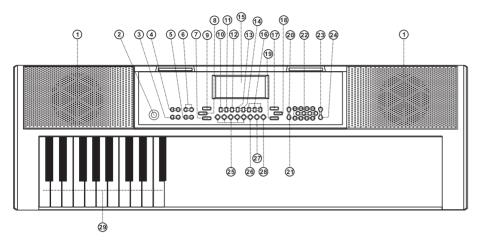

- 1 Loudspeaker
- (2) Power On/Off
- (3) Transpose
- 4 Master Volume
- Tempo
- 6 Accom Volume
- Start/Stop
- ® Fill-in
- 9 Sync

- 1 Single
- (11) Fingered
- (12) Record
- (13) Programming

(17) Demo all

(18) Demo one

- (14) Play 23 Timbre
- 15 LCD Display 24 Rhythm
- One-key\Follow\Ensemble 25) Memory M1-M4
  - **26** Metronome

(19) Keyboard Percussion

20 Sustain (21) Vibrato


2 Numbers

**28 KEY LIGHTING** 

 (29) Chord Zone

27 Split

# External ports on the rear panel




- AUDIO INPUT
- 3 MIC
- PHONES/OUTPUT
- 33 DC 9V

# II. Performance Preparation

# Installing batteries

The instrument requires the use of six 1.5V "AA" batteries. Open the battery compartment cover on the backside and load in the batteries one by one with correct polarity. Replace the cover when the compartment is fully loaded.(Batteries are not included) \*Energy or voltage dissipation will result in the loss of volume and timbre distortion. Discharged or bad batteries MUST be replaced immediately to ensure the effect of performance. Always remove the batteries when you are not using the product for a long time.

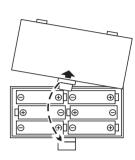

### Power adaptor

A dedicated power adapter shall be used. Connect the output end of the adaptor to the power port on the rear of the keyboard, and then the other end to the power socket. (Note: the input voltage of the adaptor shall be compatible with the power supply voltage)

### Audio output / external headphone

- ◆ Audio output: firstly, turn off the keyboard and the external audio devices, secondly, connect one end of the audio cable to the PHONES/OUTPUT port on the rear panel of the keyboard, and then connect the other end to the audio input port of the audio devices.
- ◆ Headphone connection: When connecting a headphone to the PHONES/OUTPUT port on the back of the keyboard, the loudspeaker will be disenabled automatically. In this way, you can perform without disturbing others.
- X Note! When using a headphone, do not turn up and keep the volume to the maximum for a long time, which may cause hearing loss.

# Mic Input and Audio Input

- ◆ Mic input: Connect a microphone to the MIC port to sing while playing the keyboard.
- ◆The Keyboard is equipped with a stereo input function. Sound signals from mobile phone, MP3 player, computer and other audio devices can be input into the keyboard system for playing. Firstly, turn off the Keyboard, connect one end of audio cable (not included) to the output port of an audio device, and the other end to the AUDIO INPUT port on the rear panel of the Keyboard, and then turn on the keyboard.

# III. Basic Performing Method

Press [ POWER ON/OFF ] button, and the keyboard will light up from both sides, and the LED display will turn on and show the current tempo "120". Then you may play the Keyboard as required.

#### Luminous keyboard

The keyboard is provided with luminous function, under the modes of playing, training and playing demo song, the light hint will be provided. The luminous function is defaulted to be enabled, press [KEY LIGHTING] to enable or disenable the luminous function.

#### Master volume adjustment

Press [ MASTER VOL +] or [ MASTER VOL - ] to increase or decrease the overall volume.

Press [MASTER VOL+] and [ MASTER VOL – ] simultaneously to reset to the default value.

The master volume can also control the accompaniment volume.

### Accompaniment volume adjustment

Press [ACCOM VOL +] or [ACCOM VOL -] to increase or decrease the accompaniment volume.

Press [ACCOM VOL +] and [ACCOM VOL -] simultaneously to reset to the default value.

#### Timbre selection

The keyboard provides 255 timbres, from "000" to "254", for your selection. When turning on the keyboard, the timbre selection function will be turned on automatically. When under other states, press the [TIMBRE] button to enable the timbre selection function. The timbre is defaulted to be "000", and it can be adjusted by pressing the corresponding number buttons or pressing the "+"/"-"button.

### Playing Percussion

This keyboard provides 61 kinds of keyboard percussions. Press the [KEYBOARD PERCUSSION] button to convert the key to percussion key. Each key corresponds to one percussion instrument. Press this button again to disenable the keyboard percussion function.

# Playing demonstration songs

50 demo songs have been stored in the Keyboard, from "000" to "049", for your selection.

Press the [Demo one] button, the system is in the state of playing, the present demo song repeatedly. For another one, press the button to stop the present song, and again to play the next one.

Press the [Demo all] button, the system is in the stage of playing all the demo songs successively.

In the course of playing demo songs, the timbre of the songs can be changed.

# IV. Auto Rhythm

# • Rhythm selection

This Keyboard provides 255 rhythms, from "000" to "254", for your selection, and the rhythm is defaulted to be "000". Press the [Rhythm] button to enable the rhythm selection function. After "RHYM" is shown on the display, press the number buttons or the "+"/"-" buttons to select other rhythms.

#### Rhythm control

- 1. Activation
- ◆ Press [ START/STOP ] to start accompaniment rhythm.
- ◆ Press [ SYNC ], after "SYN" is shown on the screen, play any key in the chord key zone (the 1st-19th key, from left), the accompaniment rhythm will be activated.
- 2. Fill-in

After the accompaniment rhythm is activated, press [FILL-IN] to have a temporary rhythm play during the accompaniment rhythm. If press and hold [FILL-IN], the temporary rhythm will continue.

- 3. Stop rhythm
- ◆ During the accompaniment rhythm, press [ START/STOP ] to stop the accompaniment rhythm.

#### Metronome

The metronome contains four tempos, 1/4, 2/4, 3/4 and 4/4, respectively. Press the [Metronome] continuously to select the four tempos. Press the [Metronome] bottom again to stop the tempo.


# Tempo adjustment

Press [TEMPO + ] or [TEMPO – ] to increase or decrease the rhythm speed. Pressing the two buttons simultaneously may reset to the default.

### V. Auto Bass Chord

# Single chord

# Single Chord Fingering

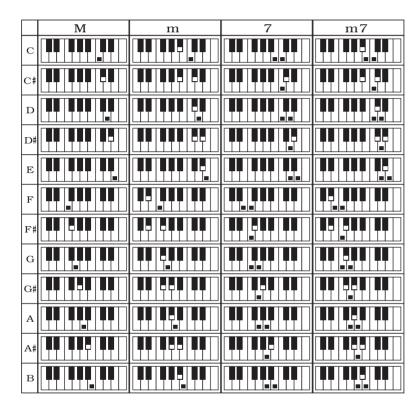


When the rhythm is activated, press [ SINGLE ]. After the "SIN" is shown on the screen, you can play a single chord on the keys in the chord zone of the keyboard.

Press [ SINGLE ] again, the single chord function will be disenabled.

# • Fingered chord

Fingered Chord Fingering (C Key)
(The C key fingered chord fingering is as shown in the following figure, and the rest can be obtained by analogy)

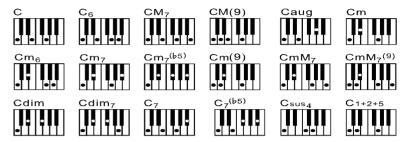

When the rhythm is activated, press [ FINGERED ]. After the "FIN" is shown on the screen, you can play a fingered chord on the keys in the chord zone of the keyboard.

When [ FINGERED ] is pressed again, the fingered chord function will be disenabled

# VI. Status memory function

With the status memory function, you can save the tone, rhythm, tempo and other parameters to be changed during playing, for fast shifting. This keyboard is equipped with 4 status memories, which can be flexibly called at any time during playing.

# Storage of status memory

Set the tone, rhythm, tempo and chord as required, and then press the [MEMORY] button and one of [M1] to [M4] to save the current status.

# Calling of status memory

Press any one of [M1] to [M4] to call the setting parameters saved under this memory to replace the current status.

XNo power failure protection is provided for the saved contents, and the saved contents will loss after the electronic keyboard is restarted after power cut.

#### VII. Effect Control

### Transposing function

With the transposing function, you can play music of other tunes with C-tune fingering method. Press the [Transpose-] to decrease the tone by half-tone (minor second), and the tune in C-tune keyboard zone will change to B-tune. Press the [Transpose+] to increase the tone by half-tone (minor second), and the tune in Ctune keyboard zone will change to #C tune or bD tune. When pressing the [Transpose-] for twice, C-tune will shift to bB-tune, when pressing the [Transpose+] for five times, C-tune will shift to F-tune. Press [Transpose+] and [Transpose-] simultaneously to recover to C-tune "00". Press [Transpose +] and [Transpose -] to adjust the level from "P-6" to "P06".

#### Sustain function

Press [Sustain], "SUS" will show on the display, and the sustain effect will be activated.

Press this button again to disenable the sustain effect.

#### Vibrato function

Press [Vibrato], "VIB" will show on the display, and the vibrato effect will be activated.

Press this button again to disenable the vibrato effect.

#### Keyboard splitting function

Press [SPLIT] to enable the keyboard splitting function, "SPLIT" will show on the display. 24 keys on the left of the keyboard will split with the remaining keyboard. While the left keyboard zone will increase by one octave and maintain the original tone, the right keyboard zone will decrease by one octave to maintain the same pitch with the left keyboard zone. The tone of the right keyboard zone can be set as needed so different tones can be played by the left and right keyboard zones at the same time.

Press [SPLIT] again to disenable this function.

# VIII. Recording and Rhythm Programming

### Recording

Press the [ REC ] button "REC" will show on the screen display. Under this mode all playing notes will be recorded. When the storage is full, "REC" will blink on the display, and recording will stop automatically.

- ◆ Press the [ PLAY ] button to playback the recorded notes, and "PLAY" will show on the screen display. On completion of playback, it will return to the recording mode. You can record a new melody, or you can press [ PLAY ] to playback the recorded melody.
- ◆ Press [ START/STOP ] or press [ REC ] again to disenable the recording function, and all recorded notes will be removed.

# • Rhythm programming

When the rhythm programming function is enabled by press [ PROG ], "PRG" will show on the screen, and the keyboard percussion will be activated. Under this mode, you can create custom rhythms by playing the corresponding percussion key.

- ♦ 32 percussions can be recorded at maximum; after that "PRG" will blink on the screen and programming will stop automatically.
- ◆ Press [ PLAY ] to playback the programming rhythm. By pressing [ PLAY ] again to stop playback, "PRG" will show on the screen and programming function will be enabled. You can re-programming hythms or you can press the [ PLAY ] button again to playback.

Press [ PLAY ] to playback the programming rhythm.

◆ Press [ START/STOP ] or press [ PROG ] again to disenable the programmingfunction, and all recorded rhythm will be removed.

# IX. Luminous Key Three-step Intelligent Training

# Training 1:ONE-KEY

Press [ ONE-KEY ] to enable the one-key training function. You can select the song to be learned by pressing the number buttons or the "+"/"-" button. The luminous keyboard will light on according to the main melody notes, indicating the note to be played, and you can perform by following the guidance of the lighted key. Training 1 aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes, and the screen will show the correct notes.

After one song is finished, repeat the current song to be learned.

Press[ START/STOP ] or press [ ONE-KEY ] to disenable the training function.

# • Training 2: FOLLOW

Press [ FOLLOW ] to enable the Follow Training function. You can select the song to be learned by pressing the number buttons or the "+"/"-" button.

With teaching Training 2, you can learn by following the correct playing notes. You can play according to the demonstration song, the key will light on according to the melody notes, indicating the notes to be played, and you can play correctly by following the guidance. You can also learn by following the notes shown on the screendisplay, it will wait for you to play the correct note before it moves to the next one.

 $\times$  Note: Under this state, the Keyboard plays only the correct notes, and gives no response to the wrong notes.

Press [ START/STOP ] or press [ FOLLOW ] to disenable the training function.

### • Training 3: ENSEMBLE

Press [ ENSEMBLE ] to enable the Ensemble training function. You can select the song to be learned by pressing the number buttons or the "+"/"-" button.

Training 3 aims at duration learning and correct notes play learning. The keyboard will screen the keynote and ensemble with you. The luminous keyboard will light on according to notes of the main melody, indicating the notes to be played, and you can play correctly by following the guidance of the luminous keyboard. You need to play the correct note according to the correct duration of the song. If a note is not played within 3 seconds, the keyboard will automatically play the correct note.

After one song is finished, repeat the current song to be learned.

Press [ START/STOP ] or press [ ENSEMBLE ] to disenable the training function.

### **Appendix**

#### I. Timbre Table

i. Illinoid labid	
000 Acoustic Grand Piano	046 Flute
001 Rhodes Piano	047 Pan Flute
002 Chorused Piano	048 Lead (Square)
003 Celesta 1	049 Banjo
004 Music Box 1	050 E-Tone Piano
005 Vibraphone	051 Electric Grand Piano
006 Marimba 1	052 Honky-tonk Piano
007 Xylophone 1	053 Harpsichord 1
008 Percussive Organ	054 Clavi 1
009 Rock Organ	055 Glockenspiel 1

010 Church Organ 056 Tubular Bells 1
011 Reed Organ 1 057 Dulcimer 1
012 Accordion 058 Drawbar Organ 1
013 Harmonica 059 Tango Accordion 1
014 Acoustic Guitar (Nylon) 060 Electric Guitar
015 Acoustic Guitar (Steel) (Muted)1

016 Electric Guitar (Jazz)
017 Electric Guitar (Clean)1
018 Distortion Guitar
019 Acoustic Bass
061 Overdriven Guitar 1
062 Contrabass 1
063 Tremolo Strings
064 Pizzicato Strings 1

073 Muted Trumpet 1

074 Synth Brass 2

075 English Horn 1

020 Electric Bass (Finger) 065 Timpani 021 Electric Bass (Pick) 066 String Ensemble 2

021 Electric Bass (Pick)066 String Ensemble022 Fretless Bass067 Synth Strings 1023 Slap Bass 1068 Synth Strings 2024 Slap Bass 2069 Choir Aahs025 Synth Bass 1070 Voice Oohs026 Synth Bass 2071 Synth Voice027 Violin072 Orchestra Hit

029 Cello 030 Orchestral Harp 031 String Ensemble 1

028 Viola

 031 String Ensemble 1
 076 Recorder

 032 Trumpet
 077 Blown Bottle 1

 033 Trombone
 078 Shakuhach

 034 Tuba
 079 Whistle

 035 French Horn
 080 Ocarina

 036 Brass Section
 081 Lead (Sawtoot

 036 Brass Section
 081 Lead (Sawtooth)1

 037 Synth Brass 1
 082 Lead (Calliope)1

 038 Soprano Sax
 083 Lead (Bass+Lead)1

 039 Alto Sax 1
 084 Pad (Warm)1

o Sax 1 084 Pad (Warm or Sax 085 Sitar

 040 Tenor Sax
 085 Sitar

 041 Baritone Sax
 086 Shamisen 1

 042 Oboe
 087 Koto 1

 043 Bassoon
 088 Kalimba 1

 044 Clarinet
 089 Bag Pipe 1

 045 Piccolo
 090 Fiddle 1

12 045 Piccolo 090 Fiddle 1 13

			· ·
091 Shanai 1	141 Xylophone 2	191 Bari & Tenor 1	224 Puff Harmonica 2
092 Tinkle Bell	142 Shanai 2	192 Soft Sax 2	225 Muted Trumpet 2
093 Agogo 1	143 Dulcimer 3	193 Attack Harp 2	226 Upright Piano 2
094 Steel Drums	144 English Horn 2	194 Didgeridoo 2	227 Soft Accord 2
095 Woodblock 1	145 Electric Guitar (Clean)3	195 Dual Horns 2	228 Uillean Harp 2
096 Taiko Drum	146 Shamisen 2	196 Hard Barsoon 2	229 Tron Flute 2
097 Melodic Tom 1	147 Koto 3	197 Kawala 2	230 Blown Bottle 2
098 Synth Drum	148 Kalimba 2	198 Soft Guitar 2	231 Indian Flute 2
099 Reverse Cymbal	149 Steel Bell 1	199 Mute Barafon 2	232 Slow Violin 2
100 Jungle Bass 1	150 Alto Sax 2	200 Lead (Bass+Lead)2	233 Electric Guitar
101 Pi Pa 1	151 Woodblock 2	200 Lead (Bass+Lead)2 201 Melodic Tom 2	(Muted)2
102 Feedback Gt. 1	152 Synth Harpsi. 1	202 Grow Guitar 2	234 Multi Wind 2
103 Uillean Harp 1	153 Attack Clav. 1	203 Lead (Sawtooth)2	
104 Jazz Bass 1		,	235 Electric Vibraphone 2
	154 Crystal 1	204 Jazz Bass 2	236 Bodhran 2
105 Flugel Horn 1	155 Bag Pipe 2	205 Chorus Guitar 2	237 Mellow Fm 2
106 Muted Horn 1	156 Barafon 1	206 Feedback Gt. 2	238 Multi Reed 2
107 Wood Barafon 1	157 Organ Flute 1	207 Fiddle 2	239 Contrabass 2
108 Electric Piano 1	158 Kalimba 3	208 Organ Flute 2	240 Barafon 2
109 Multi Reed 1	159 Reed Horn 1	209 Flugel Horn 2	241 Wind Organ 2
110 Guitar Pinch 1	160 Hard Vibe 2	210 Crystal 2	242 12-str. Gt 2
111 Multi Wind 1	161 Twin Trombones 1	211 Soft Clav. 2	243 Attack Barafon 2
112 Clavi 2	162 Synth Harpsi. 2	212 Overdriven Guitar 2	244 Lead (Calliope)2
113 Celesta 2	163 Attack Clav. 2	213 Ukulele 2	245 Viola Attack 2
114 Harpsichord 2	164 Chorus Guitar 1	214 Tango Accordion 2	246 Pad (Warm)2
115 Mellow Fm 1	165 Steel Bell 2	215 Twin Trombones 2	247 Oct Harp 2
116 Pi Pa 2	166 Tsugaru	216 Jazz Organ 2	248 Bari & Tenor 2
117 Upright Piano 1	167 Oct Harp 1	217 Bright String 2	249 Agogo 2
118 Electric Piano 2	168 Bodhran 1	218 Reed Horn 2	250 Flugel Horn 3
119 Hard Vibe 1	169 Tubular Bells 2	219 Glockenspiel 2	251 Organ Flute 3
120 Wood Barafon 2	170 Suona	220 Drawbar Organ 2	252 Fiddle 3
121 Music Box 2	171 Castanets	221 Muted Horn 2	253 Feedback Gt. 3
122 Marimba 2	172 Attack Harp 1	222 Pizzicato Strings 2	254 Chorus Guitar 3
123 Santur	173 Electric Vibraphone 1	223 Nay 2	
124 Reed Organ 2	174 Soft Sax 1	•	
125 Puff Harmonica 1	175 Soft Clav. 1	II. Rhythm Table	
126 Ukulele 1	176 Soft Guitar 1	•	016 Pasodoble
127 12-str. Gt 1	177 Grow Guitar 1	001 Club Pop	017 Cha Cha
128 Guitar Pinch 2	178 Didgeridoo 1	002 Fusion	018 Fox Trot
129 Slow Violin 1	179 Attack Barafon 1	003 Rap Pop	019 Rumba 1
130 Bright String 1	180 Mute Barafon 1	004 British Pop 1	020 Samba 1
131 Jungle Bass 2	181 Nay 1	005 Twist	
132 Indian Flute 1	182 Soft Santur	006 8 Beat Pop 1	021 Samba 2
133 Clavi 3	183 Dual Horns 1	007 Fusion Shuffle	022 Schlager Rock
134 Celesta 3	184 Hard Barsoon 1	008 Funk	023 Tango 1
135 Church Bells	185 Tron Flute 1	009 Funk Shuffle	024 Tango 2
		010 Rock'n Roll 1	025 Disco Latin 1
136 Marimba 3	186 Kawala 1	011 Rock Pop	026 Calypso
137 Dulcimer 2	187 Jazz Organ 1	012 Rock Shuffle	027 Latin Rock
138 Reed Organ 3	188 Soft Accord 1	013 Rock Cha Cha	028 Bolero
139 Electric Guitar (Clean)2	189 Wind Organ 1	014 Straight Rock	029 Analog Ballad 1
140 Koto 2	190 Viola Attack 1	015 Folk Rock	030 E_Ballad
		5.51 SIK 1 (SOK	

17

031 Country Ballad	
032 Electro Pop	
033 Pop New Age 1	
034 8 Beat Modern 1	
035 R&B Ballad 1	
036 Disco Fox 1	
037 Disco Funk 1	
038 Disco Party 1	
039 Disco Samba 1	
040 Disco Soul	
041 Disco Trot	
042 Rave 1	
043 Funky Disco 1	
044 Techno 1	
045 Techno 2	
046 Saturday Night 1	
047 Club Latin 1	
048 Disco Hands 1	
049 Country	
050 China 1	
051 China 2 052 China 3	
053 China 4	
054 China 5	
055 8 Bt Up Tempo	
056 16 Beat Pop	
057 16 Bt Shuffle 1	
058 16 Bt Shuffle 2	
059 16 Bt Ballad 1	
060 16 Bt Ballad 2	
061 Soul	
062 Pop Rock 1	
063 Pop Rock 2	
064 8 Bt Rock Balld	
065 16 Bt Rock Balld	
066 6/8 Hvy Rock	
067 16 Beat Rock	
068 Bossa Nova 1 069 Bossa Nova 2	
070 Salsa	
071 Mambo	
072 Beguine	
073 Bolero Lento	
074 Espagnole	
075 Reggae 12	
076 Pop Reggae 1	
077 Slow Rock 1	
078 Slow Rock 2	
079 R&B	
080 Dance Pop 1	

081 Dance Pop 2	
082 Euro Beat	
083 Euro House	
084 Hip Hop	
085 Swing	
086 Big Band Swing	
087 Jazz Quartet	
088 Dixieland	
089 Bluegrass 1	
090 Bluegrass 2	
091 8 Bt Country	
092 Country Rock 093 Cntry Ballad	
094 March 1	
095 March 2	
096 Polka	
097 Pop Waltz	
098 Jive	
099 Vienna Waltz	
100 Hoedown	
101 Finger Pickin	
102 Jazz Latin 1	
103 Unplugged 104 Boogie	
105 Cumbia 2	
106 Classical Slow Rock	
107 European Disco 1	
108 Big Band Middle 1	
109 Christon	
110 Pasodobl	
111 Cat Groove 1	
112 Jazz Tango 1 113 Fast Gospel	
114 Big Band Fast 1	
115 Tricks Mambo	
116 Funky Disco 2	
117 Latin Salsa	
118 Pop New Age 2	
119 Jazz Swing 1	
120 Trip Hop	
121 Rave 2 122 Acoustic Ballad 1	
123 India's Indigenous	
124 Indonesian Pop	
125 Pop Ballad	
126 South Africa Country	
127 South Africa Polka	
128 Tarantella 1	
129 Bright Pop	
130 Pub Piano 1	

131	West Shuffle
	Big Band Fast 2
	Espag Nol 1
	Disco Funk 2
135	Pop Mambo
	Europe Swing 1
	Tricks Latin
	Disco Samba 2
139	Latin Waltz
140	Dance Pop 3
	Jazz Rock 1
	Detroit
	Fanatical Sand
	European Rock 1
	Ground Beat
	8 Beat Modern 2
	Jazz Disco 1
	Dixie Jazz 1
149	Disco Chocolate
	Disco Latin 2
	Synth Boogie
	Saturday Night 2
	Club Dance 1
154	Tricks Bossa Nova Tarantella 2
	USA March
	Espag Nol 2
158	Club Latin 2
	Jazz Cha Cha 1
	Country Cha Cha
	Disco Party 2
	Modern R&B 1
	8 Beat Pop 2
	Country Jazz
	Soul Rock 1
166	Rumba 2
167	Samba 3
168	Modern R&B 2
	Club Dance 2
170	Country Bossa Nova Jazz Bo 1
171	Jazz Bo 1
	Modern Cha Cha 1
	Pop Reggae 2
	Rock Samba 1
	Jazz 8 Beat 1
	Disco
	Seville 1
	Disco Hands 2
	Rock Ballad
180	Mixed Bossa Nova

101 Jazz 16 Doot 1	
181 Jazz 16 Beat 1	
182 Single 16 Beat 1	
183 Love Song	
163 Love Song	
184 Single 16 Beat 2	
105 Diago Foy 2	
185 Disco Fox 2	
186 Pop Rock 3 187 Tijuana Waltz	
107 Tilliana Malta	
101 Hjuana Wanz	
188 British Pop 2	
189 Show Tune 1	
109 Show Turle 1	
190 Schlager Alp	
191 Single Rock	
191 Silligle Rock	
192 Swing Waltz	
193 Slow Waltz	
194 Cat Groove 2	
195 Country Slow Rock	
196 Rock Disco 1	
197 16 Beat Shuffle 1	
198 Jazz 8 Beat 2	
199 Casa	
200 Guad Dance 1	
201 Jazz Cha Cha 2	
202 Country Waltz	
203 European Rock 2	
204 Caribbean Dance 2	
205 Jazz Disco 2	
206 Medium Jazz	
200 Mcdidili Jazz	
207 Piano Ballad	
208 70's Disco	
209 Jazz Rock 2	
210 Europe 8 Beat 1	
211 Seville 2	
212 Rumba 3	
213 Soul Rock 2	
214 European Disco 2	
215 Analog Ballad 2	
216 Pub Piano 2	
217 Europe Rumba	
218 Rock'n Roll 2	
2 10 ROCK II ROII 2	
219 Disco Trop	
220 Rock Salsa 1	
221 Europe 8 Beat 2	
222 Europe Samba	
223 Show Tune 2	
224 Jazz 16 Beat 2	
225 Rock Samba 2	
226 Jazz Waltz 2	
227 Europe Reggae	
228 Modern Cha Cha 2	
229 R&B Ballad 2	

231 Jazz Bossa Nova
232 Rock Salsa 2
233 Slow & Easy
234 Hip Waltz 1
235 Jazz Latin 2
236 Rock Disco 2
237 Jazz Tango 2
238 Analog Ballad 3
239 Europe Swing 2
240 Hip Waltz 2
241 Jazz Swing 2
242 Party Pop
243 Jazz Club
244 Guad Dance 2
245 Jazz Bo 2
246 Dixie Jazz 2
247 Acoustic Ballad 2
248 Jazz Slow Rock
249 16 Beat Shuffle 2
250 Polka Pop
251 Latin Party Pop
252 Parranda
253 Carnival
254 60's Vintage Pop

16 080 Dance Pop 1 130 Pub Piano 1 180 Mixed Bossa Nova 230 Rock Boogie





# **Return / Damage Claim Instructions**

#### 

In case a return is required, the item must be returned in original box. Without this your return will not be accepted.

# $\triangle$ Take a photo of the box markings.

A photo of the markings (text) on the side of the box is required in case a part is needed for replacement. This helps our staff identify your product number to ensure you receive the correct parts.

#### 

A photo of the damage is always required to file a claim and get your replacement or refund processed quickly. Please make sure you have the box even if it is damaged.

# $\boldsymbol{\triangle}$ Send us an email with the images requested.

Email us directly from marketplace where your item was purchased with the attached images and a description of your claim.