

## USER'S MANUAL

### Kids Kitchen Cart TP10051



# Before You Start

Please read all instructions carefully and keep it for future reference.

## General Security Warning

Caution: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

Danger: Lack of attachment may cause a risk of tipping.



**WARNING:**  
**CHOKING HAZARD**-Small parts.  
Not for children under 3 years.

## Warning for Assembly


⚠ Assembled only by adults

⚠ Remove all Packaging, separate and count all parts and hardware.

⚠ Read through each step carefully and follow the proper order.

⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.


⚠ Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.

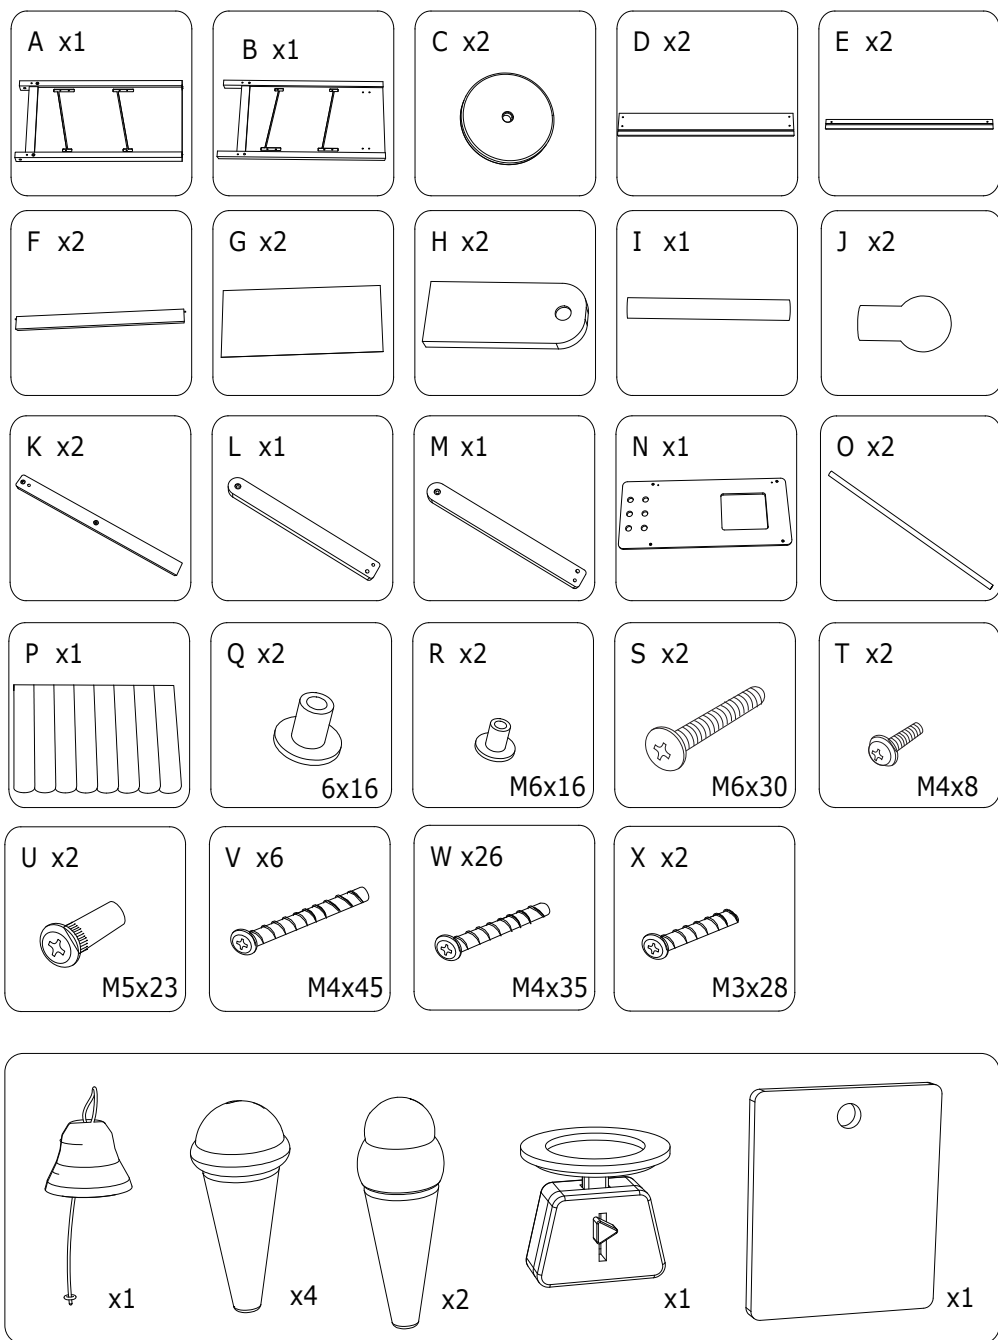

# 01

EN:


Assemble the wheels C on the board A, and fix the wheels C with screws S, bushings Q and nuts R.

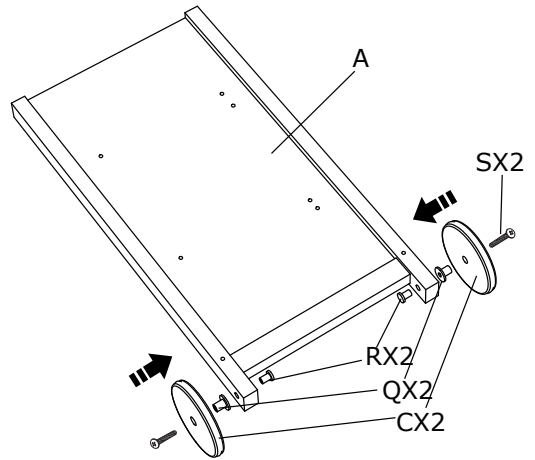

# 02

EN:


Assemble boards D, E and F with screws V and W based on the assembly in step 1.

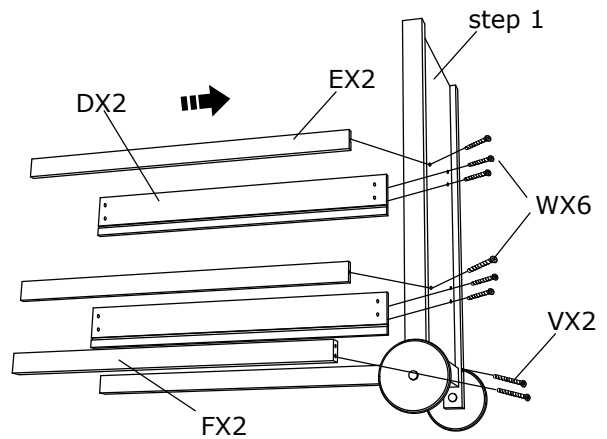

# 03

EN:


Install boards G on the basis of the assembly in step 2.

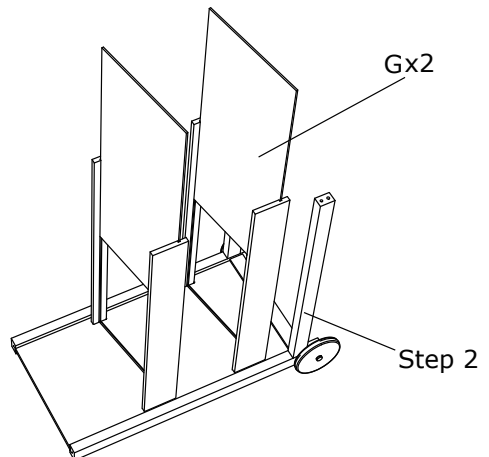

## 04

EN:


Connect boards H with wooden stick I with the screws W.

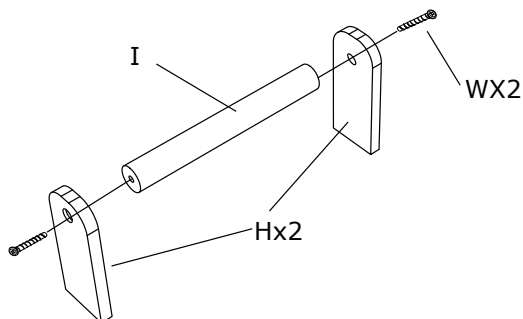

## 05

EN:


On the basis of the assembly in step 4, use screws W to assemble the board B.

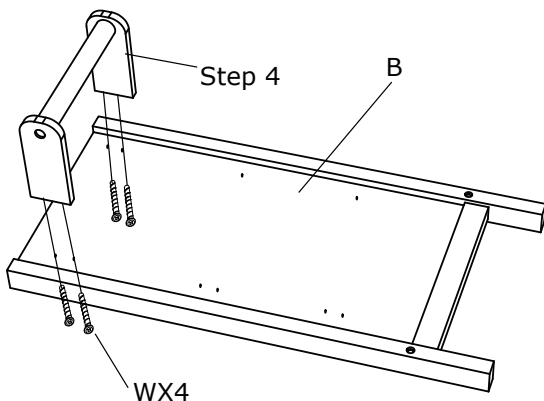

## 06

EN:


On the basis of the assembly in step 3, use screws W and V to assemble the assembly of step 5.

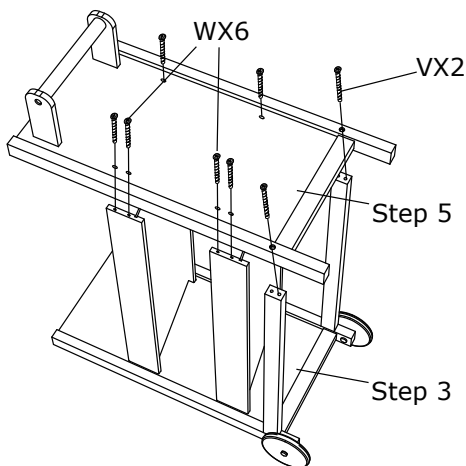

## 07

EN:


Assemble part J to board K with screw X.  
Do this twice.

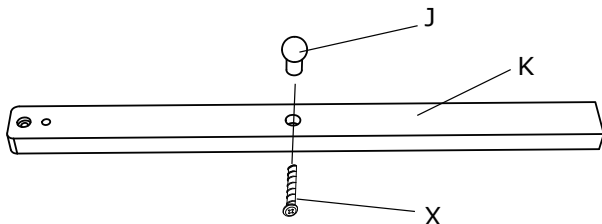

## 08

EN:


On the basis of the assembly in step 7, use screws W to assemble the board N.

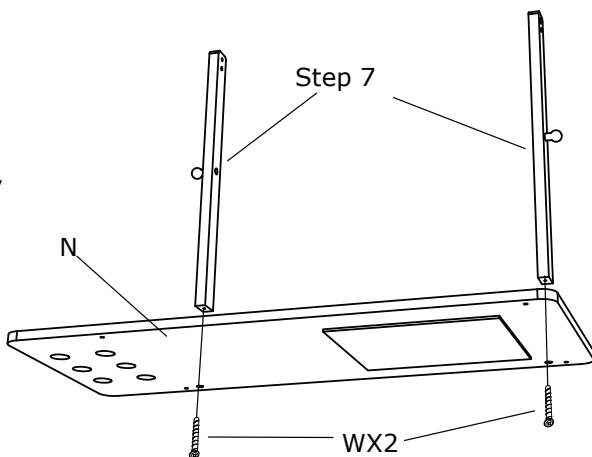

## 09

EN:


On the basis of the assembly in step 8, use nuts U and screws T to assemble boards L and M, and then thread the screws V into the top holes of boards K to facilitate the assembly of wooden sticks later.

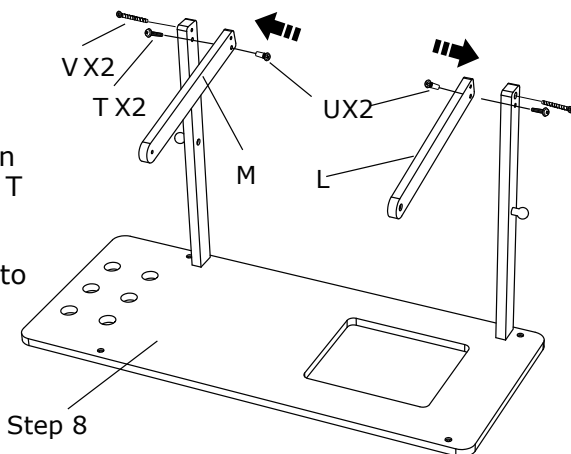

## 10

EN:


Thread the sticks O onto the cloth P.

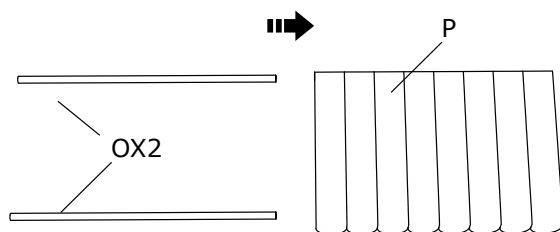

## 11

EN:


On the basis of the assembly in step 9, use screws W and screws V (threaded on boards K) to install the assembly of step 10.

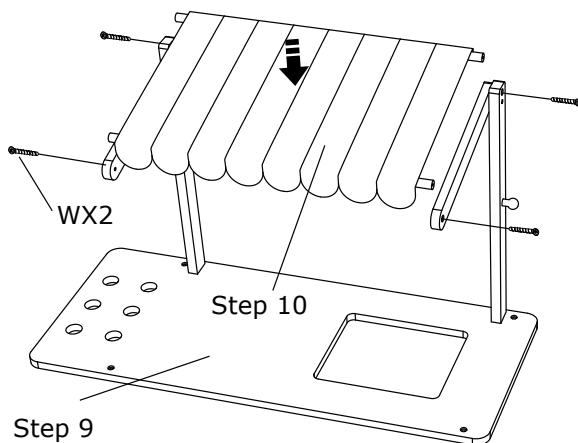


## 12

EN:

Install the assembly of step 11 to the assembly of step 6 with screws W.

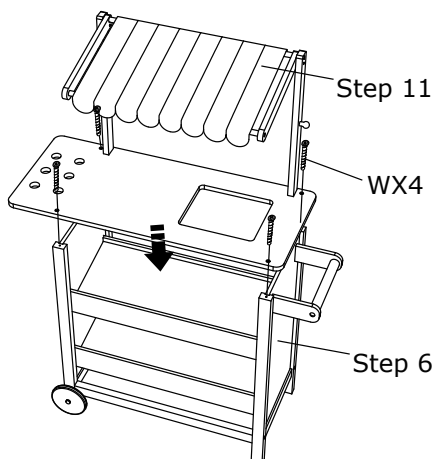

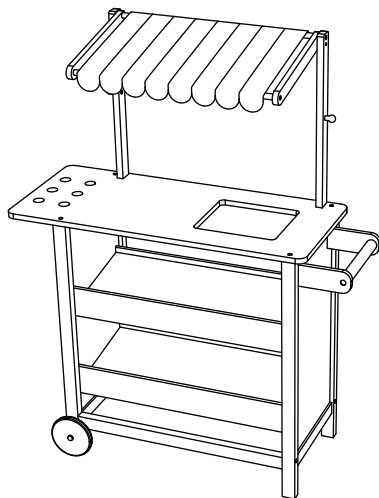

## **WARNING:**

Your toy is only meant to be assembled once.

- After you have assembled your toy, do not dismantle it again as this may weaken the joints and screws leaving the toy unsafe for use.
- Regularly check that all of the bolts are fully tightened. (But do not over tighten)
- Do not allow children to sit, stand, play or climb on the top surface. Failure to do so may cause the product to become unstable.
- Use the toy on a flat level surface only.
- This Kids Kitchen Set is not suitable for outdoor use. The coatings will become scratched and product damage may occur.
- Please check the assembly of the toy regularly and frequently tighten the bolts. If regular maintenance is not carried out, the product may cease to function properly.





**Please give us a chance to make it right and do better !**

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana

UK office: Ipswich

AU office: Truganina



## Contact Us !

**Do NOT return this item.**

Contact our friendly customer service department for help first.



US:cs.us@costway.com

UK:cs.uk@costway.com

AU:cs.au@costway.com