


USER'S MANUAL

TABLE TOP PATIO HEATER NP10036 / NP10037

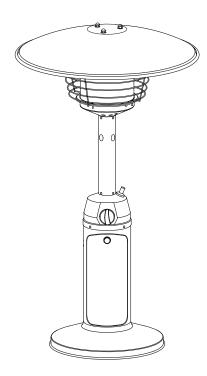

A DANGER

If you smell gas:

- 1. Shut off gas to the appliance.
- 2. Extinguish any open flame.
- 3. If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.

WARNING

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

WARNING: For Outdoor Use Only



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor.




Using it in an enclosed space can kill you.

Never use this appliance in an enclosed space such as a camper, tent, car or home.


M WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

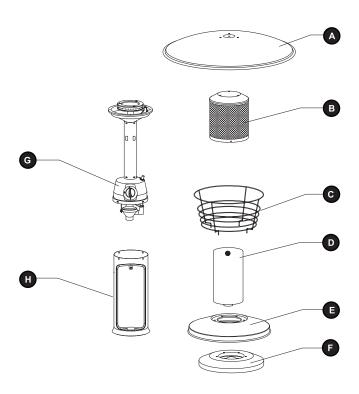

PART	DESCRIPTION	QUANTITY
Α	Reflector	1
В	Emitter	1
С	Wire Guard	1
D	Access Door (preassembled to Heater Housing (H))	1
E	Base	1
F	Ring Weight	1
G	Post with Burner Assembly	1
Н	Heater Housing	1

HARDWARE CONTENTS (shown actual size)

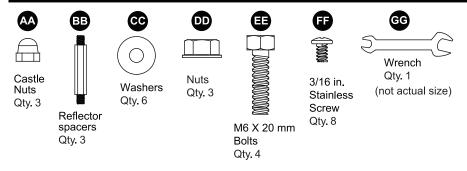



SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

This manual contains important information about the assembly, operation and maintenance of this patio heater. General safety information is presented in these first few pages and is also located throughout the manual. Keep this manual for future reference and to educate new users of this product. This manual should be read in conjunction with the labeling on the product. Safety precautions are essential when any mechanical or propane-fueled equipment is involved. These precautions are necessary when using, storing, and servicing this item. Using this equipment with the respect and caution demanded will reduce the possibilities of personal injury or property damage. The following symbols shown below are used extensively throughout this manual. Always heed these precautions, as they are essential when using any mechanical or fueled equipment.

⚠ DANGER

Failure to comply with the precautions and instructions provided with this heater can result in death, serious bodily injury and property loss or damage from hazards of fire, explosion, burn, asphyxiation, and/or carbon monoxide poisoning. Only persons who can understand and follow the instructions should use or service this heater.

A DANGER

FOR YOUR SAFETY

If you smell gas:

- 1. Shut off gas to the appliance.
- 2. Extinguish any open flame.
- 3. If odor continues, keep away from the appliance and immediately call your gas supplier or fire department.

⚠ DANGER

- EXPLOSION FIRE HAZARD
- Keep solid combustibles, such as building materials, paper or cardboard, a safe distance away from the heater as recommended by the instructions.
- Provide adequate clearances around air openings into the combustion chamber.
- Never use the heater in spaces that do or may contain volatile or airborne combustibles, or products such as gasoline, solvents, paint thinner, dust particles or unknown chemicals.
- During operation, this product can be a source of ignition. Keep heater area clear and free from combustible materials, gasoline, paint thinner, cleaning solvents and other flammable vapors and liquids. Do not use heater in areas with high dust content. Minimum heater clearances from combustible materials: three (3) feet from the sides and two (2) feet from the top.

A DANGER

- CARBON MONOXIDE HAZARD
- This heater is a combustion appliance. All combustion appliances produce carbon monoxide (CO) during the combustion process. This product is designed to produce extremely minor, non-hazardous amounts of CO if used and maintained in accordance with all warnings and instructions. Do not block air flow into or out of the heater.
- Carbon Monoxide (CO) poisoning produces flu-like symptoms, watery eyes, headaches, dizziness, fatigue and possibly death. You can't see it and you can't smell it. It's an invisible killer. If these symptoms are present during operation of this product get fresh air immediately!
- For outdoor use only.
- Never use inside house, or other unventilated or enclosed areas.
- This heater consumes air (oxygen). Do not use in unventilated or enclosed areas to avoid endangering your life.

A DANGER

- EXPLOSION FIRE HAZARD
- Never store propane near high heat, open flames, pilot lights, direct sunlight, other ignition sources or where temperatures exceed 120°F.
- Propane vapors are heavier than air and can accumulate in low places. If you smell gas, leave the area immediately.
- Never install or remove propane cylinder while heater is lighted, near flame, pilot lights, other ignition sources or while heater is hot to touch.
- This heater is red hot during use and can ignite flammables too close to the burner. Keep flammables at least 3 feet from sides and 2 feet from top. Keep gasoline and other flammable liquids and vapors well away from heater.
- Store the propane cylinder outdoors in a well ventilated space out of reach of children. Never store the propane cylinder in an enclosed area (house, garage, etc.). If heater is to be stored indoors, disconnect the propane cylinder for outdoor storage.

A SAFETY INFORMATION

A WARNING

We cannot foresee every use that may be made of our heaters.

Check with your local fire safety authority if you have questions about heater use.

Other standards govern the use of fuel gases and heat producing products for specific uses. Your local authorities can advise you about these.

If no local codes exist, follow National Fuel Gas Code, ANS Z223.1. In Canada, installation must conform to local codes. If no local codes exist, follow the current National standards of CANADA CAN/CGA-B 149.2.

WARNING

California Proposition 65

Combustion by-products produced when using this product contain chemicals known to the state of California to cause cancer, birth defects, and other reproductive harm.

WARNING

BURN HAZARD

- Never leave heater unattended when hot or in use.
- · Keep out of reach of children.

M WARNING

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

M WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

M WARNING

Certain materials or items, when stored under the heater, will be subjected to radiant heat and could be seriously damaged.

A SAFETY INFORMATION

A WARNING

- This product is fueled by propane gas.
 Propane gas is invisible, odorless, and flammable. An odorant is normally added to help detect leaks and can be described as a "rotten egg" smell. The odorant can fade over time so leaking gas is not always detectable by smell alone.
- Propane gas is heavier than air and leaking propane will sink to the lowest level possible.
 It can ignite by ignition sources including matches, lighters, sparks or open flames of any kind many feet away from the original leak.
 Use only propane gas set up for vapor withdrawal.
- Store or use propane gas in compliance with local ordinances and codes or with ANS/NFPA 58. Turn off propane when not in use.

A CAUTION

SERVICE SAFETY

- Keep all connections and fittings clean.
 Make sure propane cylinder valve outlet is clean.
- During set up, check all connections and fittings for leaks using soapy water. Never use a flame.
- Use as a heating appliance only. Never alter in any way or use with any device.

A WARNING

- Alert children and adults to the hazards of high surface temperatures. Stay away from these surfaces to avoid burning skin or igniting clothing.
- Carefully supervise young children when in the vicinity of the heater.
- Do not hang clothing or any other flammable materials from the heater, or place on or near the heater.
- Replace any guard or protective device removed for servicing the appliance prior to placing back in service.
- Installation and repair should be done by a qualified service person. The heater should be inspected before use and annually by a qualified service person.
- More frequent cleaning may be required as necessary.
- It is imperative that the control compartment, burners, and circulating air passageway of the appliance be kept clean.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

Estimated Assembly Time: 30 minutes

Tools Required for Assembly (not included): Phillips Screwdriver and Leak Detection Solution.

ASSEMBLY INSTRUCTIONS

1. Attach post with burner assembly (G) onto heater housing (H), using four 3/16 in. stainless screws (FF).

Hardware Used

FF 3/16 in. Stainless Screw



2. Attach ring weight (F) to base (E) using M6 x 20 mm bolts (EE).

Hardware Used

M6 x 20 mm Bolt



3. Put reflector spacers (BB) into the holes in the emitter (B). Use nuts (DD) to secure the reflector spacers (BB) inside of the emitter (B). Attach emitter (B) to post with burner assembly (G) with 3/16 in. stainless screws (FF).

Hardware Used



BB Reflector Spacer





Nut





x 4


х3





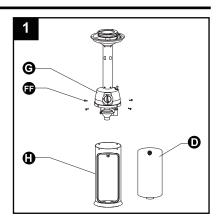


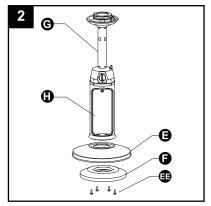

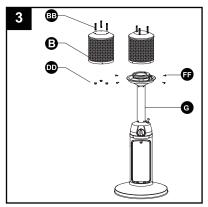

ASSEMBLY INSTRUCTIONS


4. Insert ends of wire guard (C) into holes in post with burner assembly (G).

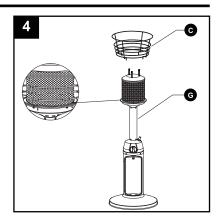


5. Put washers (CC) into the top of support bolts on post with burner assembly (G).


Attach reflector (A) to assembly with castle nuts (AA) and washers (CC).

 Hardware Used



6. Rotate regulator preassembled to post with burner assembly (G) toward opening in heater housing (H). Line up threads on cylinder (not included) with those on the regulator. Insert and rotate cylinder clockwise until tight. Re-attach access panel (D).

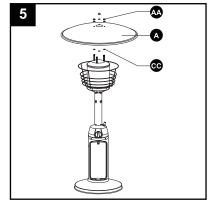

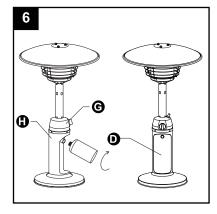

ASSEMBLY INSTRUCTIONS

The propane gas and cylinder are sold separately.

Every part of the heater shall be secure against displacement and shall be constructed to maintain a fixed relationship between essential parts under normal and reasonable conditions of handling and usage. Parts not permanently secured shall be designed so they cannot be incorrectly assembled and cannot be improperly located or misaligned in removing or replacing during cleaning or other servicing.

Use a standard 1.02 lb. propane cylinder only (approximately 3.9 in. / 9.8cm. in diameter and 7.9 in. / 20cm high).

Disconnect the cylinder when the appliance is not used.

Store the appliance indoors only if the cylinder is disconnected and removed from the appliance. A cylinder must be stored outdoors in a well-ventilated area out of the reach of children. A disconnected cylinder must have dust caps tightly installed and must not be stored in a building, garage or any other enclosed area.

The maximum inlet gas supply pressure: 150 psi /1034 kPa.

The minimum inlet gas supply pressure: 5 psi /35kPa.

Manifold pressure with regulator provided: 11 inch W.C/ 2.74 kPa. The minimum hourly of 4000 Btu /1.2 kW is required input rating for an appliance for automatic operation at ratings less than full input rating.

Use the pressure regulator supplied with the appliance.

The installation must conform with local codes, or in the absence of local codes, with National Fuel Gas Code, ANS Z223.1/NFPA54, Natural Gas and Propane Installation Code, CSA B149.1, or Propane Storage and Handling Code, B149.2.

Certain materials or items, when stored under the heater, will be subjected to radiant heat and could be seriously damaged.

Use only a cylinder marked for propane.


A dented, rusted or damaged propane cylinder may be hazardous and should be checked by your cylinder supplier. Never use a propane cylinder with a damaged valve connection. The propane cylinder must be constructed and marked in accordance with the specifications for LP gas cylinders of the U.S. Department of Transportation (DOT) or with the Standard for Cylinders, Spheres and Tubes for Transportation of Dangerous Goods and Commission, CAN/CSA-B339. The propane cylinder must include a listed overfilling prevention device. The propane cylinder must include a cylinder connection device compatible with the connection for the appliance.

The cylinder used must include a collar to protect the cylinder valve.

Never connect an unregulated propane cylinder to the heater.


- Do not store a spare LP-gas cylinder under or near this appliance;
- Never fill the cylinder beyond 80 percent full;
- Place the dust cap on the cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve that is provided with the cylinder valve. Other type of caps or plugs may result in leakage of propane.

The pressure regulator and hose assembly supplied with the appliance must be used. Replacement pressure regulators and hose assemblies must be those specified by the appliance manufacturer.

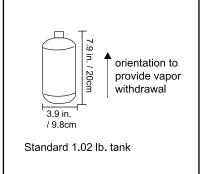


Portable Heater Location

- This portable heater is intended for outdoor use only.
 Always ensure adequate fresh air ventilation.
- 2. Always maintain proper clearance to combustible materials: a minimum of 24 in. from the top and 36 in. from the sides.
- 3. Place the heater on a strong and stable table.
- Never operate the heater in an explosive atmosphere like in areas where gasoline or other flammable liquids or vapors are stored.

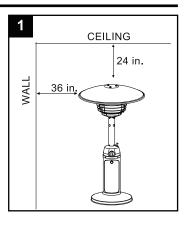

Testing for Leakage

 Gas connections on this heater are leak-tested at the factory prior to shipment. Possible mishandling of this appliance during shipping may impair product integrity. Perform a complete leakage test again at the installation site following the procedure below:



- Make a soap solution of one part liquid detergent and one part water. The soap solution can be applied to hoses and connections with a spray bottle, brush or rag.
- 2. Make sure the safety control valve is in the "OFF" position.
- Turn the cylinder valve ON and check for soap bubbles forming on and around connections and hoses. If bubbles appear, there is a leak present.
- 4. If a leak is present, remove the gas cylinder immediately, tighten any leaking fittings, replace the gas cylinder, and recheck.
- · Periodically check the whole gas system for leaks.
- Immediately check for leaks if an odor of gas is detected.
- Extinguish all open flames during testing or when an odor of gas is detected.
- Never smoke while performing the leak test.
- If you cannot stop a leak, unscrew and remove the cylinder from the heater.
- Check the heater with a full propane cylinder. DO NOT use the heater until you have performed a leak test on all the connections and verified that your unit does not leak.
- Use only manufacturer recommended replacement parts. Substitution may void the warranty.

OPERATION INSTRUCTIONS

Turning ON the Heater

- 1. Turn on the valve on the gas supply cylinder completely.
- Firmly press down and turn the variable control knob approximately 90° (counterclockwise).
- 3. Press down the variable control knob and hold for 60 seconds. While holding down the variable control knob, press the igniter button several times until the pilot flame comes on. After lighting the pilot, wait 15 seconds to heat the thermocouple, before releasing the control knob. Release the variable control knob after the pilot flame lights.
- 4. If the pilot does not light, repeat steps 2 to 3.

 Note: If a new tank has just been connected, please allow at least one minute for the air in the gas pipeline to purge out through the pilot hole.
- 5. After the flame comes on, leave the variable control knob on LO for about 5 minutes, and then switch to the desired temperature.

☐ I am familiar with entire owner's manual and understand all precautions noted.

Turning the Heater and Pilot Light OFF

- 1. Turn control knob to "PILOT".
- 2. Press down lightly and turn to "OFF".
- 3. Turn the gas tank off completely.
- 4. Wait 5 minutes before relighting.

OPERATION CHECKLIST

Perform this check before each use.

н	Δt	\sim	re	(1	nο	ra	tı	n	~	
$\boldsymbol{-}$	CI.	v		$\mathbf{}$	vc	ıa	u		ч	٠

near the fire pit.

prior to operating the fire pit.

Ш	All components are properly assembled, intact and operable.
	No alterations have been made.
	All gas connections are secure and do not leak.
	Wind velocity is below 10 mph.
	Unit will operate at reduced efficiency below 40°F.
	Heater is outdoors (outside any enclosure).
	There is adequate fresh air ventilation.
	Heater is away from gasoline or other flammable liquids or vapors.
	Heater is away from windows, air intake openings, sprinklers and other water sources.
	Heater is at least 24 in. on top and at least 36 in. on sides from combustible materials.
	Heater is on a hard and level surface.
	There are no signs of spider or insect nests.
	All burner passages are clear.
	All air circulation passages are clear.
	Children and adults should be alerted to the hazards of high surface temperatures and
	should stay away to avoid burns or clothing ignition.
\Box	Young children should be carefully supervised when they are in the area of the fire nit


Clothing or other protective material should not be hung from the fire pit, or placed on or

 
☐ Any guard or other protective device removed for servicing the fire pit must be replaced

Installation and repair should be done by a qualified service person. The fire pit should be

inspected before use and at least annually by a qualified service person.

☐ More frequent cleaning may be required as necessary. It is imperative that control compartment, burner and circulating air passageways of the fire pit be kept clean.

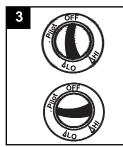



A

WARNING

FOR YOUR SAFETY:

- Do NOT touch or move heater for at least 45 minutes after use.
- Reflector is hot to the touch.
- Allow reflector to cool before touching.



Visually checking portions of the hose assembly located within the confines of the heater post. Inspect the entire hose assembly at least annually, disassembling the reflector and burner. Inspect the hose assembly for evidence of excessive abrasion, cuts, or wear. Suspected areas should be leak tested. Then assembling the reflector and burner again following with step 3 to 5.

- Keep exterior surfaces clean.
- Use warm soapy water for cleaning. Never use flammable or corrosive cleaning agents.
- While cleaning your unit, be sure to keep the area around the burner and pilot assembly dry at all
 times. Do not submerge the control valve assembly. If the gas control is submerged in water, do
 NOT use it. It must be replaced.
- Keep the appliance area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- · Do not obstruct the flow of combustion and ventilation air.
- Keep the ventilation opening(s) of the cylinder enclosure free and clear from debris.
- Air flow must be unobstructed. Keep controls, burner, and circulating air passageways clean.
- Spiders and insects can nest in burner or orifices. This dangerous condition can damage heater and render it unsafe for use. Clean burner holes by using a heavy-duty pipe cleaner. Compressed air may help clear away smaller particles.
- Carbon deposits may create a fire hazard. Clean dome and burner screen with warm soapy water if any carbon deposits develop.

Note: In a salt-air environment (such as near an ocean), corrosion occurs more quickly than normal. Frequently check for corroded areas and repair them promptly.

 Use high-quality automobile wax to help maintain the appearance of the heater. Apply to exterior surfaces from the pole down. Do not apply to emitter screen or domes.

Between uses:

- Turn Control Knob OFF.
- Disconnect LP source.
- Store heater upright in an area sheltered from direct contact with inclement weather (such as rain, sleet, hail, snow, dust and debris).
- If desired, cover heater to protect exterior surfaces and to help prevent build up in air passages. Note: Wait until heater is cool before covering.

During periods of extended inactivity or when transporting:

- Turn Control Knob OFF.
- Disconnect LP source and move to a secure, well-ventilated location outdoors. Store heater upright in an area sheltered from direct contact with inclement weather (such as rain, sleet, hail, snow, dust and debris).
- If desired, cover heater to protect exterior surfaces and to help prevent build-up in air passages.
- Never leave LP cylinder exposed to direct sunlight or excessive heat.

Note: Wait until heater is cool before covering.

Service


Only a qualified service person should repair gas passages and associated components. *Caution: Always allow heater to cool before attempting service.*

12

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
	1. Cylinder valve is closed	1. Open valve
Pilot won't light	Blockage in orifice or pilot tube Air in gas line	Clean or replace orifice or pilot tube Open gas line and bleed it (pressing control knob in) for not more than 1 - 2 minutes or until you smell gas
Note: Heater operates at reduced efficiency below 40°F	Low gas pressure with cylinder valve fully open Igniter fails	Turn cylinder valve OFF and replace cylinder .Use match to light pilot; obtain new
	5. Igniter fails	igniter and replace
	1. Dirt built up around pilot	Clean dirt from around pilot
Pilot won't stay lit	Connection between gas valve and pilot assembly is loose	Tighten connection and perform leak check
	3. Thermocouple is not operating correctly	3. Replace thermocouple
	Propane cylinder is frosted over	Wait until the propane cylinder warms up and becomes unfrosted
Burner won't light	2. Blockage in orifice	2. Clear blockage
	3. Control knob is not in ON position	3. Turn control knob to ON
	1. Gas pressure is low	Turn cylinder valve OFF and replacecylinder
Burner flame is low	2. Outdoor temperature is less than 40°F and tank is less than 1/4 full	2. Use a full cylinder
	3. Control knob fully ON	Check burner and orifices for blockage
	Spiders and insects nest in burner or orifices	4. Clean burner and orifices
Thick black smoke	Blockage in burner	Remove blockage and clean burner inside and outside
Gas odor with extreme yellow tipping of flame.	Spiders and insects nest in burner or orifices	Clean burner and orifices
Heater glow is excessively uneven.	Spiders and insects nest in burner or orifices	Clean burner and orifices
Heater makes popping noises.	Spiders and insects nest in burner or orifices	Clean burner and orifices
Carbon build-up	Dirt or film on reflector and burner screen	Clean reflector and burner screen


For replacement parts, contact our customer service.

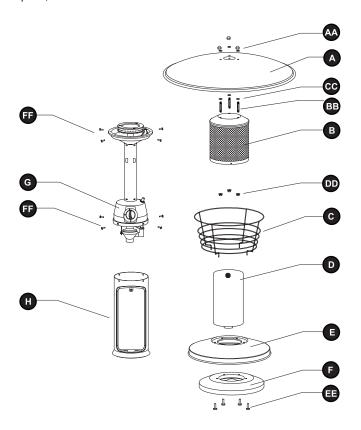

PART	DESCRIPTION	QUANTITY
Α	Reflector	1
В	Emitter	1
С	Wire Guard	1
D	Access Door (preassembled to Heater Housing (H))	1
Е	Base	1
F	Ring Weight	1
G	Post with Burner Assembly	1
Н	Heater Housing	1
AA	Castle Nut	3
BB	Reflector Spacer	3

PART	DESCRIPTION	QUANTITY
CC	Washer	6
DD	Nut	3
EE	M6 X 20mm Bolt	4
FF	3/16 in. Stainless Screw	8

Printed in China

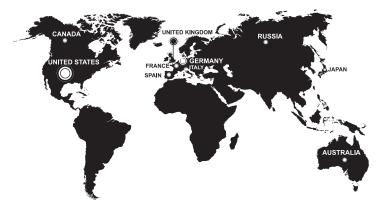

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE!

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZA OBSŁUGE KLIENTA.

US office: Fontana UK office: Ipswich

DE office: FDS GmbH, Neuer Höltigbaum 36, 22143 Hamburg, Deutschland

FR office: 26 RUE DU VERTUQUET, 59960 NEUVILLE EN FERRAIN, FRANCE



