

EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

ES

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

PL

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

US office: Fontana

 
UK office: Ipswich

AU office: Truganina

DE office: Hamburg

FR office: Saint Vigor d'Ymonville

PL office: Gdańsk

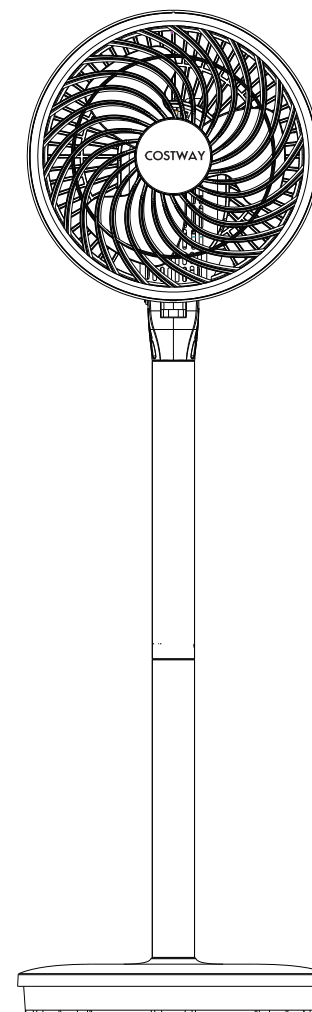

USER'S MANUAL

Circulating Fan ES10088US

PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATING THIS APPLIANCE AND RETAIN IT FOR FUTURE REFERENCE.



**IMPORTANT
SAFEGUARD**

When using an electrical appliance, basic safety precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

WARNING

To reduce the risk of fire, electric shock, or injury to person:

1. Read all instructions before using. The product is for household use only.
2. Before first use, please check that the voltage you use is in accordance with the product nameplate requirements.
3. Always turn the product to the OFF position and unplug it from the electrical outlet when not in use.
4. Extreme caution is necessary when the appliance is used by or near children, invalids or elderly person.
5. Do not run cord under carpeting and do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area and where it will not be tripped over.
6. Please check the power cord and plug for breakage before using it.
7. Do not operate the appliance with a damaged cord or plug, or after the unit malfunctions, has been dropped, or damaged in any manner.
8. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person to avoid a hazard.
9. Use the appliance in a well-ventilated area. While using, distance of no less than 8" (20cm) should be kept away from wall or corner to ensure the air intakes or exhaust openings should not be blocked unexpectedly. The unit must not be located directly below or besides a curtain or similar items.
10. Use the appliance on flat, dry floor only.

11. Do not use in high temperature, humidity, dusty or volatile places such as acid-base oil.

12. Do not twist or pull the power cord to avoid bad contact.

13. Do not place heavy objects on the machine to prevent pressure breakdown from causing trouble.

14. Make sure the appliance is disconnected from the power supply when the power is cut off or moved.

15. Do not place machine directly under the power outlet.

16. When the whole machine is running, it is not allowed to block the air duct and the air inlet of the rear shell. Don't use wire to plug into the passageway to prevent electric shock.

17. During the automatic oscillation process, do not change the orientation by hand to avoid damage to the oscillating structure.

18. Turn off the power supply before pulling out the plug. Do not pull the power cord. Pull out the power plug, otherwise it will lead to short circuit, fire and electric shock.

19. Do not use wet hand to pull out the power plug, there is a danger of electric shock and induction.

20. When leaving the room for a long time, please turn off the machine and unplug the plug.


21. Do not use in places where curtains are easy to suck in. Avoid obstacles and unstable places around you.

22. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


Technical Specifications

Model No	ES10088US-WH
Voltage	120V AC
Frequency	60Hz
Rated Power	40W

 
Product Overview

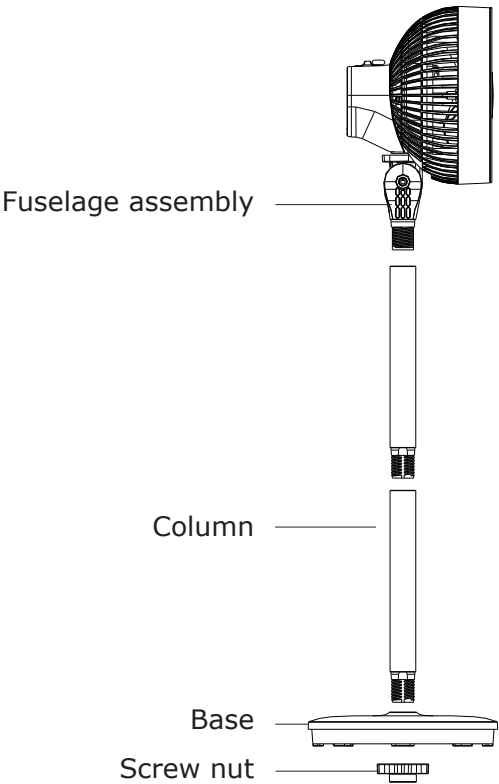


Product Assembly

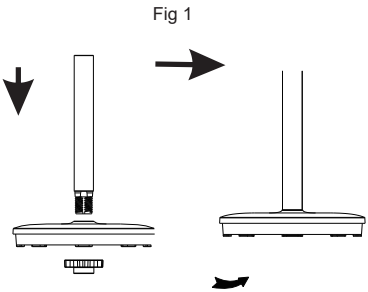 

 1. Align the column with the center hole of the chassis assembly and insert it.
2. Tighten the screw nut with the lower column. See Fig 1.

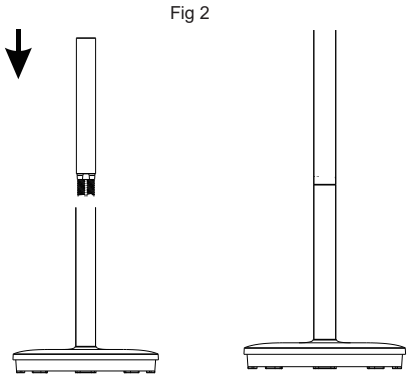


 3. Screw the column down into the lower column and tighten.

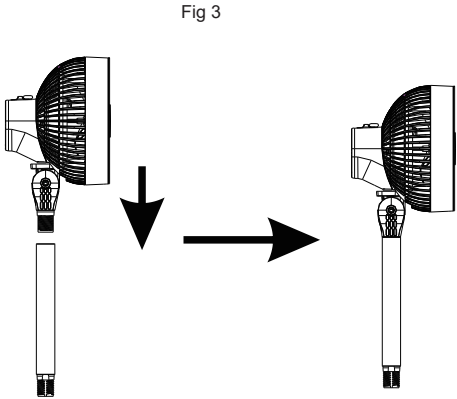

4. Screw the fuselage assembly down into the upright screw and tighten it.
5. Screw the fuselage components down into the column and just tighten it.

 Instruction of Control Panel

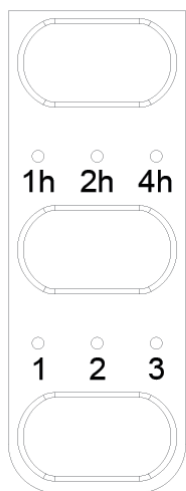

Osc

Timer

ON/Speed

1. "ON/Speed" button Speed

There are three types of power-on, speed switch and standby State cycle switching.

2. "TIMER" button

Set the desired shutdown time by pressing the "TIMER" button. It allows you to set an automatic switch on time. The options are 1-7 hours.

3. "Osc" button

Press the "Osc" button to wave the fan head from side to side. Press the "Osc" button again to stop the process.

Remote control:

 


The above functions can be controlled using the remote control by pressing the corresponding function buttons.

1. Press the button to power on and power off the fan.

2. Press the button to select the speed you like, select from "1, 2, 3, off" to adjust the fan speed in cycles.

Battery installation:

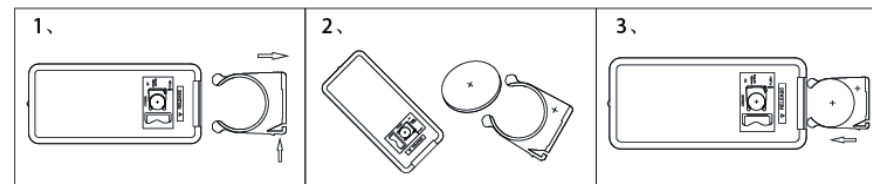

1. Pull out the remote control battery holder according to the assembly drawing on the back of the remote control.

2. Put the battery into the battery holder, pay attention to the positive and negative poles of the battery.

3. Reinstall the battery holder with the battery in the remote control.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Fan fails to operate	1. Unplugged or poorly contacted power cord. 2. Failure to press the switch. 3. Machine damaged.	1. Plug in the power cord 2. Press the switch 3. Delivery to maintenance point for maintenance
Unable to shutdown	Machine damaged	Delivery to maintenance point for maintenance
Abnormal sound	1. Wind wheel loosening. 2. Motor breakdown.	1. Delivery to maintenance point for maintenance 2. Delivery to maintenance point for maintenance
Can not change the direction of the wind	Breakdown of wind guide synchronous motor	Delivery to maintenance point for maintenance

Maintenance And Storage

Cut off the power supply before maintenance

1. When the body has oil pollution, it must be cleaned up to avoid discoloration and damage.
2. After maintenance and cleaning, the parts should be packed into packing boxes according to the original packing and placed in a dry place for proper storage.
- 3.This product only needs general external cleaning and maintenance.
- 4.Use neutral detergent to wipe, and then clean with a clean and soft cloth.
- 5.Do not rinse directly with water.
- 6.Do not wipe with diluent, toluene, acid lotion, oil, etc. to avoid discoloration or deterioration.