
COSTWAY

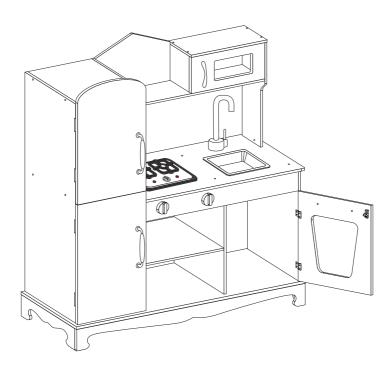

USER'S MANUAL Kid Kitchen Set HW67657

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway











Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

Please read all instructions carefully and keep it for future reference.

General Security Warning

Caution: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and

children, otherwise they may pose a choking hazard.


Danger: Lack of attachment may cause a risk of tipping.




Warning for Assembly

- **⚠ Remove all Packaging, separate and count all parts and hardware.**
- \triangle We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- \triangle Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.


COSTWAY

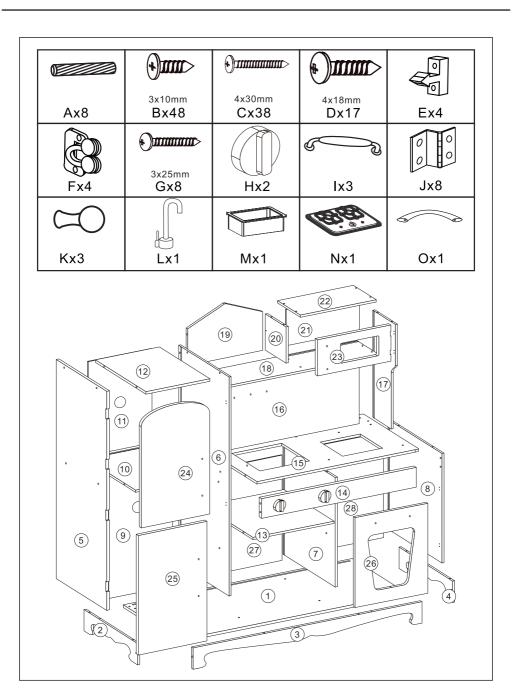

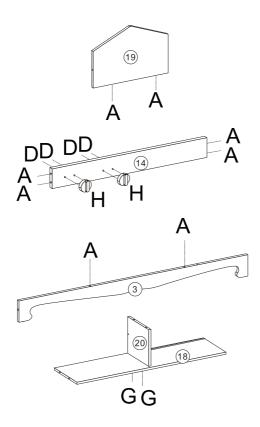



STEP 1:

Insert wooden plugs A to No.3,14,19. Assemble parts H to No.14 with screws D.Attach No.20 to No.18 with screws G.

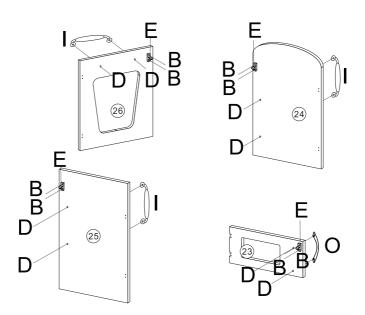


 STEP 2: Assemble parts E to No.23,24,25,26 with screws B. Also assemble parts I to No.24,25,26 with screws D. Assemble part O to No.23 with screws D.

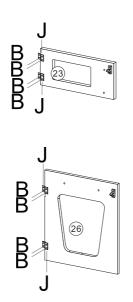




STEP 3: Assemble parts J to No.5,23,26 with screws B.

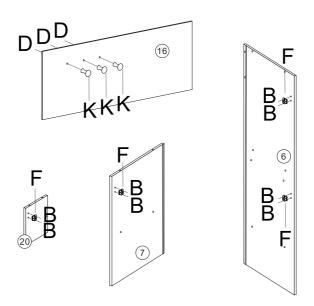


STEP 4: Assemble parts K to No.16 with screws D. Assemble parts F to No.6,7 ,20 with screws B.



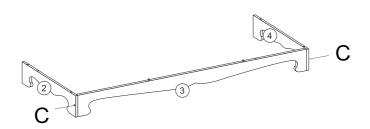


STEP 5: Attach No.2,3 to No.4 with screws C.




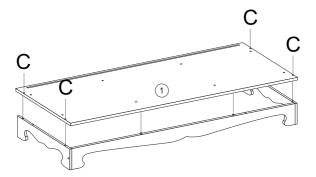


STEP 6: Assemble No.1 to No.2,3,4 with screws C.

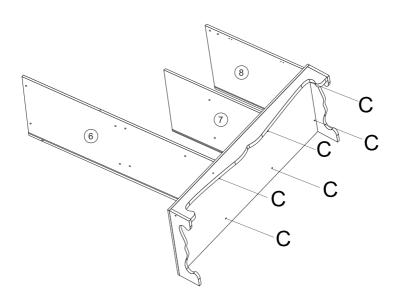


STEP 7: Assemble No.6,7 ,8 to No.1 with screws C.

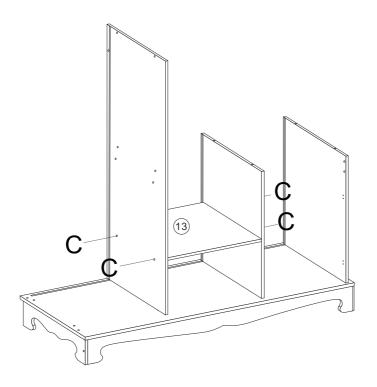


STEP 8: Assemble No.13 to No.6 and No.7 with screws C.

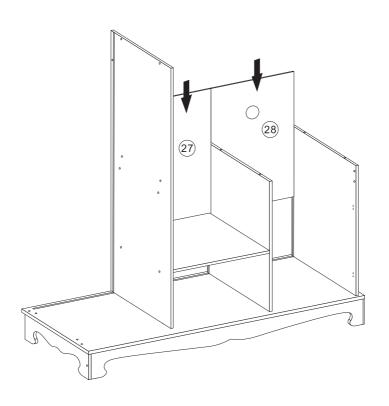


STEP 9: Insert No.27,28 to No.6,7,8.

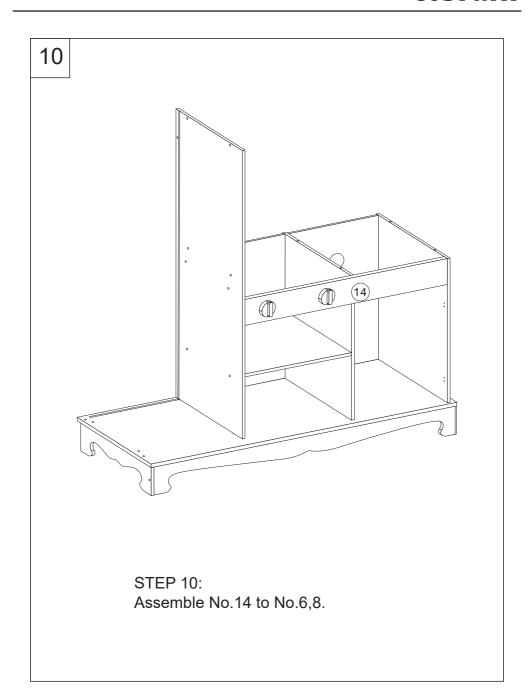

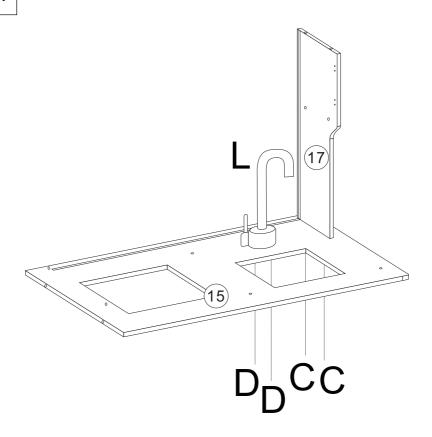


STEP 11:


Assemble No.17 to No.15 with screws C, also assemble part L to No.15 with screws D.

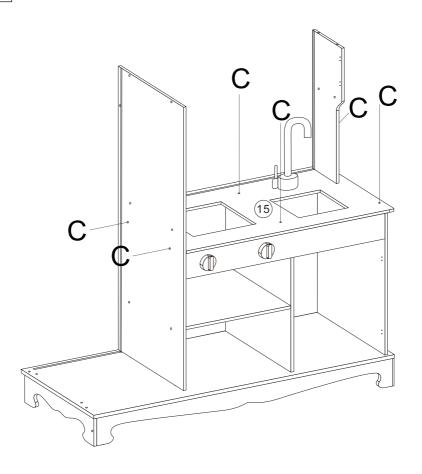


STEP 12: Assemble No.15 to No.6,7,8 with screws C.

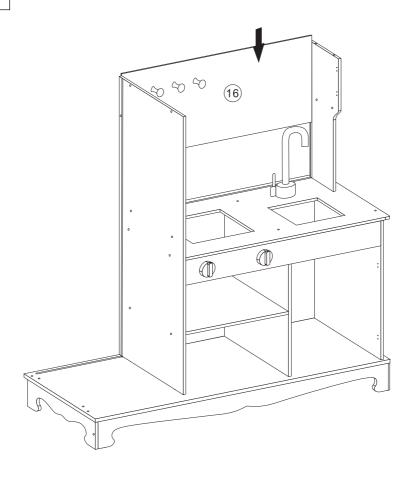


STEP 13: Insert No.16 to No.6 and No.17.

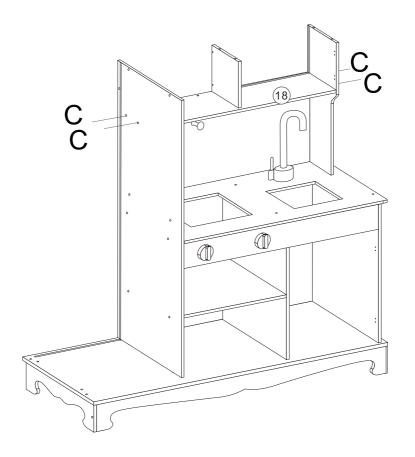


STEP 14: Assemble No.18 to No.6 and No.17 with screws C.

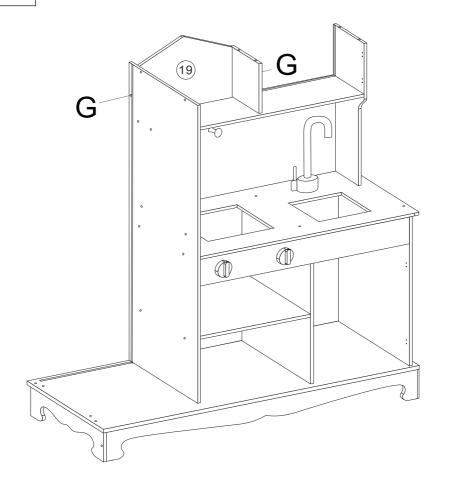


STEP 15: Assemble No.19 to No.6 and No.20 with screws G.

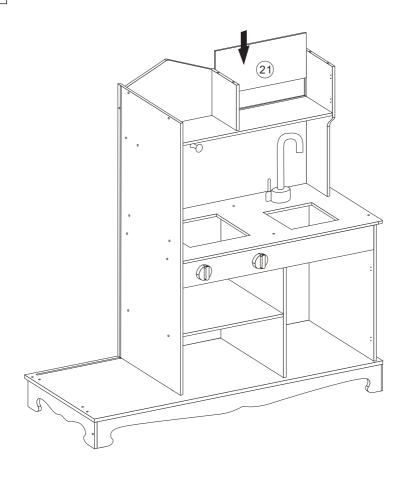

STEP 16: Insert No.21 to No.20 and No.17.

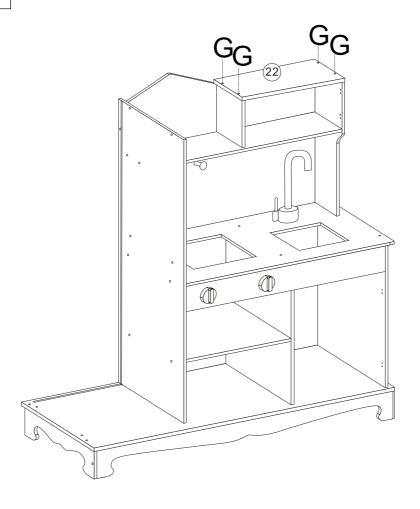



STEP 17: Assemble No.22 to No.20 and No.17 with screws G.

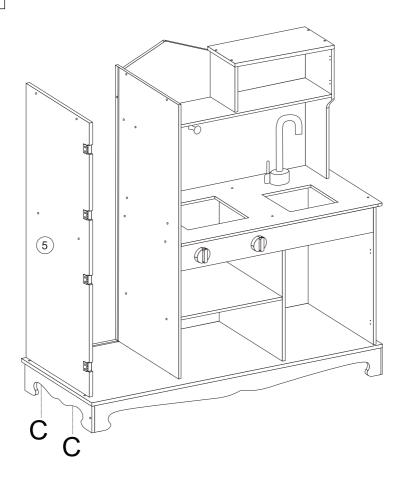

STEP 18: Assemble No.5 to No.1 with screws C.


19 9 STEP 19: Insert No.9 to No.5 and No.6.

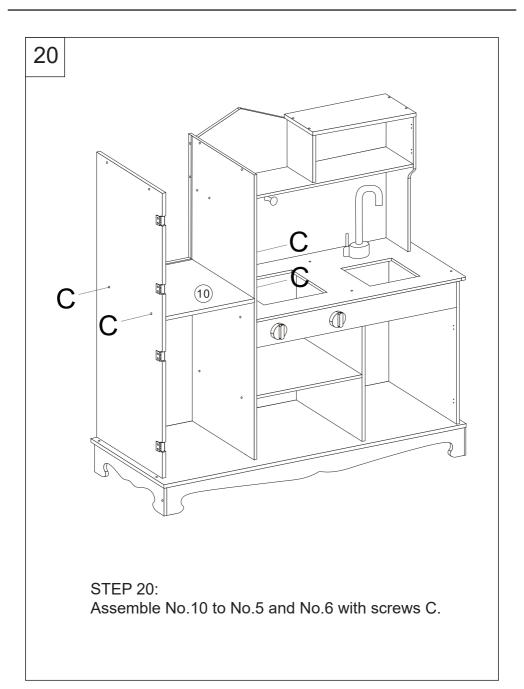

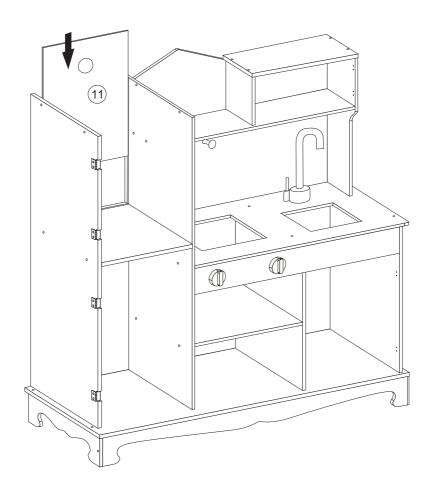



STEP 21:

Insert No.11 to No.5 and No.6.

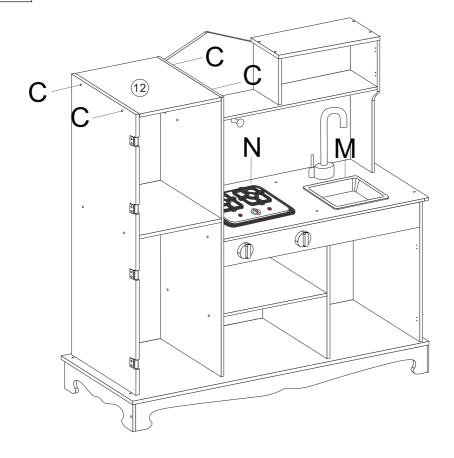

STEP 22: Assemble No.12 to No.5 and No.6 with screws C. Put parts N and M above No.15.

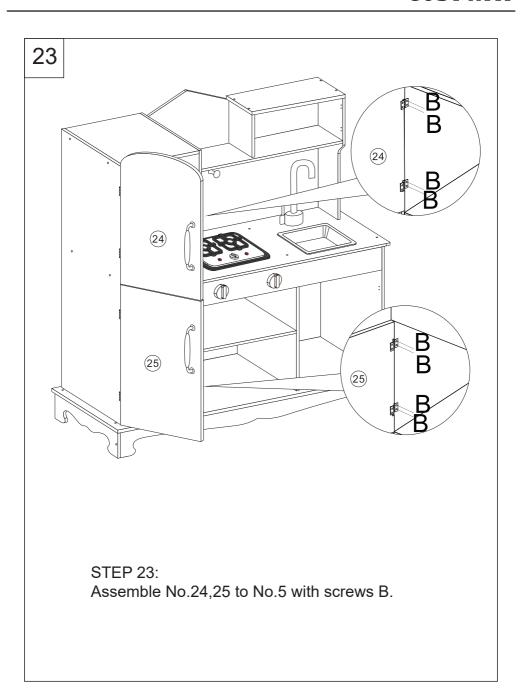

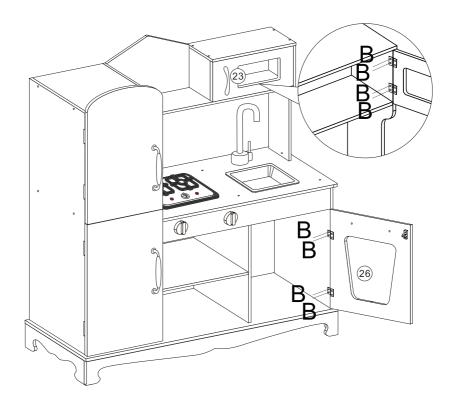

STEP 24: Assemble No.23 to No.17 with screws B, also assemble No.26 to No.8 with screws B.

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.





