

- A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Extension cords are available and may be used if care is exercised in their use.
- If an extension cord is used:
 - 1)The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
 - 2)The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over,snagged,or pulled on unintentionally (especially by children).

SAVE THESE INSTRUCTIONS!

MAINTENANCE:
WARNING:ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING.DO NOT IMMERSE HEATER IN WATER!

CLEANING:IMPORTANT!DO NOT IMMERSE DRYER IN WATER!
Clean the dryer grills with the vacuum brush attachment on your vacuum cleaner.This will remove lint and dirt from the inside of the dryer.DO NOT ATTEMPT TO TAKE DRYER APART.Clean the body of the heater with soft cloth.

CAUTION:Do not use gasoline,benzine,thinner,harsh cleaner,etc.as they will damage the dryer.**NEVER USE ALCOHOL OR SOLVENTS.**

STORAGE:Store the dryer with these instructions in the original carton in a cool,dry place.

4

INSTRUCTION MANUAL




HEATED SHOE&BOOT DRYER
ITEM NO:EP23622
RATED POWER:36W
RATED VOLTAGE:120V
RATED FREQUENCY:60Hz

1

CAUTION!
Please read the instruction manual before using your SHOE DRYER. Proper use of this product will extend the life of your footwear,improve comfort and increase safety.Please keep this manual.

ASSEMBLY:
Align the tabs on Base Front piece directly beneath matching tabs on BaseRear.Gently slide together until tabs snap into place and Base Front is flush with Base Rear to complete Base Unit.

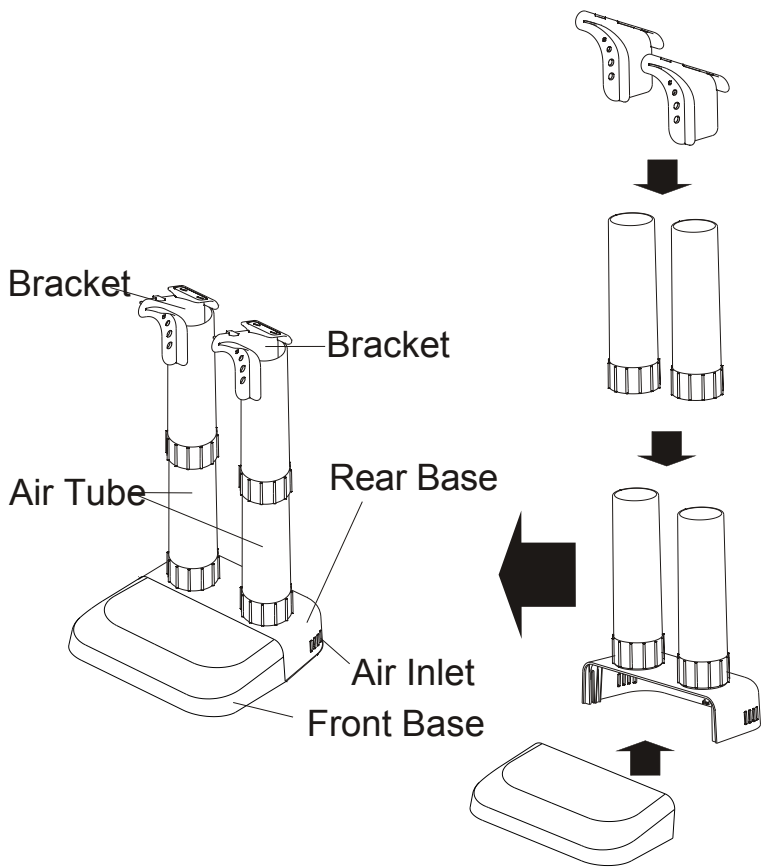

2

- OPERATING INSTRUCTIONS:**
- 1.Place dryer on solid ,flat surface.
 - 2.Place footwear onto tubes,making certain there is a minimum of 6-8 inches from the top of the boot to the base of the appliance.
 - 3.Plug the power cord into a standard 120V household electrical outlet and turn ON the switch button behind base,then the unit will begin working.The unit operates silently and warm air will begin to circulate through the tubes in approximately 10 minutes.
 - 4.Monitor your footwear carefully and remove when dry,and turn OFF the switch.

- IMPORTANT INSTRUCTIONS:**
- When using this product or any electrical appliance,basic safety precautions should always be followed - especially when children are present.This product is not intend for use for children.
 - Do not place “soaked”or “dripping wet” footwear or gloves on the dryer.
 - Do not expose the dryer to rain ,spray,or liquids.Do not immerse in water. Do not use outdoors.
 - Never drop or insert any object into any opening of this appliance. Keep air intake vents clear for proper circulation.
 - Do not use near flammable substances.
 - Keep dryer away from other heat sources.
 - Do not leave dryer on unattended for long periods of time.
 - Do not turn on unit or leave on without footwear in place.
 - Do not disassemble unit or attempt to repair.Doing so may void your warranty and cause damage to the product or may cause personal injury.
 - This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock,this plug is intended to fit in a polarized outlet only one way.If the plug does not fit fully in the outlet, reverse the plug.If it still does not fit,call a qualified electrician.Do not modify the plug in any way.

3