

 


COSTWAY®

**Please give us a chance to make it right and do better !**

Contact our friendly customer service department for help first.  
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana    UK office: Ipswich    AU office: Truganina

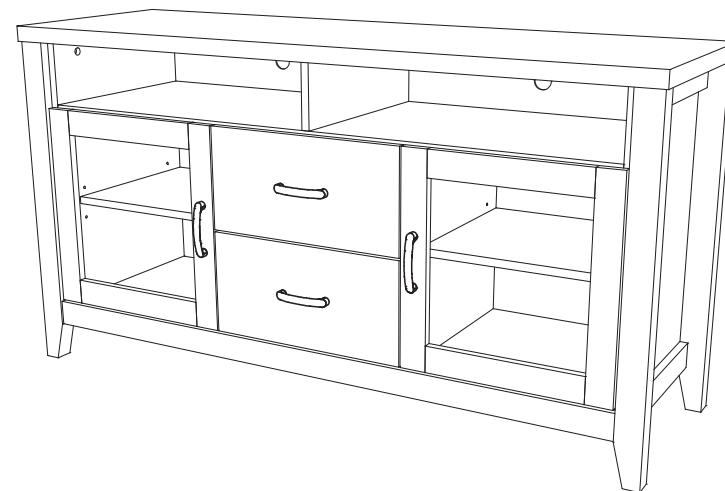

## Contact Us !

**Do NOT return this item.**

Contact our friendly customer service department for help first.



US: cs.us@costway.com  
UK: cs.uk@costway.com  
AU: cs.au@costway.com

## USER'S MANUAL

 
 
 
 
 
### TV CABINET HW65206

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



## Before You Start

- ⚠ Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⚠ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⚠ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- ⚠ Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

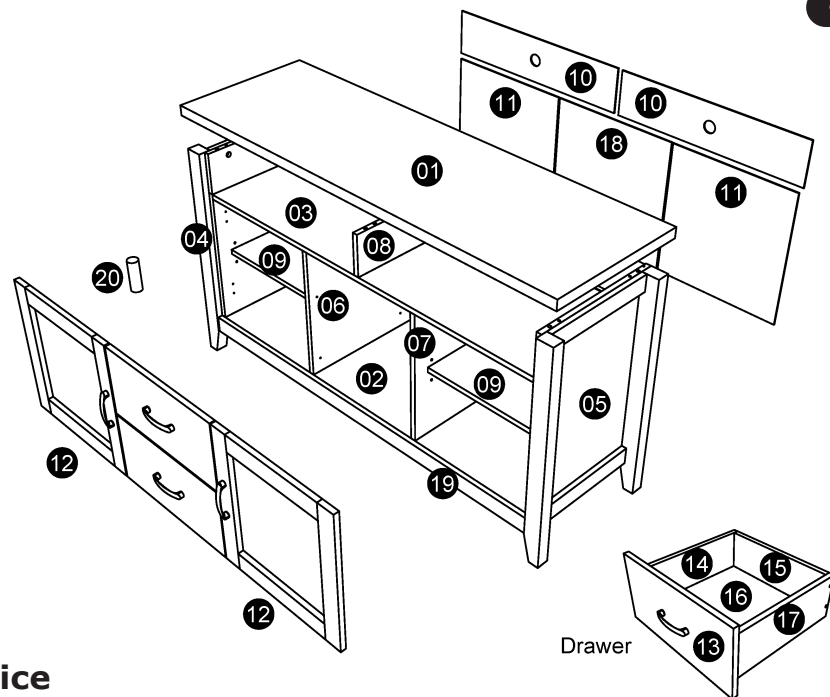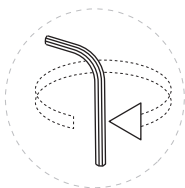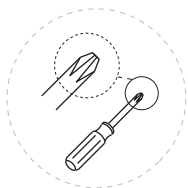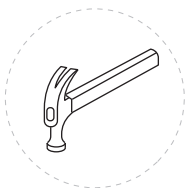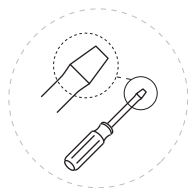


### Notice


- 50% tighten before fixing all screws. Allen wrench is recommended instead of an electric drill.
- Place the item on a flat ground to adjust and make sure it remains stable.
- Tighten up all screws with tools gradually.
- If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- Note: If one or some screws are fully tightened during assembly, the others may not be aligned with the holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

## Part List

 
01 TOP 1 pc

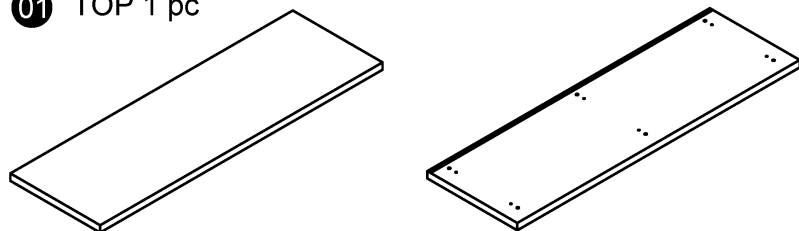


02 BASE 1 pc

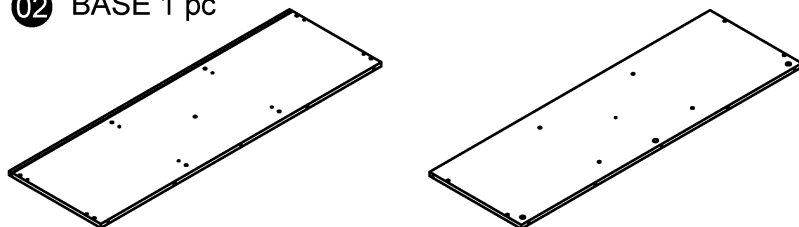 

03 CENTER 1 pc

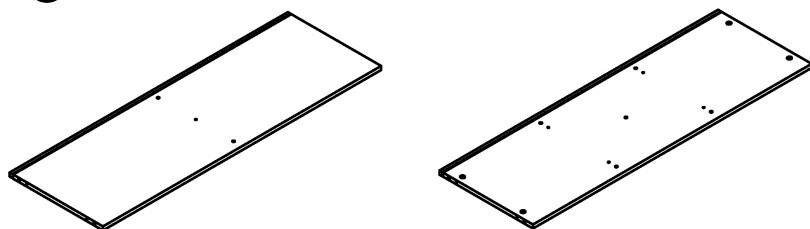 


04 SIDE (L) 1 pc

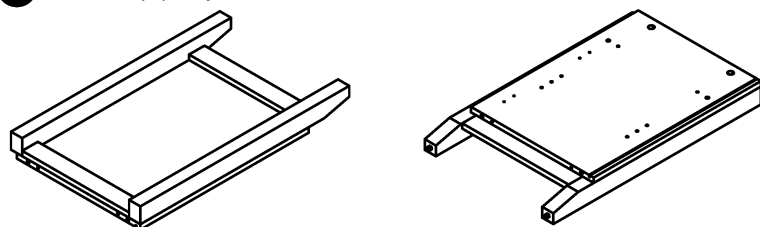 


## Part List

 
05 SIDE (R) 1 pc

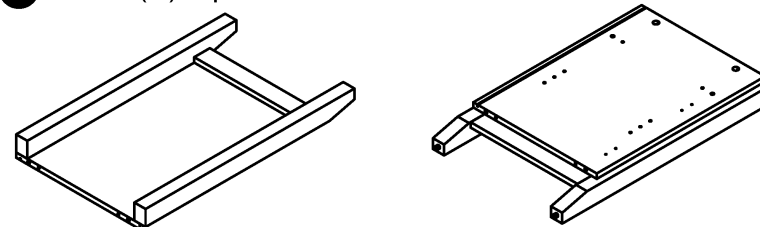


06 CENTER (L) 1 pc

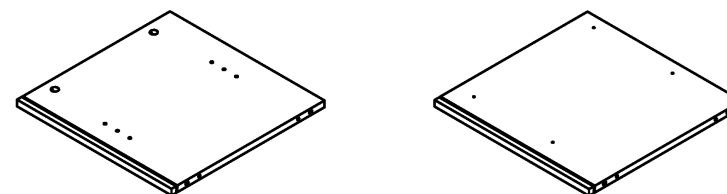 

07 CENTER (R) 1 pc

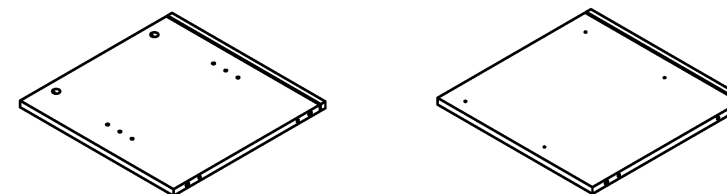 


08 CENTER UP 1 pc

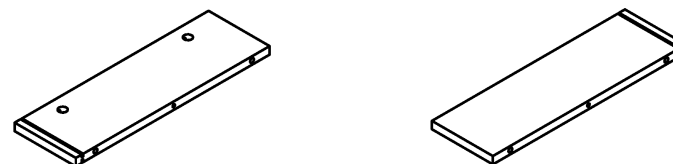 


## Part List

 
## 09 SHELF 2 pcs

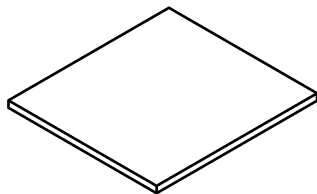


## 10 BACK PANEL UP 2 pcs

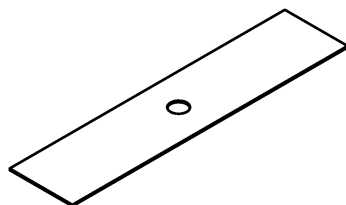 

## 11 BACK PANEL SIDE 2 pcs

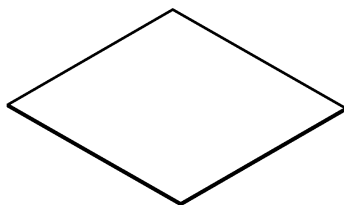 


## 12 GLASS DOOR 2 pcs

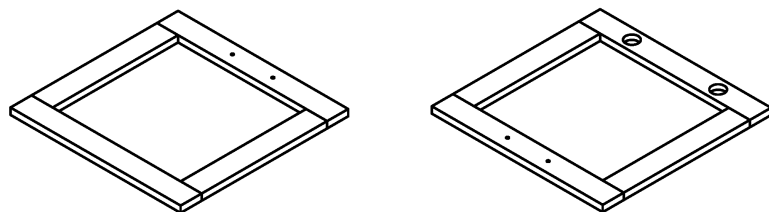 


## Part List
 
## 13 DRAWER FRONT 2 pcs

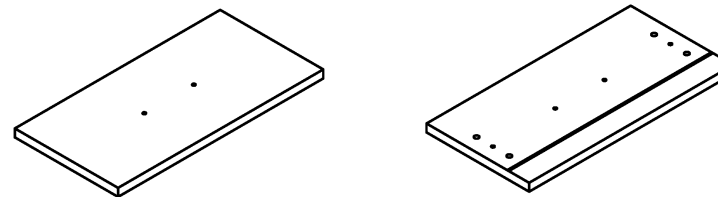


## 14 DRAWER SIDE (L) 2 pcs

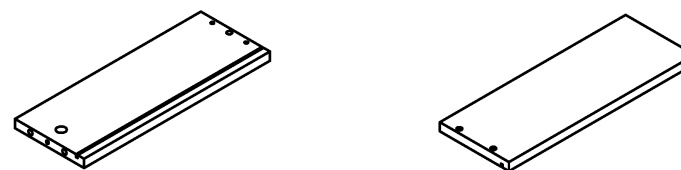 

## 15 DRAWER BACK 2 pcs



 
## 16 DRAWER BASE 2 pcs

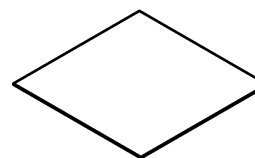


## Part List

 
## 17 DRAWER SIDE (R) 2 pcs

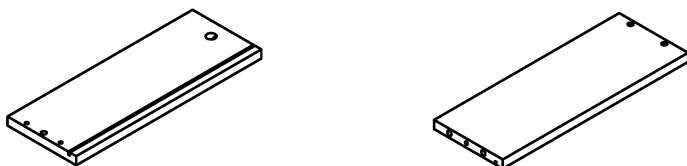

## 18 BACK PANEL (MID) 1 pc

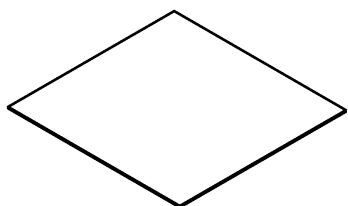 





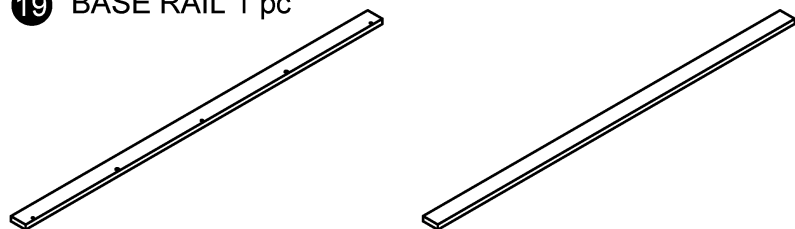 




## 19 BASE RAIL 1 pc



 
 




## 20 SUPPORTING LEG 1 pc

 






## Hardware List

  Description	Hardware	Spec	Qty
A Minifix (S)			21pcs
B Wood Dowel		8x35mm	38pcs
C Cap Bolt		M6x50mm	9pcs
D CSK Screw		3.5x12mm	24pcs
E Tapping Screw		3x19mm	12pcs
F CSK Screw		4x16mm	8pcs
G CSK Screw		4x32mm	8pcs
H Handle			4pcs
I Handle Screw		4x18mm	8pcs


## Hardware List

 Description	Hardware	Spec	Qty
J Hinge		5/8"	4pcs
K Steel			8pcs
L Runner		14"	2pcs
M JCBC Bolt		M6x30mm	1pc
N Corner Block			12pcs
O Allen Key		M4	1pc


## STEP 1

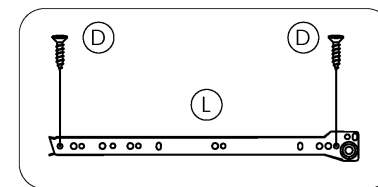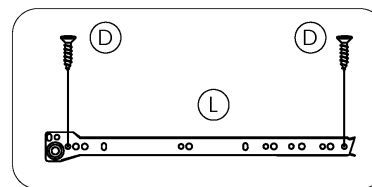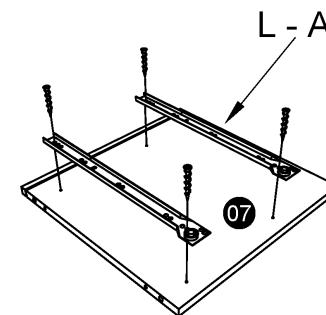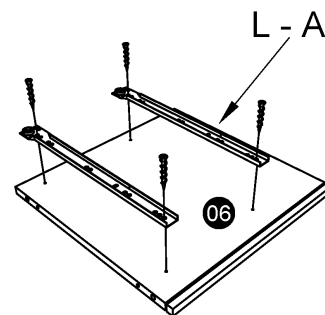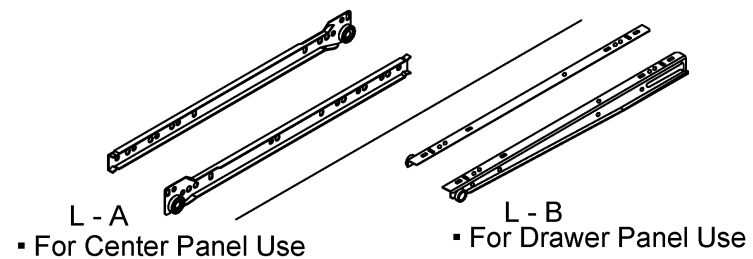     


## STEP 2

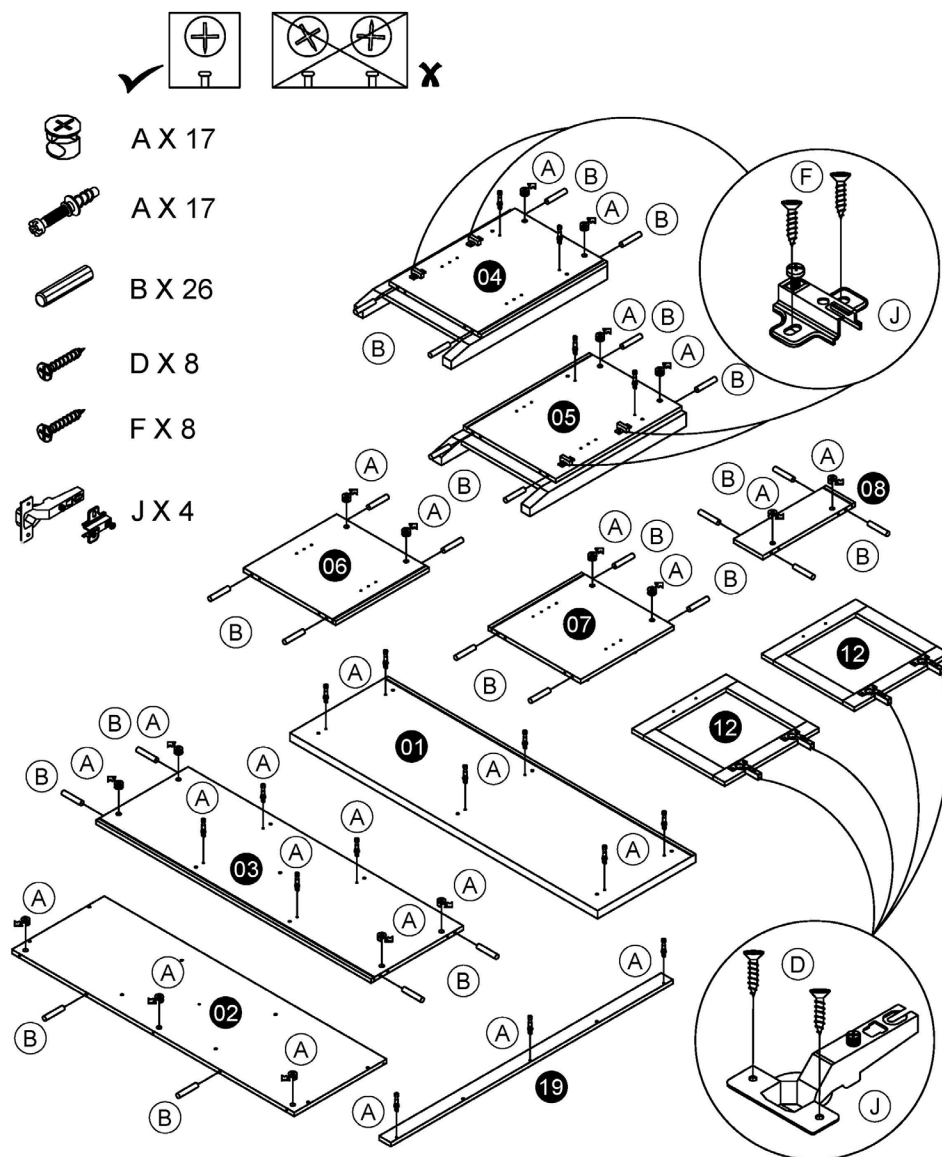 


## STEP 3

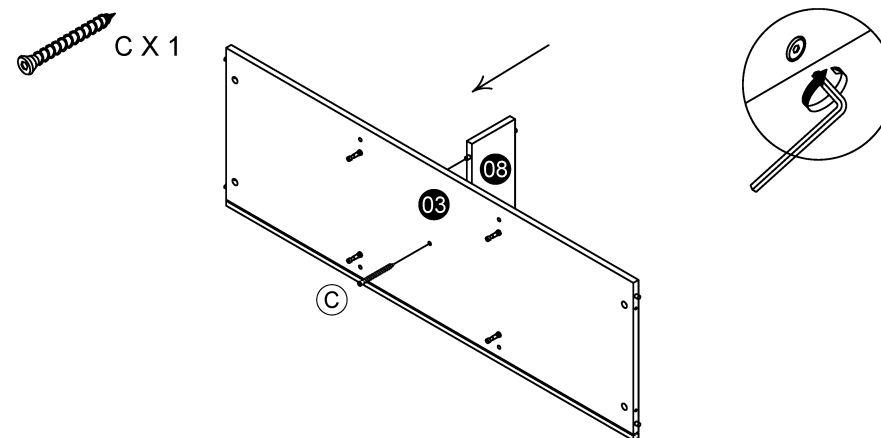 


## STEP 4

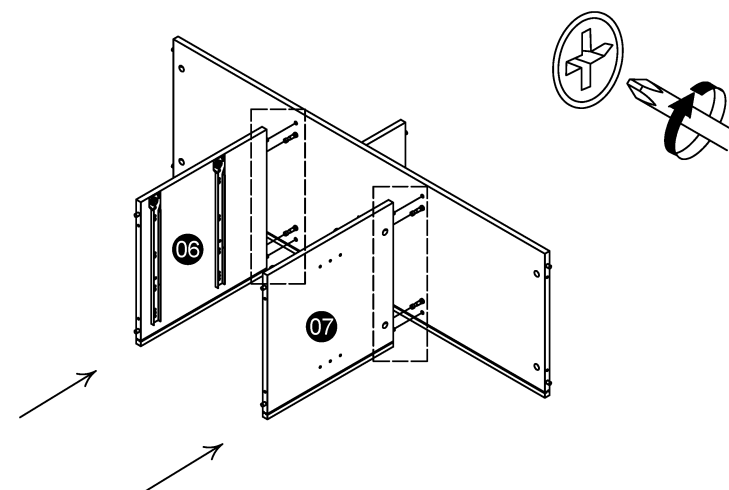 


## STEP 5

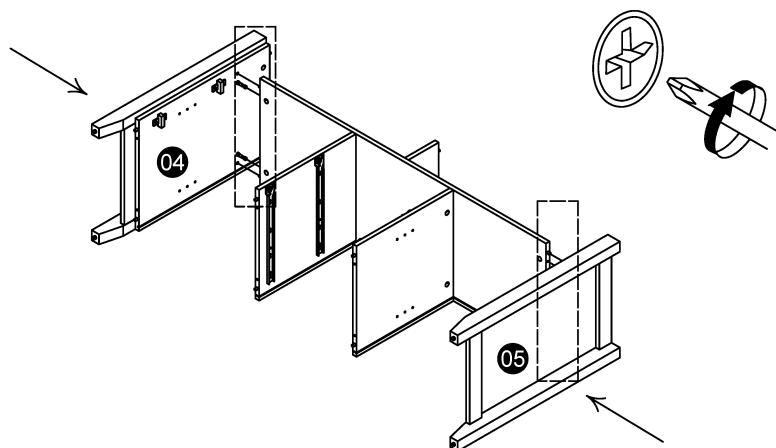 


## STEP 6

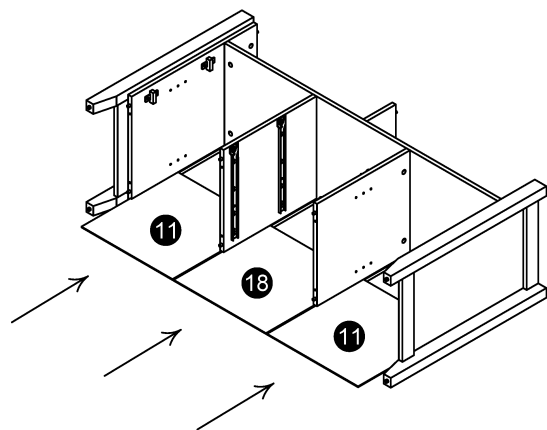 

## STEP 7

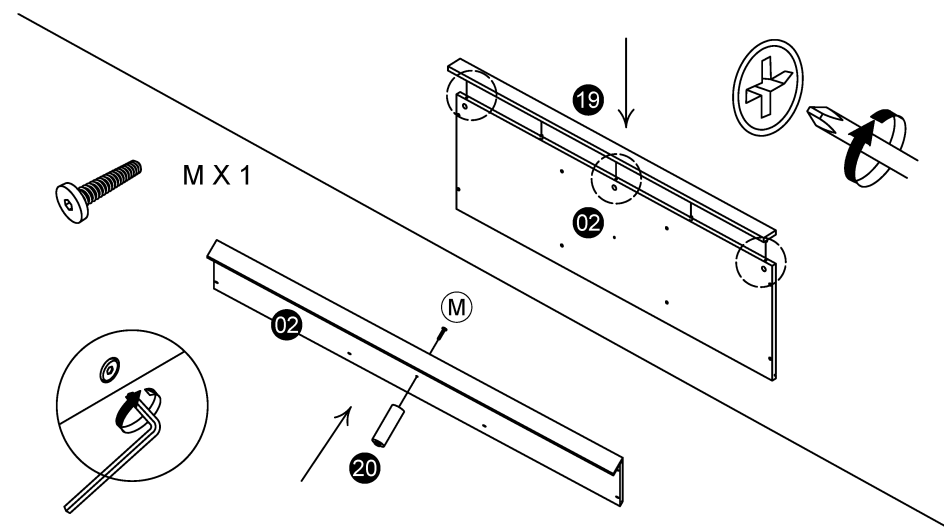 


## STEP 8

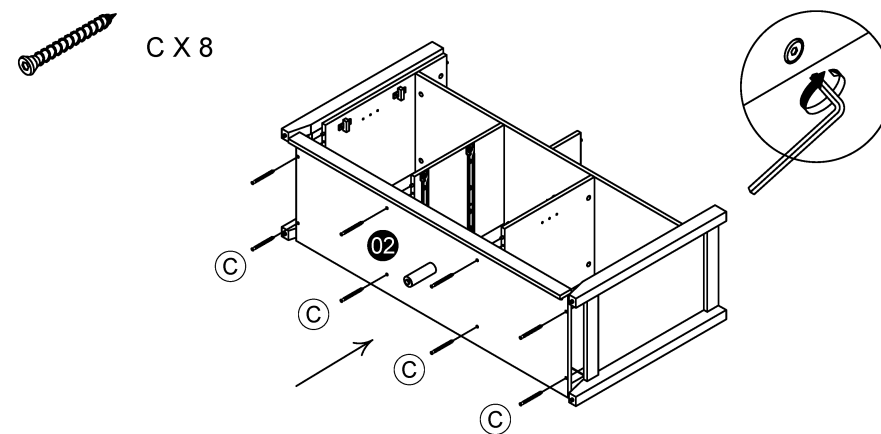 







## STEP 9

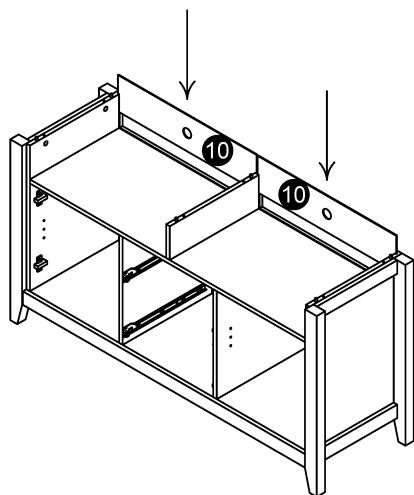 


## STEP 10

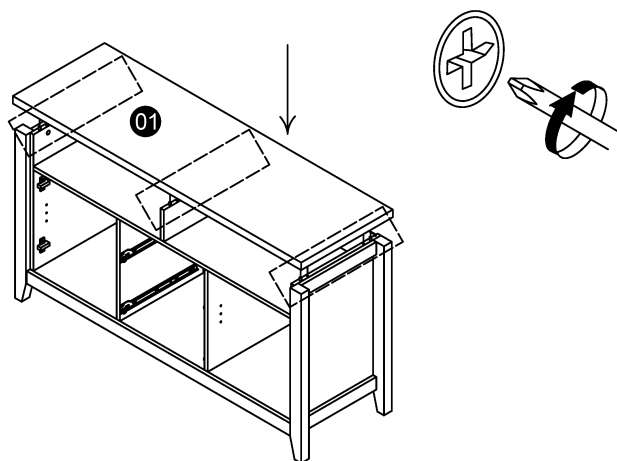 

## STEP 11

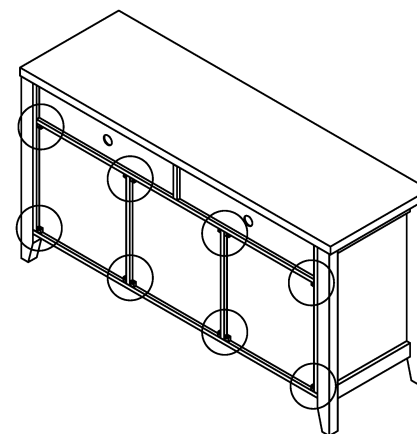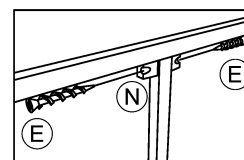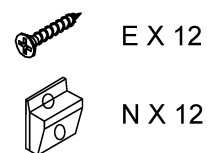    
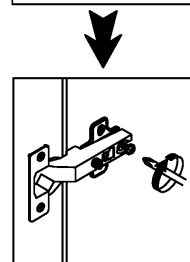 
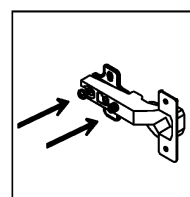 
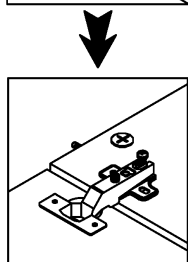 
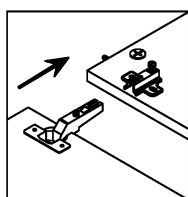 
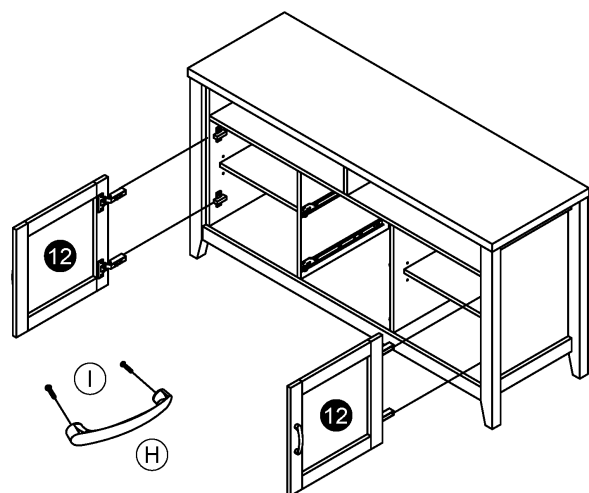 


## STEP 12

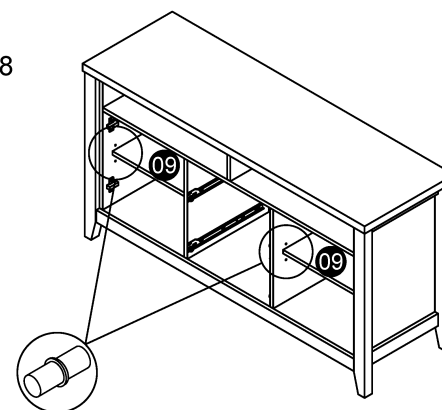 


## STEP 13

 
 H X 2

 I X 4


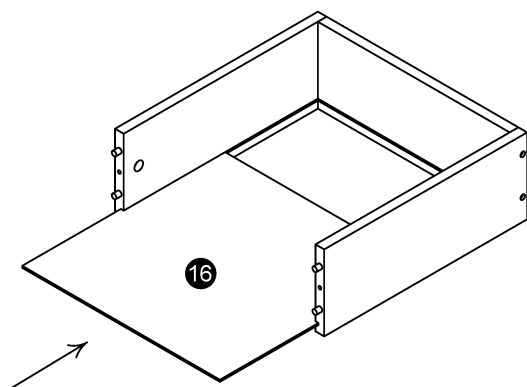 
## STEP 14

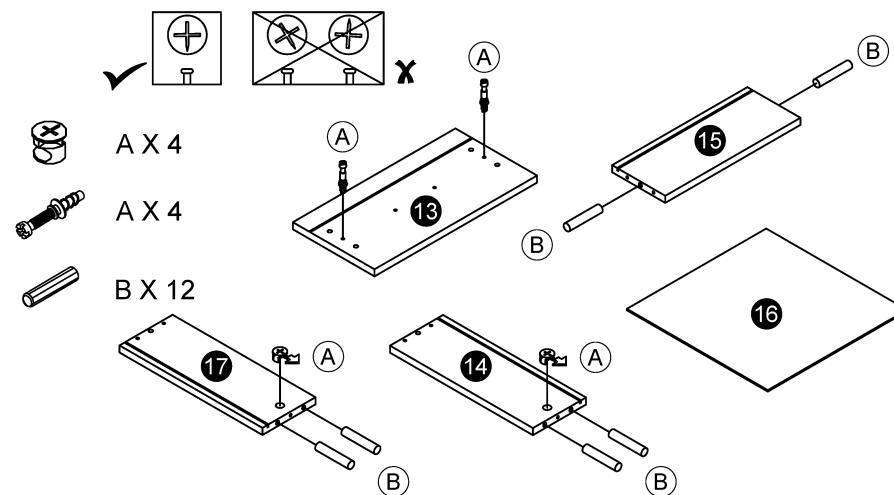


## STEP 15

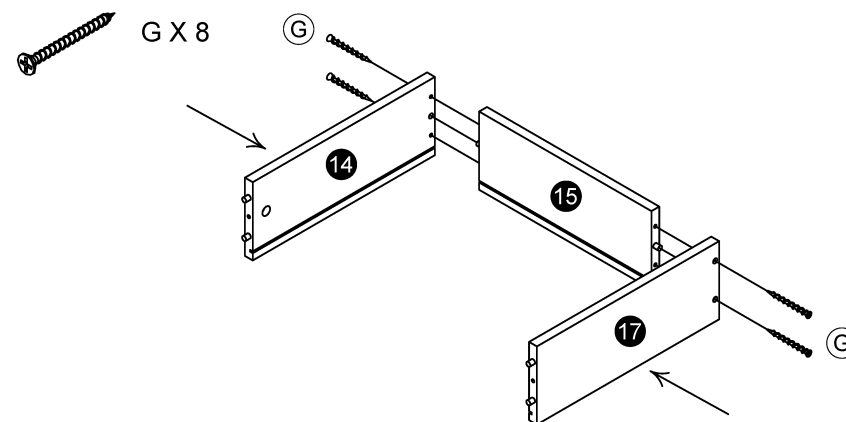


## STEP 16



 
## STEP 17

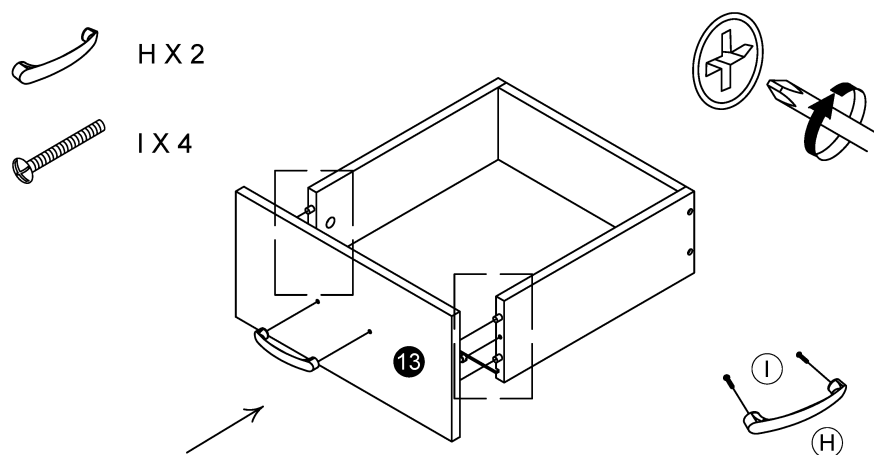


## STEP 18

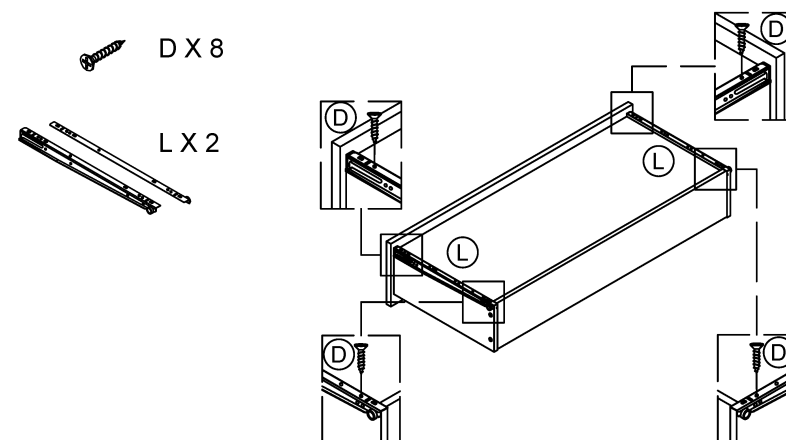 

## STEP 19

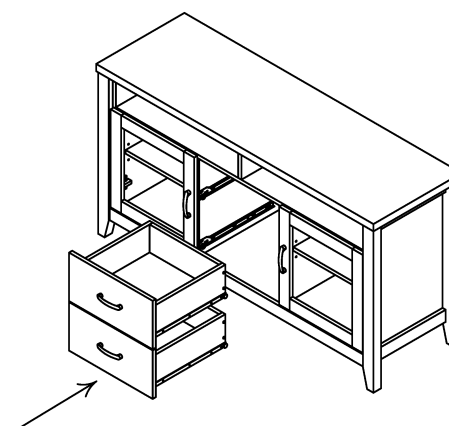 

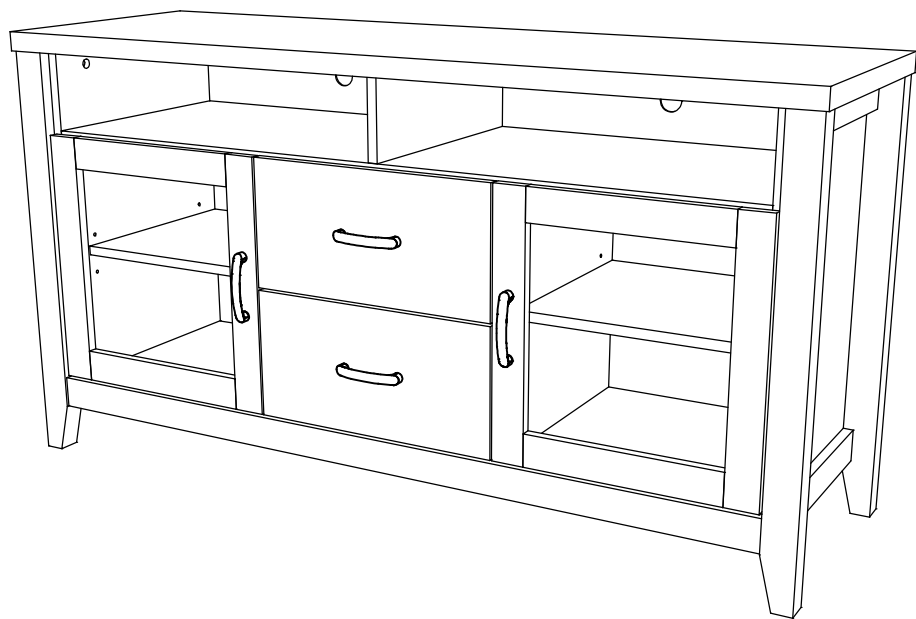 

## Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

## Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment.

Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood.

It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.