COSTWAY

2.Plug the charger port into the input socket.

Caring For Your Vehicle

COSTWAY


3.Plug the charger plug into a wall outlet.

The battery will begin charging.

Visit us: www.costway.com

6V 4.5Ah

Kids Electric Motorcycle with Training Wheels **ITEM: TY327673** 

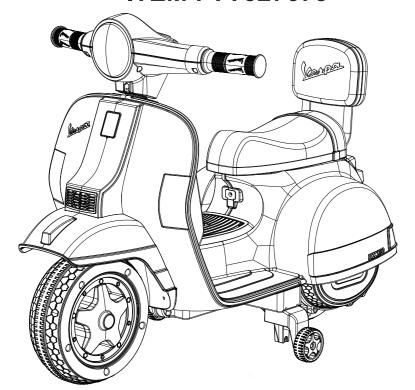

Manual book only for your reference, product features may vary from the pictures in book, configuration based on your order!

THIS INSTRUCTION BOOKLET CONTAINS <u>IMPORTANT</u> SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE. Please give us a chance to make it right and do better! Follow Costway

Contact our friendly customer service department for help first. Replacements for missing or damaged parts will be shipped ASAP!

COSTWAY

|  |  |   | <b>COSTWAY</b> www.costway.com                                |
|--|--|---|---|
| 1 Brief Instroduction And Models                       |  |   | 01  |
| 2 Important Safety Instructions                        |  |   | 02  |
| 3 Parts List   |  |   | 04  |
| 4 Battery Line Connector                               |  |   | 05  |
| 5 Assembly Steps                                       |  |   |   |
| 6 How To Operate Your Vehicle                          |  |   | 08  |
| 7 Charging The Vehicle                                 |  |   |   |
| 8 Caring For Your Vehicle                              |  |   |   |
| 9 Problems And Solutions Guide                         |  |   |   |
| 10 Disposal Of Battery                                 |  |   |   |
| 11 Additiona   | I Explanation  |   | ··11  |
|  |  | Brief   | Instroduction And Models                                      |
| designed up<br>vehicle and<br>your childrer<br>We wisł | rou for choosing our<br>on a unique mold: so<br>cute series, which br<br>n.<br>n our vehicle to acco<br>nd your family will be | uch as the re<br>ring different<br>mpany your o | alistically imitated fun and feeling for children for a happy |
| Suitable Age:  | 37~72Months  | Load Capacity:                                  | Under 44LBS   |
|  |  |   |   |

Motor RS380/6V/13000RMP | Size Of Car: | 26"x15.5"x20.5"

Manual book only for your reference, all configuration based on your order!

110-240VAC,50/60HZ

Output: DC7.8V 500MA

\_\_\_\_\_\_1 \_\_\_\_\_

Charging Type

COSTWAY www.costway.com

COSTWAY

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us!

Great products so far. Fast delivery, easy setup, and working without any issues.

★ ★ ★ ★ Great products so far

US office: Fontana, California

COSTWAY

UK office: Ipswich

We sincerely solicit you to go back to our shop and leave a good rating in just a

simple click. It would be quite encouraging if you could kindly do so like below:

With your inspiring rating, COSTWAY will be more consistent to offer you

EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

5 Star Rating

Contact Us!

Do NOT return this item. Contact our friendly customer service department for help first.



**Before You Start** 

Please read all instructions carefully.

 
 Retain instructions for future reference. Seperate and count all parts and hardware.

Read through each step carefully and follow the proper order.

We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

Always place the product on a flat, steady and stable surface.

(iii) Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.



\* Exclusive Customer Service

\* Permanent Shopping Cart

\* Order History

\* Personalized Recommendations

COSTWAY

COSTWAY

Important Safety Instructions Read carefully and follow all the instructions MARNING ! CAUTION

Assembly/Used Product requires adult assembly. Children can be harmed by small parts, sharp

edges and sharp points in the vehicle's unassembled state. \square Care should be taken in unpacking and assembly of the vehicle. Children should not handle parts, or help in assembly of the vehicle. Always properly handle the protective material and poly bags before assembly

Forbid children to play and have suffocation danger! Suitable for age 37-72 months; Maximum user weight is 44 lbs. 1 Choking hazard----small parts. This product is forbidden to use by children under 3 years.

Direct Adult Supervision Required. Never leave the child unattended by himself. Always keep your child in view when he is in vehicle. Teach appropriate safety rules to your child before allowing operation of this vehicle. These rules should also be reviewed with other playmates who want to drive this vehicle. Make sure children know and follow these rules for safe driving and riding:

Always wear shoes;

 Always sit on the seat; Always wear a helmet when riding;

 Only one rider at a time. 1 Keep children within safe riding areas, these areas must be:

A Away from steps/cars/driveways/roads and alleys;

B Away from sloped/inclined surfaces/swimming pools or other bodies of water; C Away from other dangerous places;

D Only outdoors. Generally flat ground/playground /Garden asphalt and other

Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-light area. Before using, adult should check whether the main components are in

Insert the battery plug and connect to the power supply; whether the battery charger / wire / plug / body and other parts are damaged; whether the screws are loose and whether there are other damage problems. Do not use a

damaged car until it is repaired. 1 To avoid damaging the motors and gears, stop the vehicle before shifting from forward

Please turn the forward / stop / reverse switch to "O" in the non-driving state Turn off the power switch. (Notice: this switch only controls the parts of the drive.)

Do not let any child touch the wheels or near them when the car is moving. Do not tow anything behind the vehicle or overload it, do not exceed the maximum

□ 孩子乐出美国豪雅A008 TY32673英文说明书-2 2020-5-12

Disposal Of Battery

Do not throw into a fire. The battery may explode or leak.

\_\_\_\_\_ 13 \_\_\_\_\_

 Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner. Return an exhausted battery to your local approved lead-acid battery

Special explanation MARNINGS

1. The product is not a means of transportation, do not drive on the street, using the product under adult's guardianship.

2. Do not allow children under 36 months to use the product. 3. Overage and overload are forbidden. Maximum load: 44 lbs.

4. The car should be assembled and checked by adults, guarantee safety

5. Do not wash the product with water, wiping the car using a soft wet cloth 6. Battery charging should be handled by adult only, the charger is not toy,

do not let children play the charger. 7. Driving on public avenue, street, slope, pool side, stair head and other

danger area are strictly forbidden. 8. Do not use this product in high-voltage line, transformer station, gas

station, hospital. 9. Must use this product with shoes, with safe-belt.


10. Please read carefully and keep this manual book for your children's safety. 11. In order to prevent a child from suffocation, keep plastic bags away from

COSTWAY

COSTWAY

Problems And Solutions Guide

Cause: Thermal fuse has tripped. The vehicle is equipped with a self-resetting fuse. When the vehicle is overloaded or operated incorrectly, the self-resetting fuse will be cut off for 5-10 seconds, then restart again. The self-resetting fuse is under the seat. (refer to the picture)

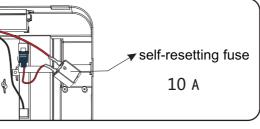

 Cause: battery connector or wires are loose Make sure the battery connectors are firmly plugged in to each other.

Cause: battery is dead

Please contact retailer or manufacturer. Cause: electric system is damaged

Please contact retailer or manufacturer.

 Cause: motor is damaged The motor needs professional repair. Please contact retailer or manufactuer

Problem: The battery will not recharge Cause: battery connector or adapter connector is loose.

Make sure the battery connector and adaptor are firmly plugged together Cause: charger is not plugged in.

Make sure the charger is plugged into the wall outlet and the power flow to

the outlet is on. Cause: charger is not working Is the charger warm while charging? If not, the charger may be broken and

please connect retailer and manufacturer. Problem: The vehicle does not run very long

How To Operate Your Vehicle

forward-backward switch -

All switches are on the dashboard of the car.

lifted from the "foot pedal".

all configuration depends on your order!

hearing damage.

「孩子乐出美国豪雅A008 TY32673英文说明书-3 2020-5-12

 Cause: battery may be undercharged You may not be charging the battery long enough. After each use, or once a month minimum, charge the battery for 8-12 hour. Do not charge over

Note! 1.when changing the tap position, please make sure the vehicle has been.

High-low speed is optional. If the buyer's model does not require

high / low speed configuration, this switch is not available.

Pls note for high-low speed and mp3 function just for your reference,

• Forward 1.Press the "forward-backward switch" on the "forward" position.

2. Press the "foot pedal", the vehicle drives forward.

The vehicle will brake automatically, when your child's foot is

2.Press the "foot pedal", the vehicle will go backwards.

Keep a distance between ears and the sound

**!**\| source during use. Improper use may cause

1. Press the "forward-backward switch" on the "backward" position.

Press the "high-low speed switch" on the "high" position, the car will go fast.

Press the "high-low speed switch" on the "low" position, the car will go slowly.

completely stopped, otherwise it will damage the gear box and motor

Important Safety Instructions

Never short-circuit the battery terminals.

overheating, fire or explosion.

1 Do not open the battery and the charger

Always maintain battery dry. Do not let the vehicle contact fresh water or

↑ Only adult can handle or charge the battery. Never allow children to do

(!\) Connecting correct polarity when charging.

or damaged parts.

! Charge the battery in a dry area ONLY.

Battery Line Connector

has not been used.

! When the room temperature is below 5 degrees Celsius, the actual below -5 degrees Celsius.

COSTWAY www.costway.com

hoThe battery/ charger/ alkaline batteries are not toys, forbidden for children playing.

Use only with manufacturers prescribed rechargeable battery and charger. ♠ Do not use the battery or charger for any other product. Could cause

⚠ Do not charge battery upside down.

⚠ Charge 4-6 hours before the first time using, but not charge over 10 hours.

that. Turn off power switch before charging the battery. ↑ Examine the battery, charger and their connectors for excessive wear or

damage each time you charge the battery. If damage or excessive wear is detected, do not use the charger or the battery until you have replaced the worn

| When the vehicle's normal speed becomes slow or after each use, recharge the battery for 8-12 hours, never charge the battery longer than

! It is normal that charger and battery are tepid while charging.

Charge the battery at least three months one time, even if the vehicle

charging time will be extended by 3-5 hours. Do not use this product

Please identify all parts before assembly and save all packaging materials until assembly is complete.

COSTWAY

8 Manual Book

Vehicle body is modeled by polypropylene. Solarize or in -15°C use are strictly prohibited. Vehicle should be far away from hot objects, like an oven and heater, plastic parts may melt beside. Avoid operating the vehicle in wet or snowy conditions, and do not spray the

car with a hose. Do not wash the vehicle with soap and water. W motors or electrical switches can cause them to corrode and can cause switch or motor Avoid operating the vehicle on sand, loose dirt or gravel. Sand, loose dirt or

gravel in the motors or electrical switches can cause them to jam, and could cause switch or motor failure. 4.The vehicle can be wiped down with a soft, dry cloth for a shiny finish, you can wipe plastic parts with a non-wax furniture polish applied to a soft-cloth. Do not

use automotive wax. Do not use soap or water or spray the vehicle with a hose.

Step 6: Press the seat into the car

body right holes. (Please note if you

assemble the car seat, should remove

flat head screw 4\*25mm \* 2pcs

Step 5: Backrest assemble (This is

optional which customer choose).

to fix the backrest on the car.

Make the backrest to the car body

hole, use one screw on each side

the dotted plastic baffle at the rear of

buy the car with backrest, before

5. Do not modify the electric system. When the fault appears and they must be maintained by professional. Alterations could cause a fire resulting in serious injury and can also ruin the electrical system. 6. Use for about half month, check the wheels turning agilely or not, motor work

is normal or not. Use infuse lube to lubricate moving parts. Problems and Solutions Guide

Step 7: Rive the screw, open the middle:

plastic plate, and plug in the power line.

the cushion)

Problem The vehicle does not run Cause: The battery may low on power.


After each use and once a month minimum, charge the battery for 8-12 hour Do not charge over 18 hour.

4x12\*4

10 Backrest (Optional) 11 4x25\*2

COSTWAY www.costway.com Please note before using the product, it must be assembled by an adult according to this manual book. Step 4: Remove the screw out firstly, then insert the line of car head into the line of the car body, put the

a. Remove the screws from the battery cover, then can open that.

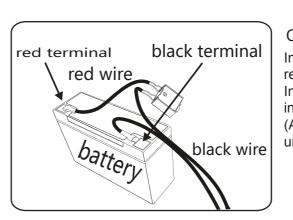

Connecting Battery Line Inserting red wire on the car into red column on the battery. Inserting black wire on the car into black column on the battery. (Avoiding inserting into the uncorrect polarity)

head in the round pipe and make the screw through the hole of the car head and the pipe hole, tighten the Step 2:Fix the fender in the car body hole, use four screws to tighten from up to down. Step 3: Insert the front fork round pipe into the bottom of the front section of the car body until the upper part of the front end of the vehicle body is completely Step 1: Take out two side wheels, exposed. Pay attention to the alignment of the iron sheet baffle: ) flat head screw with the slot of the fender, and then place the car body stably.

then use four screws to fix them on both sides of the car body. round head screw 4\*16mm \* 8pcs.

COSTWAY

孩子乐出美国豪雅A008 TY32673英文说明书-4 2020-5-12

「孩子乐出美国豪雅A008 TY32673英文说明书-1 2020-5-12

b. Insert the red wire on the car into red column on the battery.