




COSTWAY®

**Please give us a chance to make it right and do better !**

Contact our friendly customer service department for help first.  
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana    UK office: Ipswich    AU office: Truganina

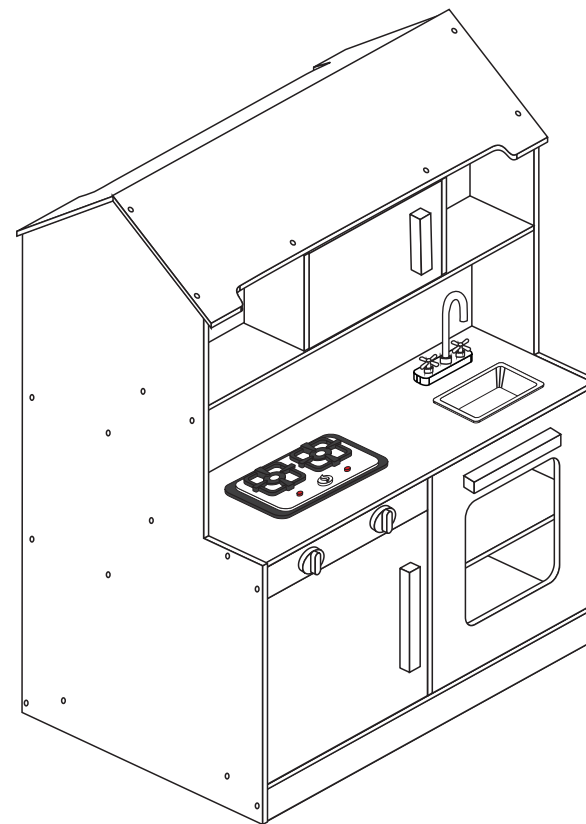

## Contact Us !

**Do NOT return this item.**

Contact our friendly customer service department for help first.



US: cs.us@costway.com  
UK: cs.uk@costway.com  
AU: cs.au@costway.com

## USER'S MANUAL

### Kid's Kitchen Playset TP10024

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



# Before You Start


Please read all instructions carefully and keep it for future reference.

## General Security Warning

Caution: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.



Danger: Lack of attachment may cause a risk of tipping.

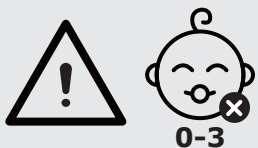


**WARNING:**  
**CHOKING HAZARD**-Small parts.  
Not for children under 3 years.

## Warning for Assembly

- ⚠ Assembled only by adults
- ⚠ Remove all Packaging, separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.

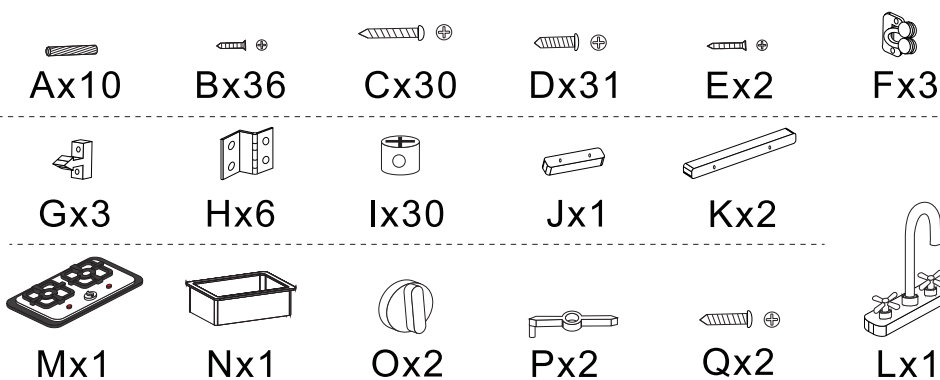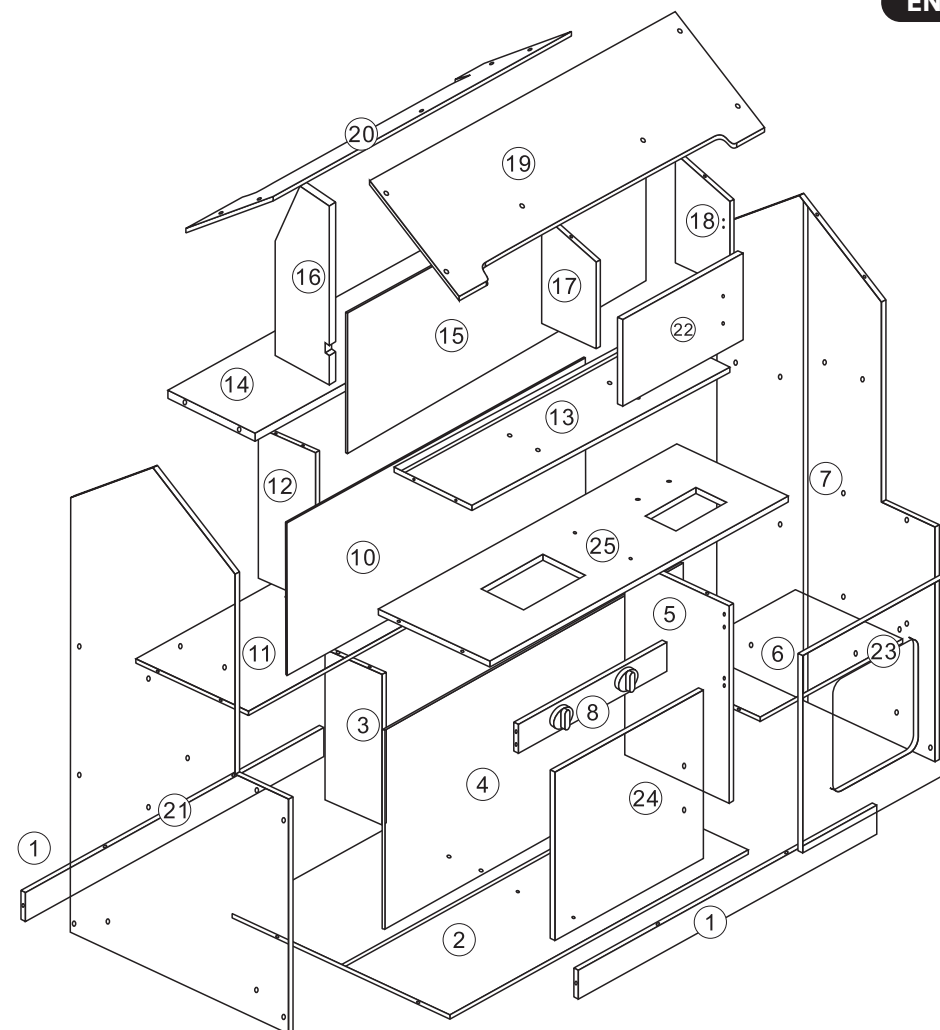


1

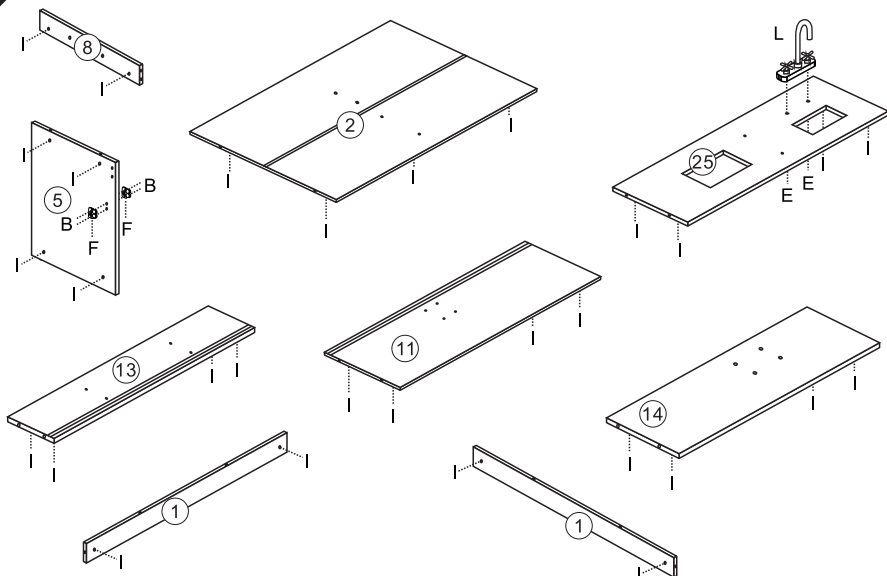


STEP 1: Insert nuts I to No.1,2, 5, 8, 11, 13, 14 and No.25. Assemble parts F to No.5 with screws B. Assemble part L to No.25 with screws E.

2

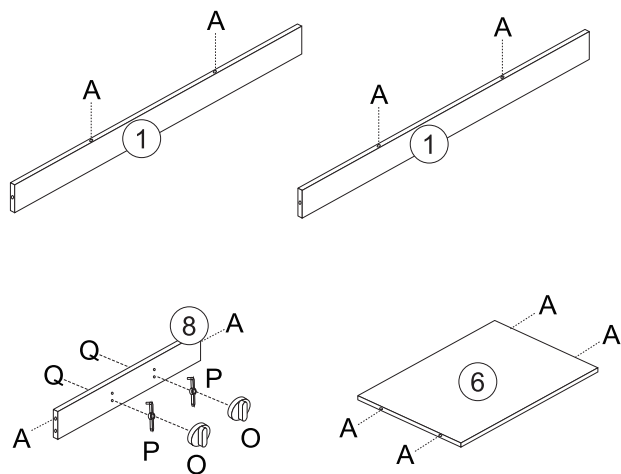


STEP 2: Assemble parts O and P to No.8 with screws Q. Insert wooden plugs A to No.1, 6 and No.8.

3

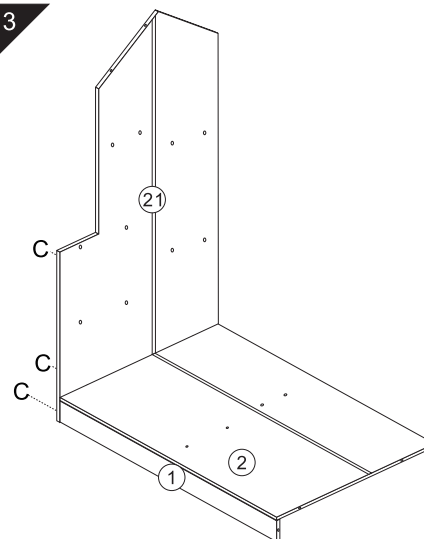


STEP 3: Assemble No.1 and No.2 to No.21 with screws C.

4

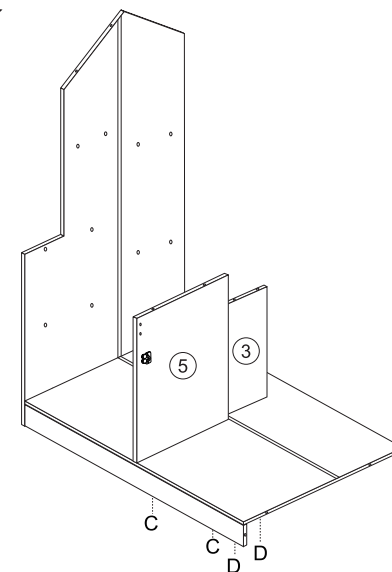


STEP 4: Assemble No.5 to No.2 with screws C, then assemble No.3 to No.2 with screws D.

5

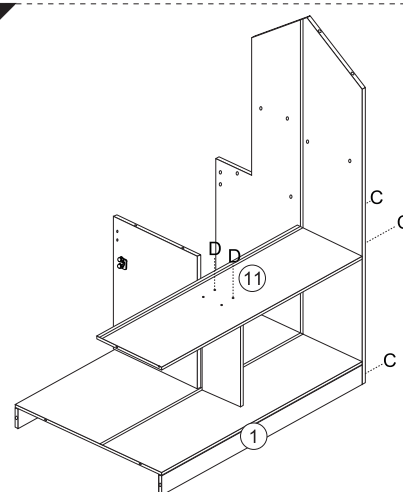


STEP 5: Assemble No.11 to No.3 with screws D, also assembly No.11 and No.1 to No.21 with screws C.

6

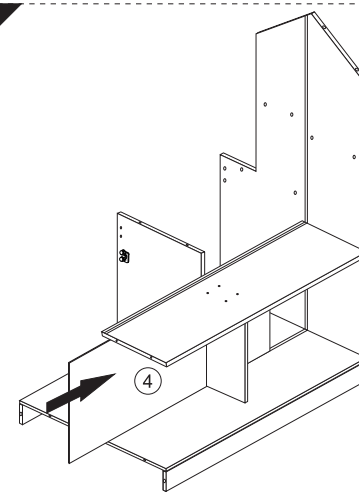


STEP 6: Insert No.4 to No.2, No.11 and No.21.

7

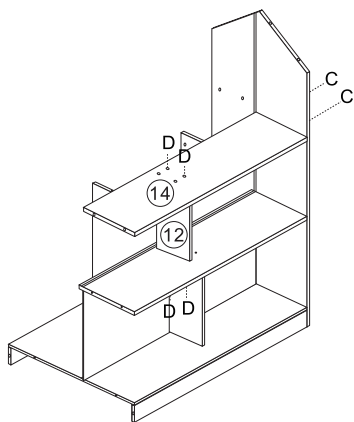


STEP 7: Assemble No.12 to No.11 with screws D, then assemble No.14 to No.12 with screws D, to No.21 with screws C.

8

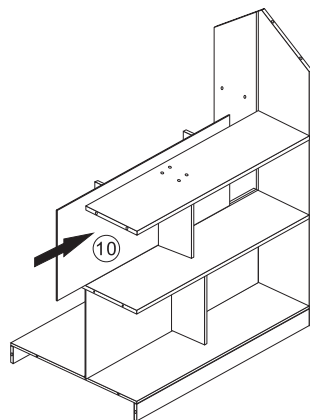


STEP 8: Insert No.10 to No.11,14 and No.21.

11

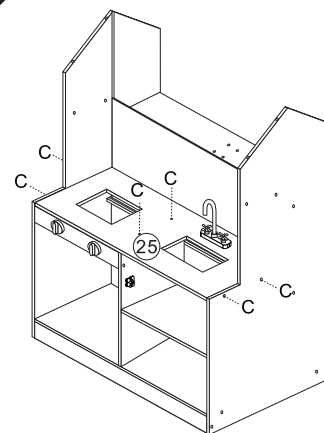


STEP 11: Assemble No.25 to No.5,7 and No.21 with screws C.

12

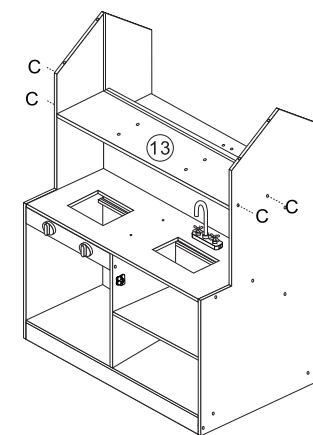


STEP 12: Assemble No.13 to No.7 and No.21 with screws C.

9

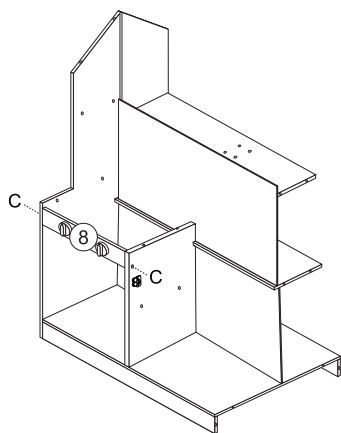


STEP 9: Assemble No.8 to No.5 and No.21 with screws C.

10

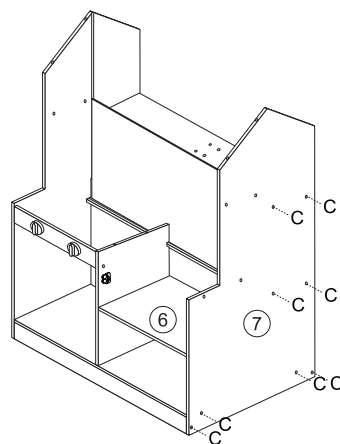


STEP 10: Insert No.6 to No.5, then assemble No.7 to No.1,2,11 and No.14 with screws C.

13

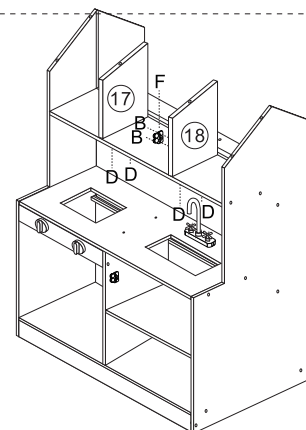


STEP 13: Assemble part F to No.18 with screws B, then attach No.18 and No.17 to No.13 with screws D.

14

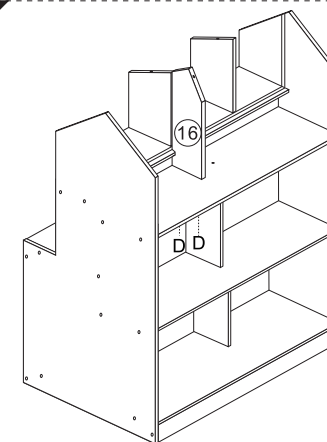


STEP 14: Insert No.16 to No.13 and assemble to No.14 with screws D.

15

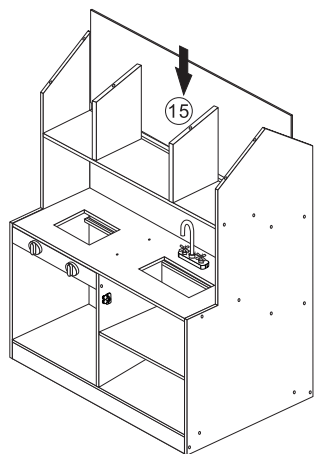


STEP 15: Insert No.15 to No.13, No.7 and No.21.

16

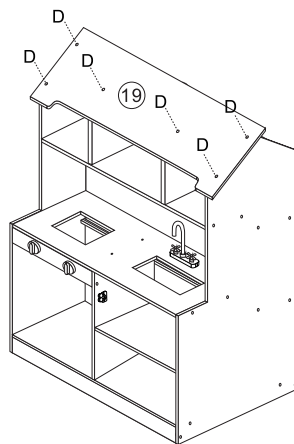


STEP 16: Assemble No.19 to No.17,18 and NO.7,21 with screws D.

19

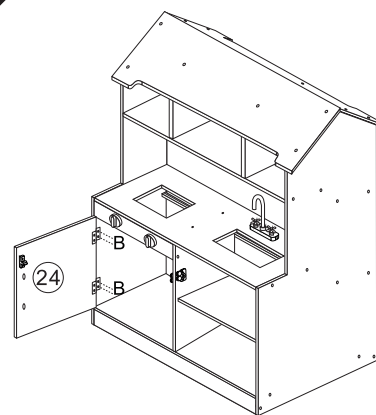


STEP 19: Assemble No.24 to No.21 with screws B.

20

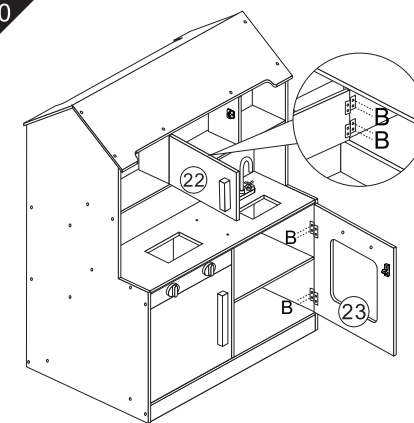


STEP 20: Assemble No.22 to No.17 and No.23 to No.7 with screws B.

17

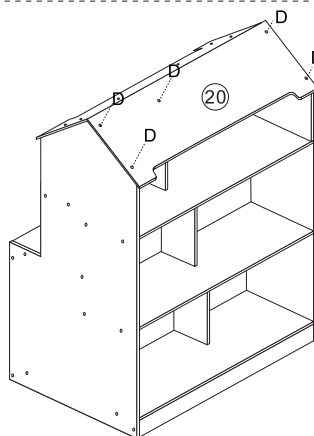


STEP 17: Assemble No.20 to No.16 and NO.7,21 with screws D.

18

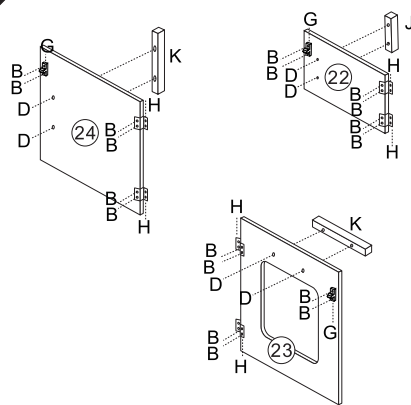


STEP 18: Assemble part J to No.22 with screws D, also parts G and parts H to No.22 with screws B.  
Assemble parts K to No.23,24 with screws D, also parts G and parts H to No.23,24 with screws B.

21

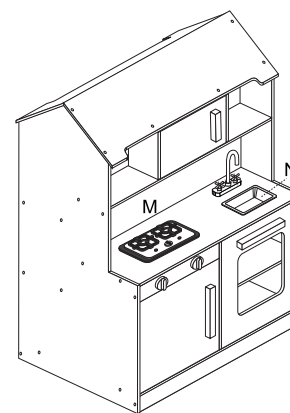

STEP 21: Put Parts M and N up to No.25.

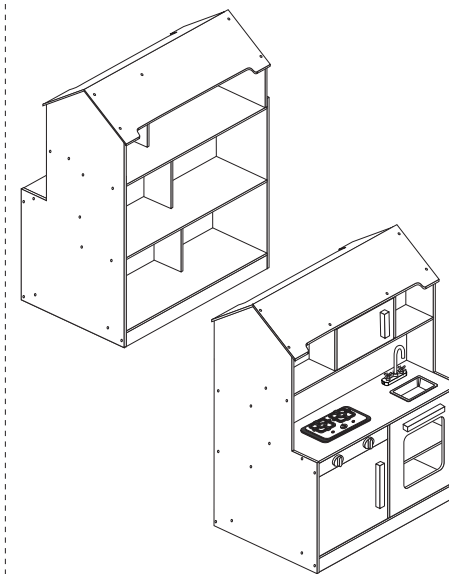

**WARNING:** Must be assembled by an adult.