

**USER'S MANUAL** 

TV Stand HW56756

Assembly Instructions

## **Hardware List**


ITEM: HW56756

ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
Α	Cam Bolt	OCC.	16 pcs	G	Shelf Pin	Ø	8pcs
В	Camlock		16 pcs	Н	Screw	<b>4*40</b> mm	13 pcs
С	Wooden Dowel		18 pcs	I	Magnetic Bar	$\theta$	2 pcs
D	Knob		2 pcs	J	SCREW		17 pcs
Е	Screw	3*12mm	30 pcs	K	Hinge		4 pcs
F	Magnetic Catch		2 pcs	L	Knob Bolt		2 pcs


## Parts List

ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Top Panel	TAIN	1 pc	7	Adjustalbe Shelf	TAIN	2 pcs
2	Bottom Panel		1 pc	8	Back Panel		1 pc
3	Left Side Panel		1 pc	9	Divide Panel		1 pc
4	Right Side Panel		1 pc	10	Connect Bar		3 pcs
5	Left Side Door		1 pc	11	Leg		1 pc
6	Right Side Door		1 pc				


Step 1

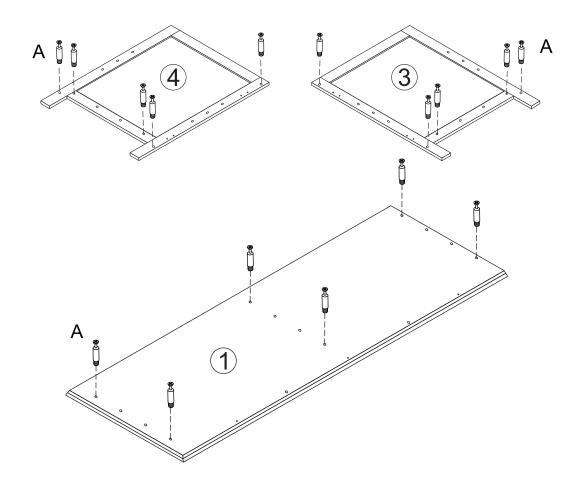


Step 2

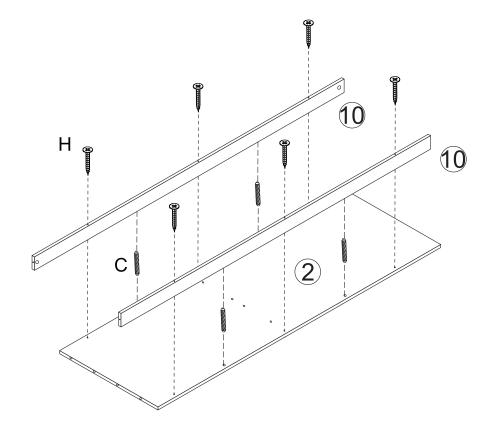


Step 3

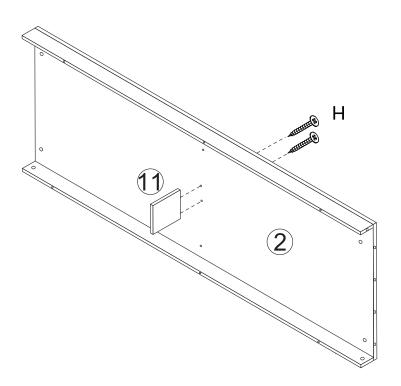


Step 4

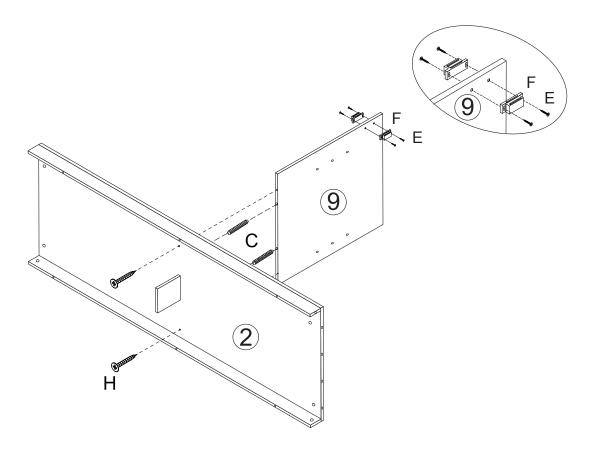


Step 5

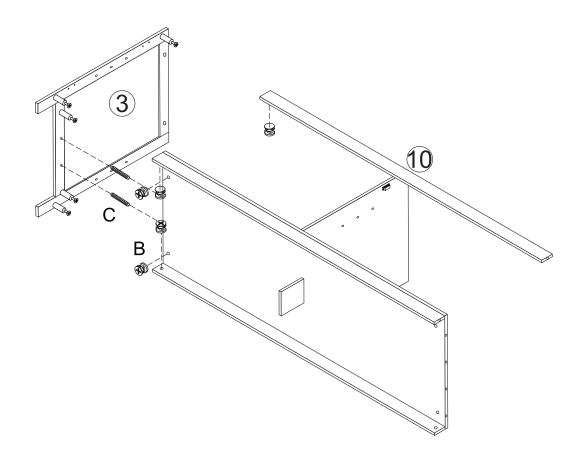


Step 6

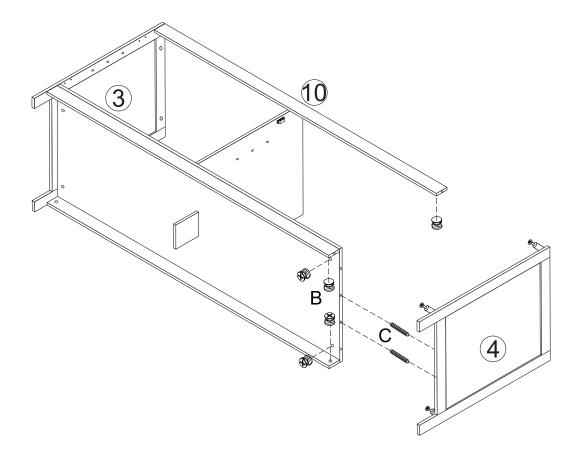


Step 7

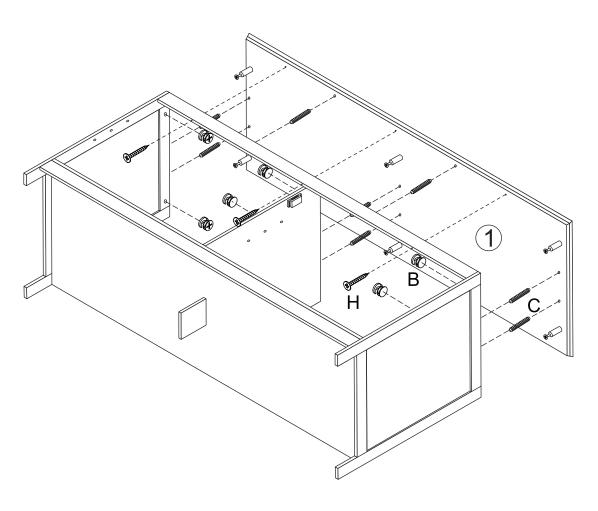



Step 8

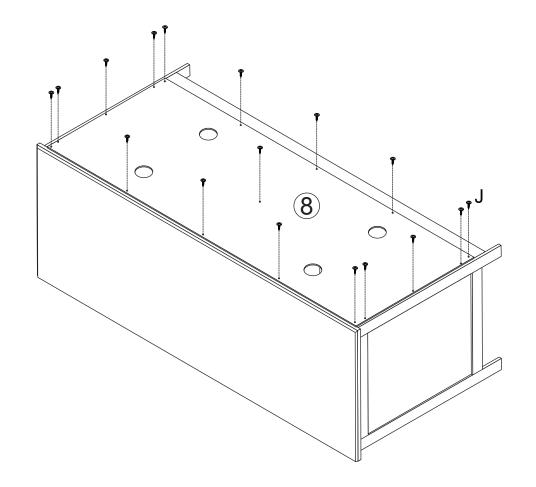


Step 9

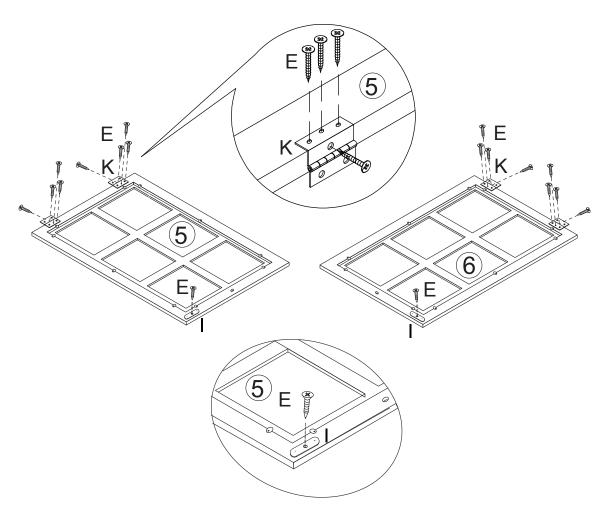

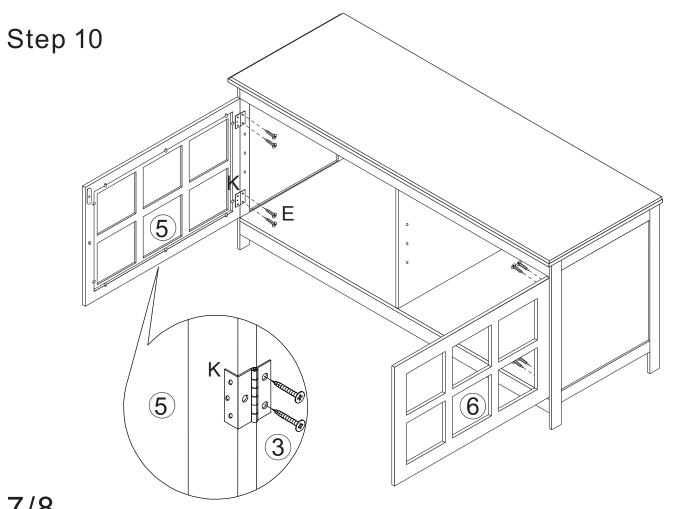

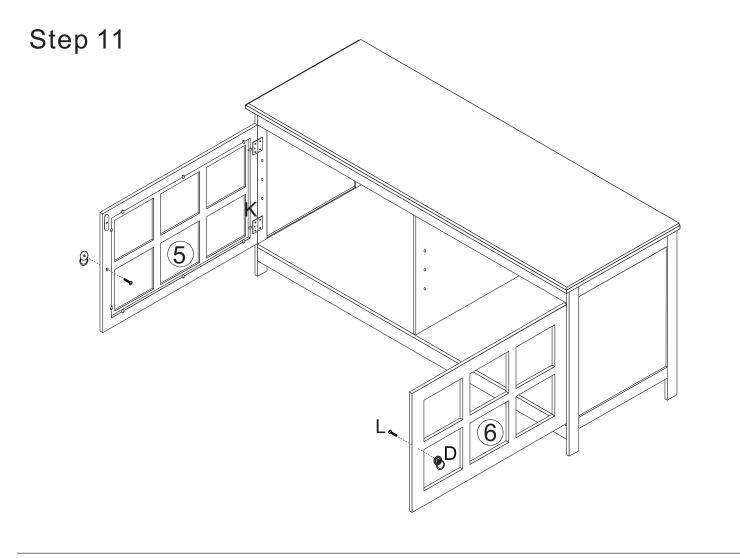

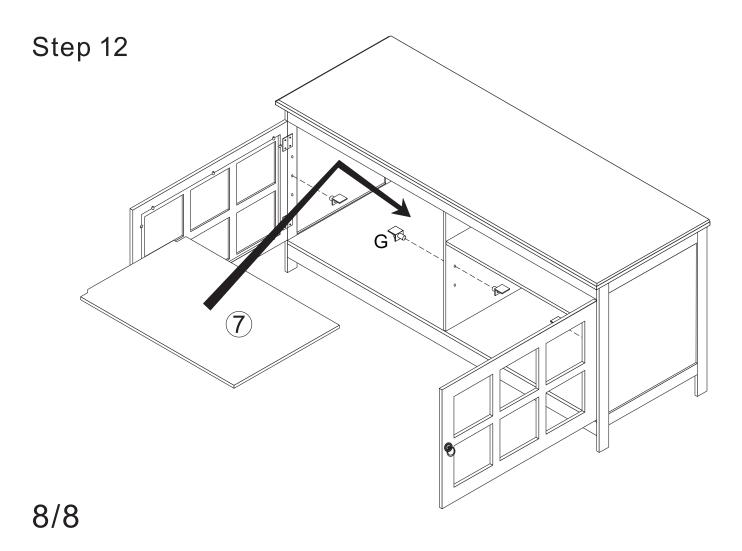



## TIPS:

Your suggestions and comments for Costway are really important to us! We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★ Great products so far

February 24, 2018

Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office:Fontana UK office:Ipswich



