








 





**USER'S MANUAL**

---

 

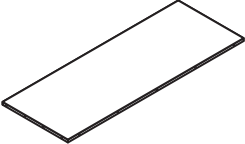 
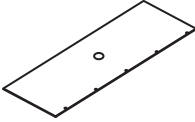 
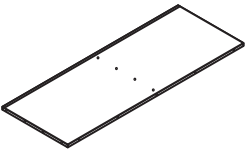 
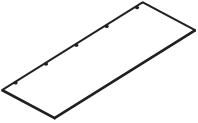 
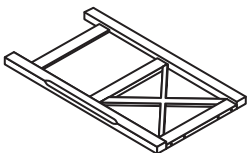 
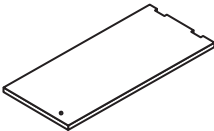 
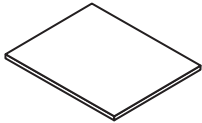 
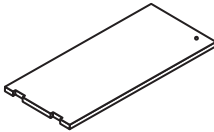 
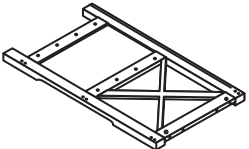 

**TV STAND**

# PRODUCT ASSEMBLY

## Hardware List

 
| ITEM | DESCRIPTION    | PART   | QTY    | ITEM | DESCRIPTION  | PART   | QTY    |
|------|----------------|--|--------|------|--------------|--|--------|
| A    | Cam Bolt       |         | 34 pcs | H    | Magnetic Bar |         | 2 pcs  |
| B    | Camlock        |         | 34 pcs | I    | Hinge        |         | 4 pcs  |
| C    | Wooden Dowel   |         | 32 pcs | J    | Screw        |         | 5 pcs  |
| D    | Knob Bolt      |         | 2 pcs  | K    | Screw        |  3*12mm | 18 pcs |
| E    | Knob           |         | 2 pcs  | L    | Fixed Button |         | 4 pcs  |
| F    | Screw          |  3*14mm | 4 pcs  | M    | Screw        |  3*16mm | 4 pcs  |
| G    | Magnetic Catch |         | 2pcs   |      |              |  |        |

## Parts List
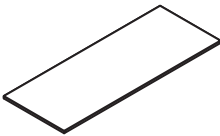
| ITEM | DESCRIPTION      | PART  | QTY  | ITEM | DESCRIPTION                  | PART  | QTY   |
|------|------------------|---|------|------|------------------------------|---|-------|
| 1    | Top Panel        |  | 1 pc | 7    | Top Connect Bar              |  | 2 pcs |
| 2    | Shelf            |  | 1 pc | 8    | Upper Back Panel             |  | 1 pc  |
| 3    | Bottom Panel     |  | 1 pc | 9    | Lower Back Panel             |  | 1 pc  |
| 4    | Left Side Panel  |  | 1 pc | 10   | Left Door                    |  | 1 pc  |
| 5    | Divide Panel     |  | 1 pc | 11   | Right Door                   |  | 1 pc  |
| 6    | Right Side Panel |  | 1 pc | 12   | Shelf and Bottom Connect Bar |  | 2 pcs |

# PRODUCT ASSEMBLY


## Parts List Assembly Overview

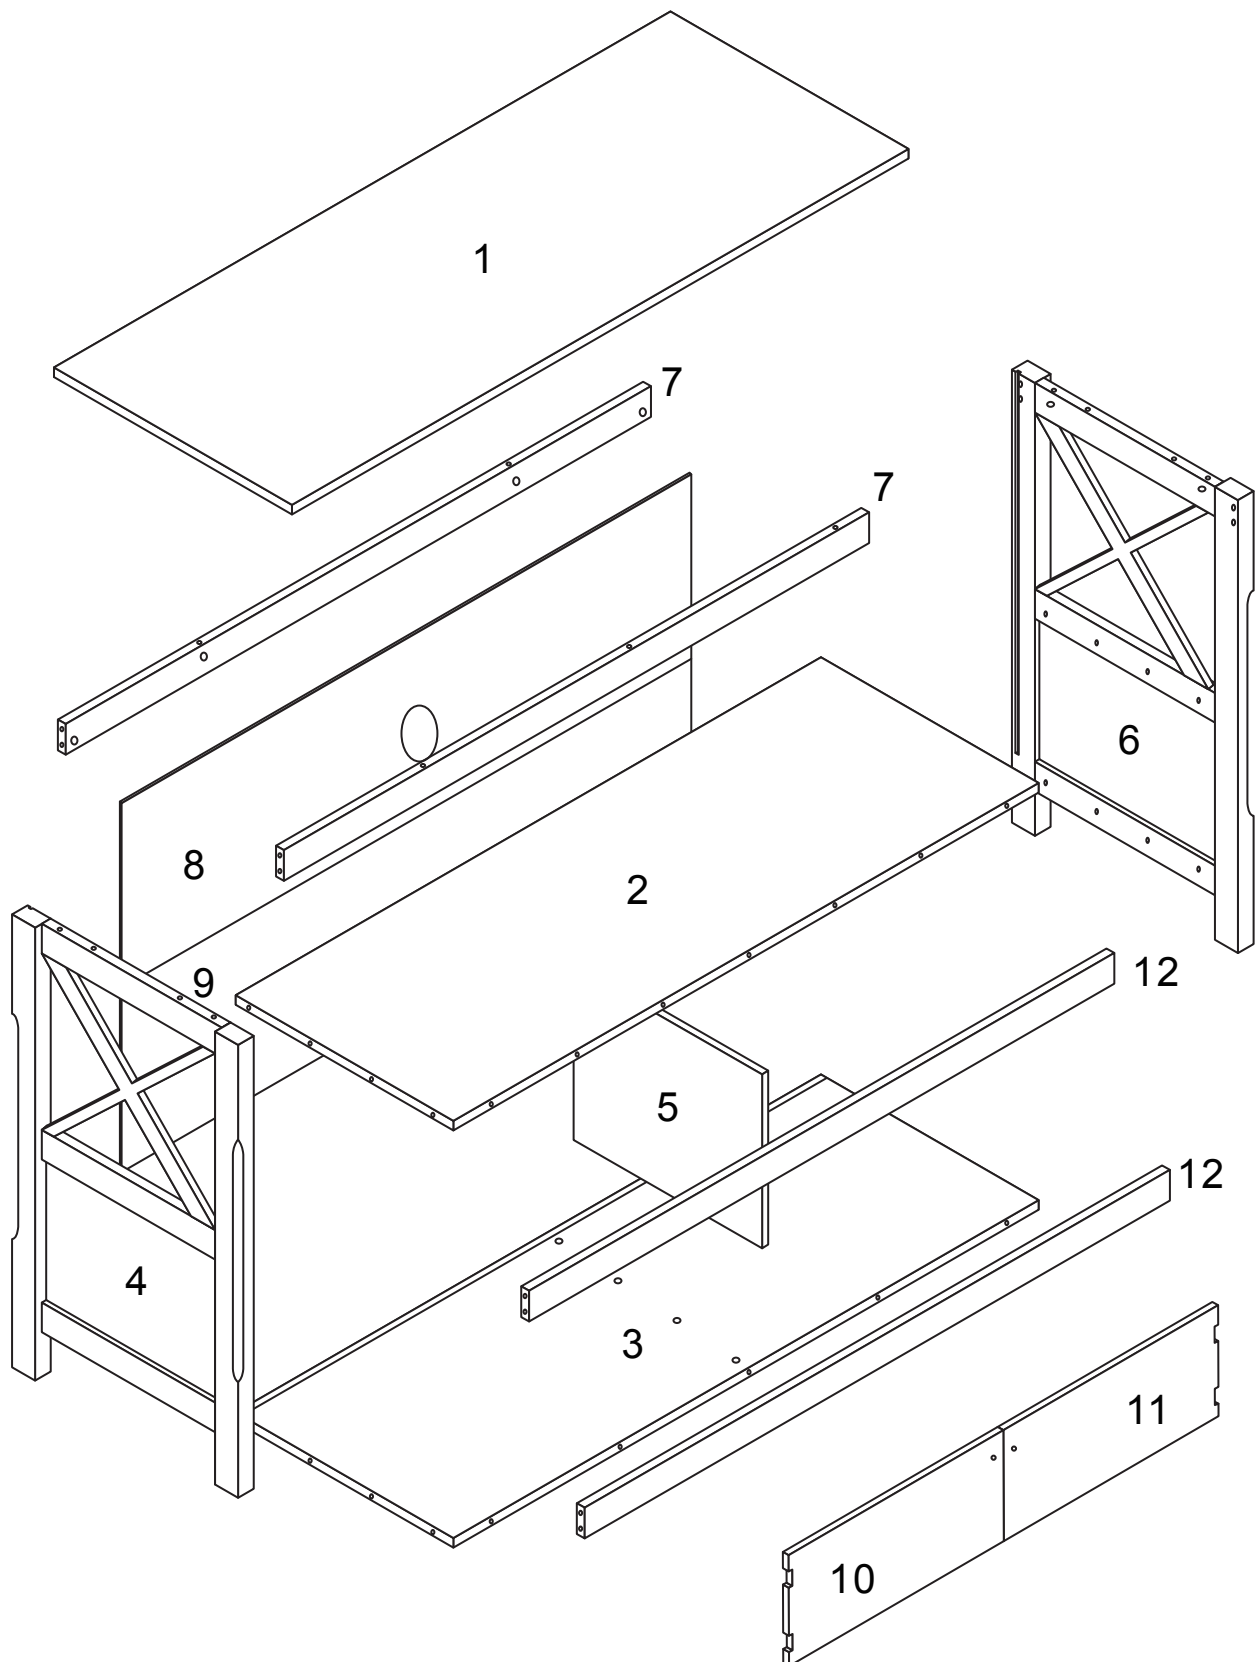

# PRODUCT ASSEMBLY


## STEP 1

 a) Screw in Cam-bolt (A) into designated holes on Shelf and Bottom Connect Bar (5).

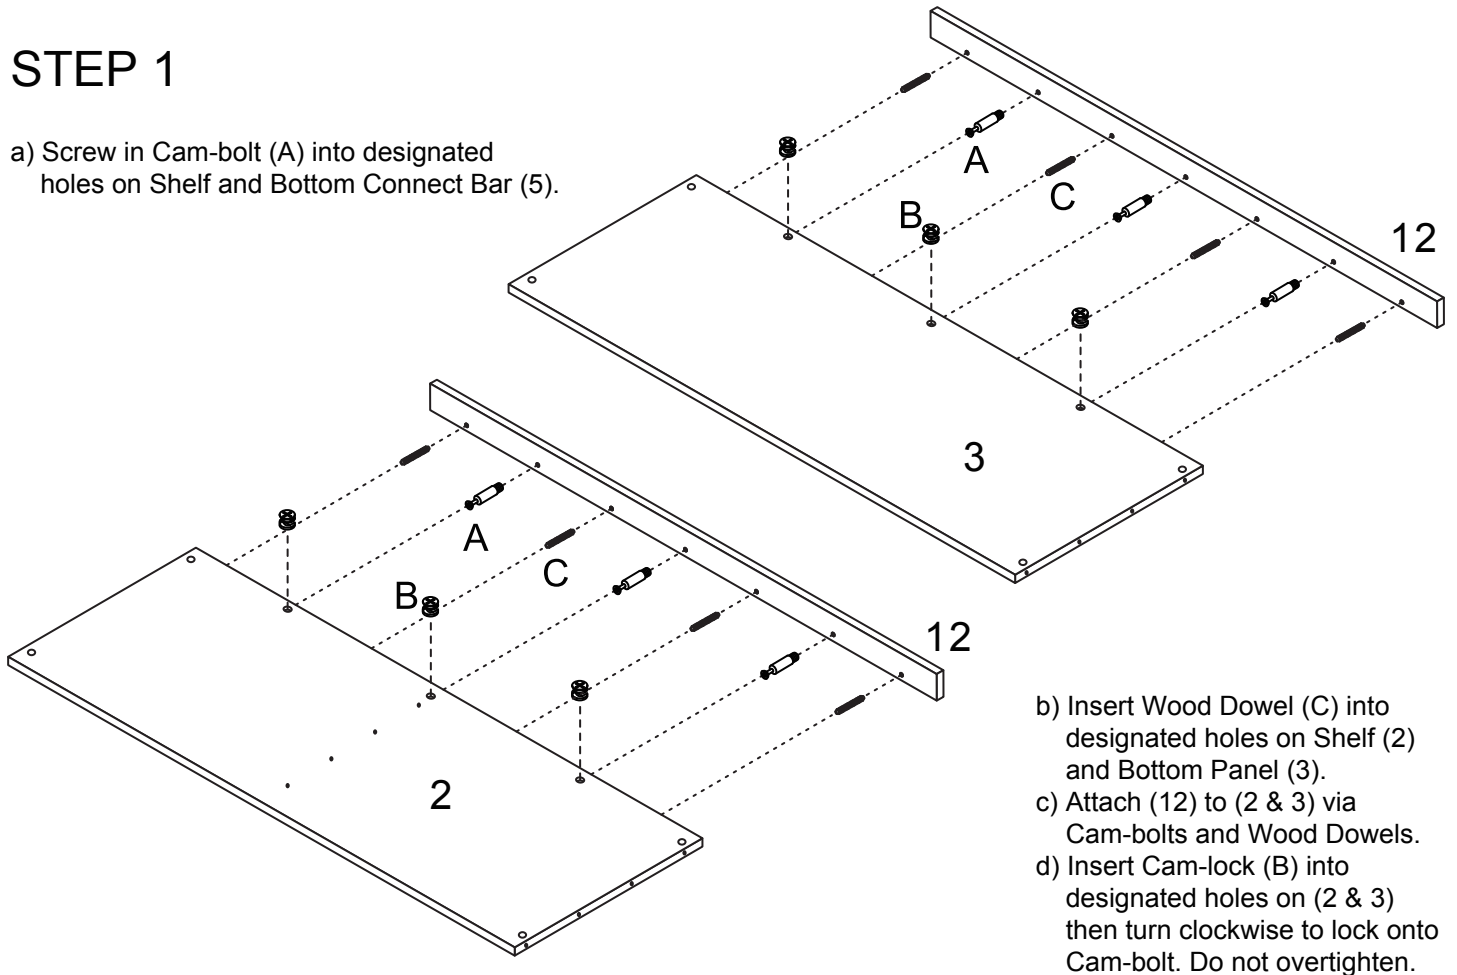


## STEP 2

 a) Screw in Cam-bolt (A) into designated holes on Shelf and Bottom Panel (2 & 3).

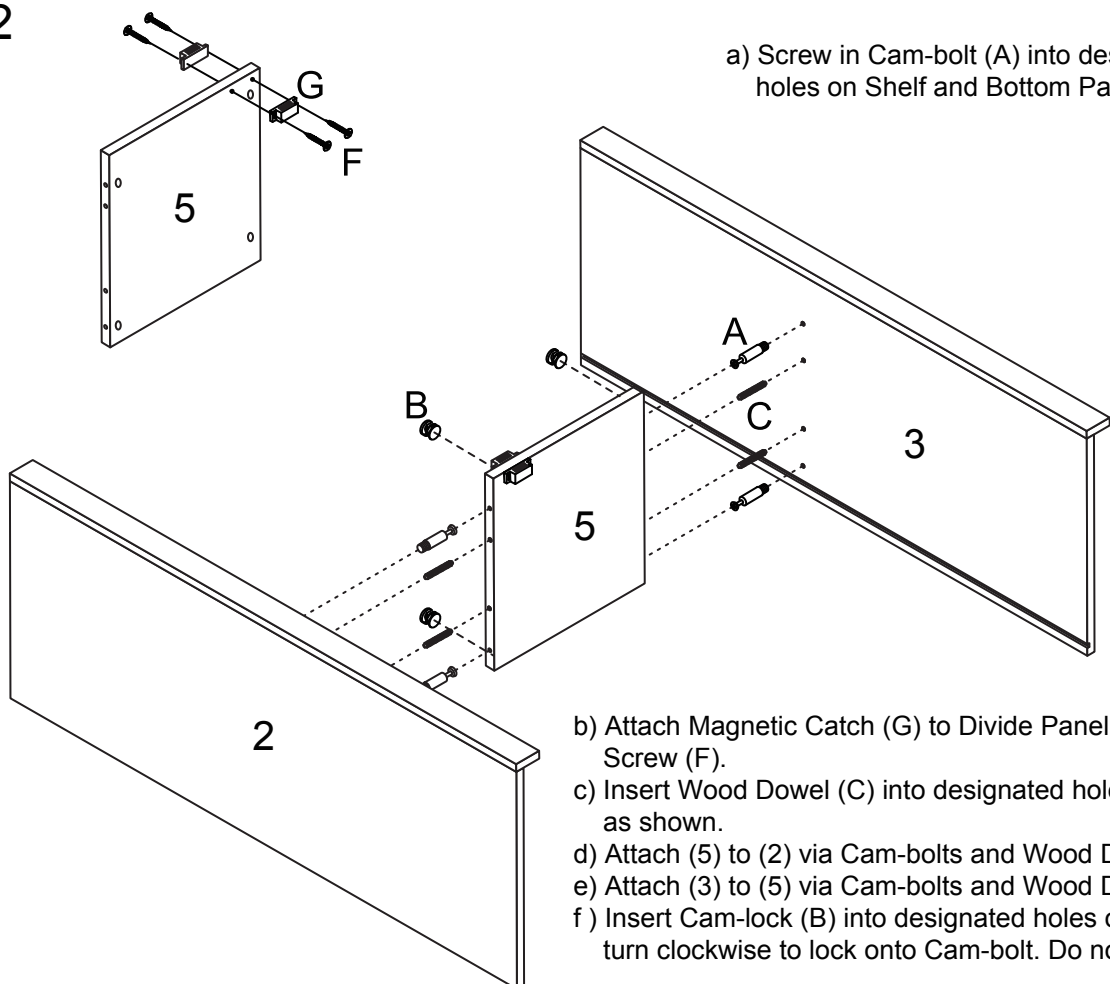

# PRODUCT ASSEMBLY

 
## STEP 3

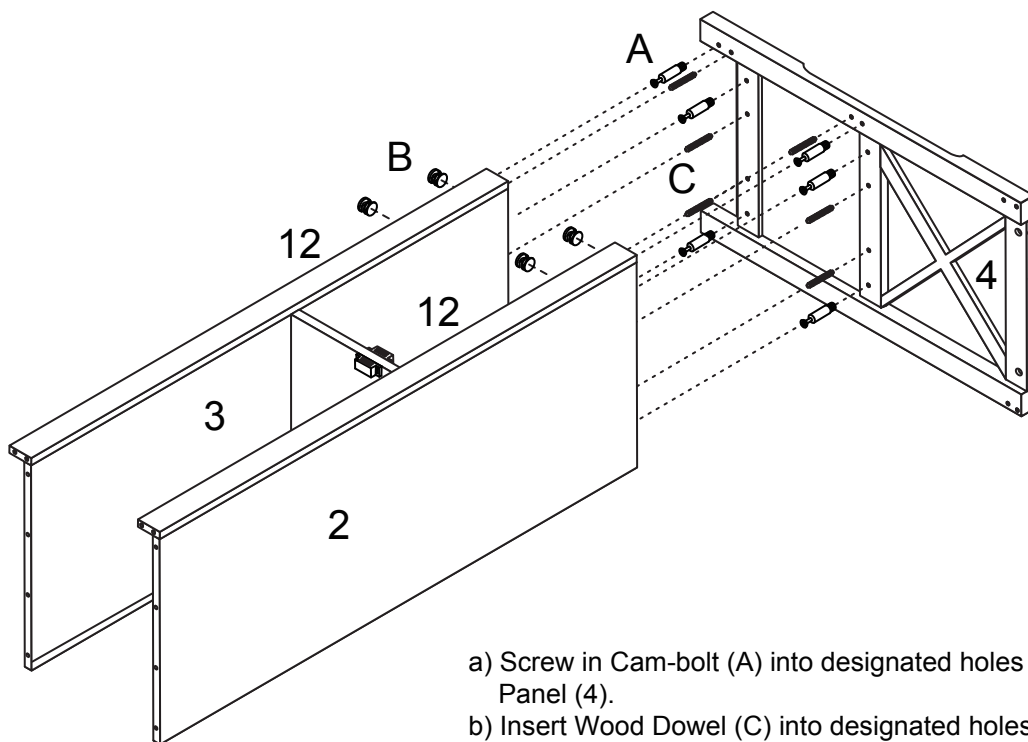

- a) Screw in Cam-bolt (A) into designated holes on Left Side Panel (4).
- b) Insert Wood Dowel (C) into designated holes on (2, 3 & 12).
- c) Attach (4) to (2, 3 & 12) via Cam-bolts and Wood Dowels.
- d) Insert Cam-lock (B) into designated holes on (2, 3 & 12) then turn clockwise to lock onto Cam-bolt. Do not overtighten.

## STEP 4

 
- a) Screw in Cam-bolt (A) into designated holes on Left Side Panel (4).
- b) Insert Wood Dowel (C) into designated holes on Top Connect Bar (7).
- c) Attach (7) to (4) via Cam-bolts and Wood Dowels.
- d) Insert Cam-lock (B) into designated holes on (7) then turn clockwise to lock onto Cam-bolt. Do not overtighten.

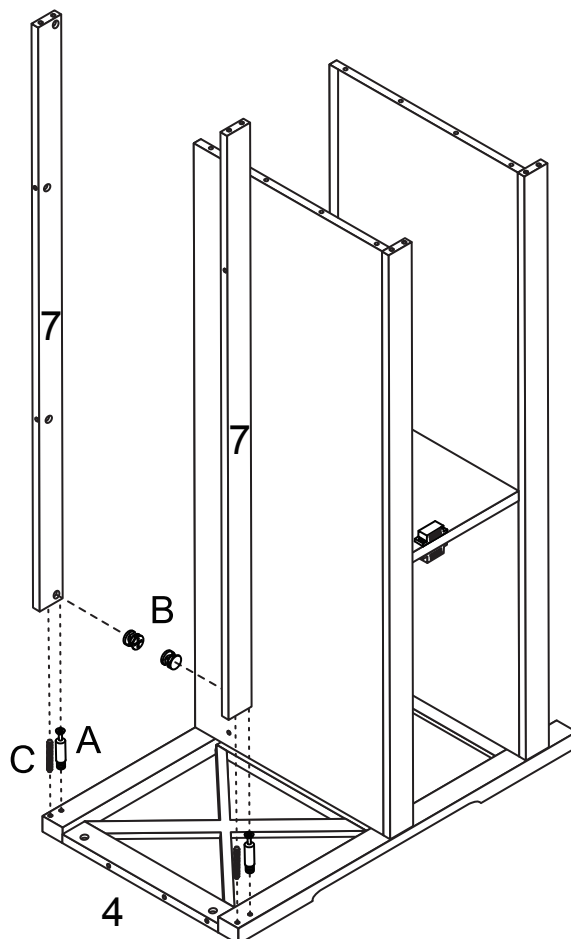

# PRODUCT ASSEMBLY


## STEP 5

 - a) Screw in Cam-bolt (A) into designated holes on Right Side Panel (6).
- b) Insert Wood Dowel (C) into designated holes on (2, 3, 7 & 12).
- c) Attach (6) to (2, 3, 7 & 12) via Cam-bolts and Wood Dowels.
- d) Insert Cam-lock (B) into designated holes on (2, 3, 7 & 12) then turn clockwise to lock onto Cam-bolt. Do not overtighten.

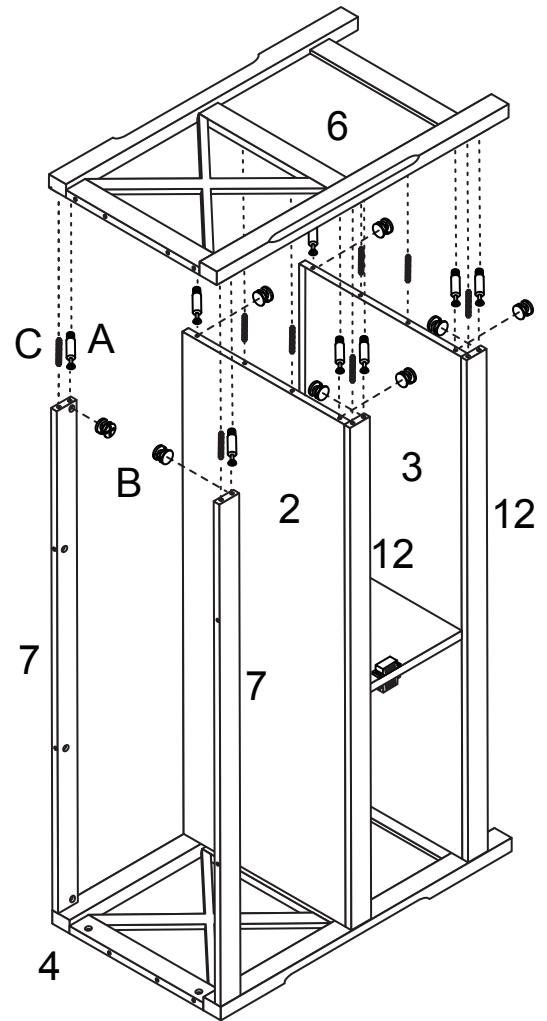


## STEP 6

 - a) Screw in Cam-bolt (A) into designated holes on Top Panel (1).
- b) Insert Wood Dowel (C) into designated holes on (4 & 6).
- c) Fit Lower Back Panel (9) and Upper Back Panel (8) to Side Panels (4 & 6) via groove on respective side Panels.
- d) Attach (1) to (4, 6 & 7) via Cam-bolts and Wood Dowels.

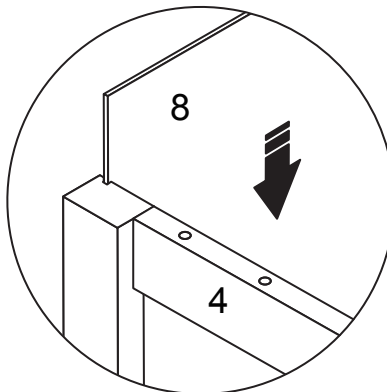


 - e) Insert Cam-lock (B) into designated holes on (4, 6 & 7) then turn clockwise to lock onto Cam-bolt. Do not overtighten.

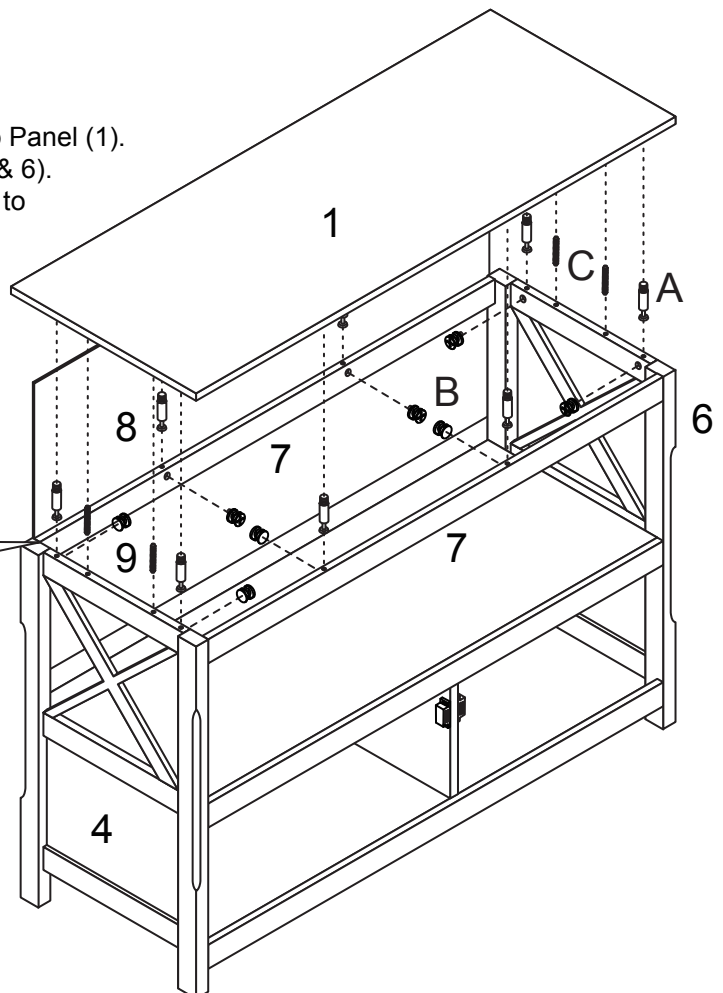


## PRODUCT ASSEMBLY
 
### STEP 7

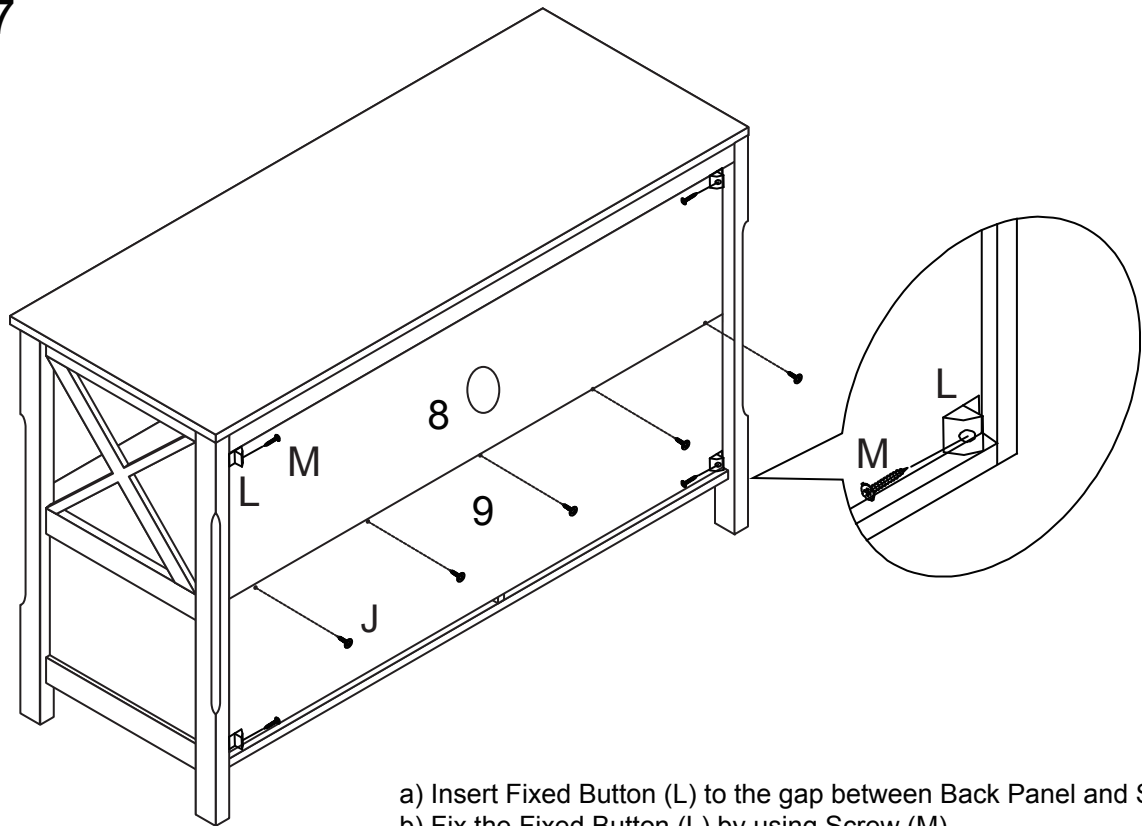

- a) Insert Fixed Button (L) to the gap between Back Panel and Side Panel.
- b) Fix the Fixed Button (L) by using Screw (M).
- c) Fix Back Panels to Shelf by using Screw (J) as shown.

### STEP 8

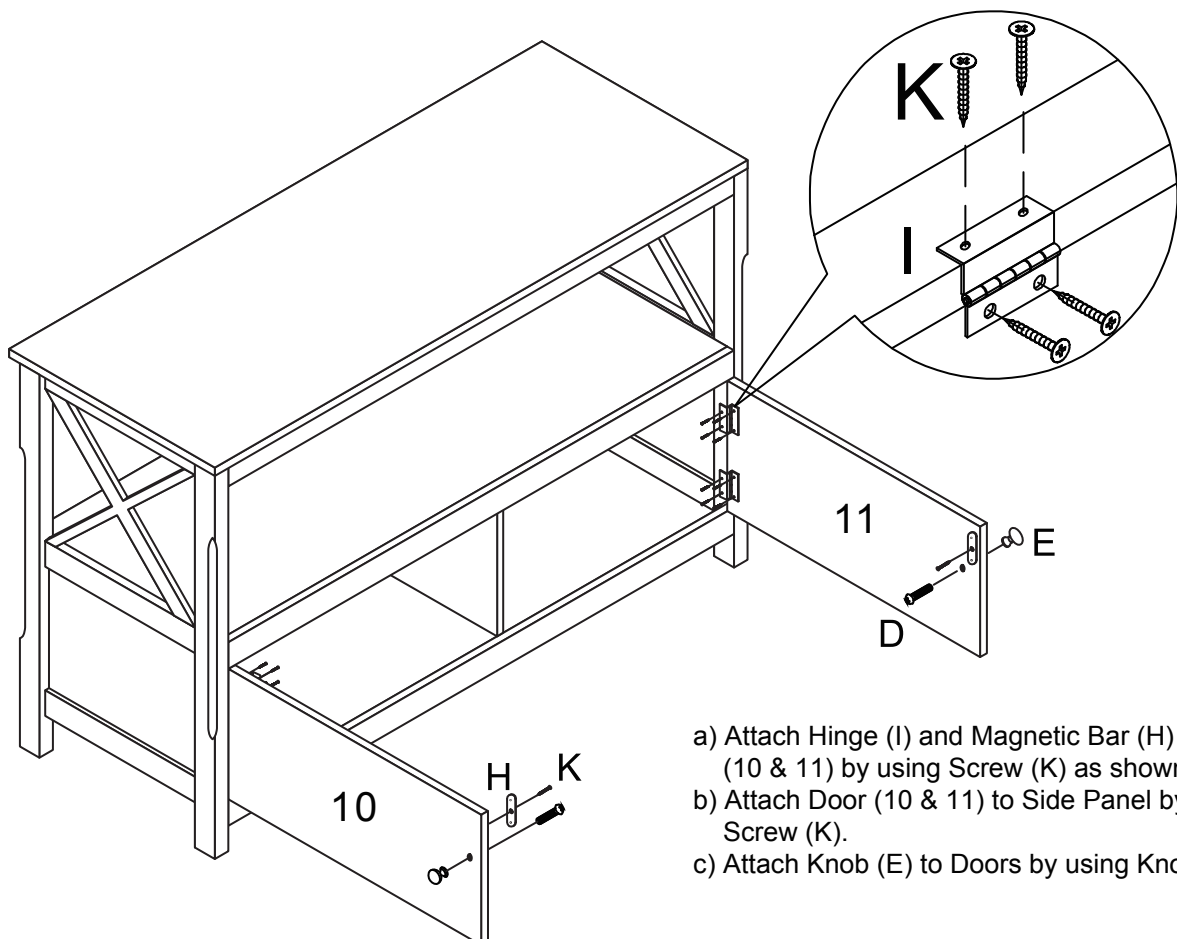 

- a) Attach Hinge (I) and Magnetic Bar (H) to Door (10 & 11) by using Screw (K) as shown.
- b) Attach Door (10 & 11) to Side Panel by using Screw (K).
- c) Attach Knob (E) to Doors by using Knob Bolt (D).

The assembly of the Tv Stand unit is complete.



#### TIPS:

Your suggestions and comments for Costway are really important to us!  
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2018

Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you  
**EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

US office:Fontana

UK office:Ipswich

