

 


COSTWAY®

Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana UK office: Ipswich

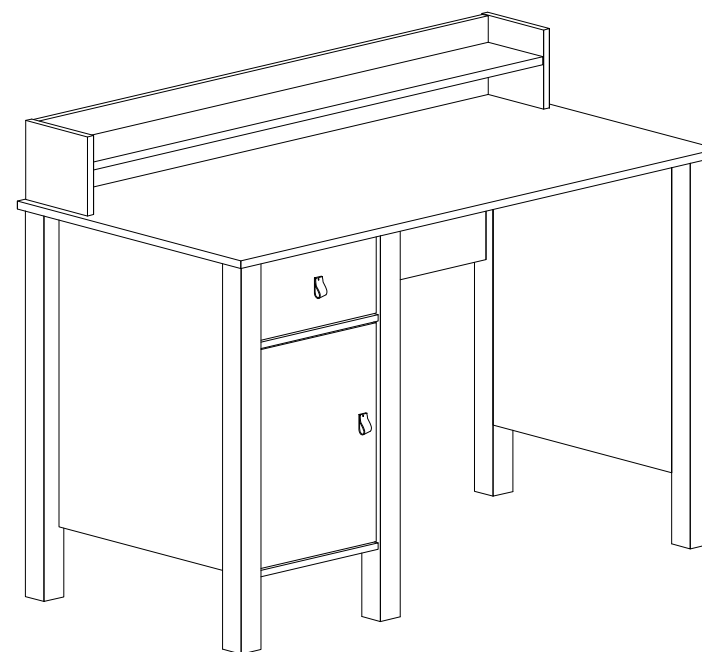

Contact Us !

Do NOT return this item.

Contact our friendly customer service department for help first.



US: cs.us@costway.com
UK: cs.uk@costway.com

USER'S MANUAL

 
 
 
 
 
 
Writing Table CB10238









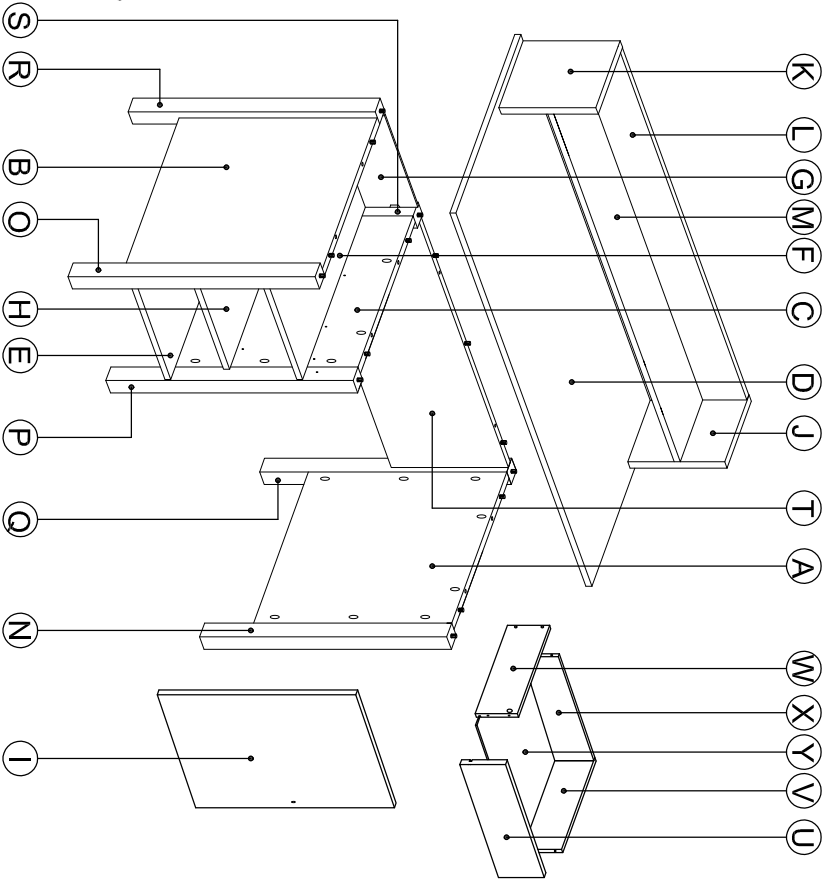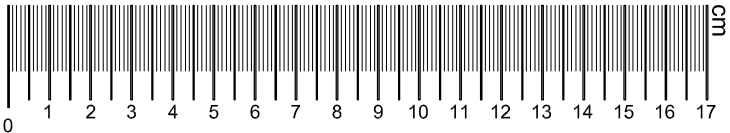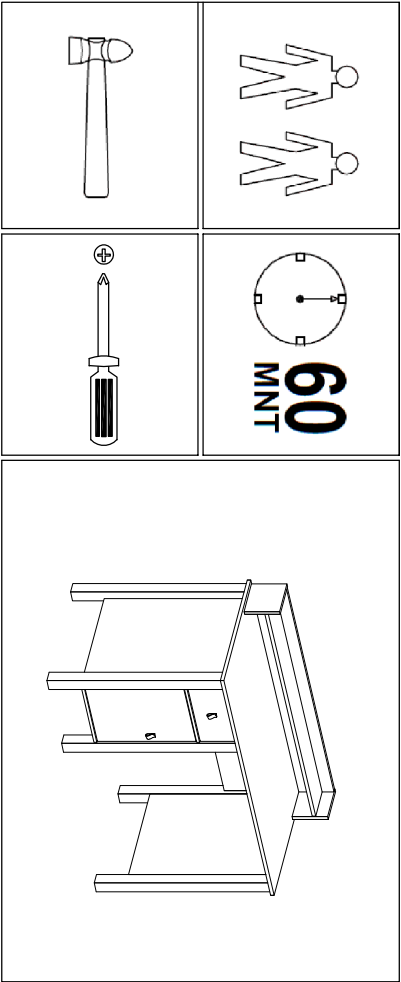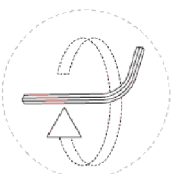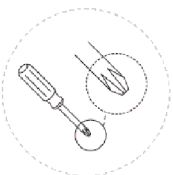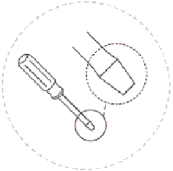





 

 

 
 


THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.





Before You Start

- ⚠ Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⚠ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⚠ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- ⚠ Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.





1	x6	 Ø15 x 23mm
2	x12	 M3.5 x 12mm
3	x8	 Dia 15mm 12mm
4	x48	 M6.5 x 32mm
5	x43	 Dia 6 x 30mm
6	x10	 M8 x 38mm
7	x40	 Dia 15mm 9mm
8	x4	 M3.5 x 25mm
9	x2	 Handle
10	x2	 Glue 10cc
11	x2	 M3.5 x 12mm
12	x2	 ANTI TIP STRAP
13	x2	 M4 x 19mm
14	x21	 STICKER COVER Dia. 17mm
15	x1	 DRAWER RUNNER RIGHT -300mm
16	x1	 DRAWER RUNNER LEFT -300mm
17	x1	 DRAWER RUNNER LEFT -300mm
18	x1	 DRAWER RUNNER RIGHT -300mm
19	x7	 MDF SUPPORT
20	x2	 7/8
21	x8	 M3.5 x 14mm
22	x4	 Dia 5 x 16mm x4

 
 
1

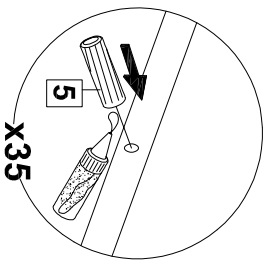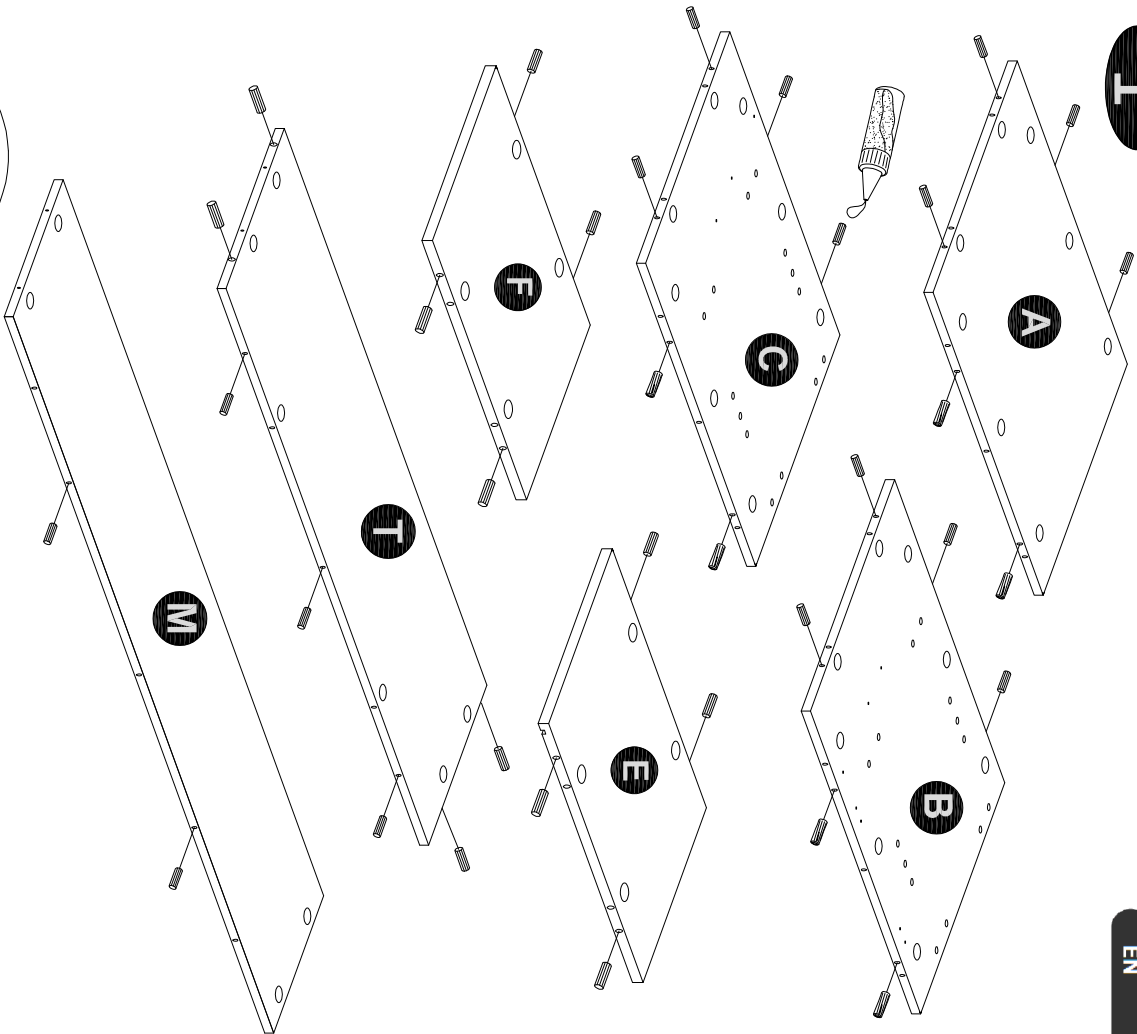

x35

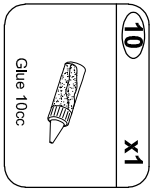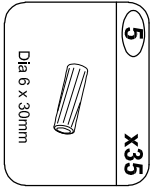  


2

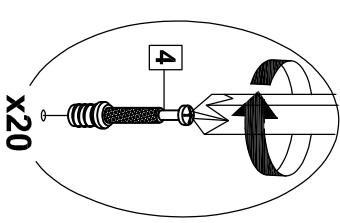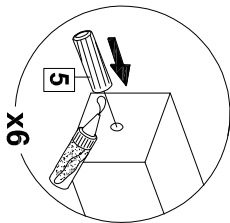  

4	x20
M6.5 x 32mm	

5	x6
Dia 6 x 30mm	




10	x1
Glue 10cc	

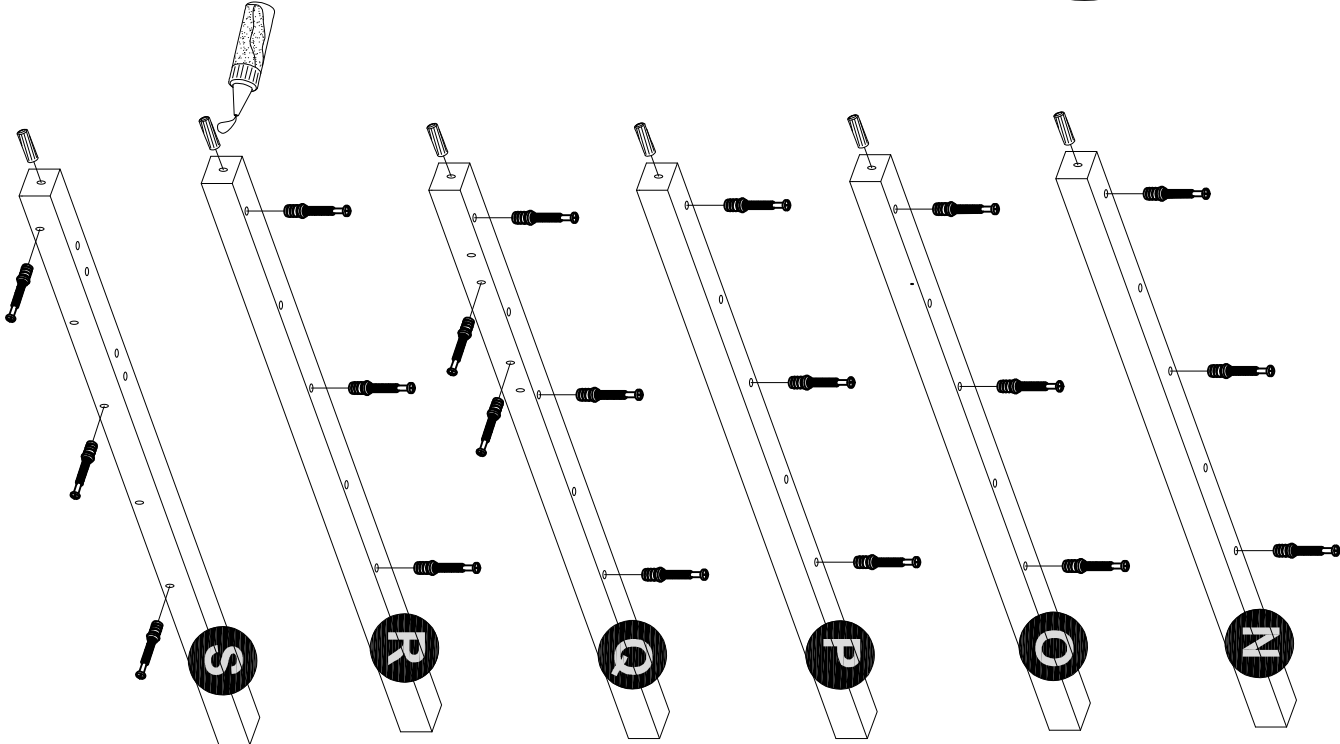 

3

N

  
 
FRONT

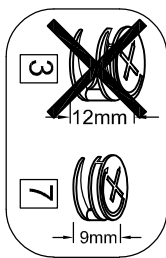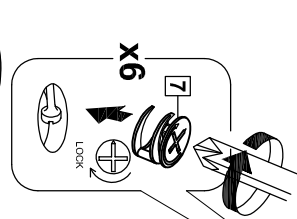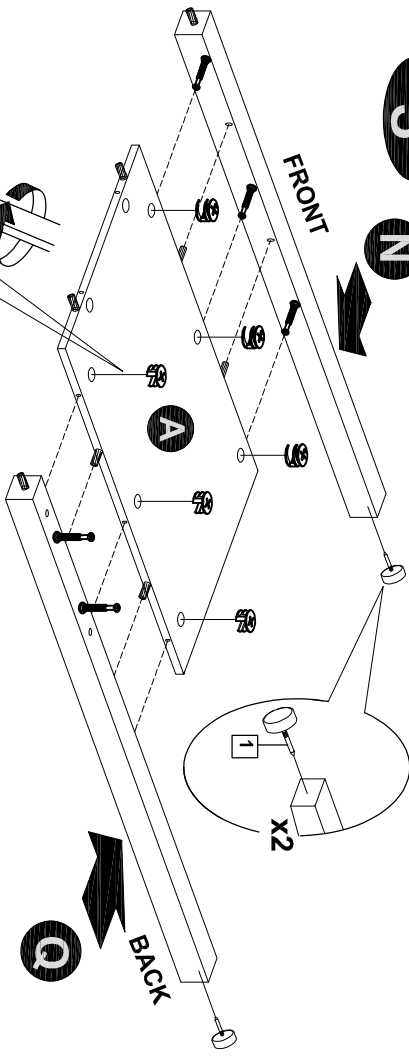



7	x6
Dia 15mm	

1	x2
Ø15 x 23mm	

  
4

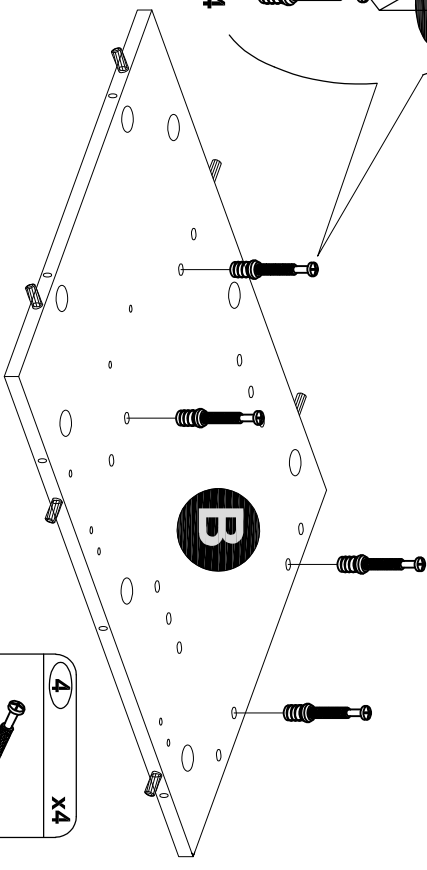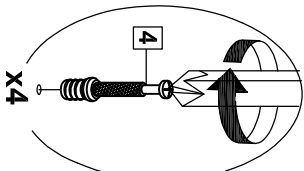


4	x4
M6.5 x 32mm	

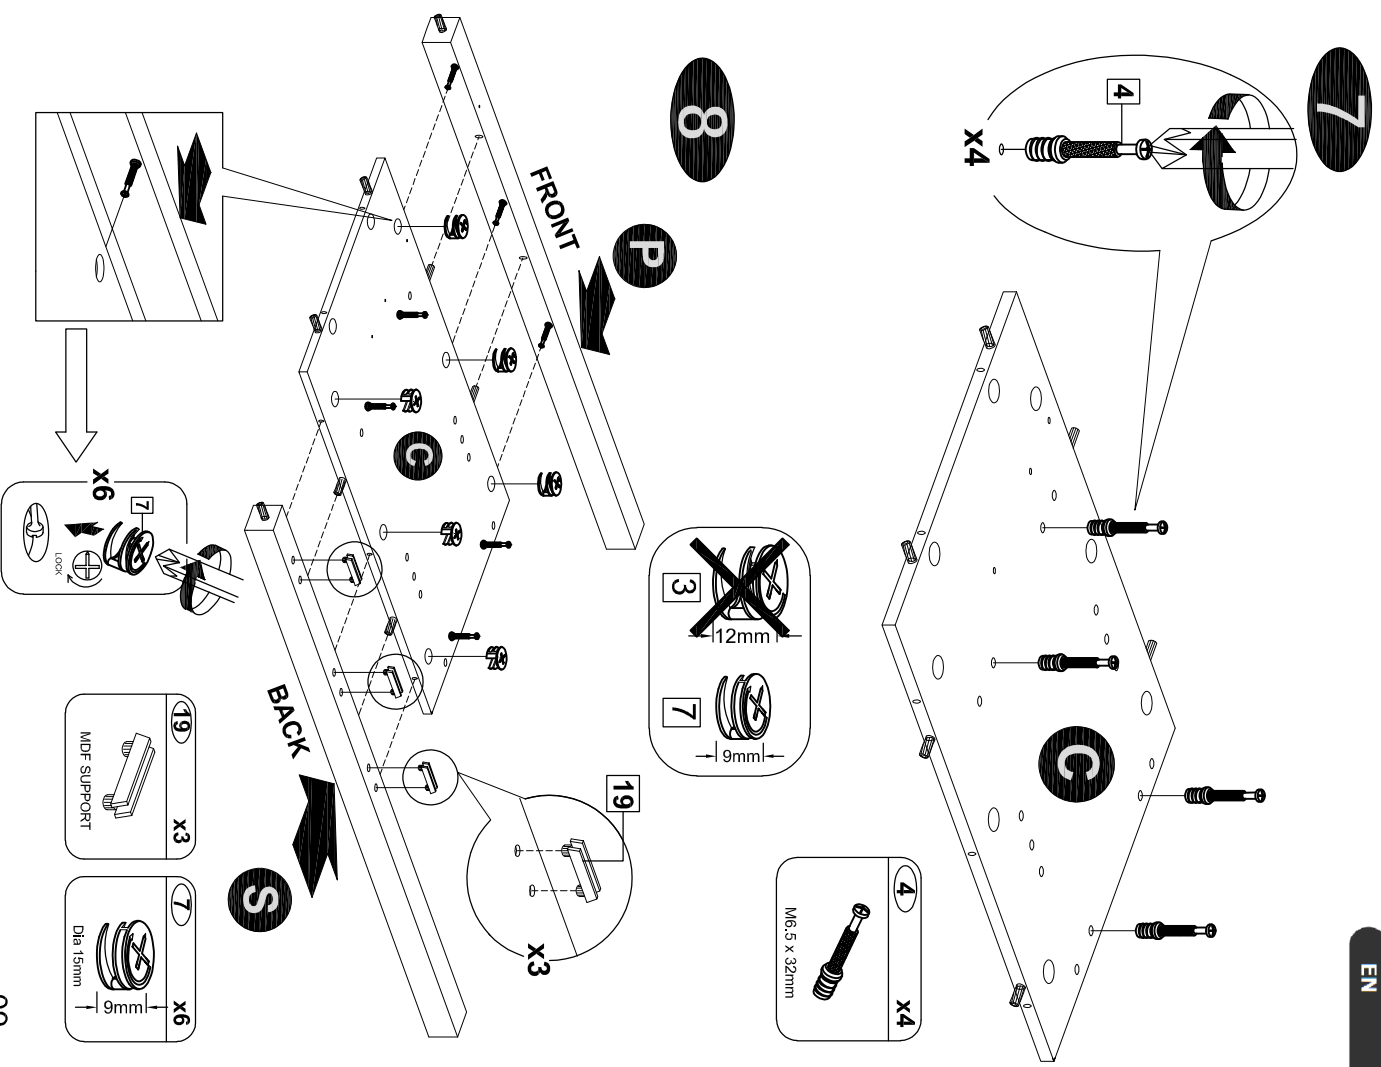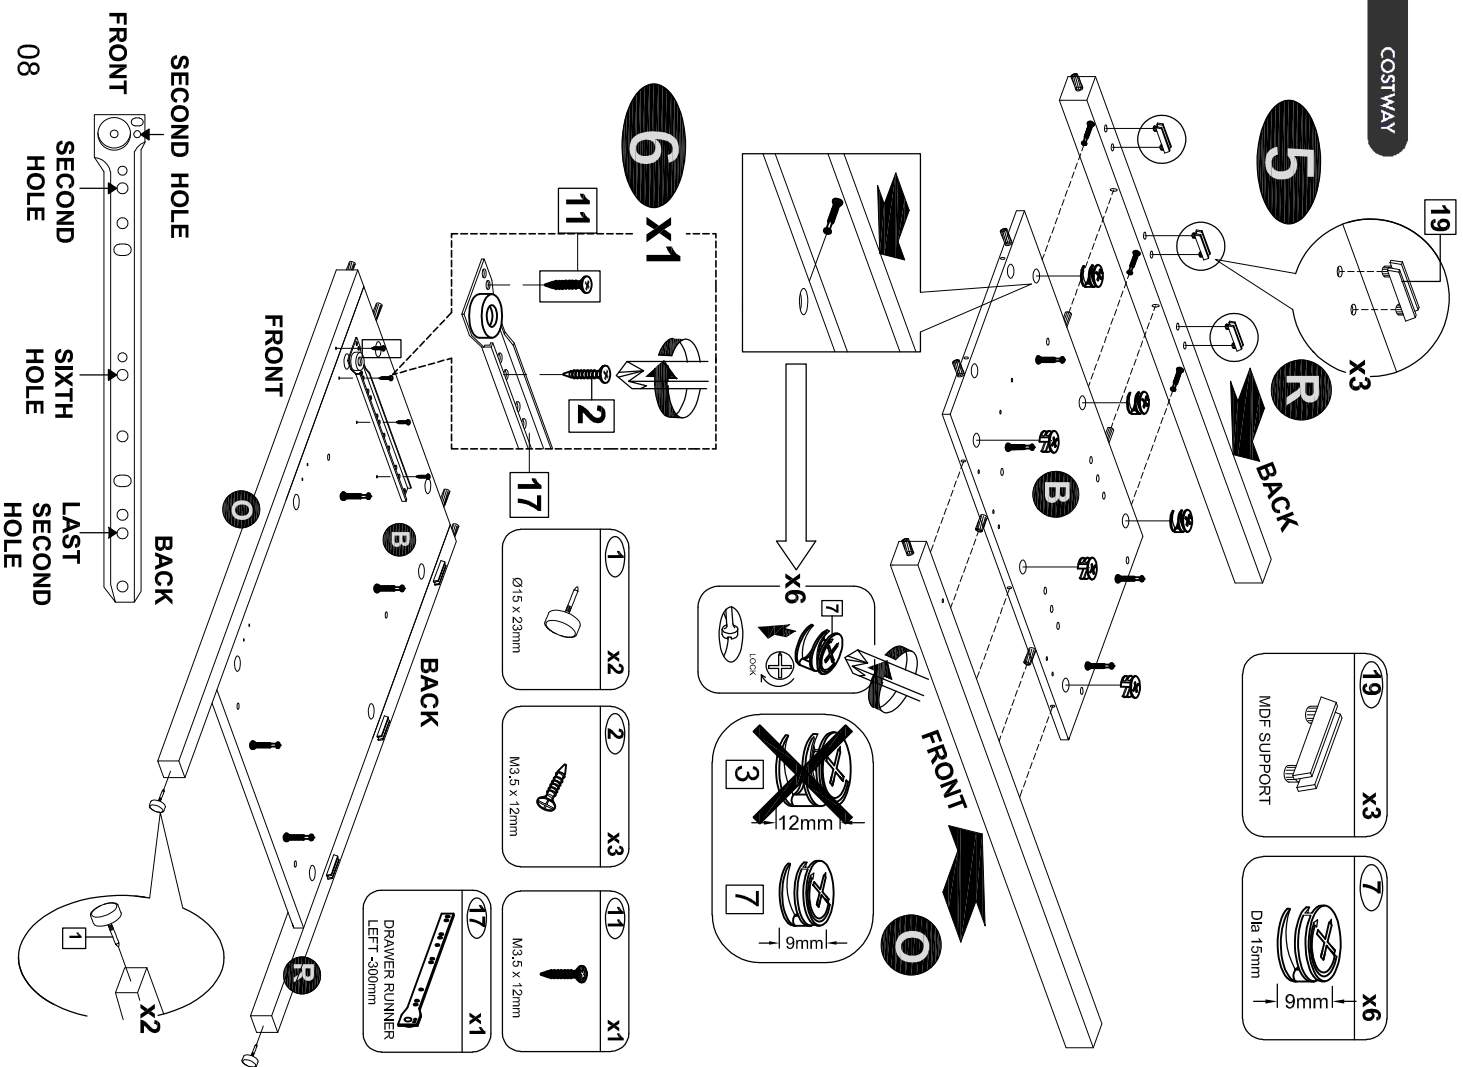  


9

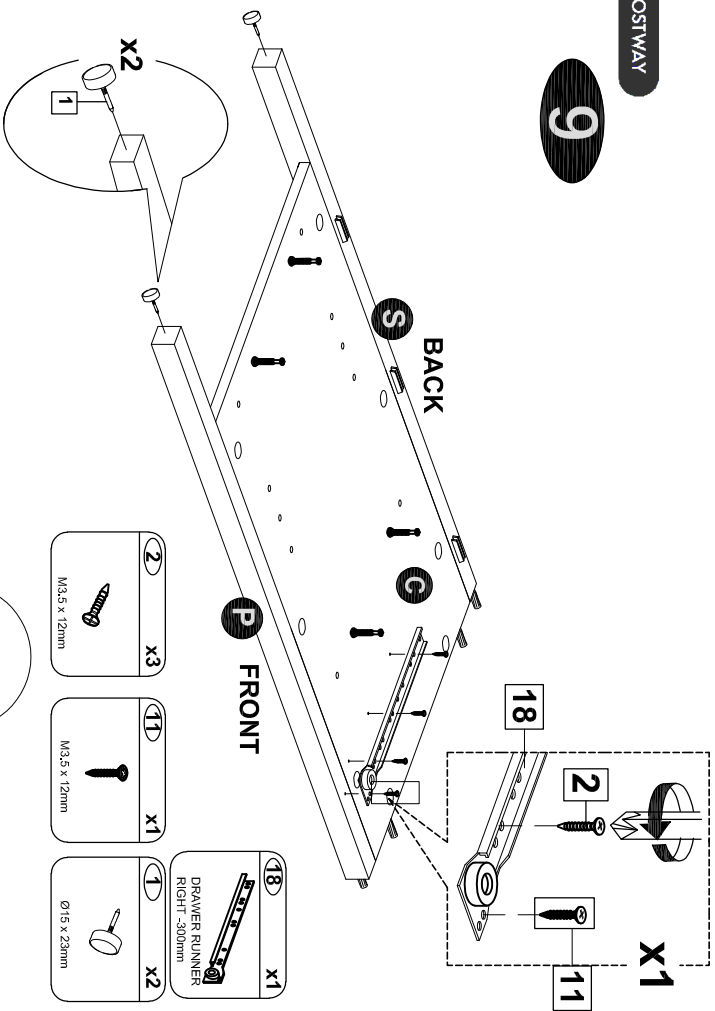 


10

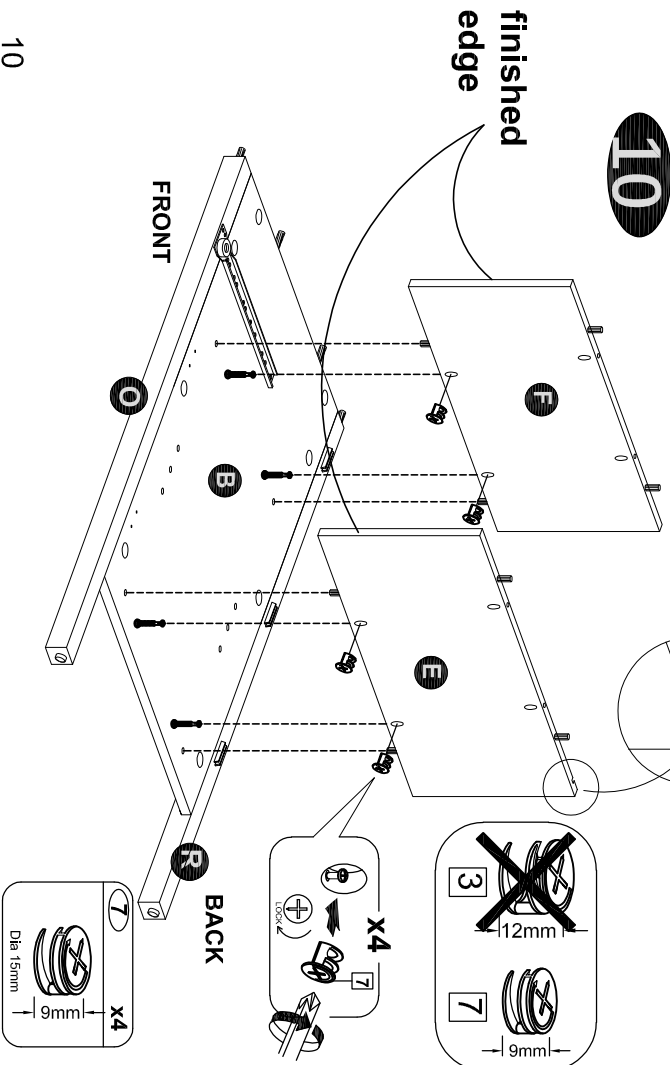 


11

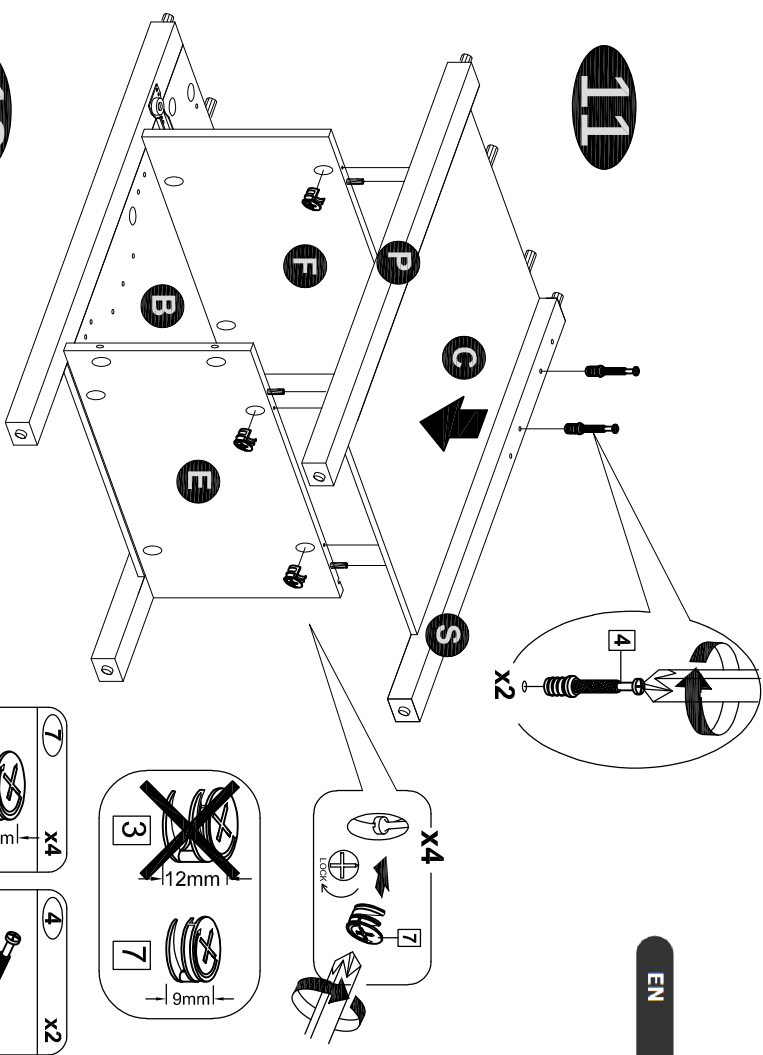 


12

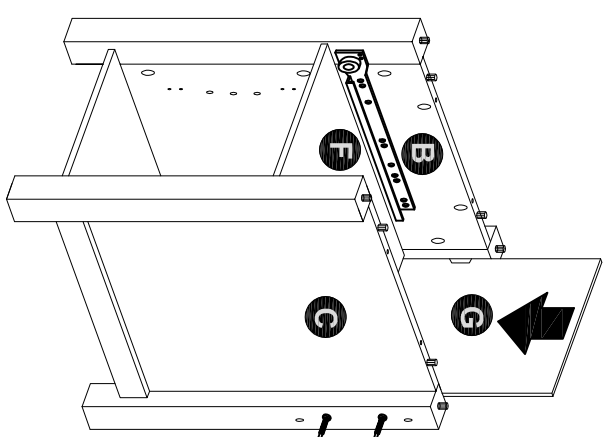 


17

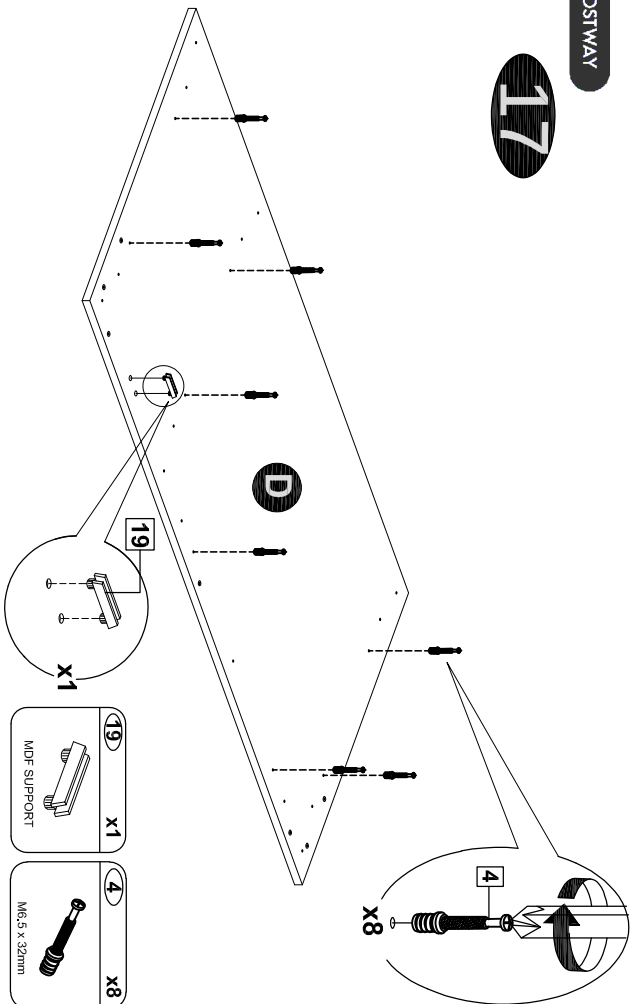 


18




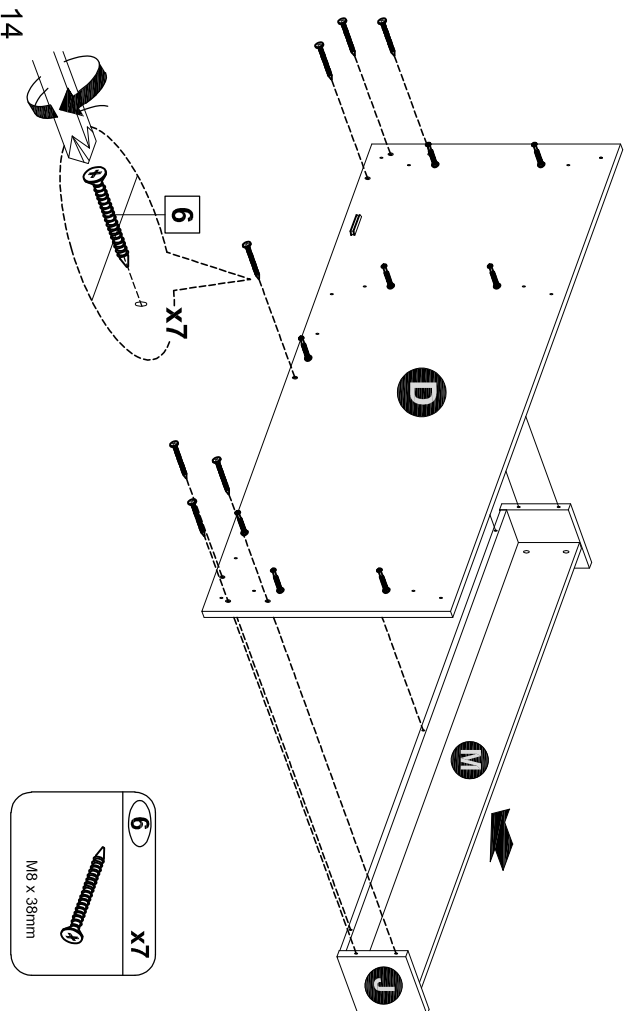 


19

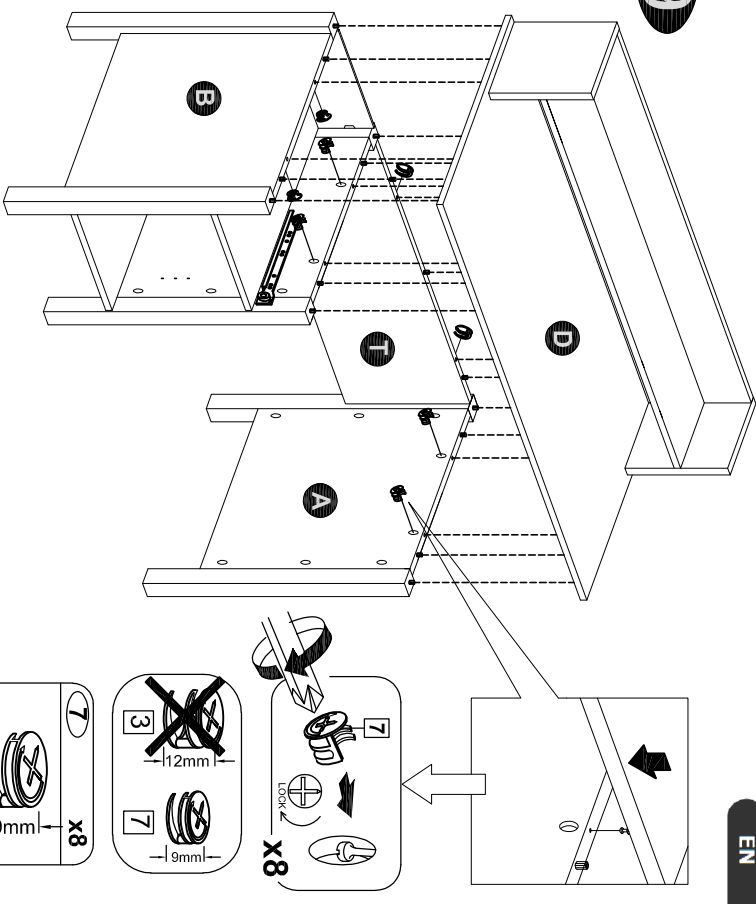 


20

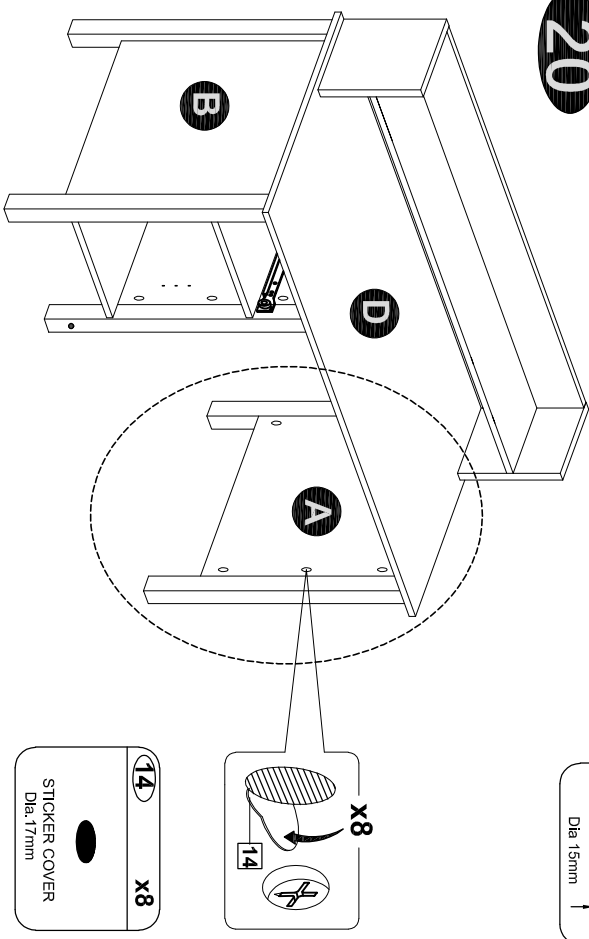 

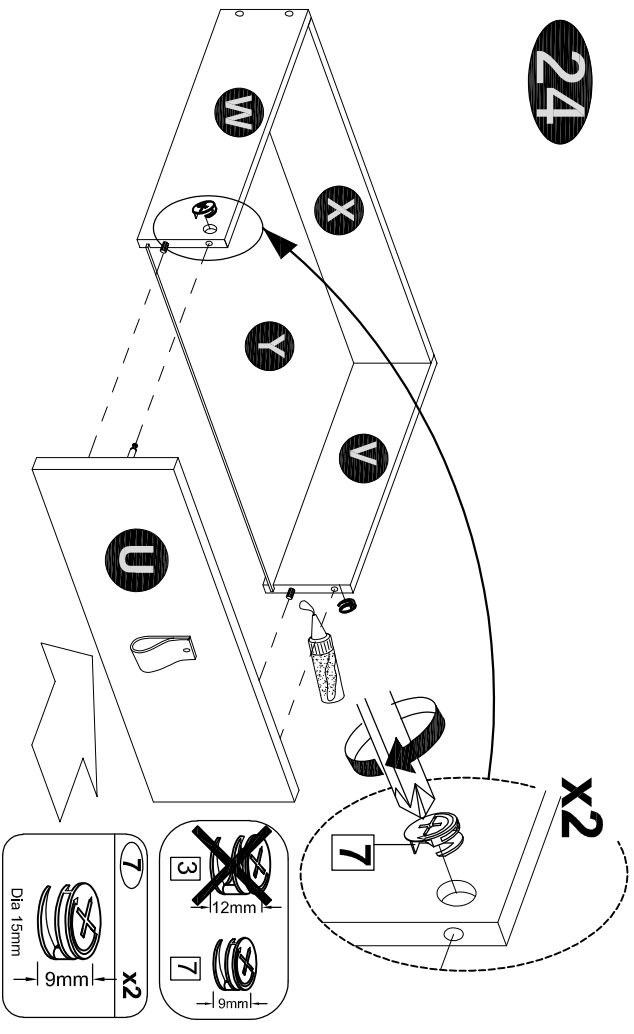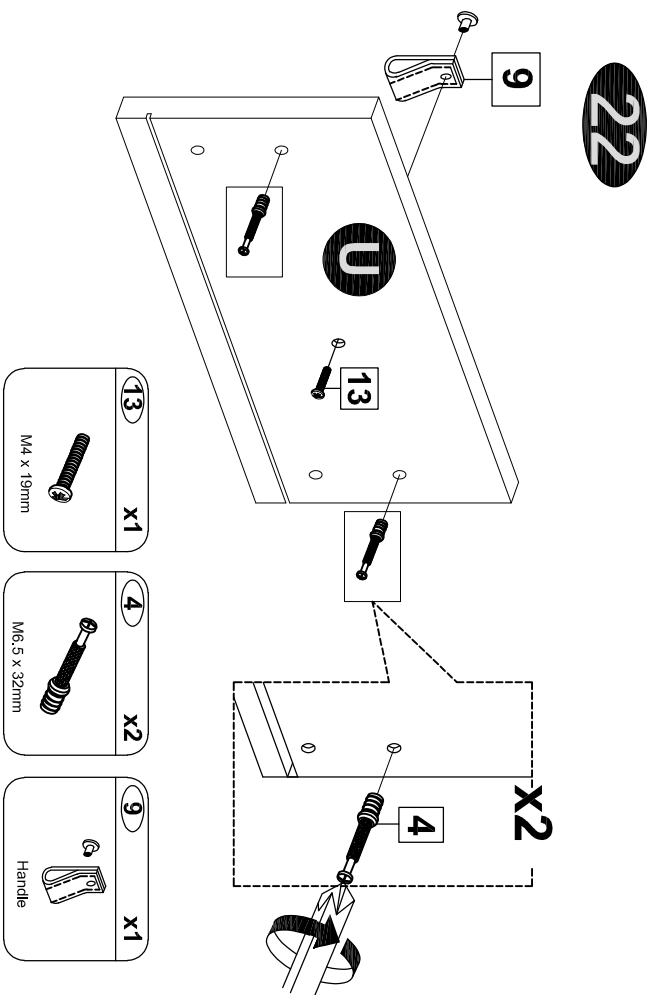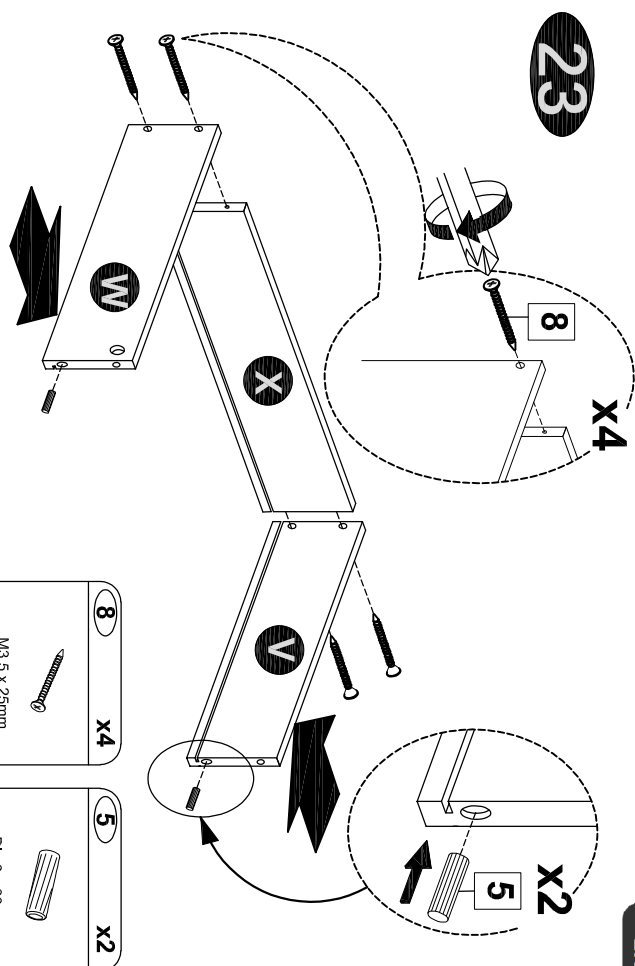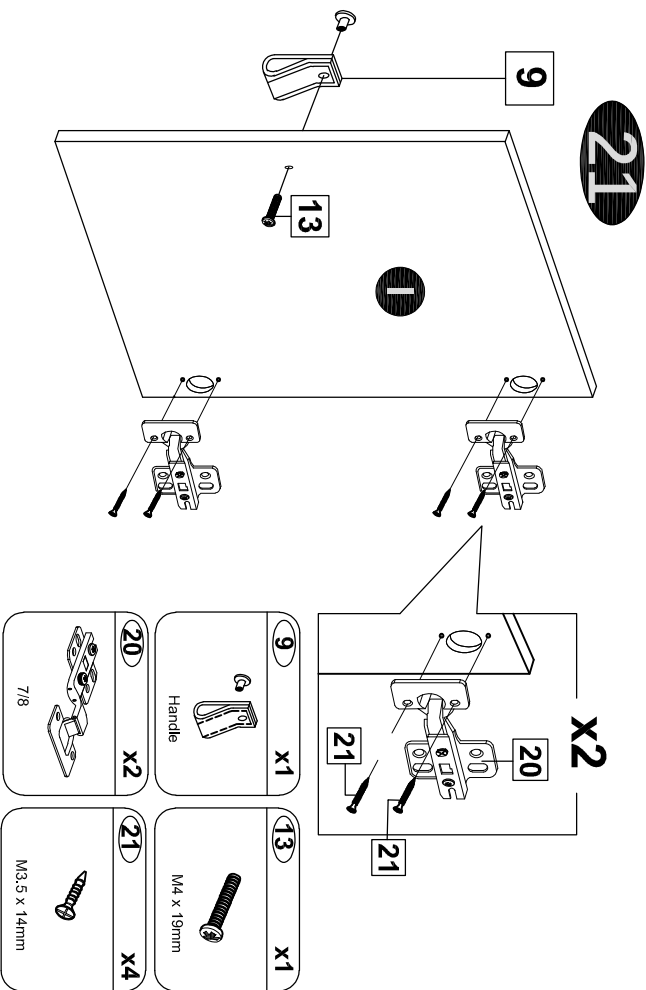    


25

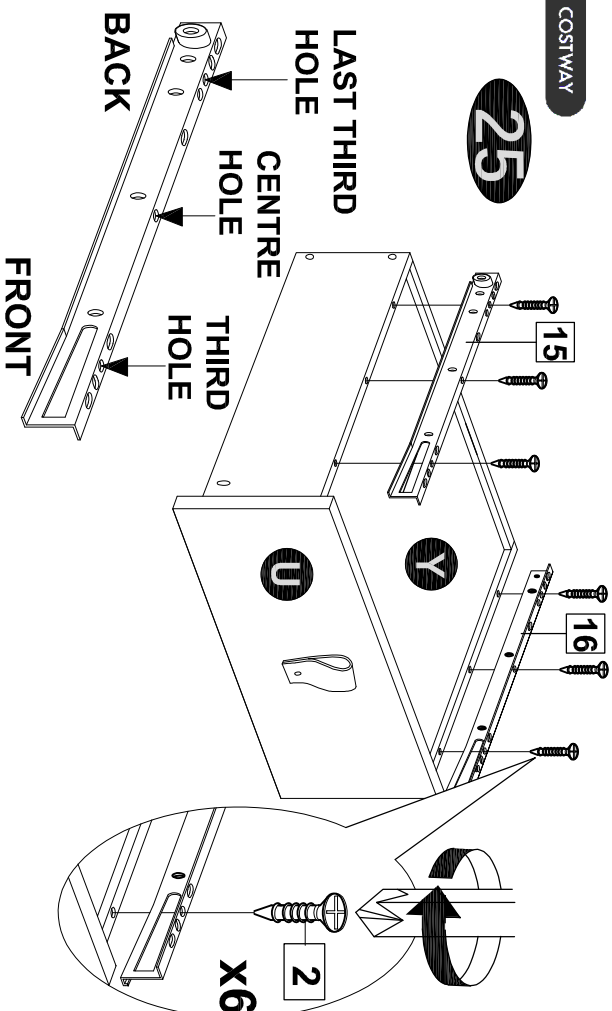 


- 15 x1
DRAWER RUNNER
RIGHT -300mm
- 16 x1
DRAWER RUNNER
LEFT -300mm
- 2 x6
M3,5 x 12mm

 26

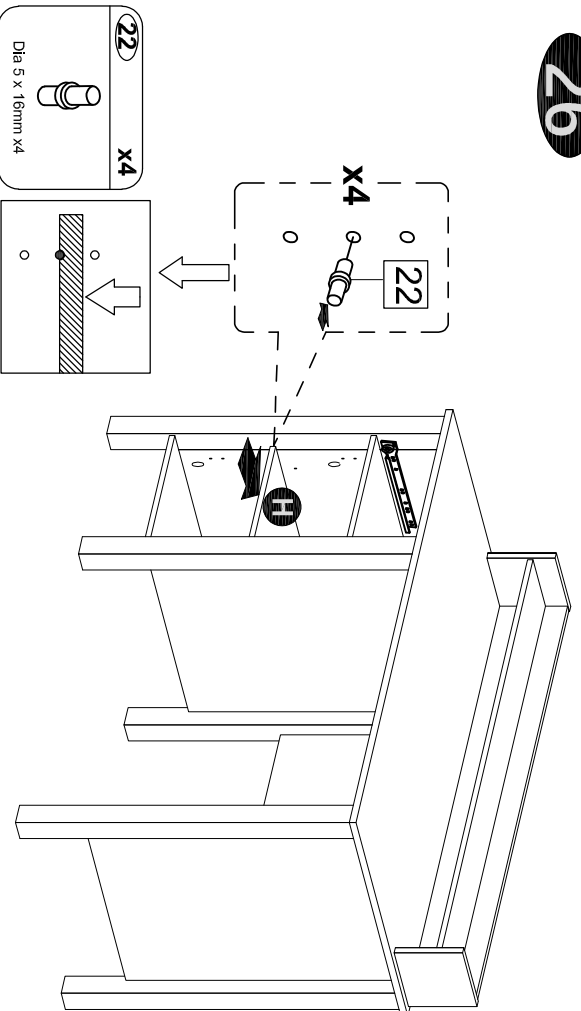


18

 27

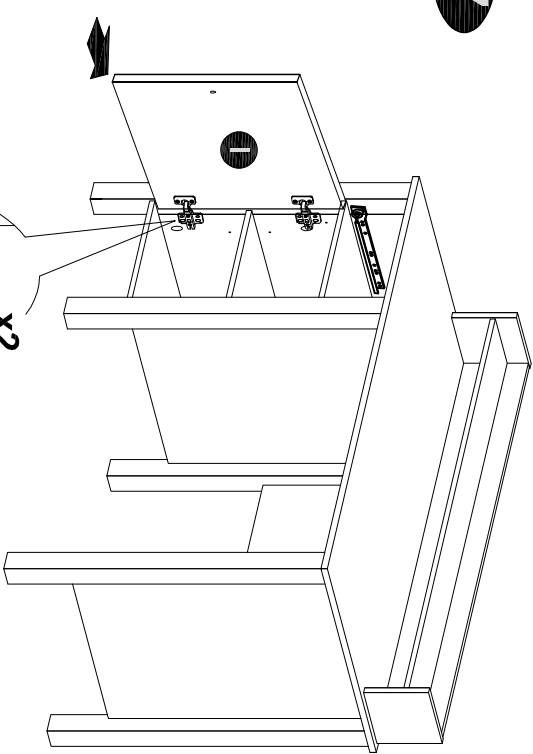

- 21 x4
M3,5 x 14mm

 28

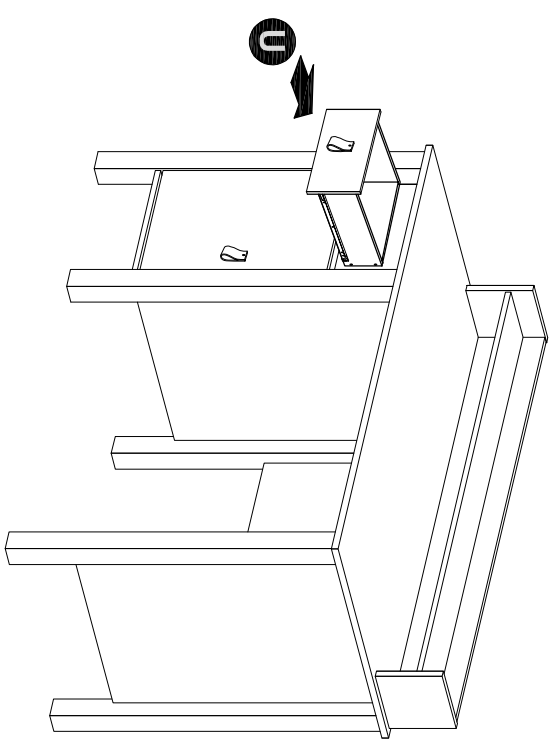

19

Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood.

It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and clearing at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.