 


COSTWAY[®]

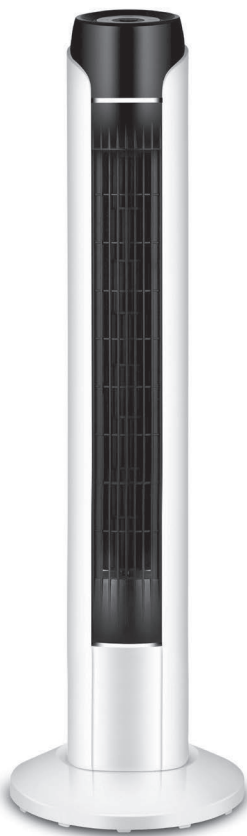

USER'S MANUAL

Tower Fan ES10145US-WH

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

SAFETY CAUTIONS

To avoid damage or danger by improper use, these users' instructions should be followed and carefully kept. If you give the appliance to another person, also supply them with the instruction for use.

Intended use:

The appliance has to be used only in the way indicated in the instruction manual.

Only use the appliance for domestic purpose – the appliance is not suited for commercial use.

Do not use the appliance outdoors.

In case of damage and accidents caused by not following this instruction manual the manufacturer assumes no liability.

- Before first use ensure that your mains voltage corresponds to that stated on the rating plate of the appliance.
- Connect this appliance to a wall socket which is wired according to the regulations (120 V, 60 Hz) only.
- The wall socket must continue to be easily accessible after the appliance is plugged in.
- Install cable in place to prevent accidental tripping or pulling.
- Ensure that the cable never comes into contact with rotating parts, sharp edges and hot objects.
- Do not let the cord hang over edge of table or counter or sharp edged surfaces.
- The appliance is forbidden to be operated by separate timer or separate remote appliance.
- Additional protection may be obtained by fitting an earth-leakage circuit-breaker (IF=30mA) into your home installation. Please consult a qualified electrician.



• **Do not operate any appliance if:**

- power cord is damaged
- in case of malfunction or if it shows any breaks, has been dropped or damaged in any manner.
- The device should not be near heat sources such as an oven, stove or heater operated or stored to avoid damage.
- The appliance must always be disconnected from the mains after use and before assembly or cleaning and during transport.
- If the mains power cable of this appliance should become damaged, it must be replaced qualified specialist, in order to avoid any hazards.
- In any case ask a (*) competent qualified electrician to check and repair it.

(*) Competent qualified electrician: qualified and capable of performing such repairs to avoid all hazards and risks of injury



• **Caution! An electric appliance is no toy!**

Children must be supervised so that they are not playing with the appliance.

- This appliance can be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and they understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance must not be performed by children unless they are supervised.

- Explain to your children all risks which can be caused by electric appliances:
 - Danger caused by rotating or sharp-edged parts of the appliance.
 - Danger caused by electric current.
- Keep the appliance at any time out of reach of children or persons who cannot handle electric appliances properly.

The appliance must be placed and stored out of the reach of children. Ensure that nobody can pull on it or stumble over the cord.

- Do not leave packaging components (plastic bags, cardboard, polystyrene, etc.) within the reach of children, as it could be dangerous – danger of suffocation!



• **Caution! Danger of electric shock!** Appliance, cord and plug should never get into contact with water or any other liquids to avoid the risk of electric shock:

- never immerse the appliance, the cord or the plug in water or any other liquid for any reason whatsoever
- the cord should never get wet or get in contact with humid things.
- never use the appliance near a sink, or bathtub to avoid danger of falling into water
- protect the housing from moisture, dripping and splashing water.
- never touch the appliance with wet hands or standing on a wet ground
- never place the appliance on wet ground
- never use the appliance outdoors
- should the appliance fall into water, immediately disconnect the power plug from mains. Only then remove the appliance.
- if liquid gets into the housing, immediately pull out the mains plug. Before using again have the appliance checked.



• **Caution! Danger of injury!** To avoid the risk of injury, please note the safety instructions below:

- The air flow from the fan should not be directed on elderly or sick people, children or pets.
- Never insert any objects or tools into the appliance openings or the fan grid or reach into it with hands / fingers.

The appliance might be damaged. Be careful of electric shock and other hazards. Pay special attention to children to prevent them from touching the fan.



• **Caution! Risk of damage!**

- During use, the appliance has to be placed on an even, clean, stable and dry surface. Keep the appliance away from hot gas, hot ovens and other heat-emitting appliances or heat sources. Never use the appliance on a hot or wet surface. Never place the appliance near moisture, heat and naked flames.
- Make sure that the fan can rotate freely and that its oscillating movement is not obstructed by any items.
- Make sure that there are no hair, curtains, drapes, table cloths or similar items in the vicinity of the fan. They might be sucked in and cause personal or material damage.
- Never cover the appliance with blankets, clothing items or similar things during use. The space above the appliance and around the fan has to be kept free at all times.
- Never move or lift the fan while it is in use.
- Do not spray anything into the fan – not even insect spray.



• **Caution! Unplug the appliance,**

- when the appliance is not in use,
- if there is a malfunction,
- before assembling or cleaning the appliance
- To unplug only pull the plug, never pull on the cord to avoid damage.
- Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.
- Do not wind the cord around the appliance and do not bend it.
- From time to time check if the cord is damaged. In this case or if the appliance is damaged it must not be used any more.

SCOPE OF DELIVERY


- | | |
|------------------|-------------------|
| • Fan body | • Stand (2 parts) |
| • Remote control | • 1 locking screw |

BEFORE FIRST USE

- Carefully take the appliance out of the packaging and remove all transport stickers, labels (except for the type plate) and packaging materials.
- Make sure that the appliance is without damage, firmly assembled and ready for use. Should you have doubts, do not start using the appliance and contact your nearest qualified technician.
- Make sure that nobody plays with the packaging material, especially with the plastic bags – suffocation risk!
- Place the appliance on a dry, stable surface as described in the safety precautions.

- Connect the power plug to a suitable power outlet. The appliance can be used after assembling as deccribed further below.
- The battery in the remote control is protected from discharging with a film. Pull the protective film to remove it. The remote control is now ready for use.


PRODUCT OVERVIEW

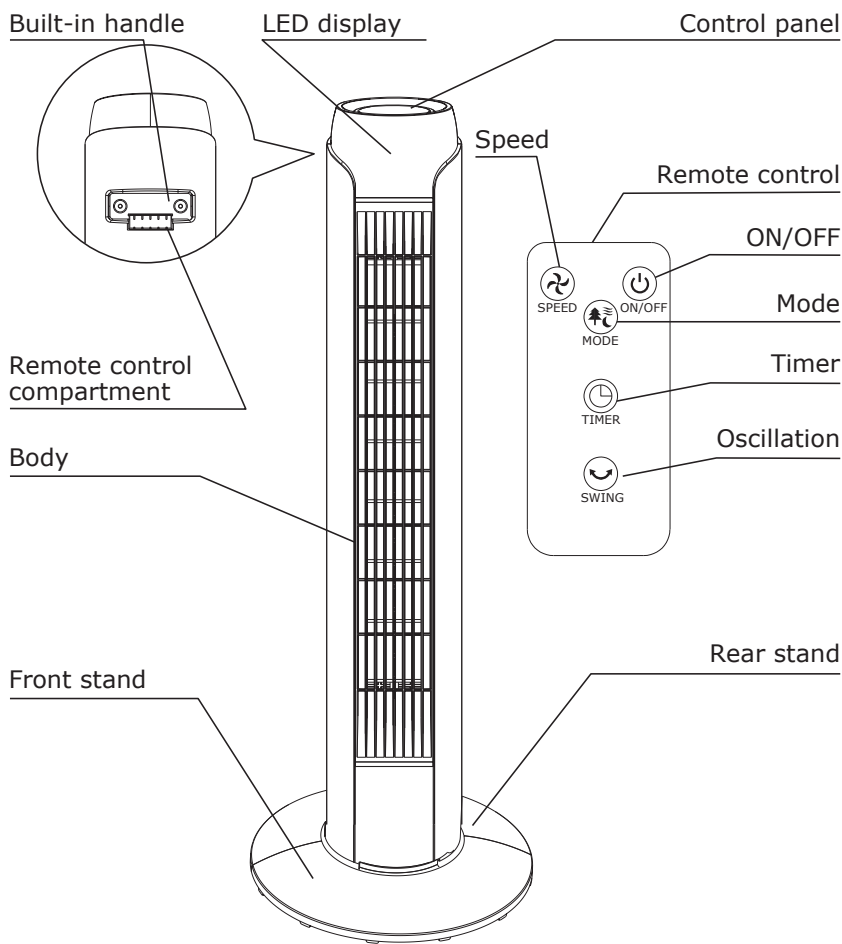


ASSEMBLY INSTRUCTIONS

Caution: Before assembling, ensure the fan is unplugged.


1. Unscrew the locking screw from base.

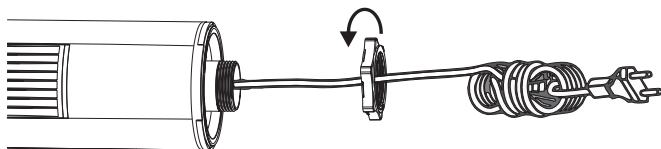

2. Thread the power cord through the centre hole of the two stand parts, then fasten the front and rear stand together, until you hear them click into place.



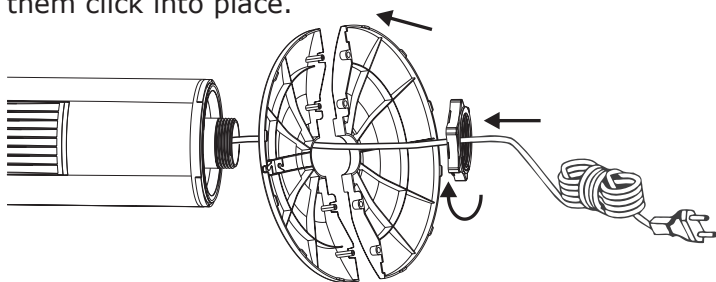


3. Align the assembled stand with the positioning hole on the base and tighten the locking screw clockwise. The seam lines of the stand point to the side, the power cord outlet points to the rear.

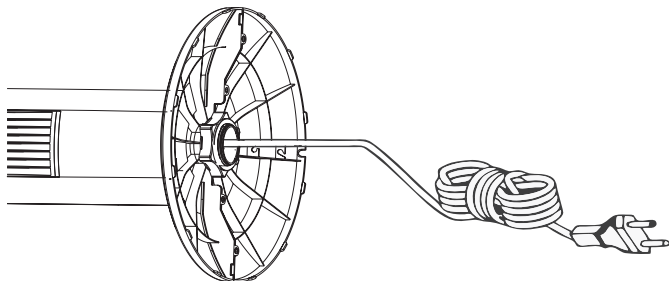

4. Place the power cable in the cable guide and outlet to ensure a secure stand.

OPERATING INSTRUCTIONS

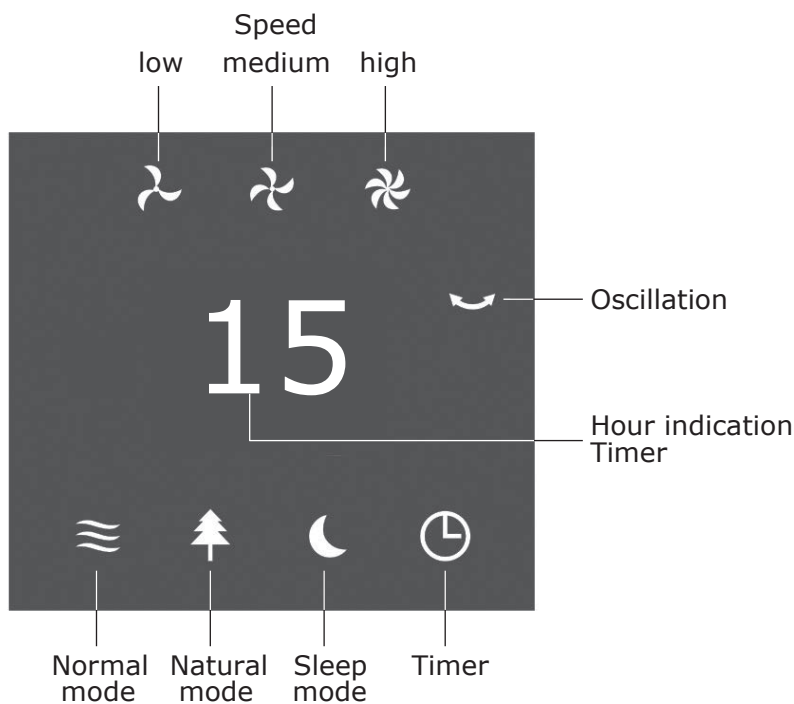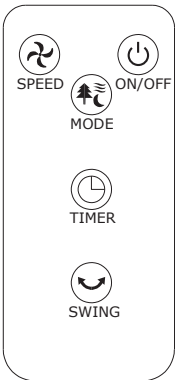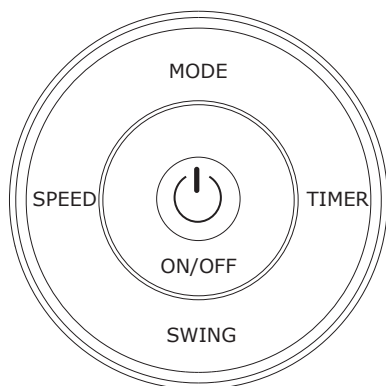

NOTE: All function keys can be operated either via the control panel or via the remote control.

ON/OFF button

Press the ON/OFF button to switch on the fan. After switching on, the fan is always in the lowest speed level in normal mode, means without oscillation, without timer.

SPEED button

The fan has 3 speed options. Select the desired speed by pressing consecutively the "SPEED" button. Original set speed is low speed, by pressing the "SPEED" button, the air flow speed can be shifted from low-medium-high circularly. Indicator light for corresponding wind speed will be turn on.

MODE button

The fan has 3 wind mode options. With this button you can switch from **normal mode** to **natural mode** and to **sleep mode** and back to **normal mode**. Indicator light for the corresponding wind mode will be turned on.

In **sleep mode**, the next lower speed level is activated after 30 minutes and then remains at the lowest speed level. The speed levels randomly change at each level. If you start at the highest speed level, the fan changes to the medium speed level after 30 minutes, then to the lowest speed level after a further 30 minutes and continues to run at the lowest level.

In **natural mode**, the speed levels will randomly change.

SWING button (Oscillation)

With this button you can set the oscillation function to achieve even ventilation. If you press this button, the fan oscillates slowly from left to right and back again. The indicator light for oscillation turns on. If you press the button again, the oscillation stops. The oscillation works in every setting.

TIMER button (set operation time)

You can set the operating time of the fan using the TIMER button. A setting of 1 hour to 15 hours is possible. Each time you press the button, the operation time increases by 1 hour to max. 15 hours (1 → 2 → 3 → ... 15 → TIMER off). The corresponding symbol on the display lights up and the set number of hours is displayed. The timer works in every setting.

CLEANING, STORAGE, BATTERY REPLACEMENT


 **The fan requires little maintenance. Do not try to fix it by yourself.**

 Refer it to qualified service personnel if service is needed.

1. The fan must be unplugged before cleaning and assembling.
2. Wipe the exterior surfaces with a soft cloth soaked in a mild detergent. Thoroughly remove the soap film with a dry cloth.
3. Do not use any abrasive detergent or solvents to avoid scratching the surface. Do not use any of the following as a cleaner: gasoline, thinner.
4. Do not allow water or any other liquid into the housing or interior parts.
5. The appliance must be stored out of the reach of children.

Battery replacement

Open the battery compartment as shown in the illustration on the back of the remote control and replace the used battery with a new, same type (CR2025).

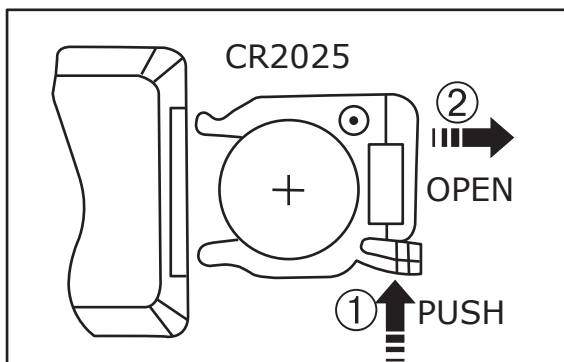

TECHNICAL DATA

Model:	JTF-02-RL
Input voltage:	120V ~60HZ
Power:	60 W
Protection class:	Class II
Dimensions:	9.3*7.3*50 INCH

This appliance is tested according to ETL regulations and corresponds to ETL directives.

DISPOSAL



Notice for environmental: If at any time in the future you should need to dispose of this product please note that waste electrical products should not be disposed of with household waste. The symbol (on the left) on the packaging is indicating it. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive).



The battery must be disposed of properly. Contact battery distributors or local waste disposal points for this.

EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

ES

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

PL

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

US office: Fontana

UK office: Ipswich

AU office: Truganina

DE office: Hamburg

FR office: Saint Vigor d'Ymonville

PL office: Gdańsk