

USER'S MANUAL

HW67626

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

 
Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway



**FLOOR AREA
2MX2M**

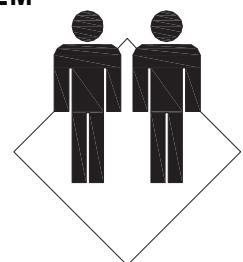

ASSEMBLED BY 2 ADULTS

 
Contact Us!

Do NOT return this item.


Contact our friendly customer service department for help first.



Before You Start

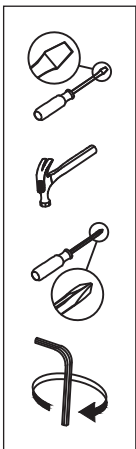


- ⚠ Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⚠ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⚠ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- ⚠ Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

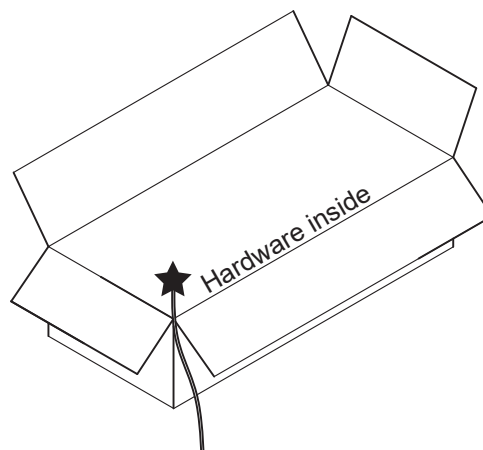 


Parts and Hardware List

 
Not actual size

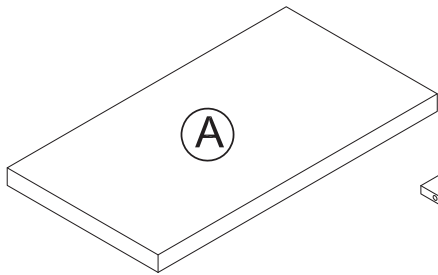


Board x1

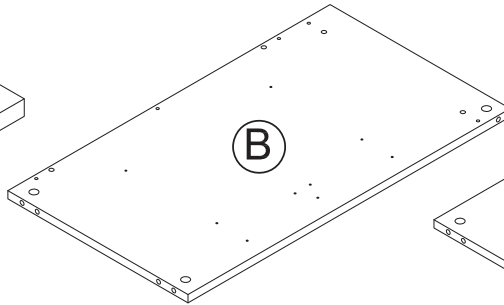 


Side Board x1

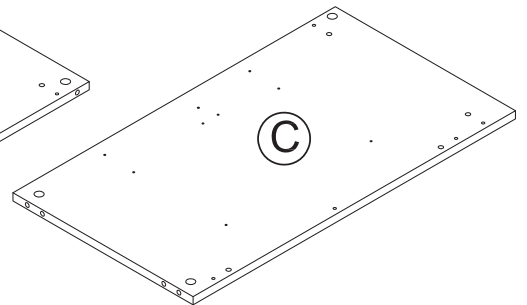 


Side Board x1

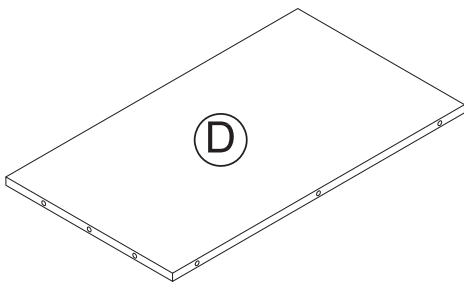 


Side Board x1

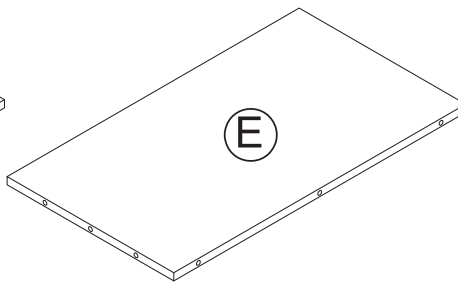 


Side Board x1

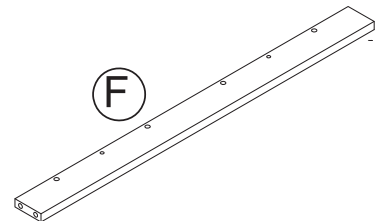 


Side Board x1

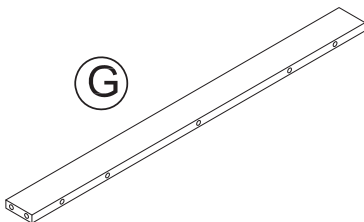 

Side Board x1

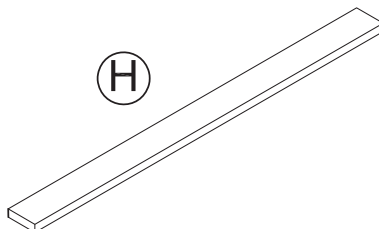 


Side Board x1

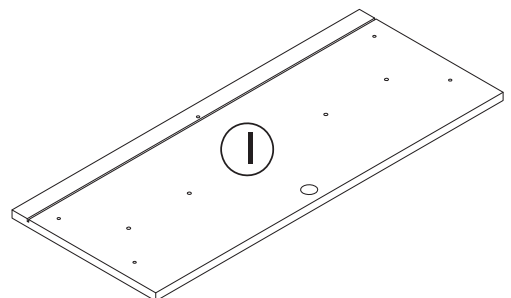 


Side Board x1

Parts and Hardware List

 
Not actual size

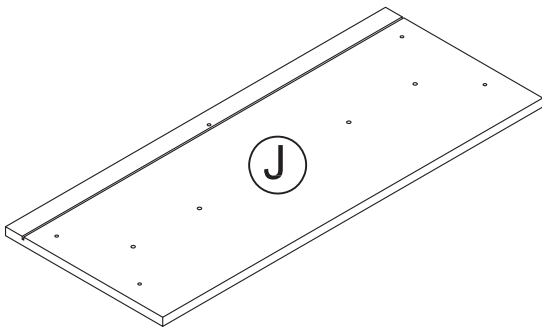


Side Board x1

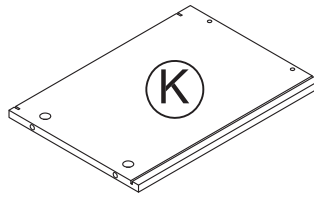 


Side Board x1

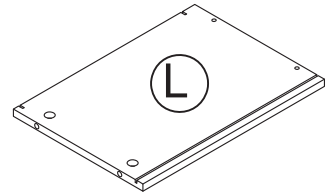 


Side Board x1

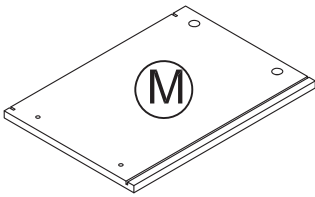 


Side Board x1

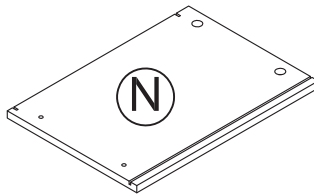 


Side Board x1

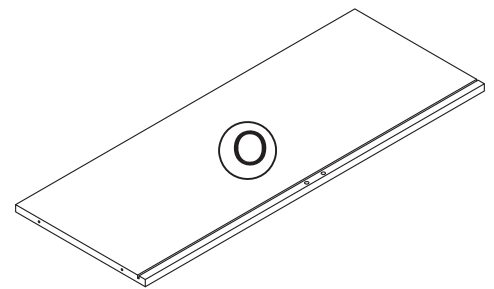 

Side Board x2

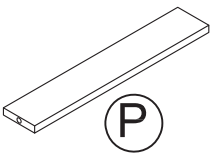 


Side Board x2

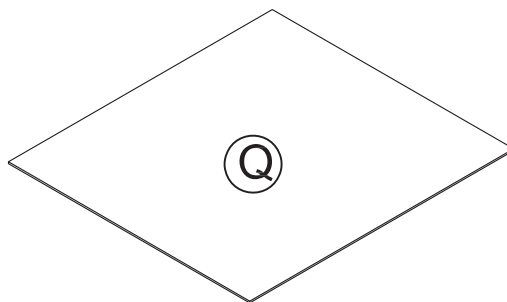 

Side Board x2


Board Identification

 Not actual size

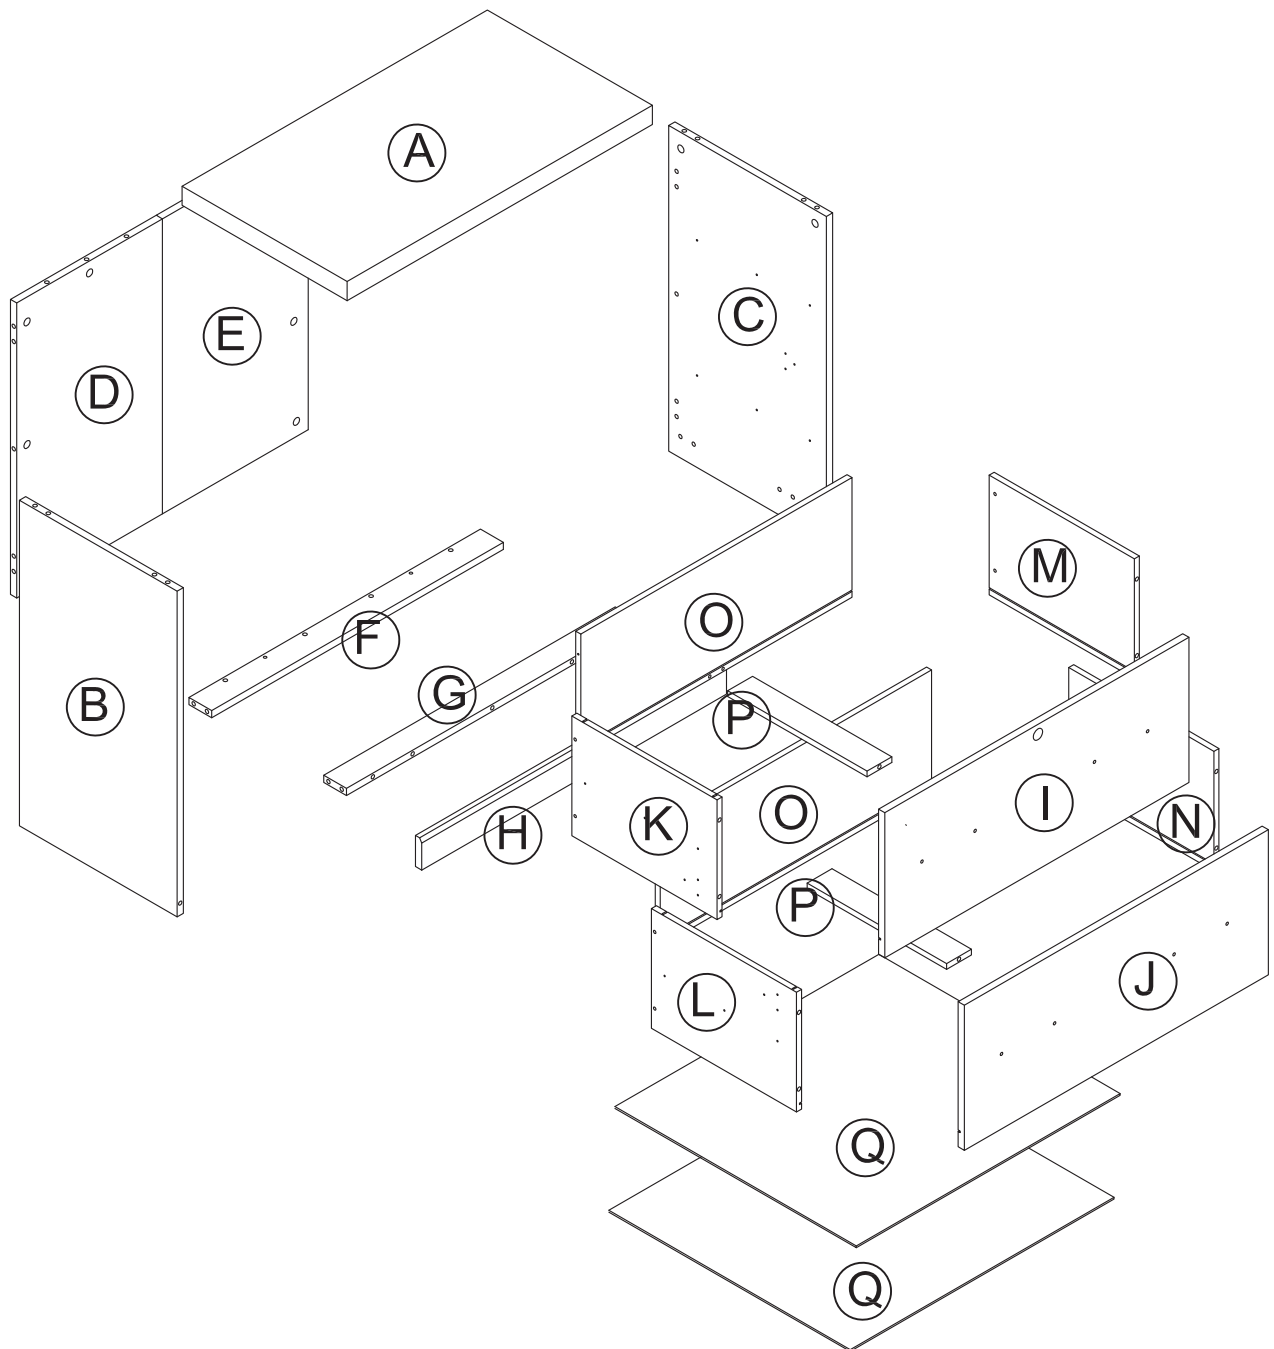


Parts and Hardware List

 
Actual size

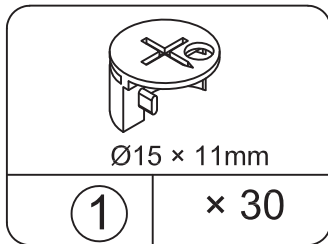


CAM LOCK

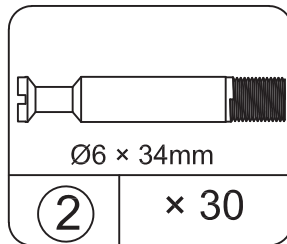 


CAM BOLT

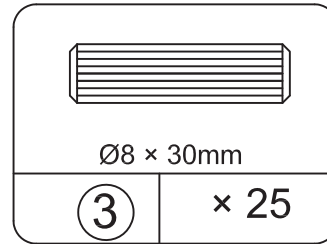 


WOOD DOWEL

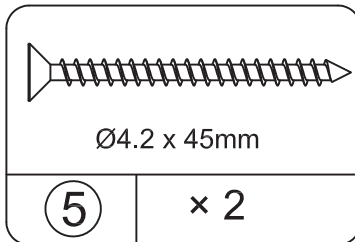 


SCREW

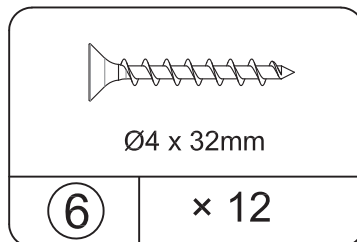 


SCREW

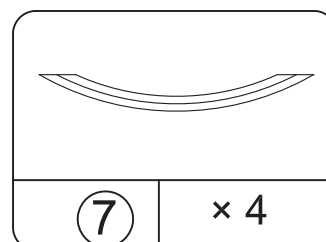 


HANDLE

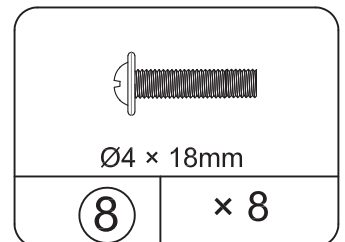 


SCREW

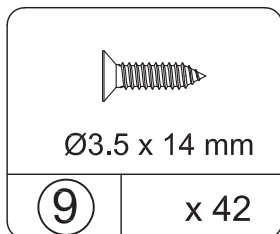 


SCREW

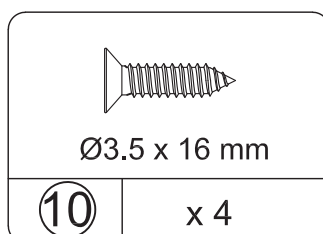 


SCREW

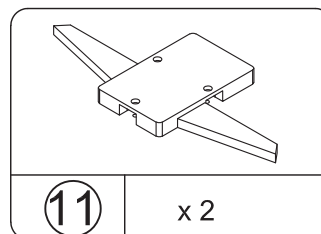 


BUTTERFLY CLASP

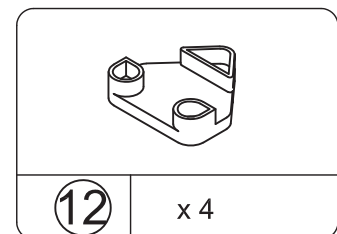 


BUTTERFLY CLASP

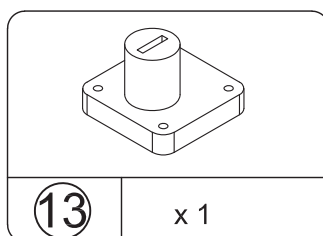 


LOCK

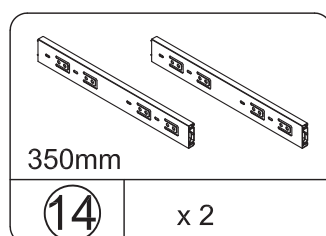 

METAL SLIDE




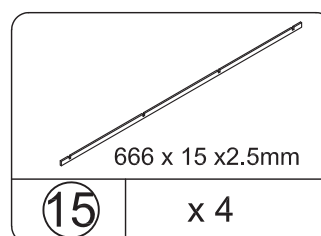 


METAL FILE HOLDER

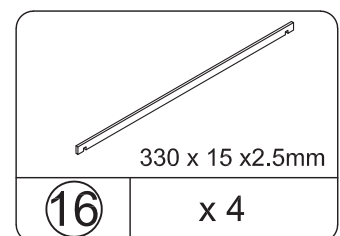 


METAL FILE HOLDER

    STEP 1

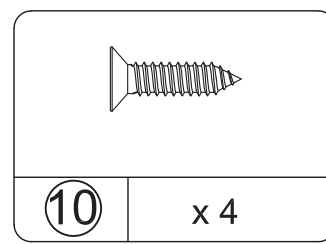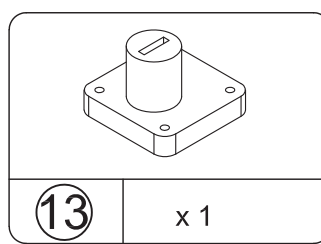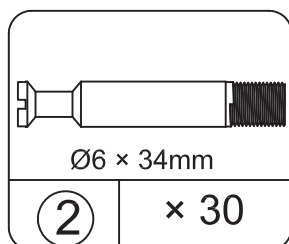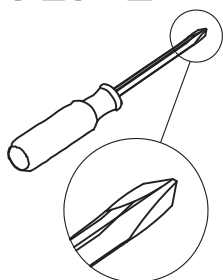

Insert the hardware ② to A\B\C\H\I\J part

 Insert the hardware ⑬ ⑩ to I part

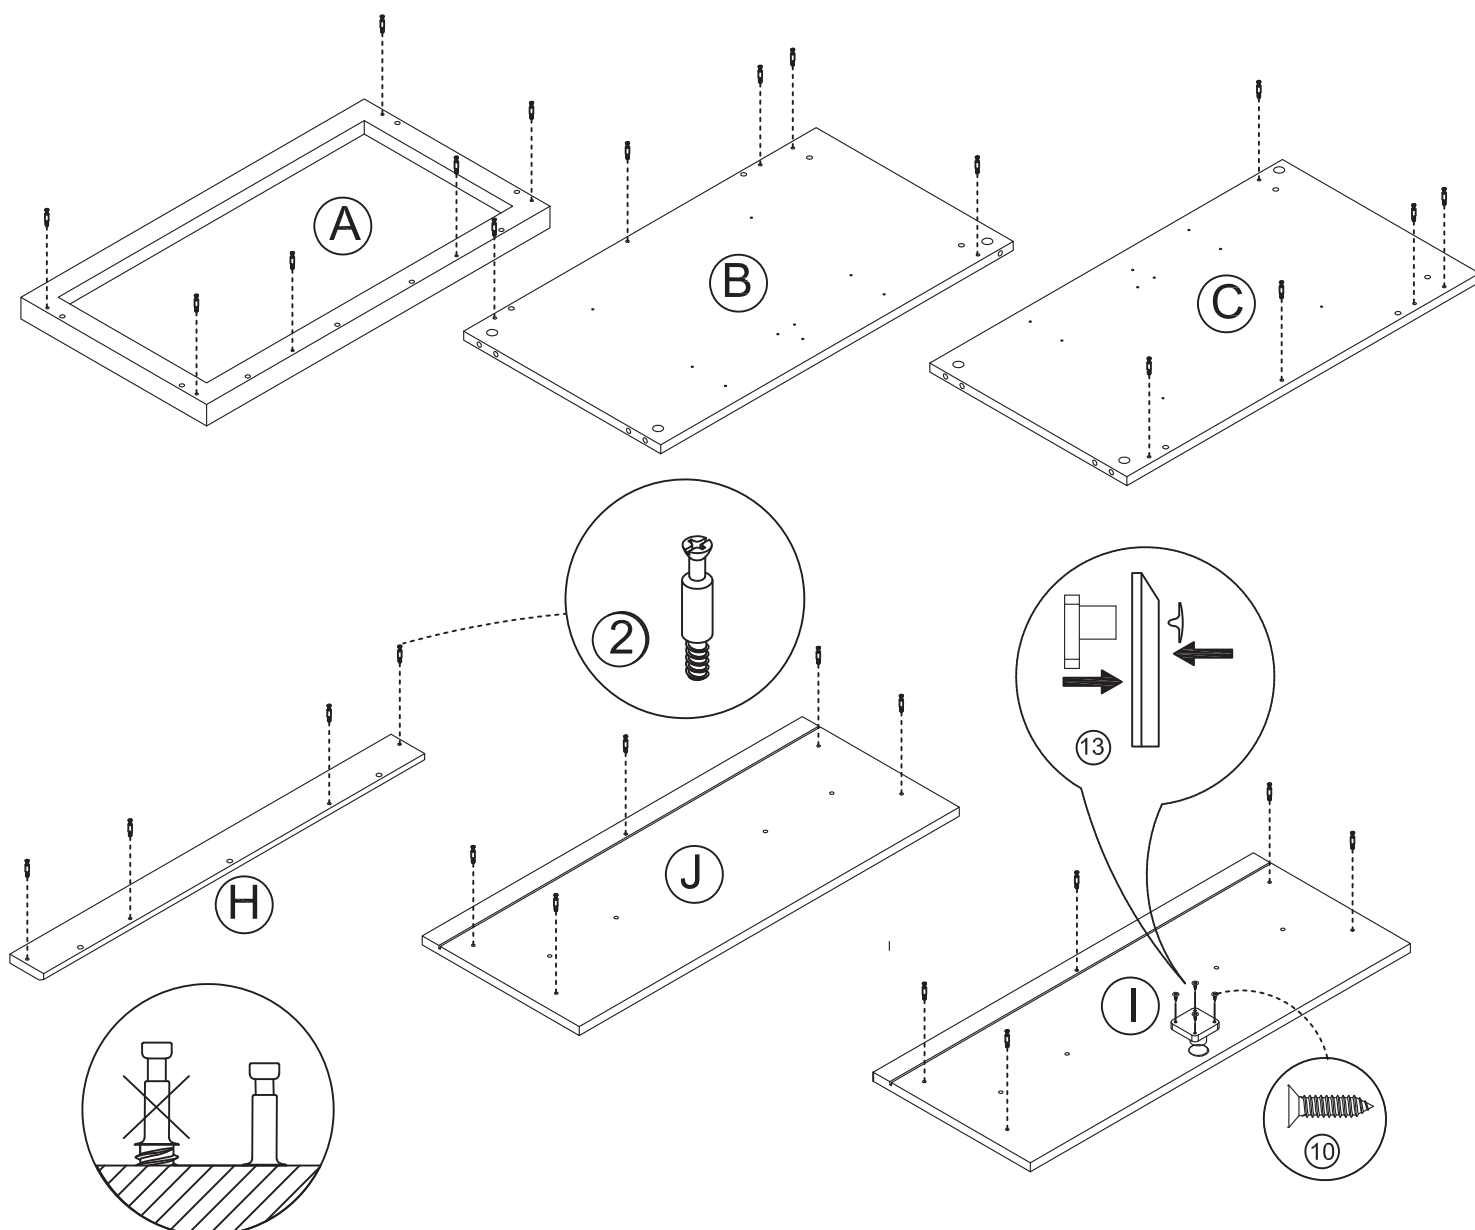


How To SEPARATE BALL BEARING SLIDE.


Cómo SEPARAR LAS GUÍAS DE BOLAS.

Comment SÉPARER LES GLISSIÈRE À BILLES.

 - 1) Pull toward arrow to open the slide until its stops and then flip it over.
Hale como indica la flecha hasta que la ranura se detenga y luego dele vuelta.
Tirez en direction de la flèche pour ouvrir la glissière jusqu'à ce qu'elle arrête, puis retournez la.



 
- 2) Push plastic lever down and pull apart.
Empuje hacia abajo el nivelador plástico y desmóntelo.
Poussez le levier en plastique vers le bas et séparez.

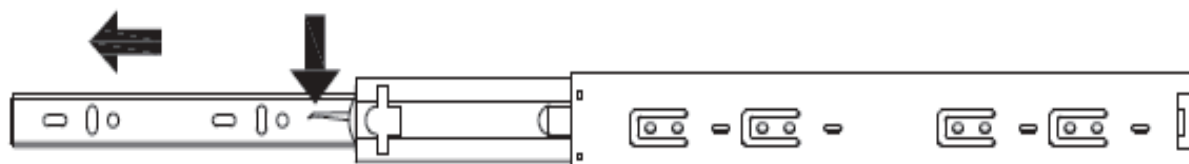



Cabinet member/ Nivelador del archivador/ Élément de l'armoir







 
Drawer member/ Nivelador del cajón/ Élément du tiroir





 
 
STEP 2

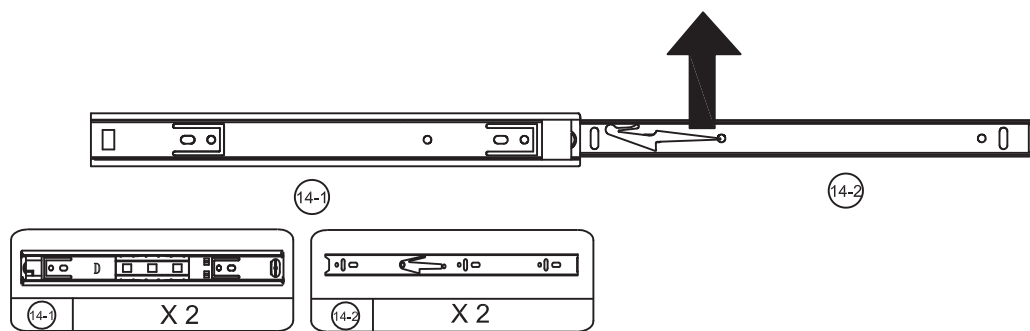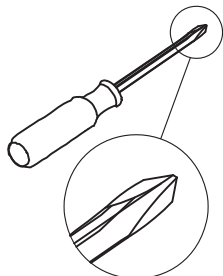

  
 
 
 
Insert the hardware (9) (10) (11) (14) to B/C part

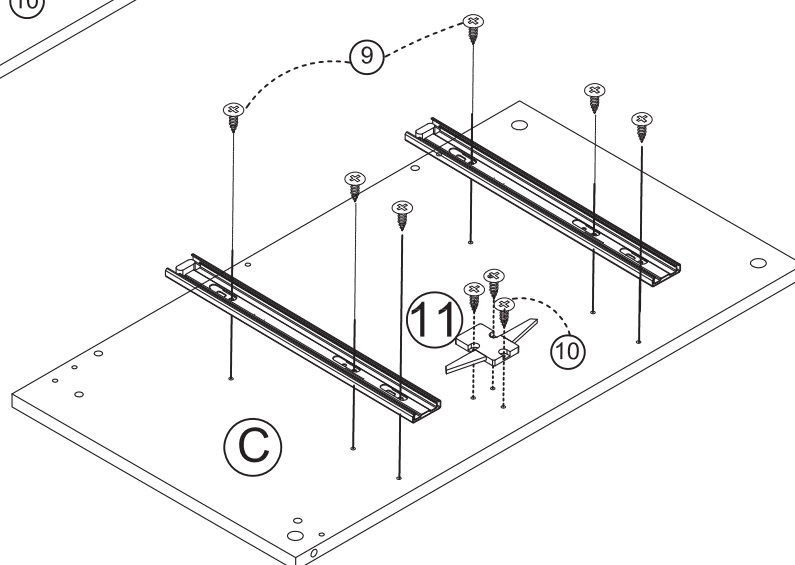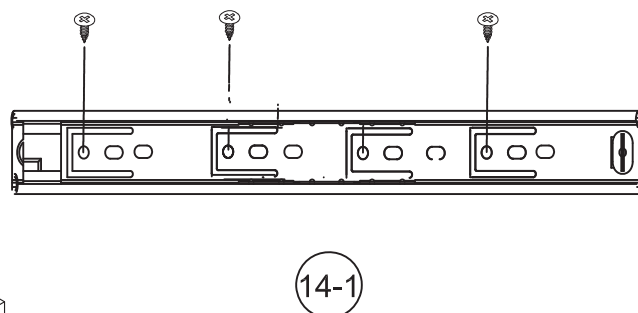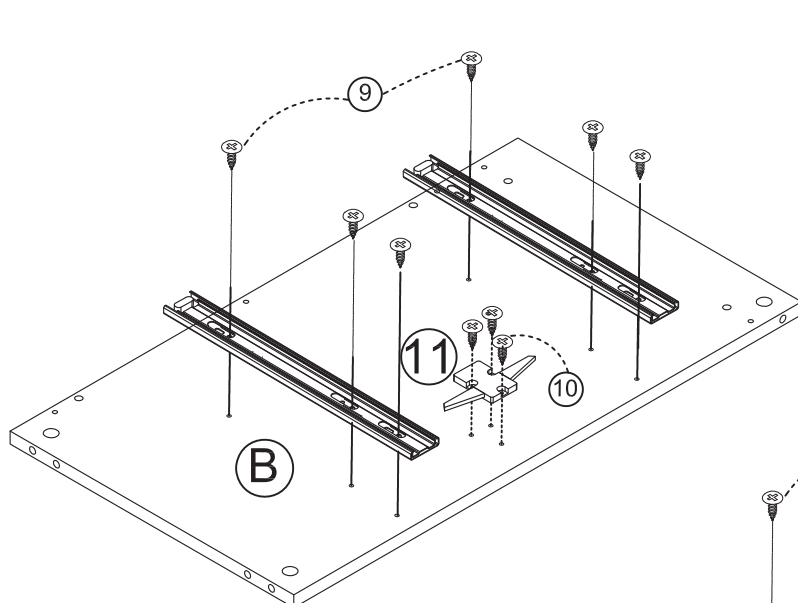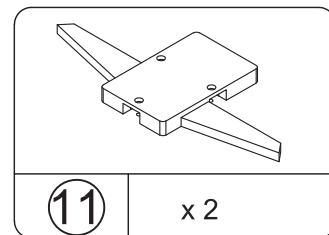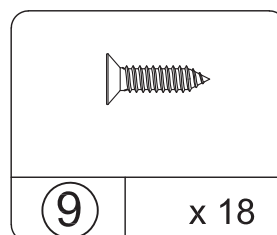

  
 
 
STEP 2

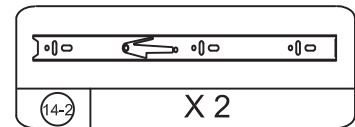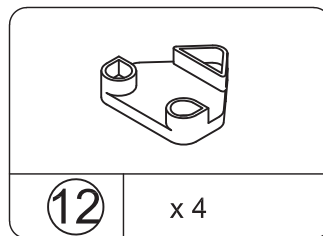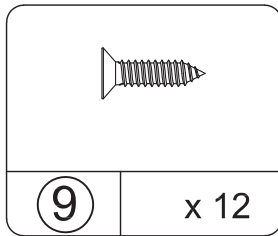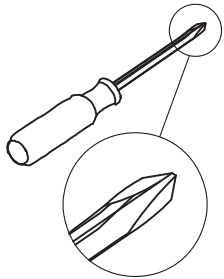

    Insert the hardware ⑨ ⑫ ⑭ to K/L/M/N part

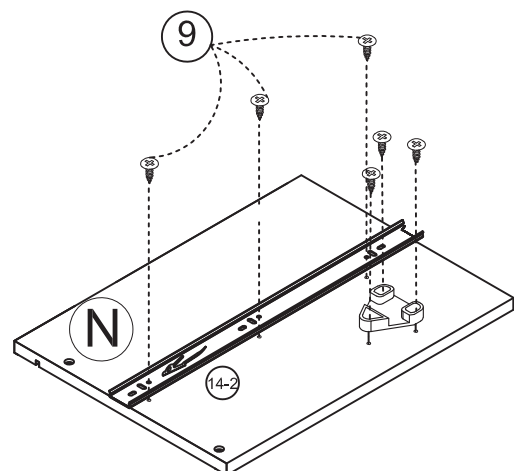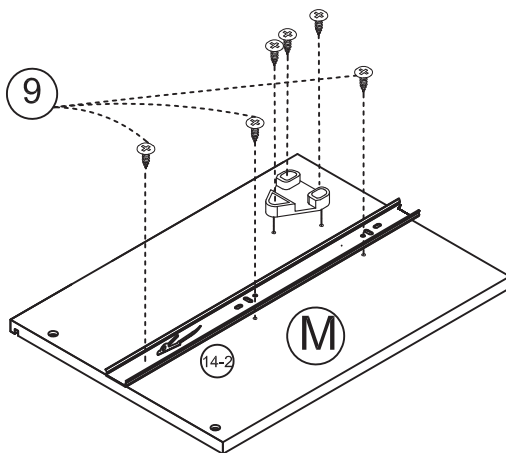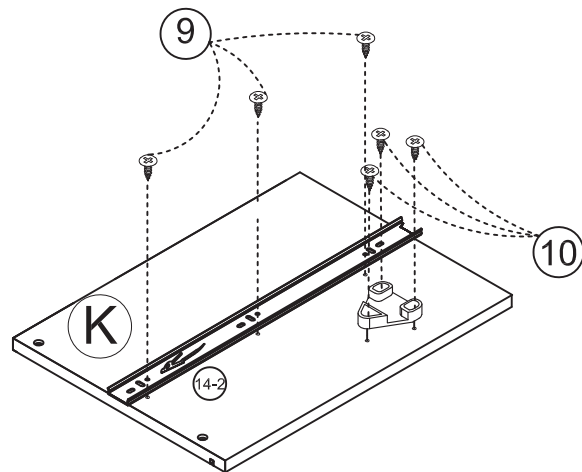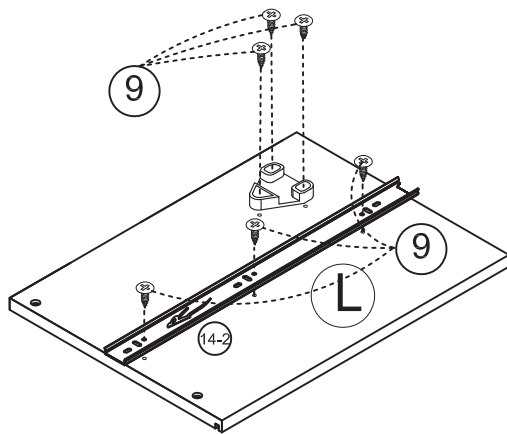


   STEP 3

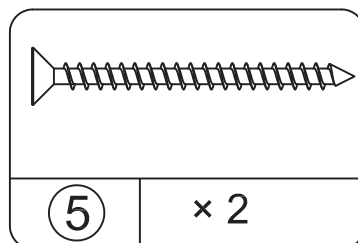
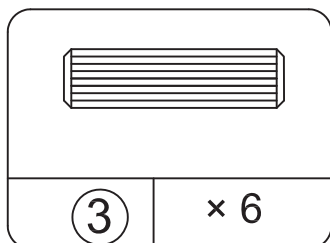
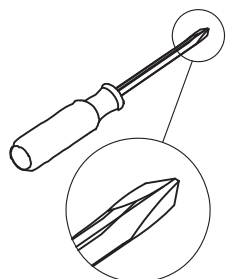


Fix the D part to the E part with the hardware ③ .

 
Fix the F part to the D/E part with the hardware ③⑤ .

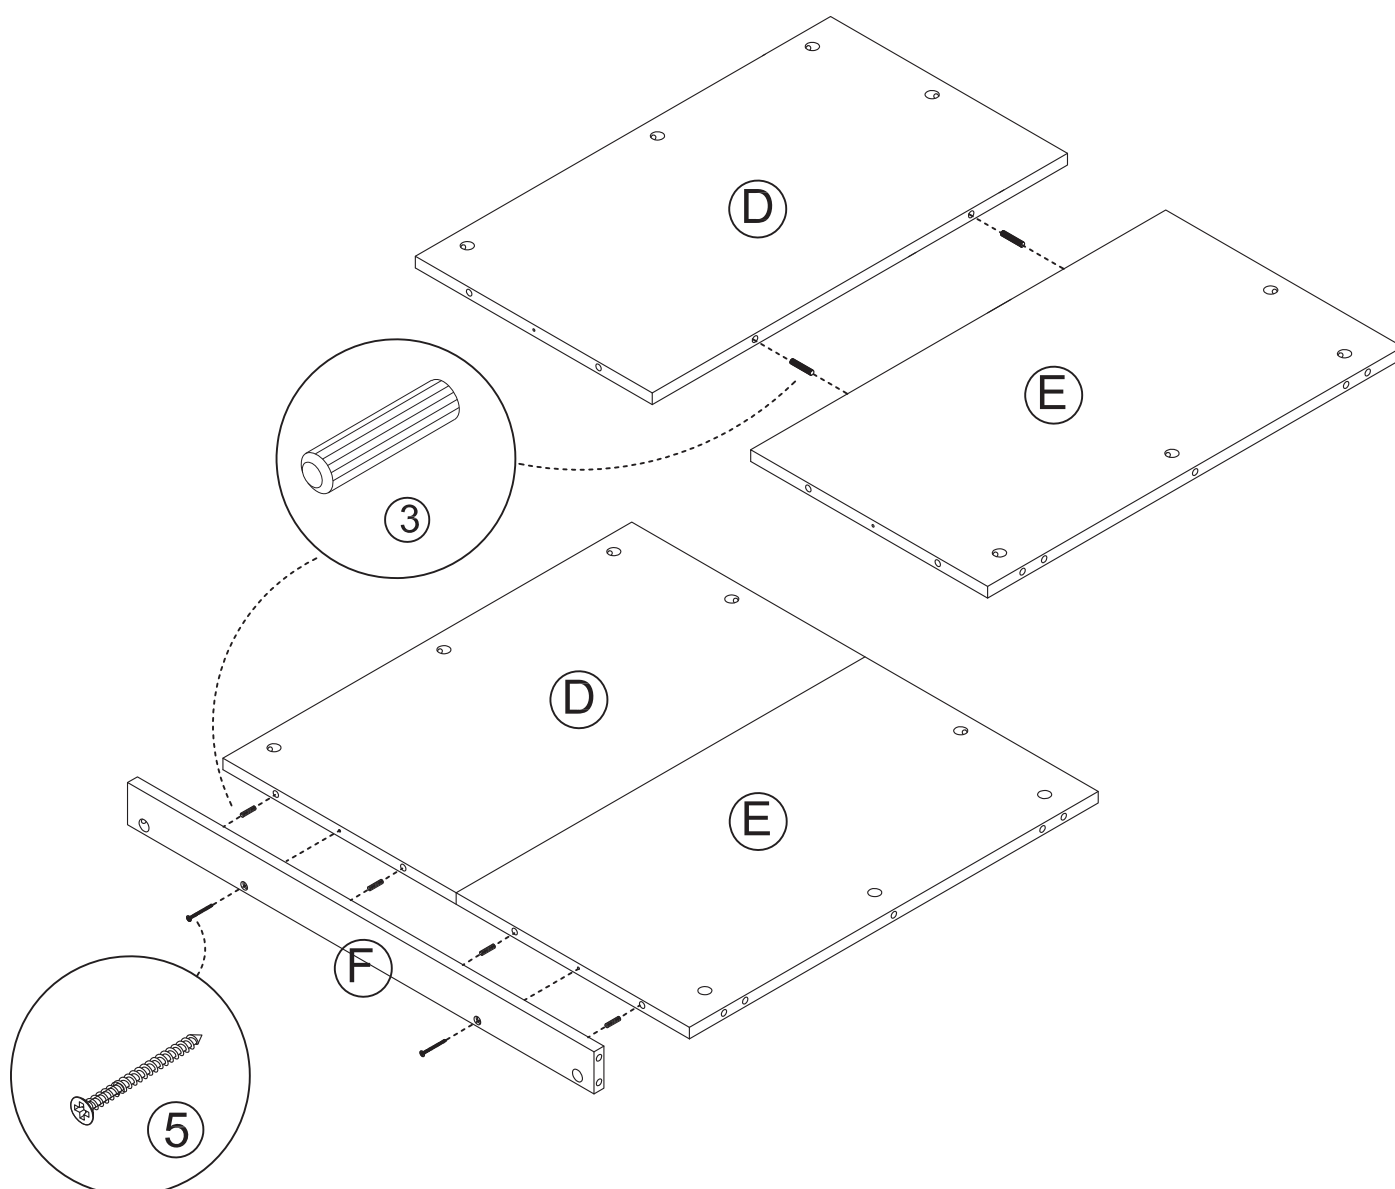

   
STEP 4

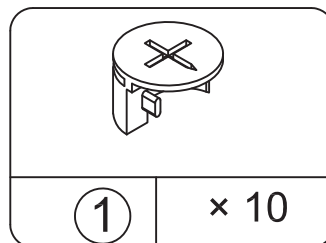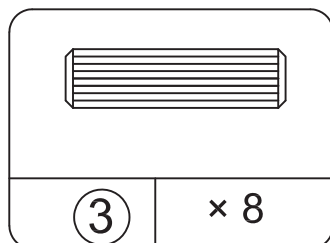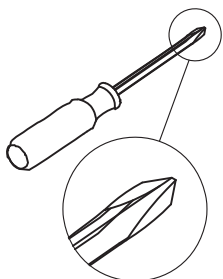



 
Fix the B part to the D\F\G part with the hardware ①③.
Fix the C part to the E\F\G part with the hardware ①③.

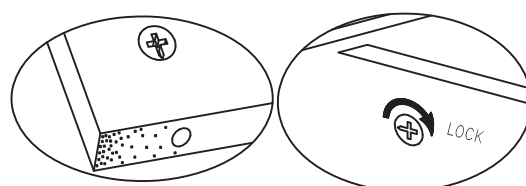

Proper orientation of CAM LOCK

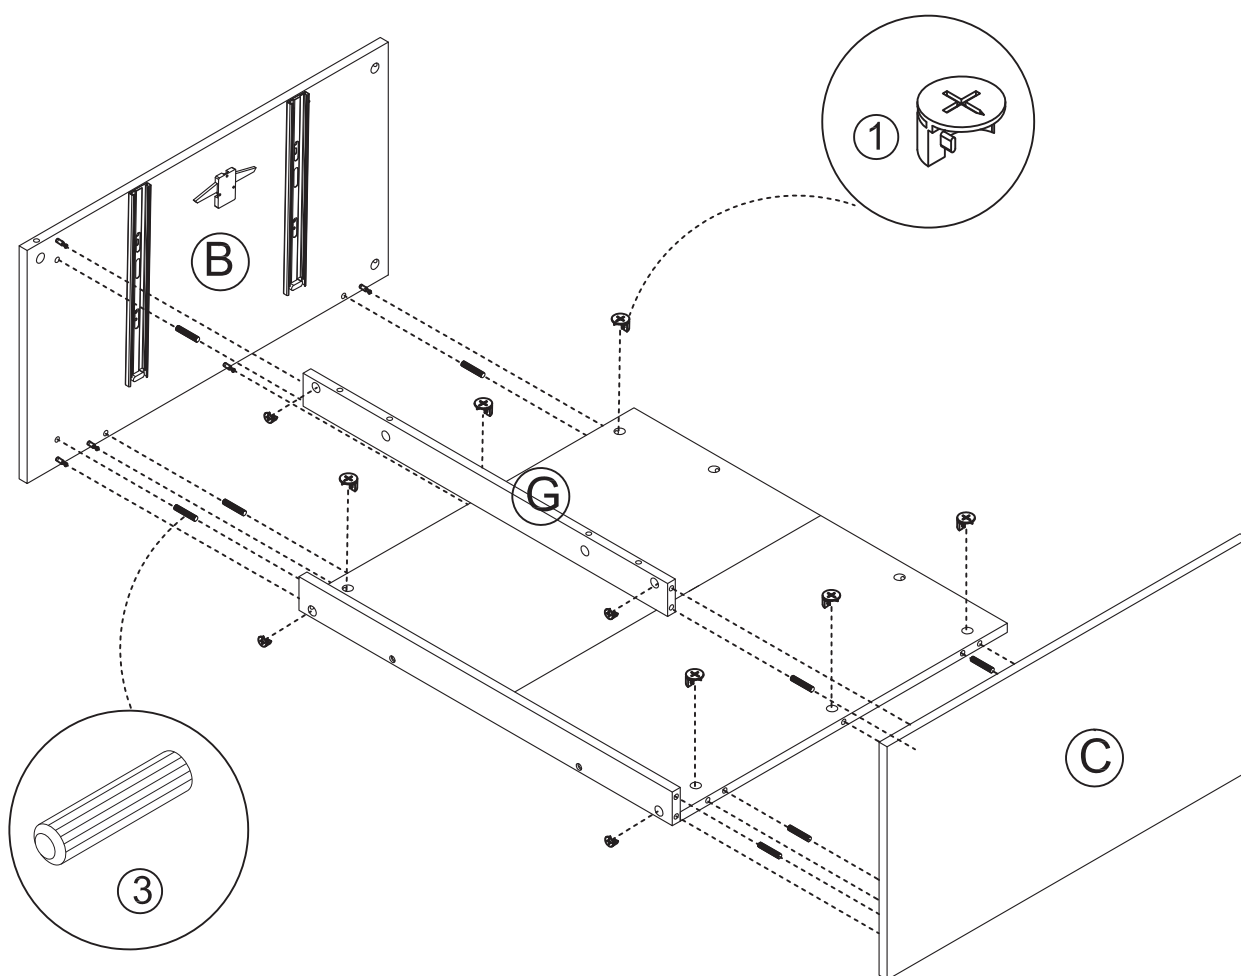 


   STEP 5

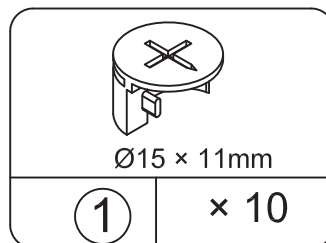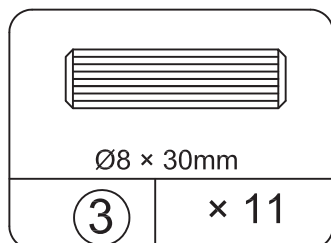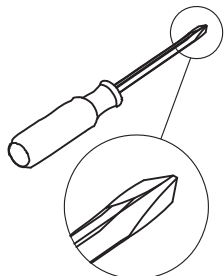


Fix the A part to the B\C\D\E part with the hardware ①③.


 
Fix the H part to the B\C\G part with the hardware ①③.

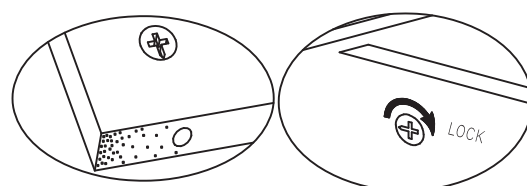

Proper orientation of CAM LOCK

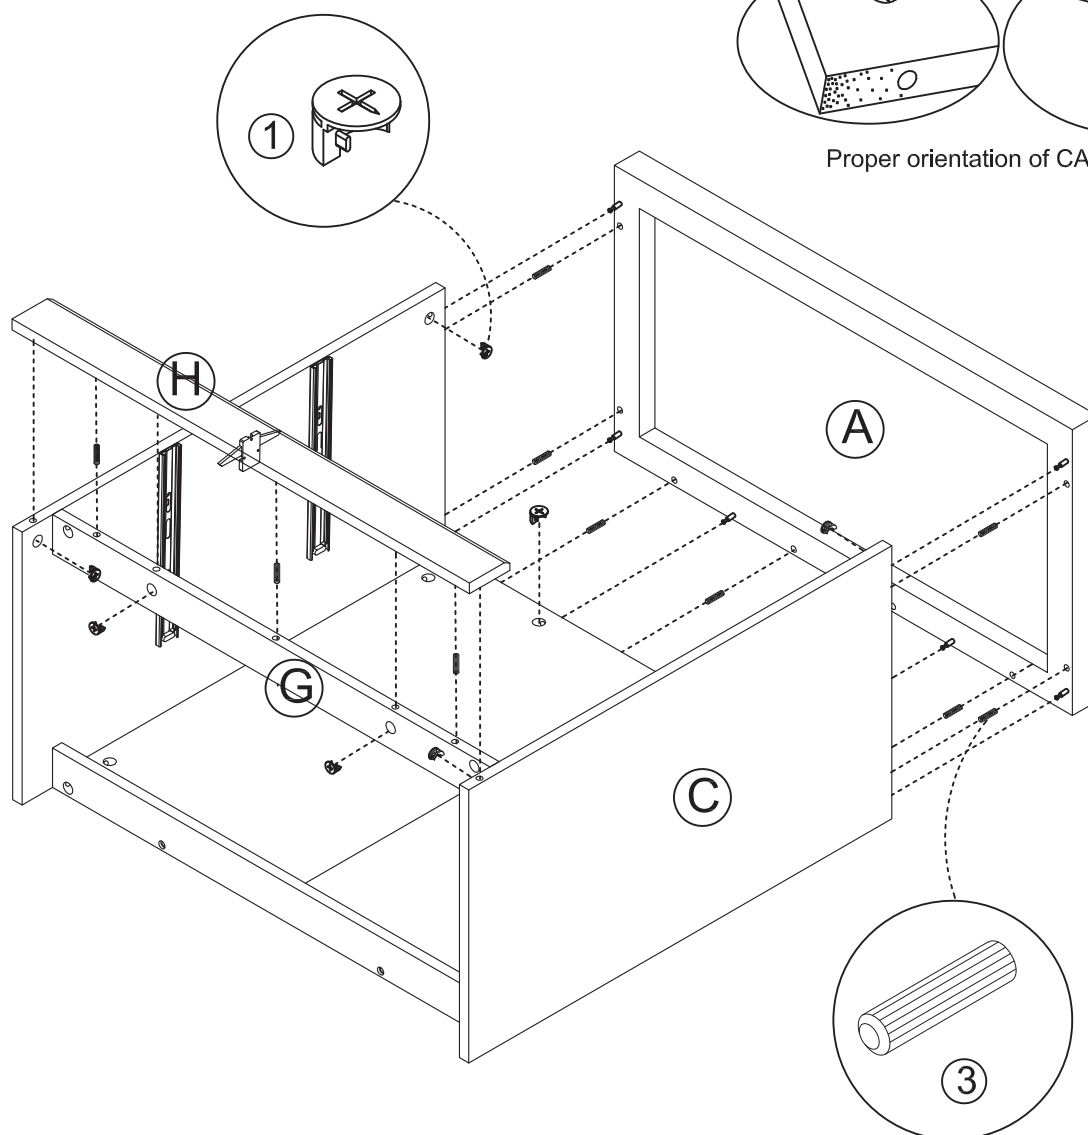 


  STEP 6


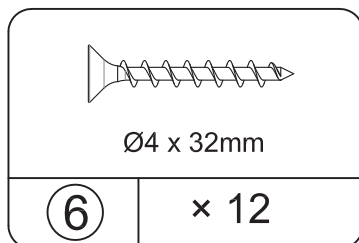
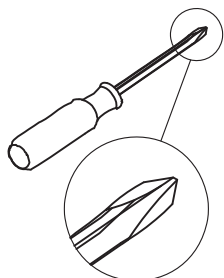


Fix the O part to the K\M\P part with the hardwaer ⑥ .

 Fix the O part to the L\N\P part with the hardwaer ⑥ .

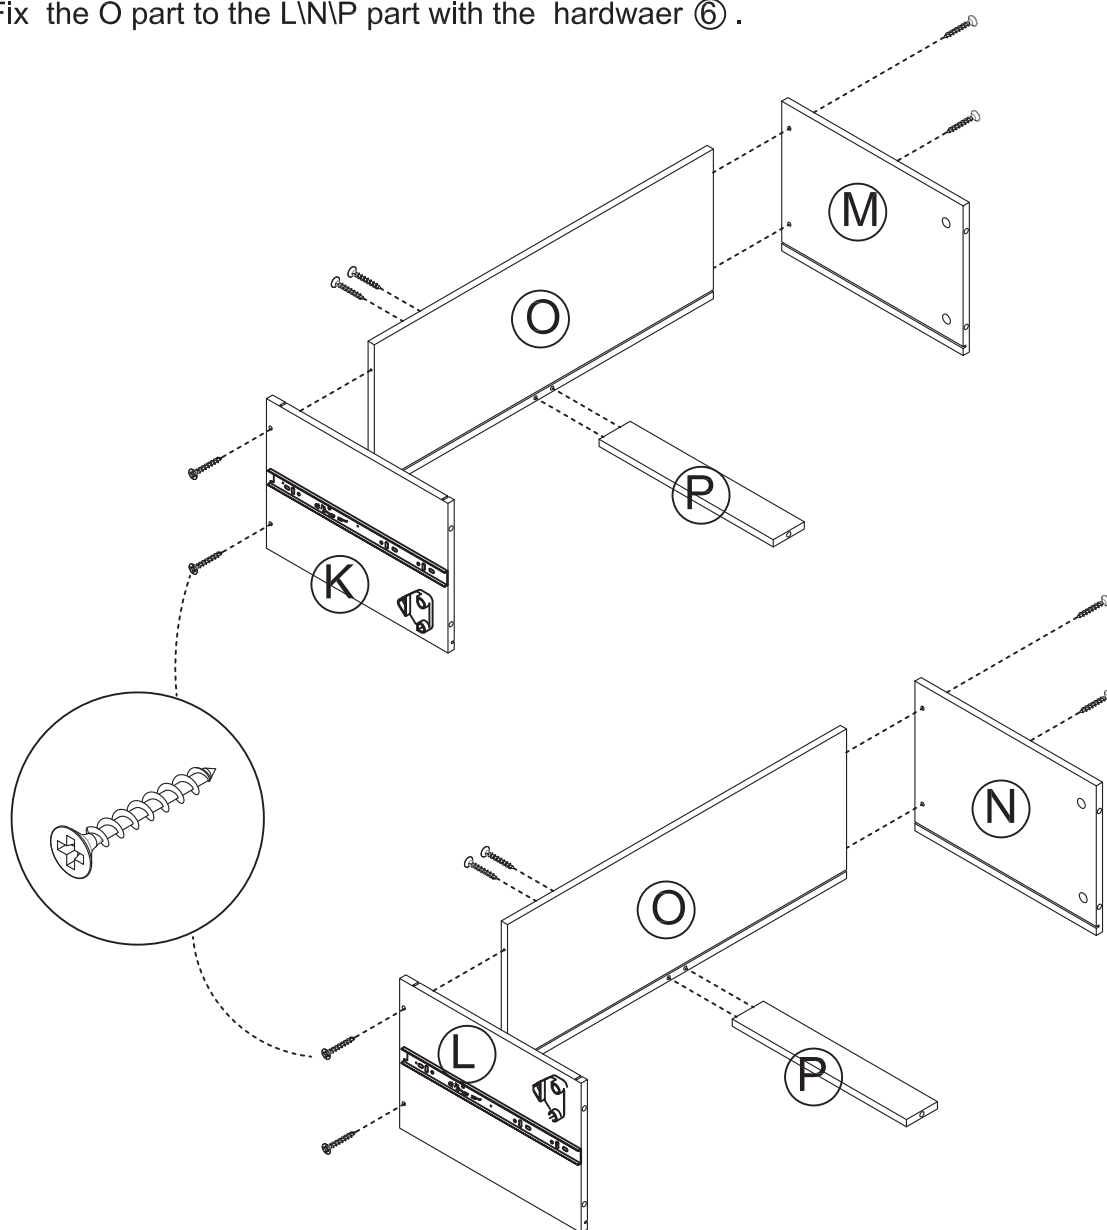

   
STEP 7

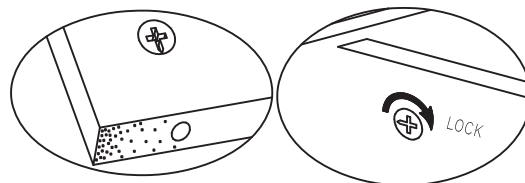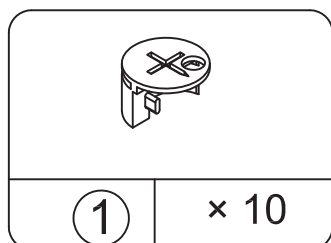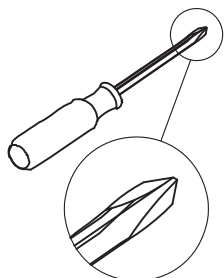




Proper orientation of CAM LOCK

Fix the I part to the K\M\P\Q part with the hardware ①.



 
Fix the J part to the L\N\P\Q part with the hardware ①.

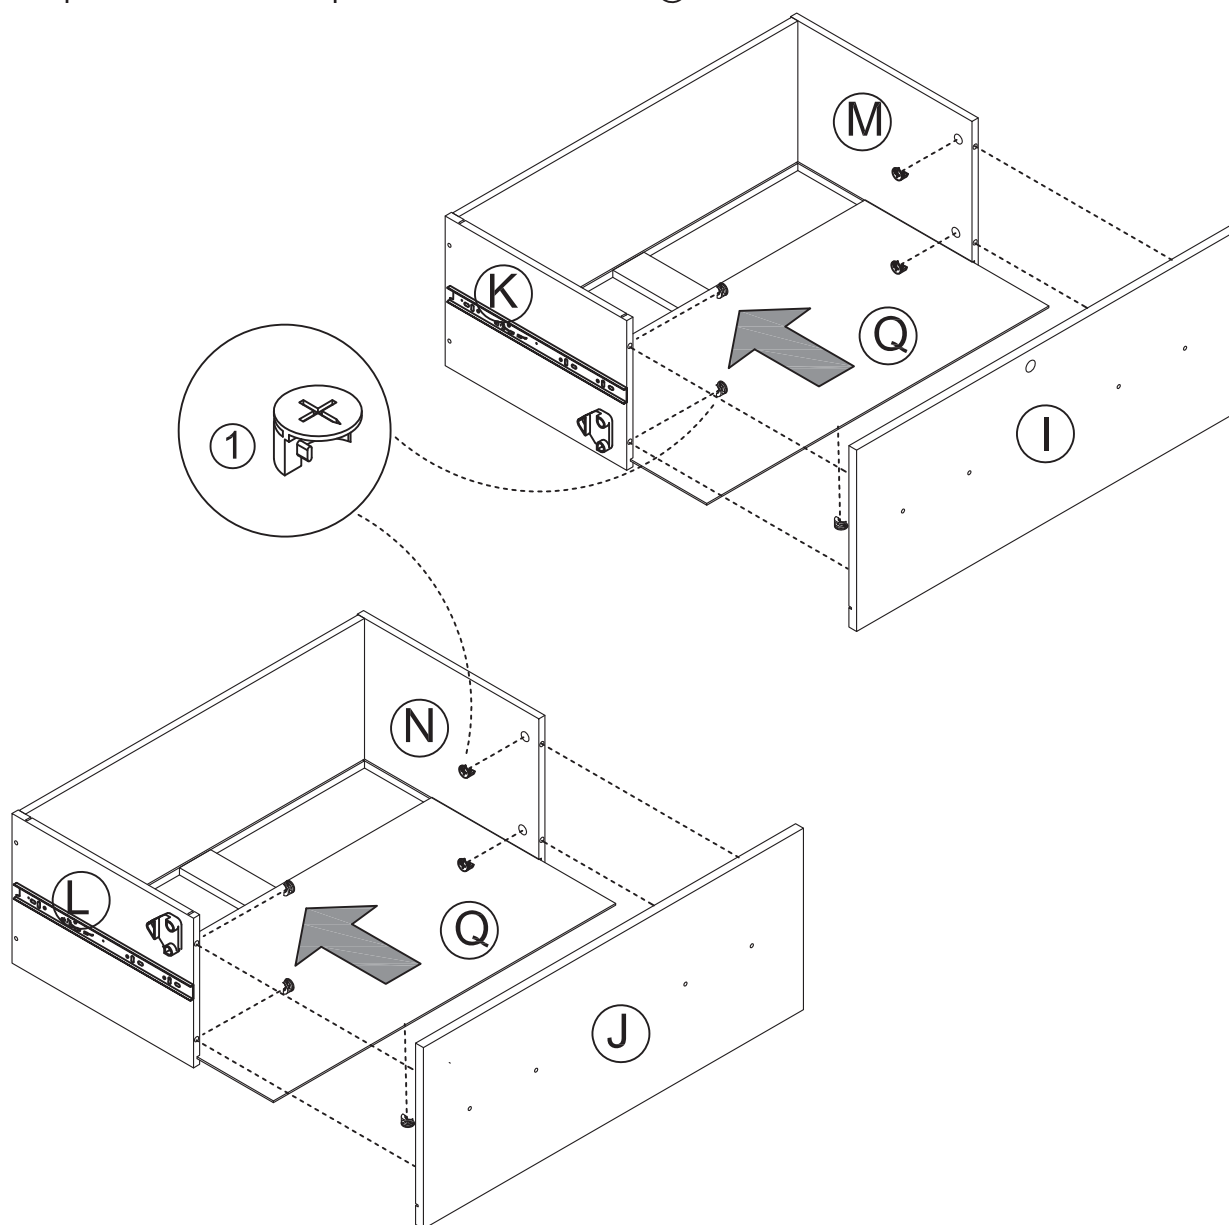

   STEP 8

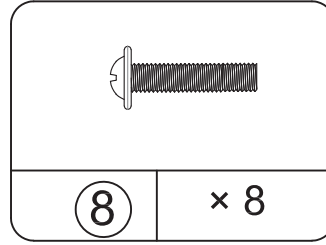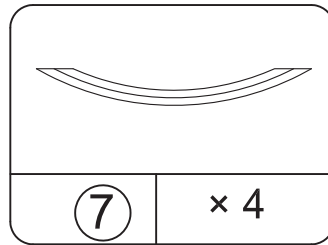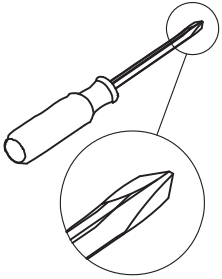

Insert the hardware ⑦⑧ to I/J part

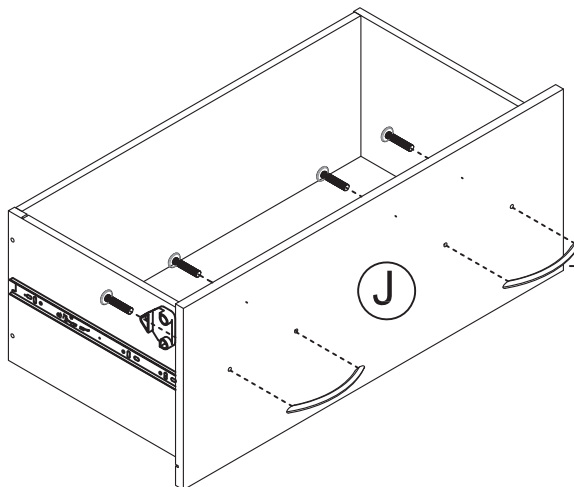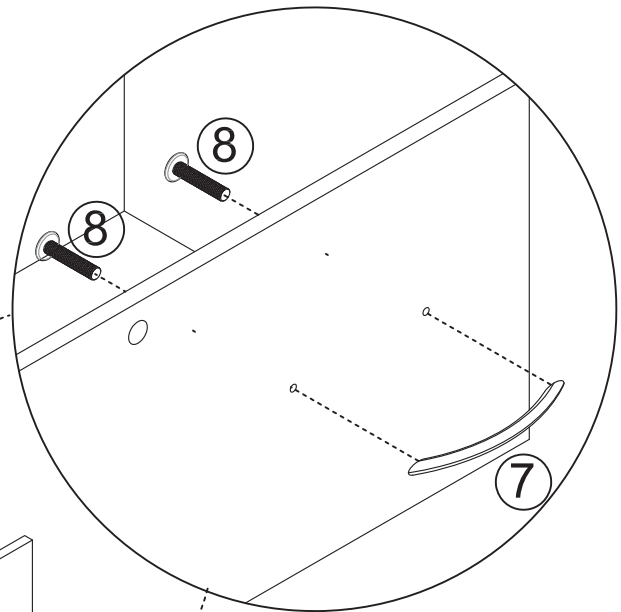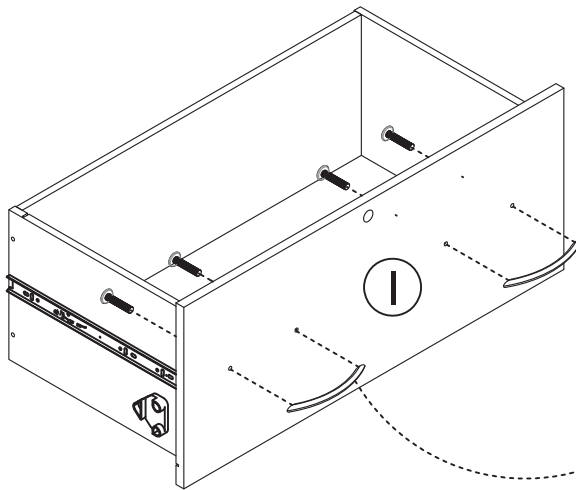   


STEP 9 NOTE: This step is just for insert or remove drawer if needed.

To Insert Drawer Into Cabinet

- Bottom drawer first.
- Position anti tip mechanism, as shown.
- Bring ball bearing retainer fully forward, as shown.
- With help of another person, carefully align and insert drawer slide into cabinet slide, guiding the drawer slide between the ball bearing retainer, as shown.
- Push the drawer into cabinet. You may experience a light resistance when pushing the drawer into cabinet but once both slides are properly engaged, drawer should slide in and out smoothly.

 
NOTE: Do not use excessive force to insert drawer as this may cause the damage to slides.

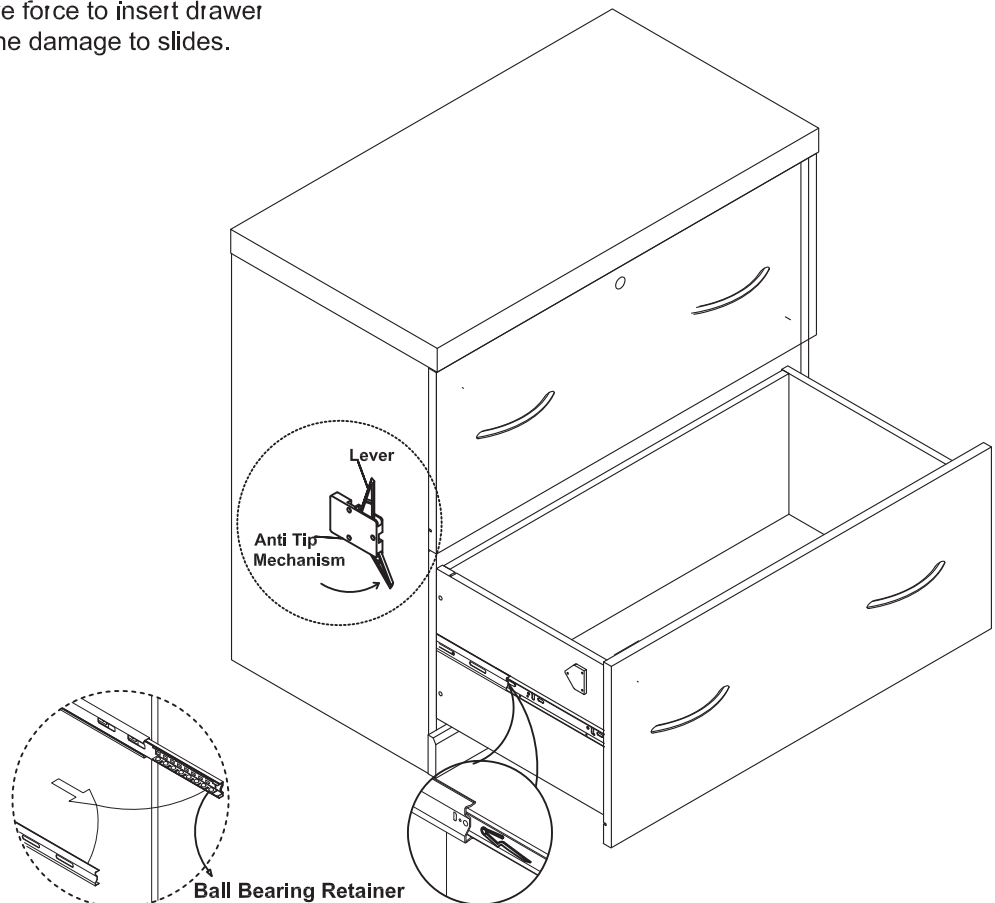


Repeat Above Step To Insert Upper Drawer.

To Remove Drawer, If Needed

 
- Pull the drawer fully open so levers are visible.
- Push UP on left side lever and DOWN on right side lever.
- Holding levers in place, pull drawer toward you.

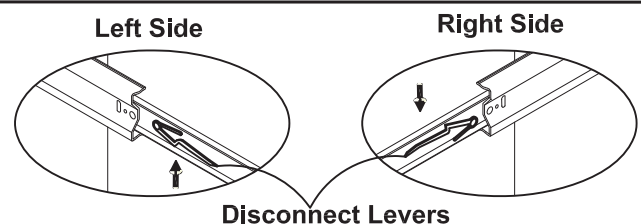

 STEP 10

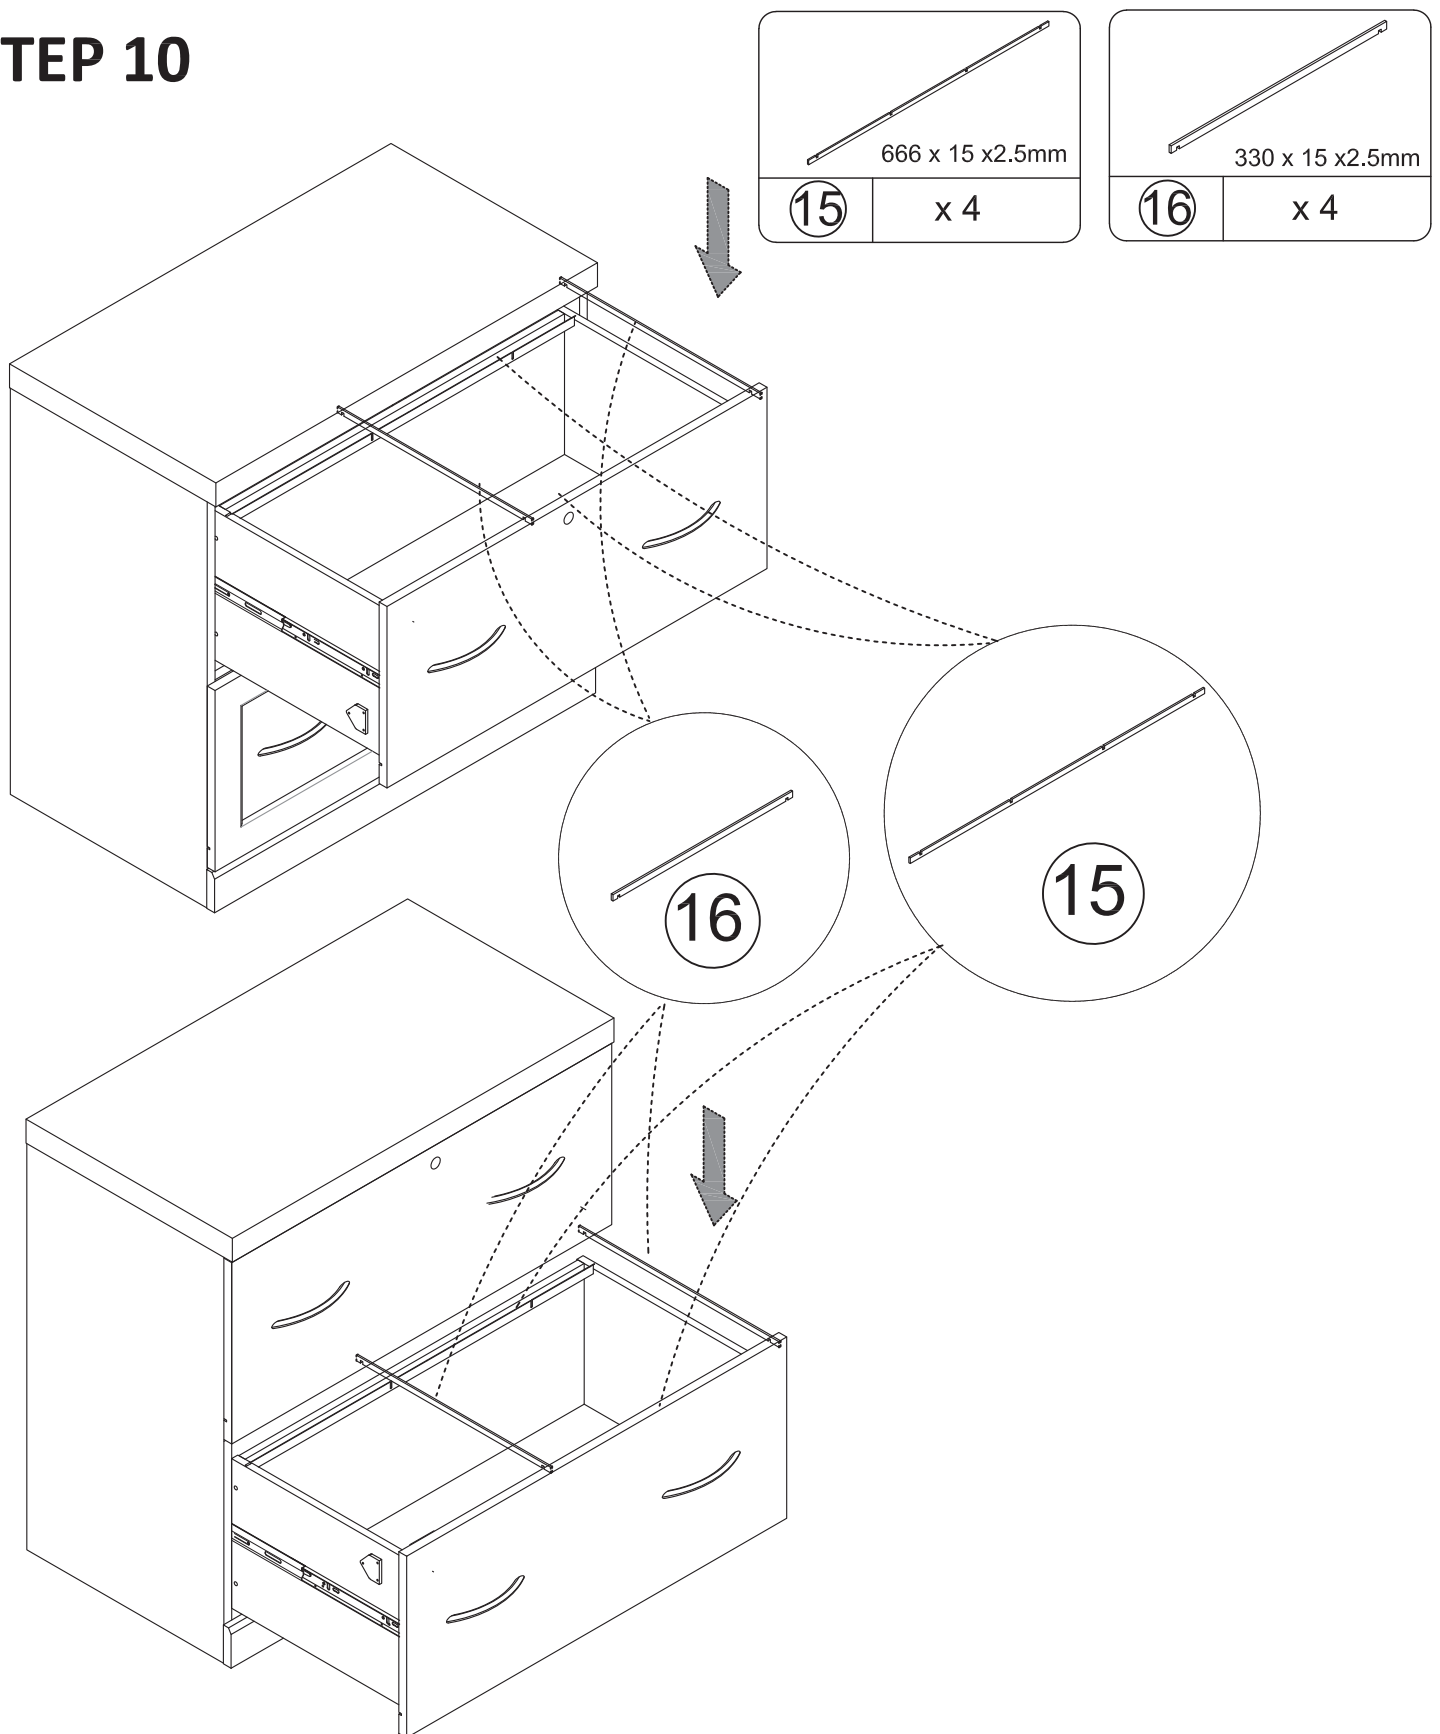

Maximum Loads

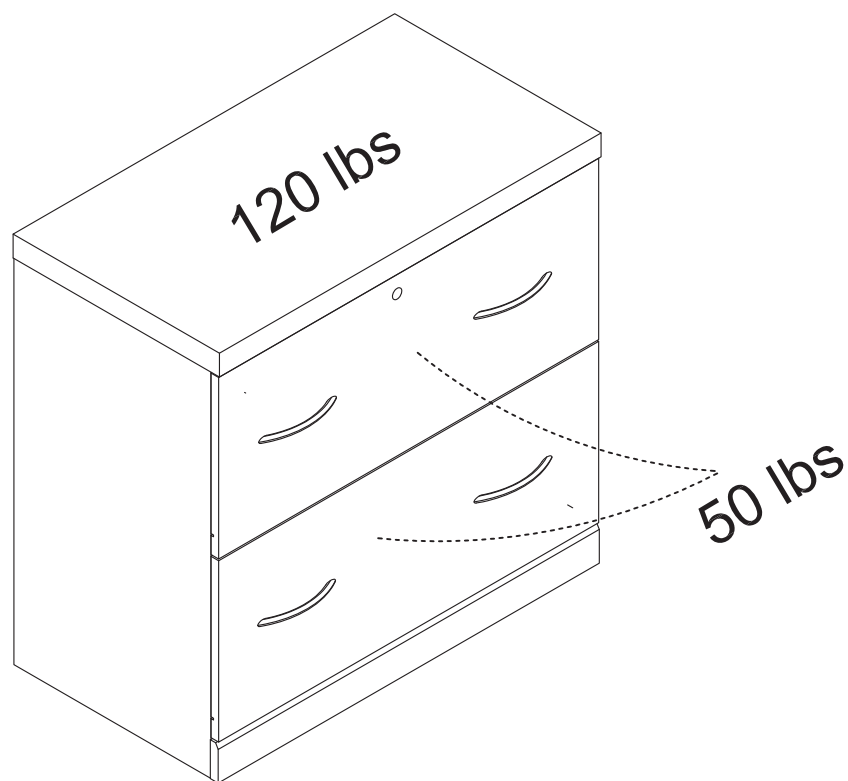 

WARNING

This unit is intended only for use within the maximum weights indicated. use with loads heavier than the maximum weights indicated may result in instability causing possible injury.

Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment.

Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood.

It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

