 


印刷技术要求:

- 1.印刷颜色为黑白,印刷尺寸为143X210mm
- 2.封面封底为105克双铜（即第一页和最后一页），  
内页为80克双胶
- 3.如果供应商排版需要加空白页，请加在封底之前
- 4.此页不用印刷

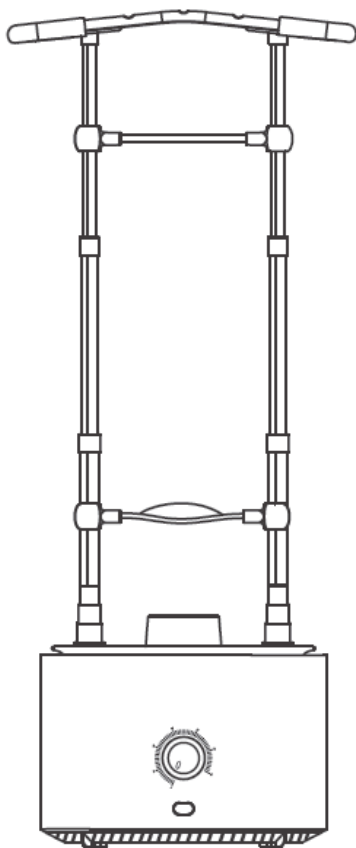

## USER'S MANUAL

Electric ironing and drying machine

EP25006US

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Please give us a chance to make it right and do better!**

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

**Follow Costway**

Visit us: [www.costway.com](http://www.costway.com)



# Contact Us!

## Do NOT return this item.

Contact our friendly customer service department for help first.



# Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

## Safety precautions

Please read carefully and observe the following "Safety precautions" before using. It is divided into two aspects: "warning" and "caution". "Warning" and "caution" are both important aspects of safety and security. Please do comply with them.



### Warning

Improper operation can cause a serious safety incident.



### Caution

Improper operation may cause minor injury to personnel or impair product performance.



Prohibitions.



Peremptory instructions.



## Warning

### Use power plugs and cords correctly



Must

- Please ensure that the marked voltage of the product matches the local supply voltage and the power plug matches the socket outlet to avoid product malfunction or fire.
- Please make sure to put the power plug in the end to avoid electric shock and fire caused by short circuit
- Be sure to hold the power plug when pulling out.
- After using, please unplug the power plug to avoid injury, scald, electric shock and fire caused by aging of insulation.



Remove power plug

- Be sure to remove the power plug before cleaning and maintenance. To avoid electric shock and injury.



Prohibit

- Do not plug in or unplug with wet hands.



Prohibit

- Do not use damaged power cord, power plug and loose socket. When the power cord or socket is broken, it must be replaced by a professional maintenance department.
- Do not use the product when the power cord is in a bundle. It may cause overheat and fire. Please extend the power cord when using.
- Do not damage the power cord. Do not bend or stretch the power cord by force or place heavy objects on the power cord. To avoid fire and electric shock caused by damaged power cord.



Must

- In case of any abnormal conditions, please stop using immediately, cut off the power supply, and remove the power plug from the power socket.

### Abnormal conditions

- Burning smell and smoke.
- Abnormal heating of power plug and power cord.
- When the power line is moved, it is switched on and off.
- Feeling numb and electrocuted when touching it.
- Abnormal shutdown during operation.



Prohibit

- Do not drag the body with the power cord to avoid damaging the power cord and causing fire.
- Do not move the product while it is running to avoid scalding.

- Do not rinse, spray or soak the main engine in water to avoid fire caused by electric shock or leakage.




Prohibit

- Do not disassemble, repair or modify the product to avoid fire or electric shock.



#### Prohibit

- Please do not cover the air outlet, the shelf must be more than 10 cm (4") away from the air outlet. To avoid product malfunction and fire due to abnormal heating.

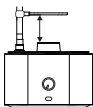

- Please don't use this product on carpet, a sofa, mattress, and soft flat place. Make sure there is smooth air flow at the air inlet.
- Do not insert metal or flammable material to air inlet or air outlet.
- Do not use this product in unstable places.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



#### Prohibit

- When product operates, please do not touch air outlet, aluminum strut and metal objects on clothes.
- After drying, metal objects on clothes are still at high temperature. They can be touched after 3 minutes of natural cooling.



- After drying, air outlet and aluminum strut are at high temperature. Please cool down for 3 minutes before touching. Products with cold air and hot air functions can also be cooled for 1 minute through the cooling air function.



- Please clean the product after cooling.
- Please don't lean on or sit on the product.




## Warning



#### Prohibit

- Please don't touch the air outlets when using the product.

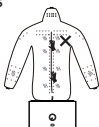

- Please don't use this product in small enclosed spaces such as wardrobes and closets to avoid overheating.
- Do not dry clothing with oil stains or solvents to avoid self-ignition and fire.
- Do not dry clothing with poor heat resistance, such as faux leather clothing, leather shoes, etc. To avoid damage to clothing
- Do not use the product near combustibles (gasoline, volatile oil, Tianna water, etc.) to avoid a fire.


## Precaution for use

- Do not dry clothing that does not adequately wring out. To avoid electric shock.




- It is normal for the machine to make a sound when it shakes, because there is anti-tipping gravity ball protection device inside.
- When cold and hot air function is switched, a transition period of about 1 minute is required.
- If the clothes model is soiled by clothes or has residual stains, please wash it before using it, so as not to stain the clothes when drying.
- When used in coastal areas, hot spring areas or places full of lampblack and other special environments, the service life of the product may be relatively shortened.

# Components

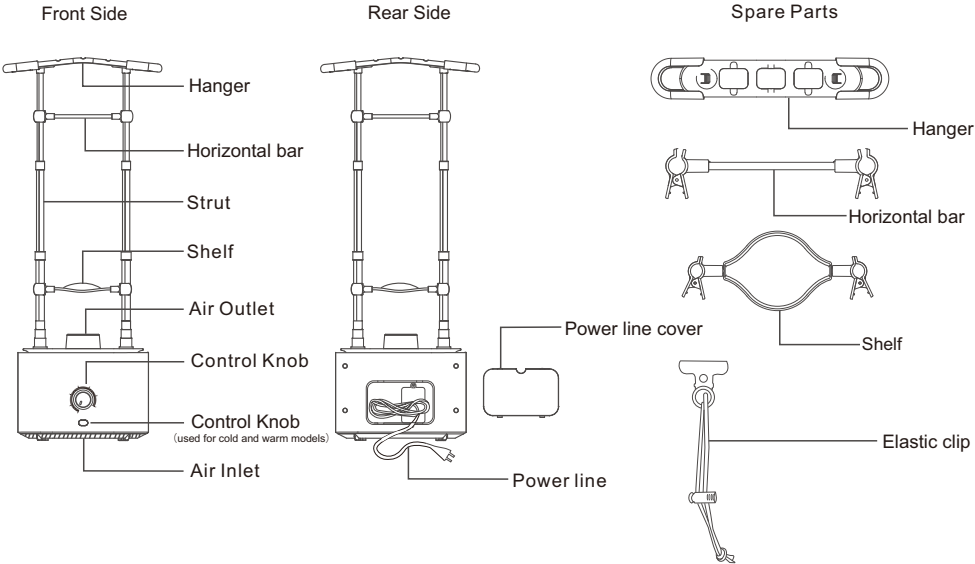

## Operation Panel

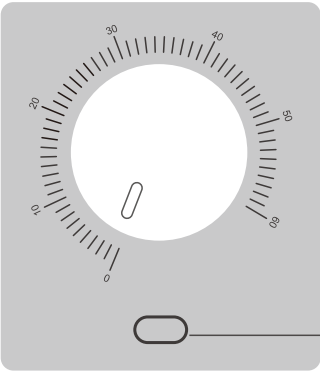

- Tips:**
- The effect of drying will be different, due to indoor temperature, humidity, clothing material, thickness, dry humidity and other external environmental impact. Please adjust drying time by yourself when you use the machine.
  - When this machine is Cold-Warm model, the function of the control button is cold and hot cycle conversion; when it is only for warm model, the control button has no function.

## Product Parameter:


Product name	Model	Rated Voltage	Power	Frequency	Control mode	Timing
Electric ironing and drying machine	EP25006US	120V	1050W	60Hz	Knob	60min

## Use


### Drying dress and shirts



### Drying jeans and pants (Optional)

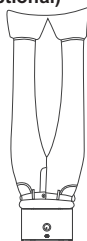


### Drying children's clothes and shoes (Optional)

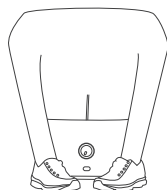

## Usage


### Drying dress and shirts

1. Loosen the buckle on the strut, pull the strut to the highest, lock the buckle on the strut.

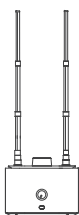


2. Install the hanger to the top end of the strut, secure both ends of the crossbar to the first section of the strut, and secure the shelf to the bottom end of the strut.

Caution : The shelf must be more than 10cm away from the air outlet, please do not cover.

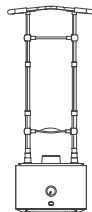


#### • Tips:



- ①. The slots at both ends of the hanger are aligned in turn to the end joints on the support strut.
- ②. Push the joints of the support strut outwards until locked.

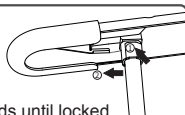

3. Place the clothes mold on the product, place the bottom rubber band on the top of the product slot, and align the ribbon of the clothes mold to the center of the product.

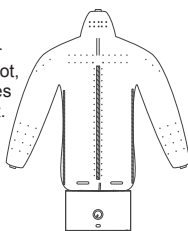

4. Put the clothes on the model and straighten the sleeves and the hem of the clothes.

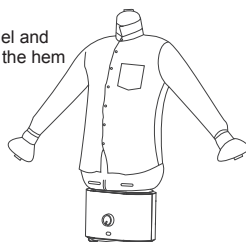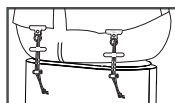


#### Tips:

When the sleeves, collar and hem of the clothes are uneven, you can use the elastic clip equipped to stretch.


#### • Tips:

When drying sleeveless and short-sleeved dresses, you can choose to put the two sleeves of the garment mold into both sides of the zipper. The monitor of the sleeve can be adjusted according to the actual situation.

5.Insert the power plug into the power socket.

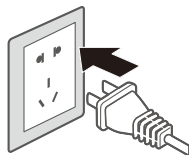

6.Use the knob to select the appropriate time to start.

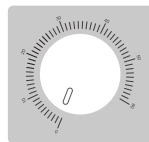


**Caution:**


- Please note that due to different clothes types, material and indoor temperature, humidity, drying laundry time is different, please choose appropriate drying laundry time.
- Drying repeatedly if clothes is not dry enough.
- Do not dry clothes that are dripping.
- When you need to stop, please turn the knob switch to the position of "0".
- Do not unplug the power plug directly during operation.

**7.After using**



①. Remove the power plug from the power socket

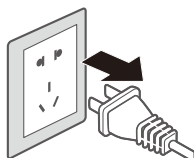

②.Tidy up the clothes mold

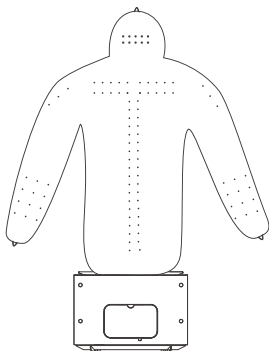

③.Shrink the strut

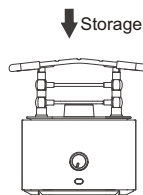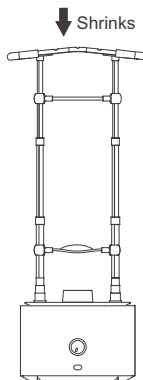

**Tips:**


- After use, put it in a ventilated place to avoid odor or mold caused by damp clothes mold.
- If the clothes mold is soiled by clothes or there are residual stains,please wash it before using it, so as not to stain the clothes when drying.
- If you do not plan to use it for a long time,remove the mold and clean it to dry it,and shrink the strut to save space.



## Drying jeans and pants(Optional)

1.Loosen the buckle on the strut, pull the lever to the highest, lock the buckle on the strut.

**caution:**The shelf must be more than 10cm away from the air outlet, please do not cover.

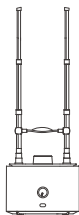

2.Put the pants mold on the product, put the bottom rubber band on the top of the product slot,and align the ribbon of the pants mold to the center of the product.




3.Put the pants on the mold.Hold the pants down at the waist.Stick hook&loop on the pants mold, and straighten the pants bottoms up along the bottoms of the pants mold.

### Tips:


When the pants are uneven, you can use the elastic clip equipped to stretch.



4.Insert the power plug into the power socket

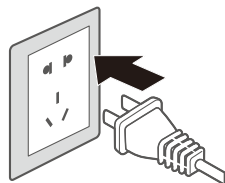


5.Use the knob to select the appropriate time to start.

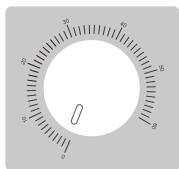

6.After using

- ①. Remove the power plug from the power socket.
- ②.Tidy up the power cord.
- ③.Put it in a ventilated place.

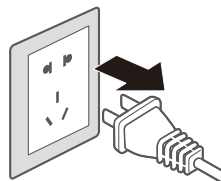


### Caution:

- Please note that due to different clothes types, material and indoor temperature, humidity, drying laundry time is different, please choose appropriate drying laundry time.
- Drying repeatedly if clothes is not dry enough.
- Do not dry clothes that are dripping.
- When you need to stop, please turn the knob switch to the position of "0".
- Do not unplug the power plug directly during operation.


### Drying children's clothes(Optional)

1. Loosen the buckle on the strut. Pull the first section of the strut to the highest, and keep the second and third sections in contraction state. Lock the buckle on the strut.

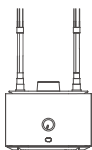


2. Install the hanger to the top end of the strut. Secure the shelf to the bottom end of the strut.

Caution : The shelf must be more than 10cm away from the air outlet, please do not cover.

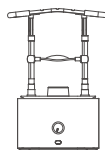


#### • Tips:

- ①. The slots at both ends of the hanger are aligned in turn to the end joints on the support strut.
- ②. Push the joints of the support strut outwards until locked.

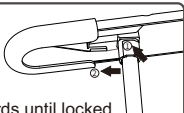

3. Put the clothing mold on the product, put the bottom rubber band in the top of the product slot, the clothing mold's color belt aimed at the product in the middle.

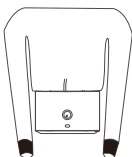


4. Put the clothes on the model and straighten the sleeves and the hem of the clothes.


Tips:  
When the sleeves, collar and hem of the clothes are uneven, you can use the elastic clip equipped to stretch.



5. Insert the power plug into the power socket

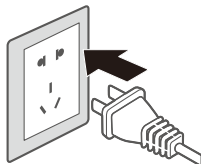


6. Use the knob to select the appropriate time to start.

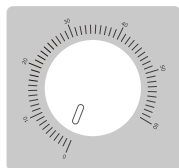

Cautions are same as drying adults' clothes.

### Drying shoes(Optional)

When drying shoes, put the air vent of the child's garment mold inside the shoe.

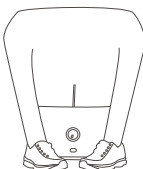

#### Tips to drying shoes:


- Please wipe the wet shoes with a dry cloth before drying them.
- Please loosen the shoelace of your sneakers before drying.

#### Cautions:

- Please note that due to different shoes types, material and indoor temperature, humidity, drying laundry time is different, please choose appropriate drying laundry time.
- Drying repeatedly if clothes is not dry enough .
- Leather shoes, rubber shoes cannot be dried with this product.

#### 7. After using

- ①. Remove the power plug from the power socket.
- ②. Tidy up the power cord.
- ③. Put it in a ventilated place.

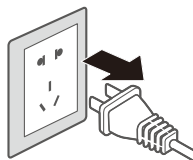

## Cleaning and maintenance

1. When you use this product at the first time after opening the package, it should be connected to power supplies, turn on to the hot air function and let the machine run for around 10 minutes to dry the machine.
2. When this product is not used for a long time or used in wet season, before you use it, it should be connected to power supplies, turn on to the hot air function and let the machine run for around 10 minutes to dry the machine.
3. When the air outlet of the main engine of this product is accidentally filled with water, you should unplug the power cord quickly, turn the main engine upside down and shake it gently to let the water drain out, and place the main engine in a dry place for 24 hours to dry the residual attached water.
4. When this product is not used for a long time, you should check the air outlet above and the air inlet below the main engine to make sure whether they are blocked by clothes, dust or clothing flocs. If so, you should clean by brush or vacuum cleaner and then start the machine and let it work for 3 minutes and blow out the debris.
5. When you clean the stains on the product appearance, wipe the product with a soft and clean cloth ; when more stubborn stains need to be removed, be sure to use mild detergent. Do not use medical diluted alcohol, otherwise it may damage this product or erase the marks on the product
6. Place the machine in a ventilated place after using this product to avoid the mold having moisture odor or mildew due to humidity ; If you find the mold is dyed or has residual stains, please clean and dry before use; If the machine is not used for a long time, please clean and store the mold in time.
7. This product can not be used across functions because it is designed for the functions of quick drying clothes and clothing care, so it can not replace the heater, hair dryer, purifier and other products.



Caution : Please be sure to remove the power plug from the power socket, wait for the machine to cool down completely before cleaning and maintenance to avoid electric shock and injury.

## ■ Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU .

To prevent possible harm to the environment or human health from uncontrolled waste disposal , recycle it responsibly to promote the sustainable reuse of material resources . To return your used device , please use the return and collection systems or contact the retailer where the product was purchased . They can take this product for environmental safe recycling.

## Failure Causes Analysis:

1. Machine does not work after it turns on.
    - (1). Make sure whether the device is plugged in?
    - (2). Please pull off the plug and plug it in again.
    - (3). Make sure whether the knob is rotated at the "ten minutes" place.
  2. The drying effect of the machine is not good
    - (1). Make sure whether the air outlet is covered?
    - (2). Adjust the drying time again
    - (3). Make sure the garment pattern or clothing is smooth without adhesion and overlap
    - (4). Make sure whether the machine inlet and outlet are blocked?  
Please open the zipper of the garment pattern, check whether the parts are blocked by clothes, dust or clothing flocs, clean them and try it again.
- Reminder: After the knob switch is activated, it is normal for the machine to start with a 2S delay, because the internal parts of the blower need limited time to accelerate to the normal speed.

**Welcome to visit our website and purchase our quality products!**

With your inspiring rating, COSTWAY will be more consistent to offer you  
**EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

US office: Fontana, California

UK office: Ipswich



- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History

*5 Star Rating*



We would like to extend our heartfelt thanks to  
all of our customers for taking time to assemble  
this product and giving us valuable feedbacks.

THANK  
YOU  
😊

