

USER'S MANUAL

Round Fire Pit JV10178

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.


 





Assembly Instructions







Round Fire Pit

Please check all packing material carefully before discarding, as some parts may be encased in the packing material.

We have been working on providing high quality products for you. However, in the rare instance that your product is defective, missing parts or there are some issues during assembly, please don't hesitate to contact our customer service to submit parts requirements, assembly suggestion, or warranty claims, and we will give the best solution in the first time. If necessary, we need you to provide some more clear pictures of the issue.

Part List :

Part No.	Description	Qty.	Photos
A	Top Frame	1	
B	Leg	4	
C	Frame Support Part	4	
D	Log Grate	1	
E	Fire Bowl	1	
F	Mesh Lid	1	
G	Lid Ring	1	

Part No.	Description	Qty.	Photos
H	Bolt (M6x8mm)	20	
I	Poker	1	
J	Allen Wrench	1	
K	Nut	1	
L	BBQ Grill	1	
M	Protective Cover	1	


Tool required: Allen Wrench (provided)

Assembly Instructions


Estimated Assembly Time: 20 Minutes

DO NOT over tighten hardware!


Step 1: Place parts on a flat surface. Assemble Legs (B) to Top Frame (A) with Bolts (H) as shown. Repeat the same steps for other legs. Tighten all bolts by hand.

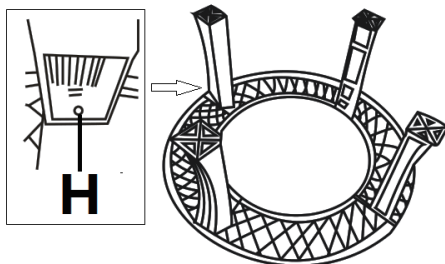

Step 2: Attach Frame Support Parts (C) to Legs (B) by Bolts (H) as shown. Repeat the same steps for the other Frame Support Parts. Tighten all bolts by Allen Wrench (J)

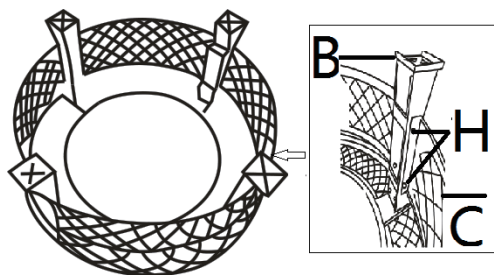

Step 3: Turn over the assembled fire pit frame and stand up. Place Fire Bowl (E) in the center of Top Frame (A) and then put Log Grate (D) and BBQ Grill (L) in the Fire bowl (E). Fix Lid Ring (G) on Mesh Lid (F) by Nut (K), then place the assembled mesh lid on the fire bowl as shown.

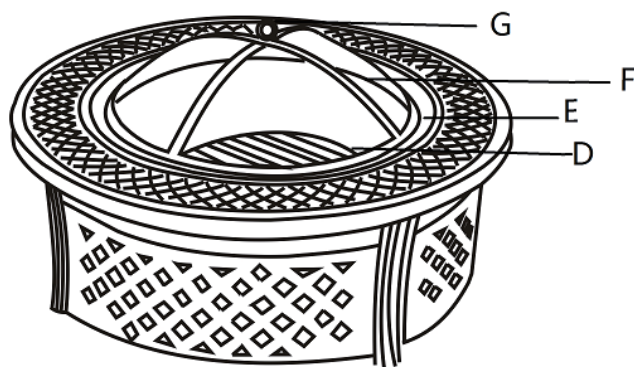

Step 4: Cover the fire pit with a Protective Cover (M) when the fire pit is not in use. Ensure the fire pit has completely cooled down before using the Protective Cover.

Your Fire Pit is ready for use now!

WARNING:  FOR OUTDOOR USE ONLY

FOR YOUR SAFETY:

1. Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
2. Read the installation, operation, and maintenance instructions thoroughly before installing or servicing this equipment.
3. Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.


OPERATING INSTRUCTIONS

Lighting

1. Make sure there is only a small amount of ash in the bottom of the bowl.
2. Place a layer of dry kindling or a natural firestarter onto the center of the grate.
3. Place above that a layer of dry seasoned hardwood that is cut to lengths no more than 3/4 the diameter of the bowl.
4. Use a match to light kindling or firestarter.
5. Using a hook and heat resistant gloves, replace spark guard once the kindling or firestarter is lit.

Tending the fire

You may need to shift and/or add logs for an ideal experience.

 **CAUTION:** DO NOT place a hot spark guard or hot fire bowl tools onto combustible surfaces such as grass, wooden deck or furniture.

1. Using a hook and heat resistant gloves, carefully remove spark guard.
2. While using a long handled fire pit tool, shift coals and logs to allow additional airflow.
3. DO NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
4. Wait until glowing coals have developed before adding any additional wood. If additional wood is required, place wood on top coals. Be careful not to shift ashes.
5. Using a hook and heat resistant gloves, replace spark guard.

Extinguishing

1. Allow fire to burn out.
2. DO NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fire pit.

CLEANING AND CARE**Inspecting**

This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life.

⚠ CAUTION: DO NOT attempt to inspect this outdoor fire pit until the fire is completely out.

1. Check handles to make sure they are secure.
2. Check components for any signs of damage or rust.
3. If damage to any components is detected, DO NOT operate until repairs are executed.

Cleaning

This outdoor fire pit should be inspected on a regular basis to ensure product safety and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

⚠ CAUTION: DO NOT attempt to inspect this outdoor fire pit until the fire is COMPLETELY out.

⚠ CAUTION: DO NOT use oven cleaner or abrasive cleaners as they will damage this product.

⚠ CAUTION: DO NOT clean any part of this outdoor fire pit in a self cleaning oven as it may damage the finish.

1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
2. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush.
3. Rinse clean with water.
4. Remove built-up creosote from components with a chimney cleaning product.

Storage

⚠ CAUTION: DO NOT move or store this outdoor fire pit until the fire is completely out.

1. Once the fire is out, coals are cold and outdoor fire pit is cool to the touch, remove ashes and properly dispose.
2. Store in a location away from children and pets.

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

THANK
you
😊

