





Instruction

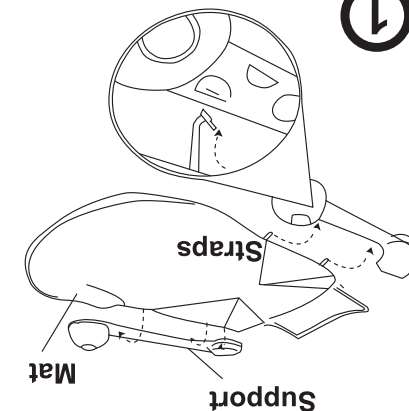


- Place the mat on a flat surface, with the print side up
- Fit all four straps on each side of the mat through the slots in the end of each strap to form a "T" under the support.
- Pull up on the mat to be sure it is secured to the supports.

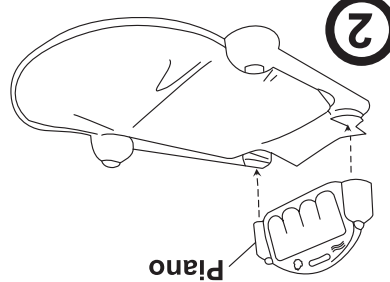

- Fit the posts on the piano into the openings in the supports, as shown.
- Push to “snap” in place.

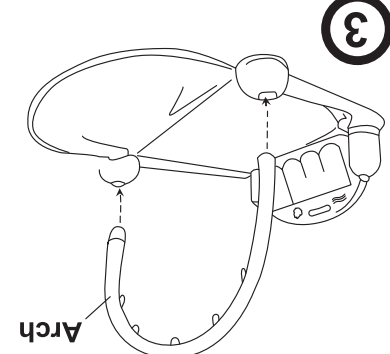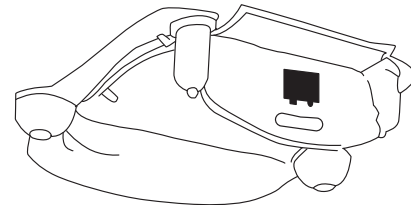

- Fit the ends of the arch into the two sides holes in the supports.

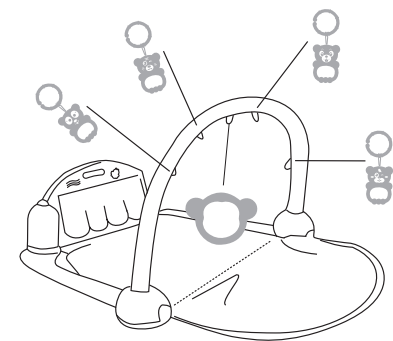

- Hang the toys from loops around the gym .

For best performance, we recommend replacing the batteries that came with this toy with three, new "AA"(LR6) alkaline batteries.

 
Locate the battery compartment door on the back of the piano.
Loosen the screws in the battery compartment door with a Phillips screwdriver and remove it.

Remove the exhausted batteries and dispose of them properly. Insert three, new "AA" alkaline batteries.


Replace the battery compartment door and tighten the screws.
Do not over-tighten.

— If this product begins to operate erratically, you may need to reset the electronic. Slide the power/volume switch off and then back on.

**When sounds become faint or stop,
it's time for an adult to change
the batteries!**



- Requires three "AA" batteries (included).

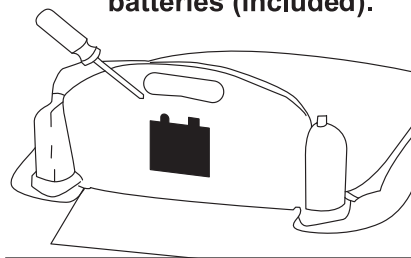

Consumer Information

Please keep this instruction sheet for future reference, as it contains important information.

Tool required for battery replacement: Phillips screwdriver (not included).

Requires three "AA" batteries (included).