

USER MANUAL

Battery Operated Ride-on TY580277

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE. Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first. Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway f P You CO

COSTWAY

COSTWAY

Contact Us!

Do NOT return this item. Contact our friendly customer service department for help first.



Before You Start

Please read all instructions carefully and keep it for future reference.

Attention: The Product is not suitable for the children under 3 years Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.



 \triangle The product must be installed and used under the supervision of an adult. \triangle Read through each step carefully and follow the proper order.

 \triangle Remove all packaging, separate and count all parts and hardware. △ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.

riangle We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled. △ Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.

_____ 2 _____

COSTWAY Parts details Front and rear Bodywork 1pc Rear drive wheel 1pc wheels 3pc Seat cushion Rear wing 1pc 1pc Drive tooth box charger 1pc 1pc Rear axle 1pc Handlebar 1pc

______ 3 _____

COSTWAY

Cut the strap with scissors.

Product installation steps



• Thread the steering rod

thread into the hole.

• Remove the nut from the

steering lever.



turn the knob to the right into place.

• Install the steering rod nut,



COSTWAY

from front axle.

The front wheels are smoothly

wheel axle holes, and fit the

front wheels into place.

facing inwards, align the front

• Remove nut and 1 washer



 Install the washer into the front axle and fit it to the wheel.



right into place.

• Install the front wheel nut

and turn the knob to the



COSTWAY

COSTWAY

• Remove the nuts and washers

on both sides of the rear axle.



• The rear wheels are facing inward smoothly, the holes

are aligned with the rear wheel axle, and the rear

wheels are put into place.

• Put the smooth end of the rear axle into the hole of the car

body from right to left.



• Install the washer into the


rear axle and fit it to the

wheel.





turn the knob to the right into place.

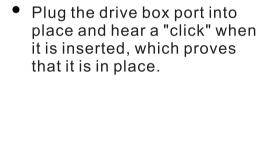



• Align the holes of the drive


box with the rear axle, and install the box in place;

as the box is installed, put

 • Install the rear wheel nut and

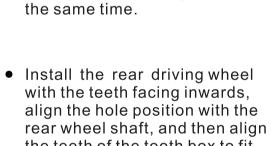

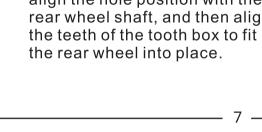





COSTWAY



COSTWAY

Install the rear wheel nut and

turn the knob to the right into

• Install the washer into the

rear axle and fit it to the

driving wheel.

place.

and screw.



• Install the handlebar into the

steering rod. When installing,

align the handlebar with the

steering rod. The hole of the

handlebar should be opposite to the hole of the steering rod.

• Remove the handlebar nut



_____ 8 -

 
• Take the rear wing, align the

the body.

screw holes, and put it into

• Using the screw tool, turn the





• Using the screw tool, turn

the knob.

the screw to the right with

• Insert the screw into the hole

of the handlebar.



• Using a screw tool, turn the four screws at the rear tail position of the body to the left knob.

• Install the front of the seat

the tail end of the seat

cushion in place.


cushion to install the seat


indicates that the seat is in

the "open" state, and the seat lock in the horizontal direction

Product function introduction

cushion first, and then press

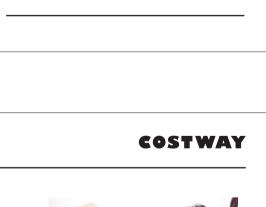

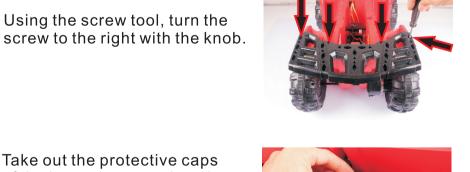


proving that they are in place.

 Take out the protective caps of the battery connection pins;

plug the battery cable ports

into place and hear a "click" when they are plugged in,

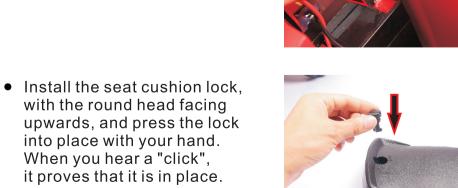

it proves that it is in place. ______10 ____




forward Back stop Toggle switch

• The seat lock in the vertical direction shown by the arrow

shown by the arrow indicates that the seat is in the "closed" state. • The product assembly is completed.

Music control panel Power switch

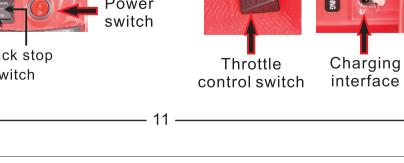





COSTWAY Four-wheeled electric ride on manual

Warning / Note: 1. When the speed is slow, it should be charged in time, the time is 8-10 hours. 2. Charging must be under adult supervision, during the charging process, the charger and the battery have a slight temperature phenomenon which is normal.

5. The positive and negative poles of the battery cannot be reversed to prevent short circuit, there is a risk of burns and fire. 6. The battery should be replaced by the professionals. 7. Do not operate the front and rear switches during travel. otherwise, the device may be damaged. To reverse the direction, first release the foot switch and then move the forward and reverse switches.

seconds. 9. When the child is in the vehicle, it is forbidden for adults or older children to push forward from the back to prevent damage to the motor. 10. Non-transportation shall not be used in dangerous sections such as street roads and slopes.

8. The maximum load capacity of the car is 55 lbs. such as overload or road blockage, etc., there is electronic insurance inside the car, it will automatically stop, to automatically recover after 5-10

3. The product should be assembled by adults, containing small parts, not suitable for children under

4. The package after installation, please properly disposed of, do not let children play, there is a risk of

11. Do not use in water, do not pour water and other liquids on the car. 12. When the electric ride on is not used for a long time, it should be charged at least once a month. 13. Do not get close to fire. 14. Children must drive this car under the guidance of an adult and the caregiver must not leave.

17. Toys should be regularly cleaned and maintained; should be adjusted in the shade when not in use 18. The battery charger should be periodically checked whether the wires, plugs, casing and other components are damaged. when the damage is found, stop using it until the repair is complete. 19. The battery should be taken out and placed in accordance with the correct polarity.

15. For the safety of children, the guardian must read the instructions before using.

20. Non-rechargeable batteries can not be charged; rechargeable batteries can only be charged under adult supervision. 21. The rechargeable battery should be taken out of the toy before charging. 22. The battery voltage is 6v 4.5ah.

16. Please keep such important information in this package.

_____12 _____

