




COSTWAY®

**Please give us a chance to make it right and do better !**

Contact our friendly customer service department for help first.  
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana    UK office: Ipswich    AU office: Truganina

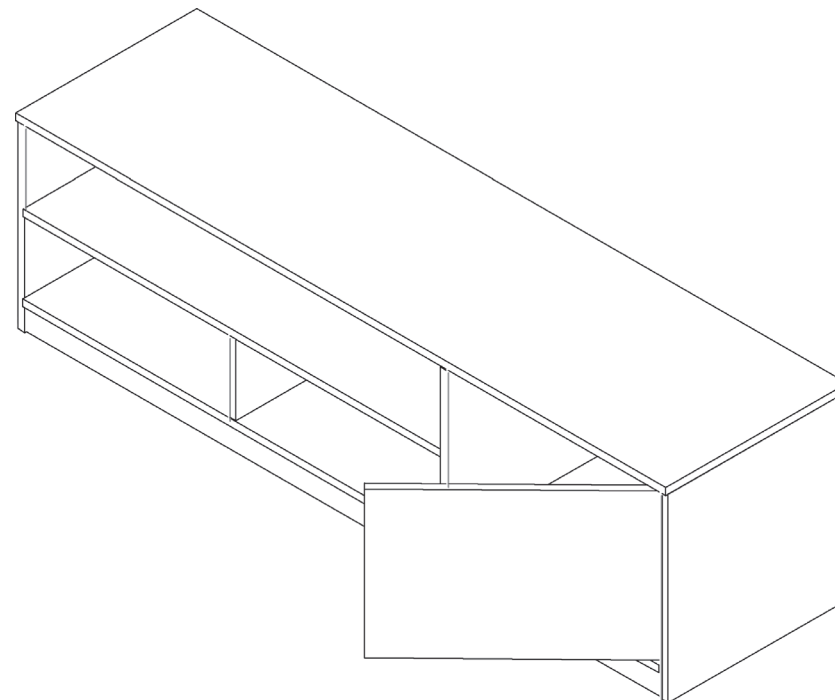

## Contact Us !

**Do NOT return this item.**

Contact our friendly customer service department for help first.



US:cs.us@costway.com  
UK:cs.uk@costway.com  
AU:cs.au@costway.com

## USER'S MANUAL





### TV Stand HV10055





 

 
THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

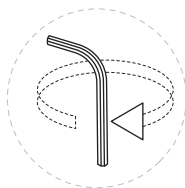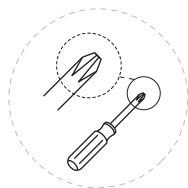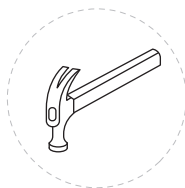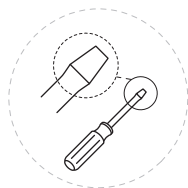


## Before You Start

- ⚠ Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⚠ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⚠ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- ⚠ Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.



No	Hardware List	Qty
1	15mm Mini fix 	22
2	Wood dowel 8 x 30mm 	8
3	Hinges 262-IN 	2
4	M3.5 x 16mm Screw 	11
5	Single Touch Magnet 	1 SET
6	Power Nail 	12
7	M4 x 32mm Screw 	5


No	Part	Quantity
a	top plank	1
b	bottom plank	1
c	side plank (Door side)	1
d	side plank	1
e	large center panel	1
f	small center panel	1
g	shelf panel	1
h	apron bottom	1
i	Back Cover	1
j	Door	1
k	center apron bottom	1

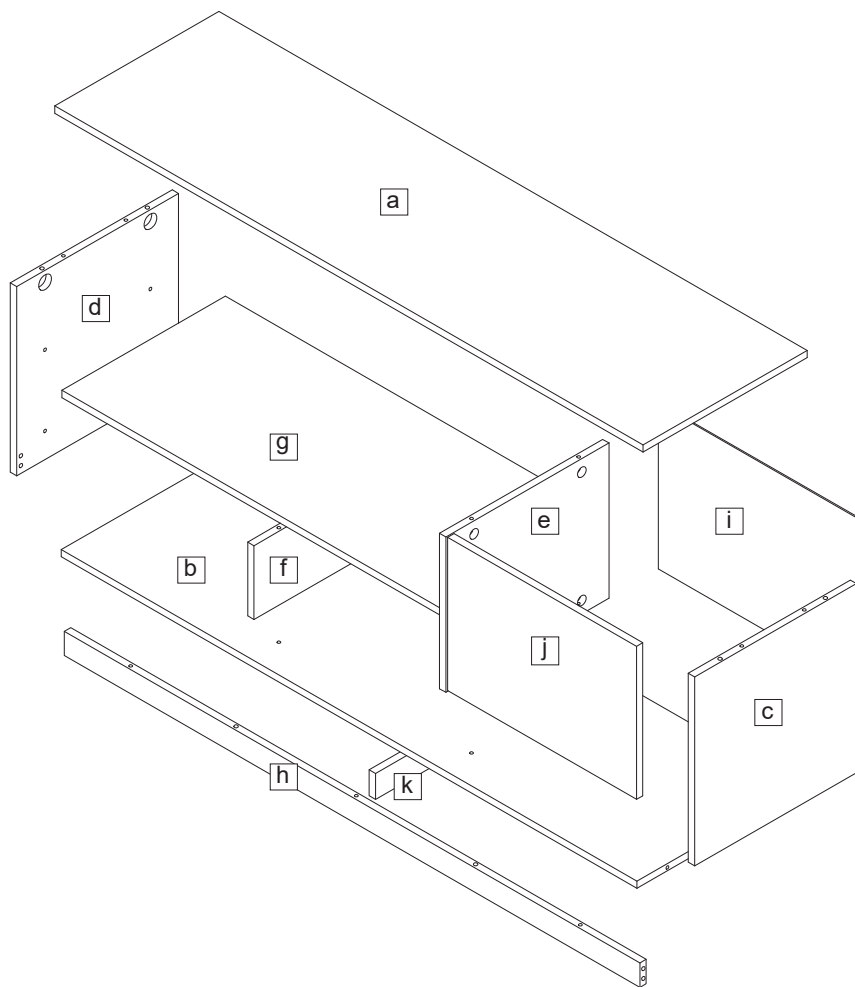

#### Important note:

- Place all wooden parts on a clean and smooth surface to avoid the parts from being scratched.
- Keep all hardware parts out reach of children.


1

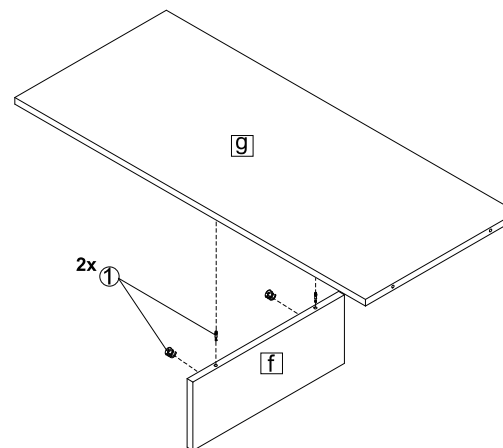


1		x 2
---	---	-----

Install the small center panel(f) to the shelf plank.


2


1		x 2
---	---	-----


After done with step 1.  
install large center  
panel(e) to the shelf plank.

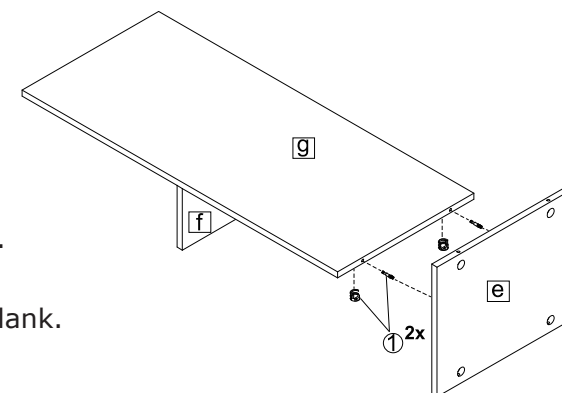

3


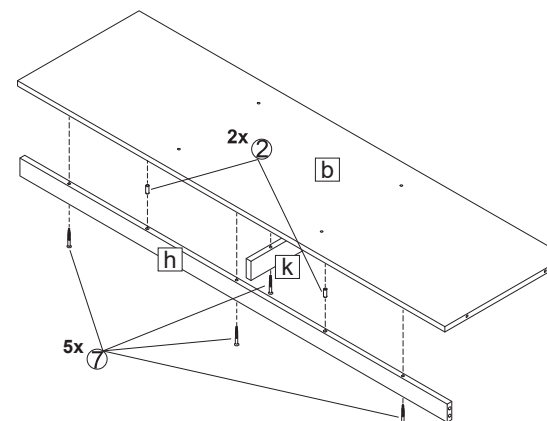


2		x 2
8 x 30mm		

7		x 5
M4 x 32mm		

Install apron bottom and  
center apron bottom to  
the bottom plank.

 4


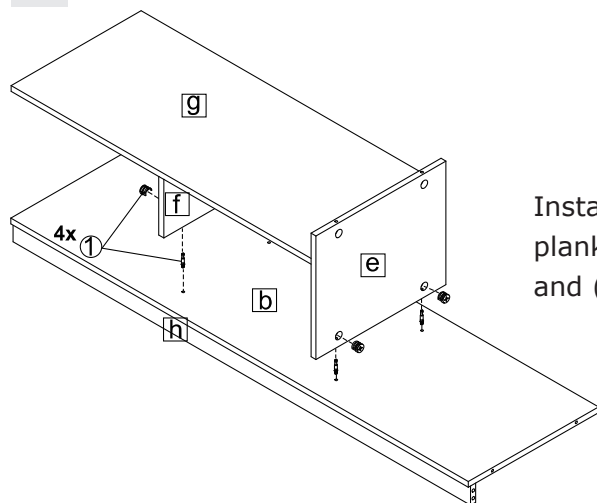


Install complete bottom plank to the center plank (e) and (f).


5&amp;6

5. Install complete bottom plank to the center plank (e) and (f).

 
6. Install the side plank (door side) to the bottom plank and apron.

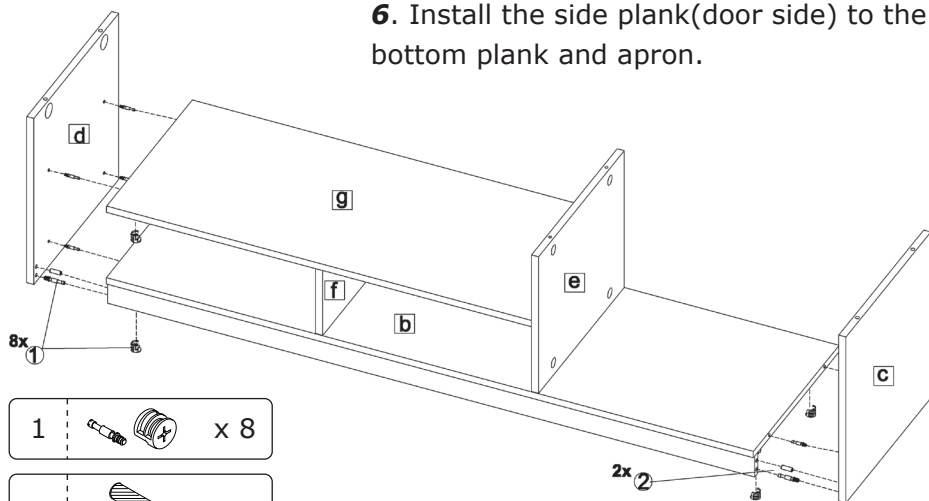

7

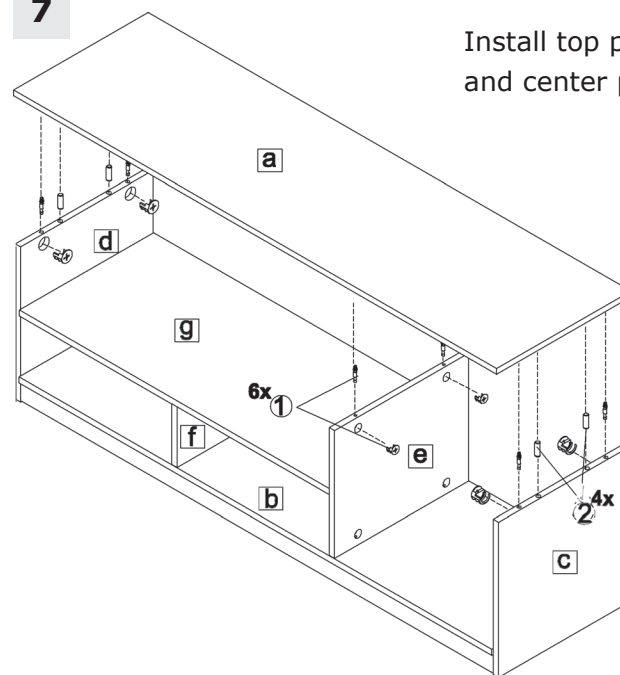




 
Install top plank to both side plank and center plank.




8&amp;9

8. Install single touch magnet to the top plank and to the door plank.

   
9. Install door plank using hinges.

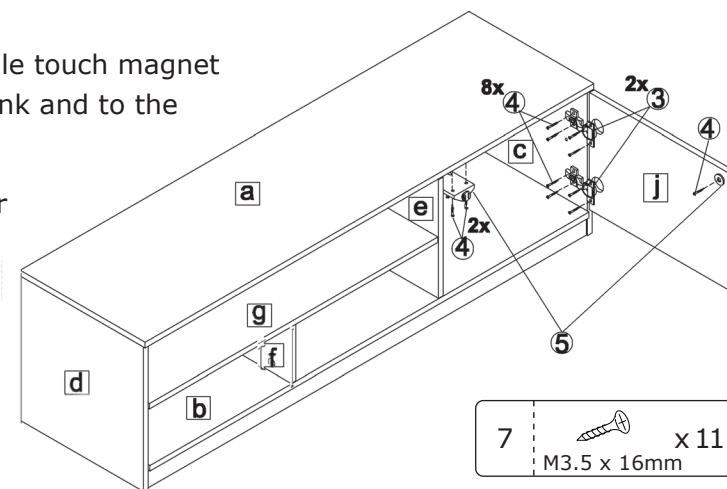

10

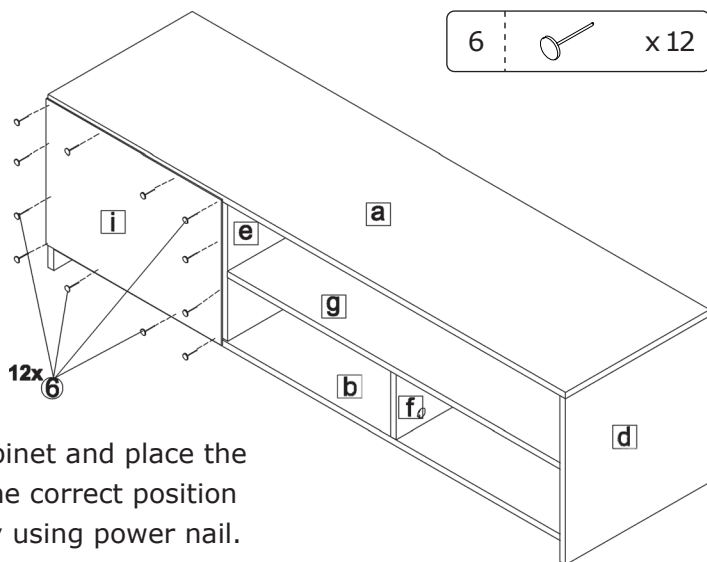

Turn around cabinet and place the back cover to the correct position before install by using power nail.

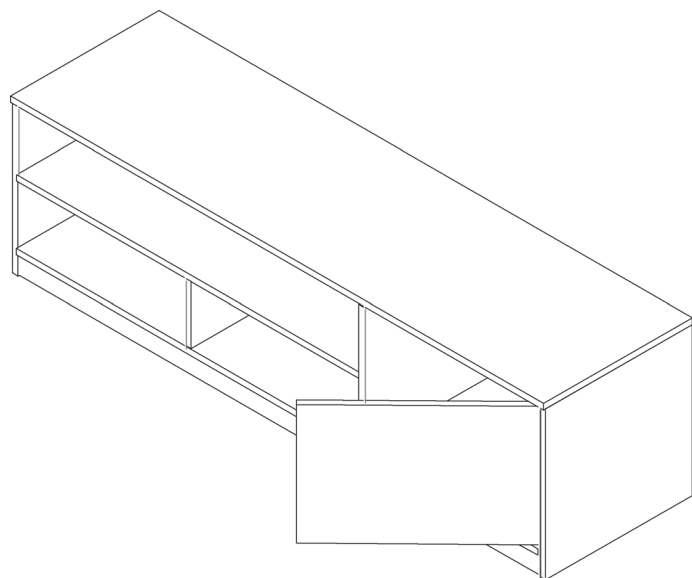

## Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

## Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment.

Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood.

It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.