
# **COSTWAY®**

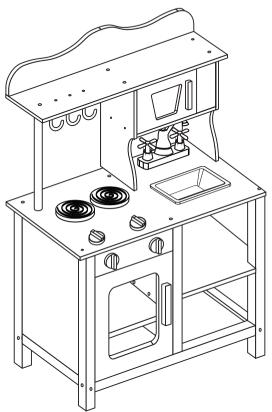

**USER'S MANUAL** Kitchen Playset HW66747

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

### Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

### **Follow Costway**

Visit us: www.costway.com











## **Contact Us!**

### Do NOT return this item.

Contact our friendly customer service department for help first.



## **Before You Start**

Please read all instructions carefully and keep it for future reference.

#### **General Security Warning**

Caution: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and


children, otherwise they may pose a choking hazard.

Danger: Lack of attachment may cause a risk of tipping.





#### **Warning for Assembly**


- **⚠** Construction only by adults
- **⚠ Remove all Packaging, separate and count all parts and hardware.**
- A Read through each step carefully and follow the proper order.
- $\triangle$  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- $\triangle$  Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.

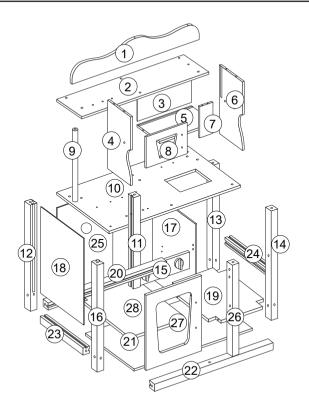


Ax12	€ Gx2	J Mx3
■ * Bx24		Nx2
	•••• Ix4	Ox2
• Dx8	Jx2	Px2
S Ex2	Kx1	
Fx4	Lx1	

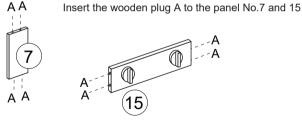

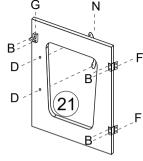


 

Assemble the part G,F to the panel No. 21,8 with screws B,and assemble the part N to the panel No. 21,8 with screws D

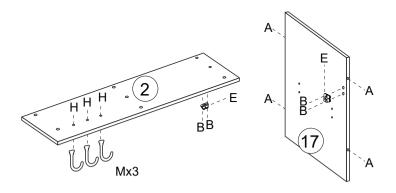


Assemble the part M to the panel No. 2 with screws H, and the part E to the panel No.2,17with screws B, then insert the wooden plug A into the panel No.17

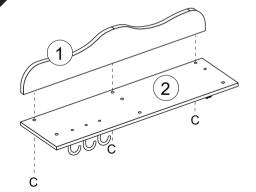


Assemble the panel No. 1, 2 with screws C

2


Assemble the panel No. 4, 5,6 with screws C

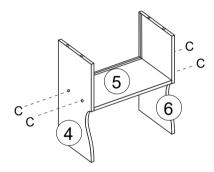


4

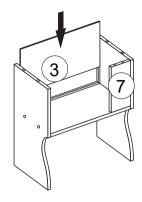


Insert the panel No.3 between the panels No.4 and No.6,and assemble the panel No.7 to No.5 with wooden plug A

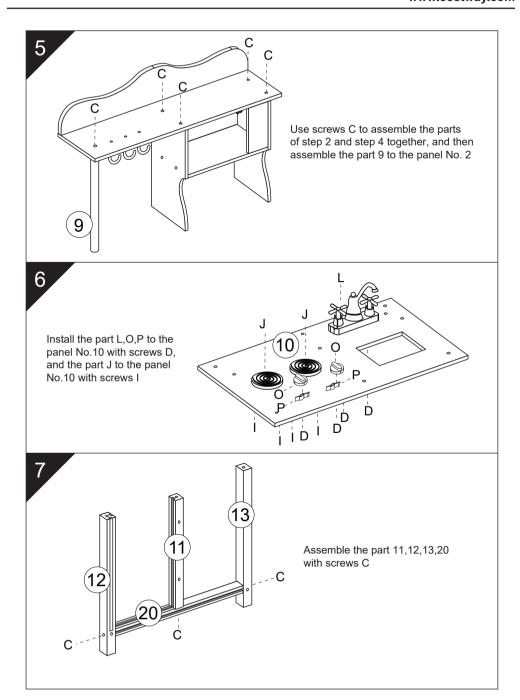


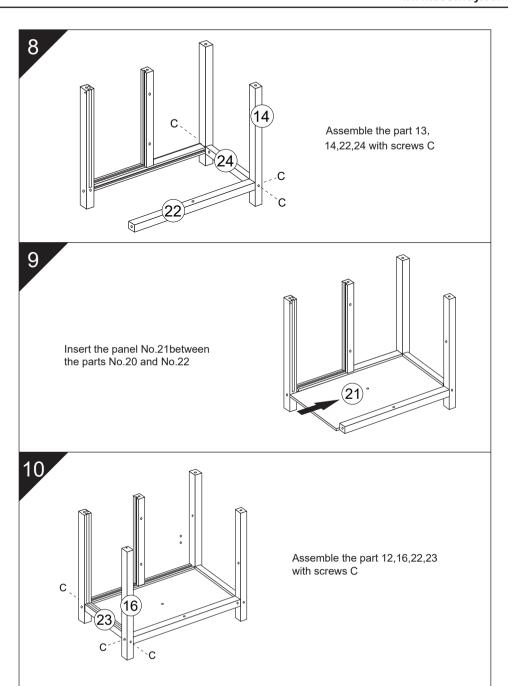

Insert the panel No. 18 between the parts No.12 and No.16, and assemble the panel No.17,21 and No.11 with screw C.

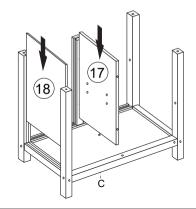


12

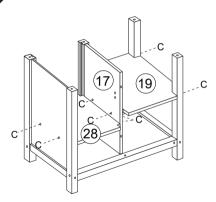


Assemble the panel No.17,18,19,28 with screws C

13

Insert the panel No.25 between the part No.11 and No.12. Insert the panel No.15 between the part No.16 and No.26

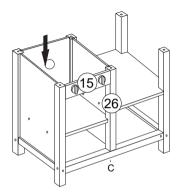


Attach the parts of step 6 to the part assembly of step 13 with screw C

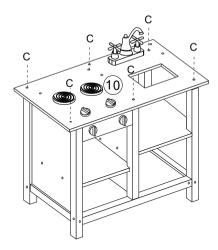


15

Attach the parts of step 5 to the part assembly of step 14 with screw C

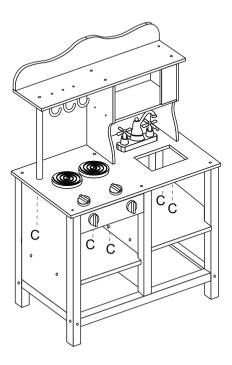




Install the panel No.8 to the panel No.4 with screws B

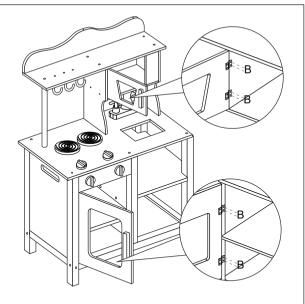

## 17

Put the part K into the groove of the countertop

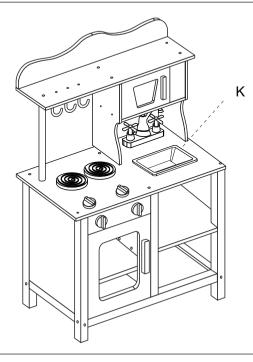



## Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana. California

UK office: Ipswich



- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.





