



USER'S MANUAL

Portable Steam Sauna BA7733US

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.



 
Safety Instructions




Please keep the product in balance when using it. To prevent fire hazard, avoid placing the steamer near flammable materials.



pregnant women and people having high blood pressure and heart disease should not use this product. Please wait at least 30 minutes after eating before using this product. Do not use this product in time of great hunger for your safety.



 Don't put animals or plants into the sauna room.



When using the product, stay at least 10cm (4 inches) away from the steam pores. Don't touch the steam pores with bare hand.



Do not use the product in humid environment or immerse it into water.



The water filled in the steamer should not reach over the max water line in case of malfunction.



User should drink 200-300 ml water or tea before using the product. Please prepare a towel for wiping sweat. Take a break after a certain period of using. Don't use the product consecutively over 20 minutes in one time.



Old people should be accompanied by their families when using the product.



Safety Instructions



The steamer will power off automatically when the water inside dries up. It will restart 20 minutes later. If it doesn't restart, please contact supplier. Never turn on the steamer without water added.



Don't forget to disconnect the power after use and wipe it clean with a damp cloth after 15 minutes of cooling down. Don't clean the product with water directly.



The sauna room and steamer must be placed at a flat surface. Do not open the lid immediately if the steamer is not working. Disconnect the power and let it thoroughly cool down first.



 
Always Keep the product clean and in good condition as it would make its service life longer.



Please keep this product out of reach of children.



Flammable, toxic, corrosive or other harmful liquids must not be put into the steamer as it might cause bodily injuries or property damage.



The steamer should be only used with the sauna room. It should not be used for other heating purposes. Don't repair or modify the product by yourself as it will invalidate the warranty.



Milk should not be put into the steamer. If you want to use herb or flowers, remember to use a gauze bag to wrap them in advance.

Pcakage Contents



Sauna Tent Cover x 1



Steamer x 1



Steam Tube x 2



 
Mat



Chair



Carrying Bag x 1



Wooden Foot Massager x 1




Steam Box x1

Specifications

Overall Dimensions(L x W x H)	26.5" x 26.5" x 39.4"
Material	Satin Cover & Iron Frame
Rated Voltage of Steamer	110V/60Hz
Power of Steamer	800W

 Set-Up Instructions

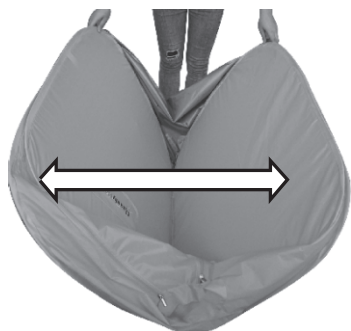1**Fig 1****Fig 2**

1. Take out the sauna tent cover from the carrying bag and unfold it from the center as shown in Fig 1.
- 2 . Hold the inner frame and pull it out diagonally as shown in Fig2.
- 3 . The sauna tent cover will look like Fig 3 after it is fully unfolded.

**Fig 3**

Note: If the frame of the sauna tent cover is out of shape, please twist it forward and backward repeatedly to readjust it as shown in Fig 4.

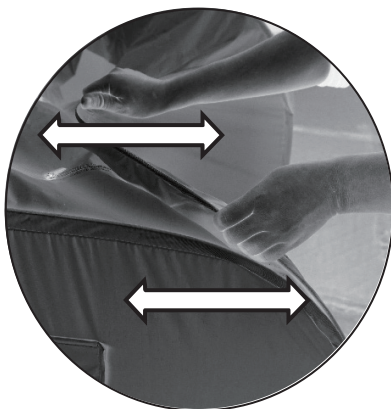 


Fig4

2


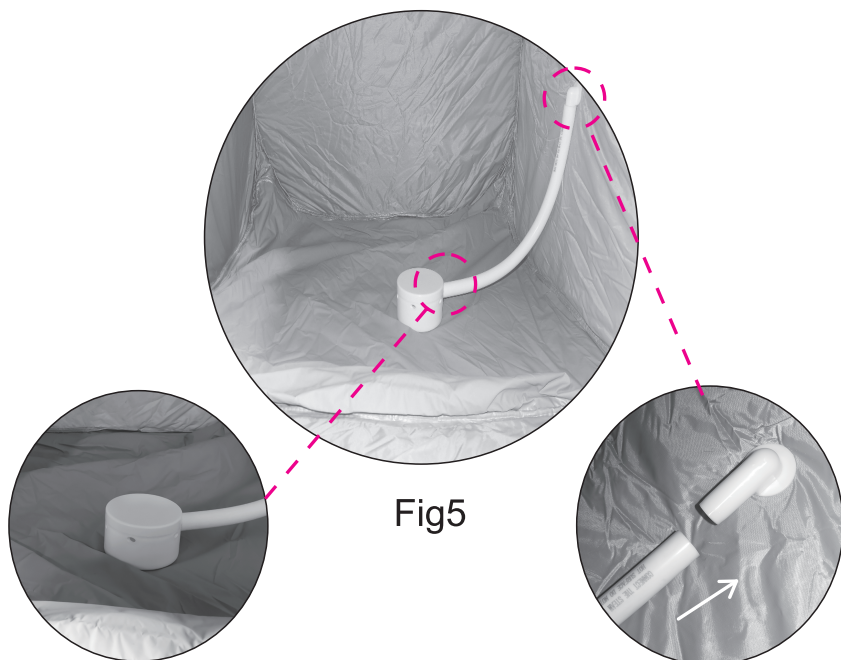 


Fig5

 Use one of the steam tubes to connect the steam box and outlet hole on the inner side of the sauna tent cover as shown in Fig 5. Ensure that the steam tube is well connected with the two parts.

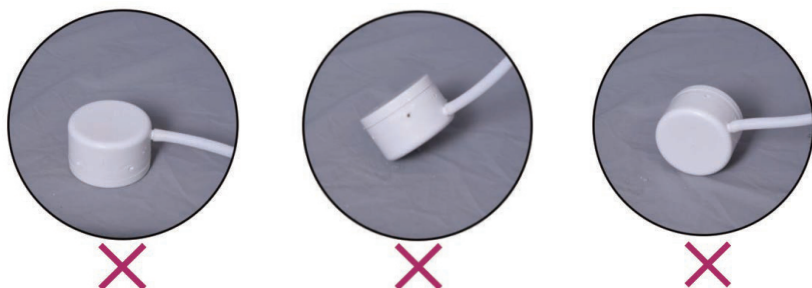

Note: Make sure that the steam box is placed flat with its cover on the top and that there is no objects within its periphery of 4 inches.


 
3

Fig 6

Use one of the steam tubes to connect the steamer and the inlet hole on the outer side of the sauna tent cover as shown in Fig 6. Ensure that the steam tube is well connected with the two parts. If the tubes fall off or loosen during usage, please turn off the power and let them thoroughly cool down first before reconnection.

**Caution:**

 When you are using the product , please make sure all of the steam tubes are not bent as shown in the right picture since it would block the flow of steam . As results , it may make the steam tubes pop off and hot steam stray out,causing scalding and other bodily injuries. Make sure the steam tubes are placed straight.If you find they are bent , turn off the power and let them thoroughly cool down first before you adjust their positions.

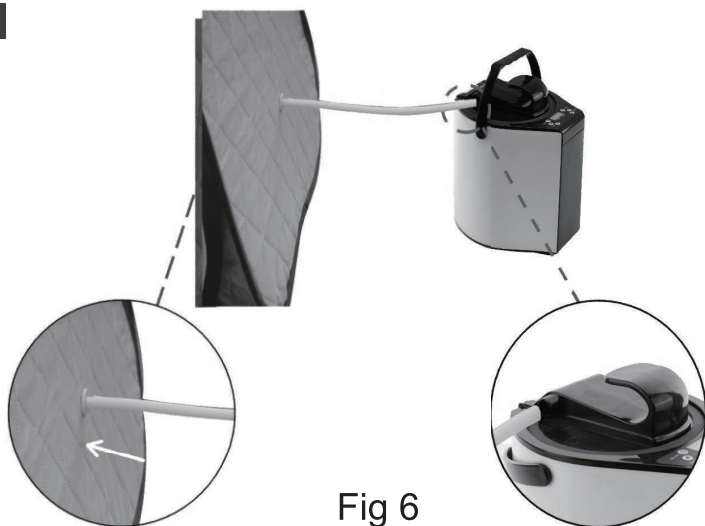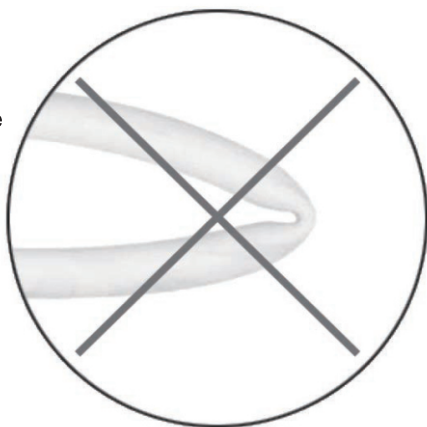

Button Introduction

a).Switch Button(ON/OFF Button)

Press this button to switch between standby and operating status.

b).Timing Button(TIMER Button)

Press this button to shorten and prolong timer.9 level timing (15,20,30,40,50,60,70,80, and 90 min).Suggested time is 20-30 minutes.

c).Temperature Button (TEMP Button)

Press this button to increase and decrease temp.There are 9 grades. Suggested temperature grade is 6-8.

d).Fogging Button

Photocatalyst fogging function makes steam have better wettability and skin-friendly properties.At the same time have a certain bactericidal effect
NOTE:

- 1.Do not operate without water in the steamer when the power is on.
- 2.Pay attention to the battery. If the battery of the remote control is low, please open the cover of battery behind the controller. Take the battery out, and install a new one.Then close the cover again.

Steamer Operation Instructions

- 1.Zip up the cover and add water to the steamer until the water reaches to the M water line.This amount of water could last about 1 hour.If you like,you can add some herb or flowers in the steamer or the steam box.Remember to use a gauze bag to wrap them in advance.
- 2.Connect the steamer to the sauna room with shorter steamer hose (Please keep the air in good condition).
- 3.Make sure the lid is locked on the steamer and connect to the power.Connect the power plug (please attention the Voltage show on the nameplate,match it),then turn on the power button “ON / OFF” .
- 4.Press the buttons on the steamer or use the remote to turn it on and adjust the time to 90 minutes and temperature to P9.Let it preheat for about 10-15 minutes first.When the steam is ready in the tent, we will start the sauna.
- 5.Before you get into the cover,adjust the temperature back to P6 first since P6 is suitable for most people.You can turn it up if you think it is not hot enough.
- 6.For time setting, press the “TIMER” button.There are 9 grades of time from 15 minutes to 90 minutes.The recommended time is 20-30 minutes (press the up button for 15-80 minutes. For 90 minutes, the user has to press the button down).
- 7.For the temperature set, press the “TEMP” button. There are 9 adjustable temperature grades. The recommended temperature is 6-8 grades depending on their comfort level (press the top button for grades 1-8.for grade 9, users need to push the button down).
- 8.There is a “FOGGING” button. When pressed, the water vapor becomes smoother and more pleasing to the skin.

NOTA:

- 1.After use, please disconnect the power and let the product cool down completely before disassembling (If you reuse it, let the product cool down for 30 minutes before starting.)
- 2.After sauna, relax your body and let your body temperature return to normal before taking a bath.
- 3.It is forbidden to pour water into the steam box.Because it will cause the vapor diffusion to be blocked

Sauna Tent Cover Take-Down Instructions

- 1 . Lay down the sauna tent cover with the inlet hole facing you . Press down the frame on the opposite side as shown in Fig 10
- 2 . Fold the sauna tent cover into half as shown in Fig11
- 3 . Hold the top left corner and fold it toward the right side of the inlet hole as shown in Fig12
- 4 . With your right hand holding the top left corner in place , use your left hand to fold the top right corner toward the inlet hole as show in Fig 13



Fig 10



Fig 11



Fig 13



Fig 12



Fig 14



Fig 15



5 . Fold the bottom left corner over the top right corner as shown in Fig 14.

6 . Press down the folded sauna tent cover as shown in Fig. 15

7 . Put the folded sauna tent cover back to the carrying bag as shown in Fig 16.



Fig16

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

THANK
you
😊

