



Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana UK office: Ipswich AU office: Truganina



 
Contact Us !

Do NOT return this item.

Contact our friendly customer service department for help first.



US: cs.us@costway.com
UK: cs.uk@costway.com
AU: cs.au@costway.com

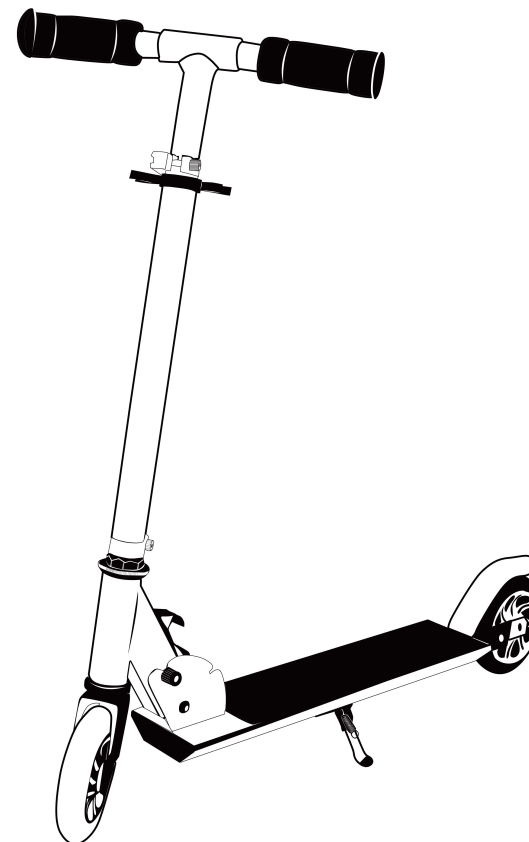

USER'S MANUAL

Kid Scooter SP0547

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Before You Start

Please read all instructions carefully and keep it for future reference.

Warnings:

Attention! Use it with protective equipment.

Attention! Not use it in the traffic.

Attention! The product is not suitable for the children under 3 years.

General Warnings:

- ⚠ The product must be installed and used under the supervision of an adult.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ Remove all packaging, separate and count all parts and hardware.
- ⚠ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- ⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.
- ⚠ Please use this product with caution. The use of this product requires superb skills to avoid accidents to the user or others due to a fall or collision.
- ⚠ Please wear suitable protective equipment during use, e.g. protective helmet, gloves, knee pads, elbow pads etc.





WARNING!

- Read the manual carefully before using your new product.
- This product should always be assembled by an adult.
- Maximum load capacity is 70 KG.
- Suitable for children between 4 to 13 years old.
- Not for use on the road.
- Use only on clean, dry surfaces, free from obstructions and away from other people
- We recommend using protection for hands, knees, elbows and head and also wearing shoes at any time.
- Before every use ensure that the steering system is correctly adjusted and that all connection components are tightened and undamaged.
- To stop, step on the brake with your foot.
- Take care during assembly and avoid placing fingers in any gaps where they may become trapped
- Do not ride your scooter in the dark.
- After braking, the mechanism and the wheel may become hot, do not touch.
- Add oil to the bearing periodically, for lubrication, light machine oil is best.
- Wheels will become worn over time, visible wear may affect the safety of the item, please seek replacement parts at this point.
- Do not modify this scooter in any way, it may affect the safety.

ASSEMBLY & FOLDING

- Release the quick release lock (fig.A1). Pull the release lever (fig.A2), and at the same time fold the front fork to an upright position.
- After that, check whether (fig.B1) is stuck in the slot, and tighten the nut (fig.B2).
- Loosen the quick release lock (fig.C2) and pull the release lever (fig.C1), and at the same time pull the lever down as position (fig.A) and then tighten the nut (fig.B2).
- Assembling of wheels: Be sure that the brake is assembled when using the product. Mount the wheels and tighten the screws carefully (fig.D). After assembling the brake, test it for working properly.
- Assembling of skis: Disassemble the brake before using the product. Loosen the screws (fig.E+F). Attach the skis in the intended position. Tighten the screws with the hex key so that they are firmly in position (fig.G1). Use the shorter screw for the front ski and the longer screw for the rear ski.
- The wheel size is 120mm.

Assembling of wheels

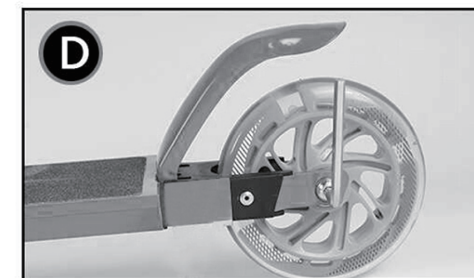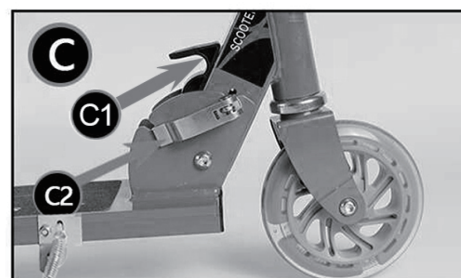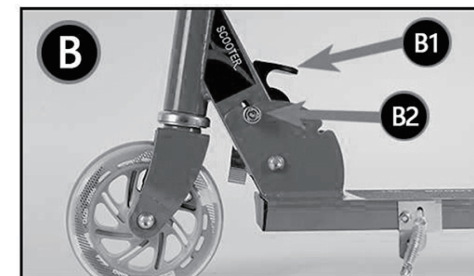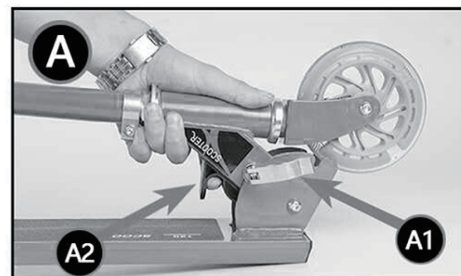

Assembling of skis

