

**EN**

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

**DE**

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

**FR**

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

**ES**

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

**IT**

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

**PL**

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

**US** office: Fontana


**UK** office: Ipswich

**AU** office: Truganina

**DE** office: Hamburg

**FR** office: Saint Vigor d'Ymonville

**PL** office: Gdańsk

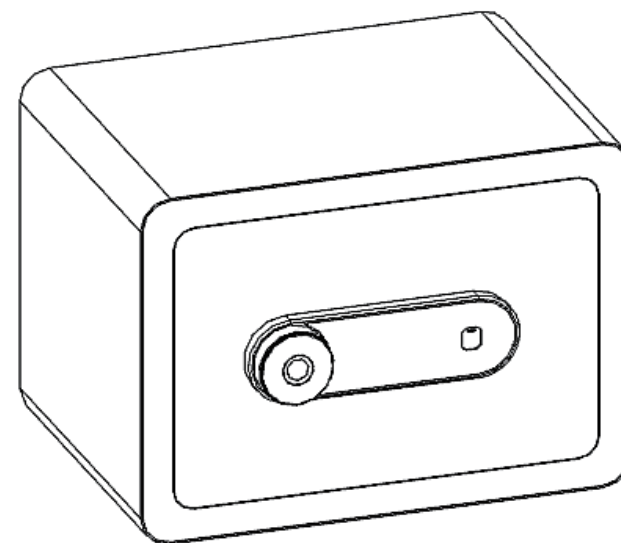

## USER'S MANUAL

### Security Safe Box HW66548

## OPERATING INSTRUCTIONS

Please do not keep emergency override keys in your safe! (factory setting code is "123456")

### 1. Open The Safe Box for The First Time or Emergency Open

Insert the emergency override key into the keyhole, and turn the key in counter-clockwise direction. At the same time, turn the knob of control panel clockwise direction to open your safe.

### 2. Installation and Replacement of the Battery

After opening your safe, push the battery cover plate on the back of the door, install the batteries. (Please install the anode and cathode of the battery correctly).

### 3. SET THE CODE

A. With the door open, press the red button (reset button) on the back of the door near the hinge, release it and you will hear one "tick".

B. Enter new password (6-12 numbers), and confirm by pressing "#" (eg. "123456#"). You will hear four "beep". The new password is set up.

**This safe allows the customer to set 2 sets of code. Set the 2nd code:**

A. With the door open, touch the screen, the panel lights up, enter "00". You will hear one "beep".

B. Press the red button (reset button) on the back of the door near the hinge, release it and you will hear one "tick".

C. Enter new password (6-12 numbers), and confirm by pressing "#" (eg. "123456#"). You will hear four "beep", the new password is set up.

***Write down your new password immediately and check whether your new combination has been programmed.***

### 4. USE YOUR SAFE

To open the safe, touch the screen, the panel lights up, enter your password and "#", you will hear two "beeps". The "RIGHT" light is on, turn the knob of the control panel in clockwise direction within 3 seconds to open your safe.

### 5. INSTALL THE SAFE

To reduce the risk of the theft of the safe. It can be secured to the floor, wall or in a cupboard. For your convenience, there are holes on the back and in the bottom. Therefore it can be fixed by the expansion bolts.

**CAUTION:** The safe should be placed vertically when installing the safe.