



TIPS:

Your suggestions and comments for Costway are really important to us!
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2018

Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office:Fontana

UK office:Ipswich



USER'S MANUAL

**Foot Spa
EP23045**

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

For Your Safety

Read all instructions carefully, even if you are quite familiar with the appliance.

- This appliance is not intended for use by persons(including children) with reduced physical,sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety, Children should be supervised to ensure that they do not play with the appliance.
- Young children should be supervised to ensure they do not play with the appliance.
- Switch off and remove the plug from the power outlet before cleaning or when not in use. To unplug, grasp the plug and remove from power outlet. Never pull cord. Never carry the appliance by the cord.
- Do not operate any appliance with a damaged cord or after the appliance malfunctions, or is dropped or damaged in any manner.
- Do not use an appliance for anything other than its intended use. The product is intended for household use only.
- Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.
- Do not use outdoors.
- Always unplug the appliance from the electrical outlet immediately.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or showering.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquids.

- Do not attempt to plug or unplug unit while feet are in water.
- Do not use attachments not recommended by the supplier, specifically any attachments not provided with the unit.
- Do not leave the Foot Spa unattended while it is operating.

FOR YOUR SAFETY: THIS ITEM CONTAINS HEATING ELEMENT. People who are sensitive to heat should pay attention when using .

If any liquid leaks out, please stop using product

WARNING

- Never immerse the Foot Spa in water or other liquids.
- Always check the temperature of the water before placing your feet into the Foot Spa.
- Do not stand in the unit. Sit down and place your feet in the Foot Spa.
- Always unplug the unit when not in use and when filling, emptying, cleaning or moving the unit.
- The Foot Spa cannot be used to warm cold water. You must fill the unit with warm water properly as you need.
- Ensure that your hands are dry when operating the switch or removing the plug.

CAUTION

- An appliance should never be unattended when plugged in. Unplug from outlet when not in use.
- Keep cord away from heated surfaces.
- Never fall asleep while using the Foot Spa.
- Never drop or insert any object into any opening.

- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not operate under a blanket or pillow. Excessive heating can occur and cause fire, electrical shock or injury.
- If you have any concerns regarding your health, consult your doctor before using the Foot Spa.
- Individuals with pacemakers should consult a physician before using the product.
- In case of pregnancy, diabetes or illness consult your doctor before using the Foot Spa.
- If you experience pain in a muscle or joint for a prolonged period of time, discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.
- Never use the Foot Spa on open wounds, discoloured areas, or any area of the body that is swollen, burned, inflamed or where skin eruption or sores are present.
- Massage and heat should be pleasant and comfortable. Should pain or discomfort result, discontinue use and consult your physician.
- Don't add bath oil etc into it as it may hold back the bubble function.

COMPULSORY WARNING

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Foot Spa

Congratulations on the purchase of your new Foot Spa EP23045

Before using your new appliance, it is important that you read and follow the instructions in this Use and Care booklet, even if you feel that you are quite familiar with this type of appliance.

Find a place and keep this booklet handy for future reference. Attention is particularly drawn to the section dealing with "Important Safeguards".

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

How to Use Your Foot Spa

- Ensure that the unit is unplugged before filling with water.
Fill the Foot Spa up with warm water.
- Plug in and switch on.
- Sit down and place your feet in the spa.
- Turn the function dial to indicate the massage of your choice and obtain the following functions:

0: Off

Setting 1: bubble

Setting 2 :infrared+heating

Setting 3: bubble+infrared+heating

· Enjoy the deep-penetrating massage while moving your feet forward and backward over the reflex zone. The bulgy point is designed according to the point of foot, can active the cells and eliminate your fatigue. Also you can massage on the roller massager. Choose each function massage as you like.

The special design as the handle anti-splash cover like basket.

To Empty

- First, turn all controls to the 'OFF' position , then unplug the unit. Tip the unit allowing water to spill out along the drain spout. **Never pour water over the control switch.**

Maintenance

To Clean

Unplug the unit and allow it to cool before cleaning. Clean only with a soft, damp cloth.

- Never allow water or any other liquid to come into contact with the control switch.

- After cleaning, wipe surfaces with a dry cloth.
- Never use abrasives, detergents or cleaning agents.
- Periodically straighten the cord if it becomes twisted.

To Store

Unplug the appliance from the outlet and allow cooling.

- Store in its box or a clean, dry place.
- To avoid breakage, do not wrap the power cord around the unit.
- Do not hang the unit by the power cord.
- This appliance is designed for household use only.

Warranty

The benefits conferred by this warranty are in addition to all implied warranties, other rights and remedies in respect of the product which the consumer has under the Trade Practices Act and similar State and Territory Laws.

The original purchaser of this foot spa is provided with the following warranty, subject to the following conditions.

We warrant this product for a period of 1 year from the date of purchase for all parts defective in workmanship or materials. The product or defective parts will be replaced free of charge.

WARRANTY CONDITIONS

1. This warranty is only valid for appliances used according to the manufacturer's instructions.
2. This appliance must not be modified or changed in any way.
3. Connection must be to the voltage requirements as specified in the ratings label located on the product.
4. The manufacturer does not accept liability for any direct or consequential damage, loss or other expense arising from misuse or incorrect installation and operation of the appliance.
5. Warranty will only be given where proof of purchase is provided, e.g. original invoice.
6. Not designed or warranted for industrial or commercial use.

RETAIN & FILE WITH YOUR RECEIPT.

Your Purchase Receipt/ Invoice is proof of date of purchase. You must be able to present it at the place of purchase to obtain a replacement or service under warranty.

We reserve the right to discontinue items, modify designs and change specifications without incurring obligation.

Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

After the expiry of the guarantee

After the expiry of the guarantee repairs can be carried by the competent dealer or repair service against the payment of the ensuing costs.

NOTED:

Technical data : 120v 60Hz 300W