



## **USER'S MANUAL**

### **Ceramic Hot Plate**

### **EP24891US**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**Please give us a chance to make it right and do better!**

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

**Follow Costway**



# Contact Us!

## **Do NOT return this item.**

Contact our friendly customer service department for help first.



# Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

# **OPERATION INSTRUCTION**

## **CERAMIC HOT PLATE**



Thank you for your purchase of our electric hot plates. To use this hot plate properly and safely, please read the following instructions carefully. **There will be some smoke and smell when first used, this is normal, please don't be afraid.**

## **IMPORTANT SAFEGUARDS**

When using electrical appliance, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. To protect against electric shock do not immerse cord, plugs, or the whole unit in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

**8. Do not use outdoors.**

**9. Do not let cord hang over edge of table or counter, or touch hot surfaces.**

**10. Do not place on or near a hot gas or electric burner, or in a heated oven.**

**11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.**

**12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.**

**13. Do not use appliance for other than intended use.**

**14. CORRECT USE OF ELECTRICITY**

a) Use of an extension cord is not recommended as it may overheat and cause risk of fire. However, if an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the long cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

b) To prevent overloading and blowing fuses, ensure that no other high power appliance is plugged into the same socket, or another socket which is connected in the same circuit.

c) **DO NOT PUT** the cord under the carpet, blankets. Always keep the power cable away from walkway in room.

d) **DO NOT TRY TO REPAIR** the broken fuse by yourself, the user should take the set to your local authorized maintenance center to replace it with the new one.

e) The appliance is indoor use only.

f) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

g) Children should be supervised to ensure that they do not play with the appliance.

h) The surfaces are liable to get hot during use

i) Appliances are not intended to be operated by means of an external timer or separate remote-control system

j) When the appliance is not in use and before cleaning, unplug the appliance from the outlet.

k) **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

l) The outer surface may get hot when the appliance is operating.

## **SAVE THESE INSTRUCTIONS**

### **HOUSEHOLD USE ONLY**

#### **15. SAFETY IN OPERATION**

a) **DO NOT OPERATE** this hot plate near water sources or flammable liquids.

- b) **DO NOT OPERATE** this hot plate on or near any hot surface. (Hot plate, electric stoves etc).
- c) Always operate this from an earthed domestic 120V~60Hz power socket.
- d) Ensure the hot plate is placed on a stable, secure surface to eliminate the possibility of tipping over or avoid any water in the appliance.
- e) Never try to touch the hot surface of this hot plate before it is cooled down.

## **PREPARATION BEFORE USE**

1. Clean the hot plate with a soft damp cloth. Place your hot plate on the level and stable surface near the electrical socket.
2. Check that the voltage marked on the product corresponds with your supply voltage. Ensure the controller is in the "OFF" position before plugging in.
3. Always use **flat bottom** saucepans or containers that make close contact with the heating element. Ideally, the saucepans or containers should be 180~200mm (7"-8") in diameter. Keep the surface of the heating element clean and dry.
4. Close supervision is extremely necessary when this hot plate is used by or near children or invalids. Never operate this hot plate unattended.
5. If there is smoke for the first use, that is normal. To make the unit heat without any pot about 10 Minutes before cooking.

## **OPERATION**

1. Put water and/or food in the container (The total amount of water and /or food should not exceed 80% of the container to avoid overflowing), put a lid on the container and place it on the hot plate.
2. Connecting to the power supply socket. Turn the switch from "OFF" TO "MAX" position and the indicator light is on for working, the hot plate is in a state of heating.
3. Two points to be reminded by the user when using the new hot plate:
  - a) When using this hot plate for the first time, there may be a smell of smoke coming from the surface of the heating element. This is normal because of the invisible protective coating in production.
  - b) Before the water is boiling, the indicator light on the hot plate may be temporary off due to the temporary disconnection of the thermostatic control. This is a safety issue for the working on the hot plate.
4. When you have finished using the hot plate, turn the switch to "OFF" position and unplug it from the socket. Wait until the appliance is completely cooled down before moving or cleaning.

## MAINTENANCE & CARE

1. Make sure the plug is removed from the power supply socket. After the hot plate set is completely cooled down, clean it with the mild cleaner or gel-like cleaner by using soft cloth.

### PLEASE DO NOT CLEAN THE SET WHEN IT IS STILL HOT.

2. **DO NOT USE** hard brushes, scratchy materials and/or alcohol, petrol or any organic cleaner for the cleaning purpose.

3. Except the removable frying pan, do not immerse the main body in water to clean.

4. Put the hot plate on the cool place right after the cleaning.

Appliances are not intended to be operated by means of an external timer or separate remote-control system.

The temperature of accessible surfaces may be high when the appliance is operating.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## SPECIFICATION

ES-3202C

Power supply	120V~ 60Hz
Power	900W+900W

### Correct Disposal of this product



This marking indicates that this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

**Welcome to visit our website and purchase our quality products!**

With your inspiring rating, COSTWAY will be more consistent to offer you  
**EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

US office: Fontana, California

UK office: Ipswich



- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History

*5 Star Rating*



We would like to extend our heartfelt thanks to  
all of our customers for taking time to assemble  
this product and giving us valuable feedbacks.

THANK  
you  
😊

