



**Please give us a chance to make it right and do better !**

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana

UK office: Ipswich

AU office: Truganina



# Contact Us !

**Do NOT return this item.**


Contact our friendly customer service department for help first.



US: [cs.us@costway.com](mailto:cs.us@costway.com)

UK: [cs.uk@costway.com](mailto:cs.uk@costway.com)

AU: [cs.au@costway.com](mailto:cs.au@costway.com)

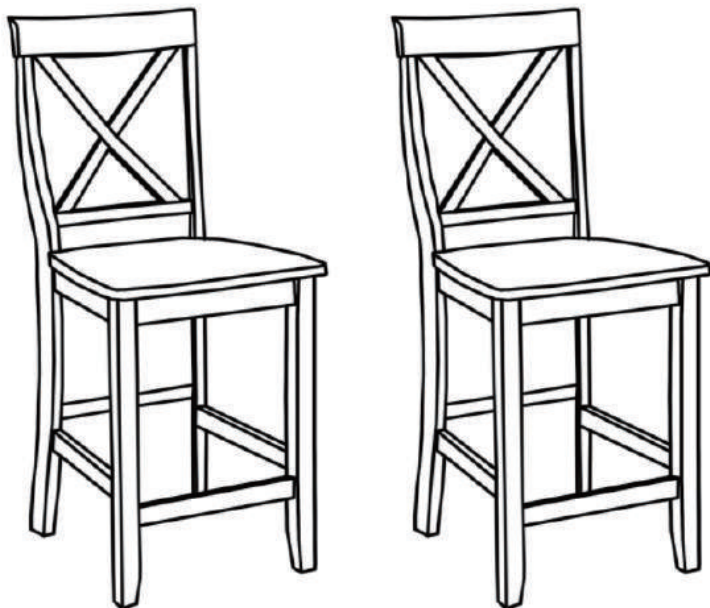









## USER'S MANUAL

### Dining Chair HW63956



## Before You Start



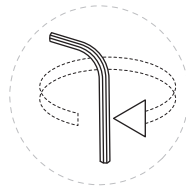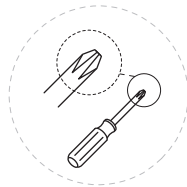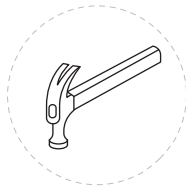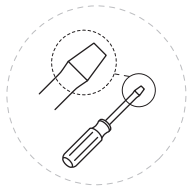




-  Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
-  Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
-  Work in a spacious area, preferably on a carpet close to where the unit will be used.
-  Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.










## ASSEMBLY INSTRUCTIONS

Read this instruction carefully. Remove all the wrapping materials, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all the wooden furniture parts on a clean and flat soft surface such as a carpet or a rug to prevent from scratches.

### HARDWARE LIST (2PCS)

NO.	DESCRIPTION		QTY
A	JCBC M6x80mm		8 PCS
B	JCBC M6x70mm		8 PCS
C	JCBC M6x35mm		4 PCS
D	SPRING WASHER		20 PCS
E	FLAT WASHER		20 PCS
F	CSK M4x32mm		18 PCS
G	ALLEN KEY		1 PC

 
### PARTS LIST (2PCS)

NO.	DESCRIPTION		QTY
1	BACK REST		2 PCS
2	BOX SEAT		2 PCS
3	FRONT LEG		4 PCS
4	STRETCHER LEFT		2 PCS
5	STRETCHER RIGHT		2 PCS
6	FRONT STRETCHER		2 PCS
7	WOODEN SEAT		2 PCS

Left



Right




The Small Hole is for "Marking" purpose to distinguish the Stretcher "Right".


### CAUTION:

1. Do NOT fully-tighten the nuts or screws until all is ready to assemble.
2. Do NOT over-tighten the nuts and screws to avoid possible damages to the threads.


1


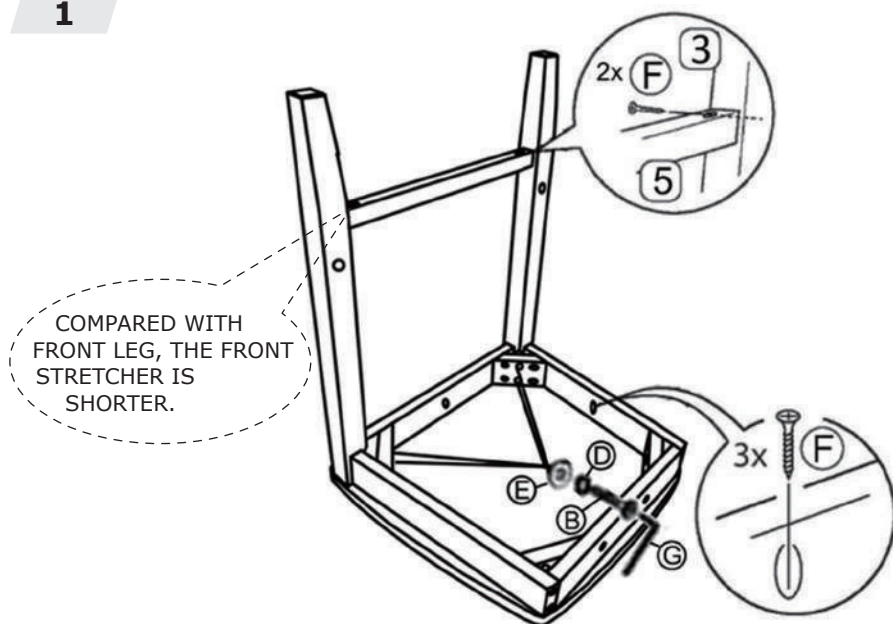


2

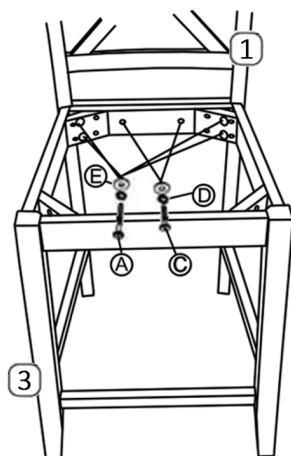

3

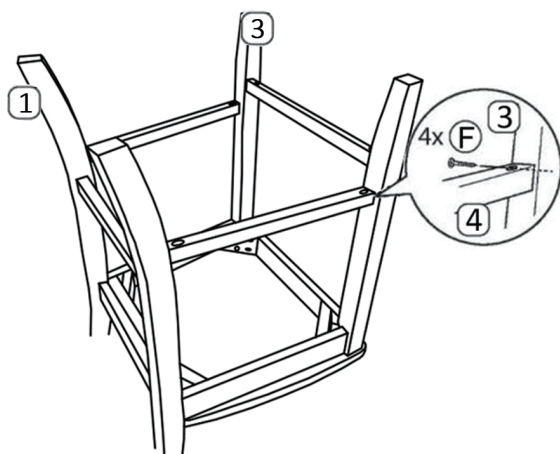

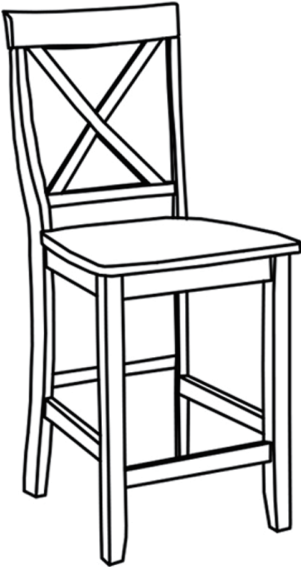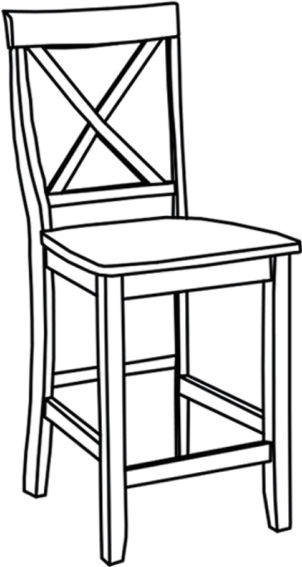

## Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

## Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment.

Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood.

It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.