

EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

ES

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

PL

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

US office: Fontana

UK office: Ipswich

AU office: Truganina

DE office: Hamburg

FR office: Saint Vigor d'Ymonville

PL office: Gdańsk



USER'S MANUAL

Security Safe Box HW51993

DEPOSITORY SAFE OPERATION MANUAL

First read the manual carefully before you start using the safe.

Do not keep the key in your safe. In event of battery failure you will not be able to pen the safe.

Product description:

The safe box is designed for protecting your cash.

This safe is great for accepting coin bags. The deposit drawer is located at the front of the safe and works in the same way as a post office box does.

Installation:

Choose a location where this product will be convenient to use, but not easily visible to an intruder. Inside a fitted wardrobe or cupboard is often suitable. If possible, select a position where the unit can be bolted to both wall and floor as security will be much higher if it is fixed to two surfaces. Wall fixing must always be to a solid wall, not a stud wall.

Preparation for use:

This product is battery operated. Batteries are not supplied. Only use 1.5VAA batteries.

For your convenience, we have engineered a manual override system for your safe. To open the door of the safe for the first time, just remove the battery cover plated (d) (see diagram 1). You will find the keyhole, insert the key into the keyhole and turn it in a counter-clockwise direction, turn the knob (a) in a clockwise direction. This will manually open your safe.


To install the batteries

After opening the safe, just remove the battery cover plate and install the four batteries. Ensure the + and – positions are correct. The display (e) will scan the status of the electronic system automatically. If it is in order the display will show "goods".

Opening the safe after installing the batteries:

To open the door of the safe, press the button "START"(c) (see diagram 1), the display on the panel will show "-----", then input one of the two sets of factory-preset codes:

0.0.0.0.0.0. (user code) or 8.8.8.8.8.8.(master code) immediately and confirm by pressing the button "START". The display will show "OPEN" and use the knob within 4 seconds.

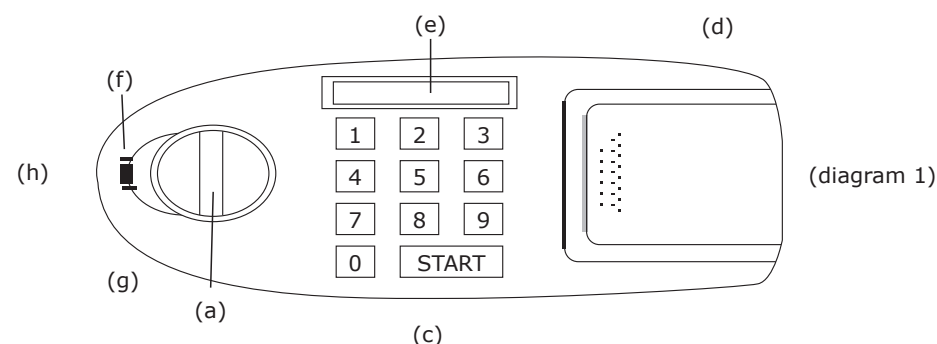

Programming the code:

The safe can be programmed with two sets of codes. For your safety, after opening the safe and installing the batteries, you should set two sets of new codes to replace the two sets of factory preset codes.

Programming the user code:

A. When the main safe door is open, Press the red button (at the back of door, near the hinge), then release it and display on the panel will show "-----"

B. Press "START" immediately.

C. Now press your 6 digits that you wish to use as a new user code. The display will show "IN" and your inputting numbers. It means that the new user code is confirmed.

Programming the master code:

A. When the main safe door is open, Press the "START" button. The display will show "-----".

B. Now input your new 6 digits

C. Press the red button inside (at the back of door, near the hinge). The display will show "IN". It means that new master code is confirmed.

If you or an intruder uses the incorrect group of numbers, the display will show "ERROR" and it will not open.

If the incorrect combination code is used 4 times consecutively, the display will show "ERROR" and the system cannot be entered until 3 minutes later. The override key can be used to open the door during the 3 minutes. If the key is used to open the door, the buzzer can be cleared by pressing the red button.

Battery replacement:

To test the batteries, just press the button "START". If the batteries are low, the display will show "LOBAE",

AND YOU SHOULD REPLACE THE BATTERIES. The safe requires 4 X size "AA" (1.5V R06) batteries.

Replace the old battery, the display will scan the status of the electronic lock system automatically. If it is in order, the display will show "GOOD". Use of alkaline batteries is recommended.

Override key:

For your convenience, we have engineered a manual override system for your safe. If you forget or misplace your combination, remove the battery cover plate and take out the batteries. You will find the keyhole, insert the key into the keyhole and turn it in a counter-clockwise direction, turn the knob in a clockwise direction.

This will manually open your safe any time. This product is supplied with 2 original keys.

Do not keep the key in your safe. In event of battery failure you will not be able to open the safe.