


COSTWAY

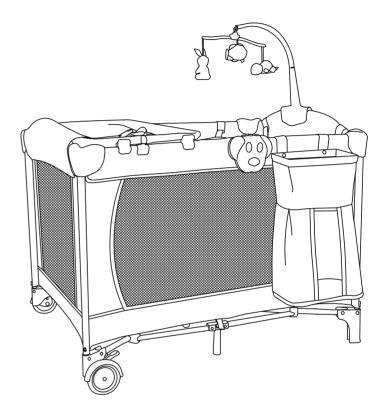

USER'S MANUAL

Baby Playard BB0445

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway













Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

Please read all instructions carefully and keep it for future reference.

General Warnings:

- \triangle Attention: To prevent possible injury by entanglement, remove this toy when the child starts trying to get up on its hands and knees in a crawling position.
- △ Danger! Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.
- \triangle The product must be installed and used under the supervision of an adult.
- $\triangle \mbox{\it Read}$ through each step carefully and follow the proper order.
- \triangle Remove all Packaging, separate and count all parts and hardware before Installation.
- ${\underline{\scriptscriptstyle{\wedge}}}$ Please ensure that all parts are correctly installed, incorrect Installation can lead to a Danger.
- \triangle We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- \triangle Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.

A WARNING!

FOR YOUR CHILD'S SAFETY, FOLLOW ALL LABELS ON THIS PRODUCT AND IN THESE WRITTEN INSTRUCTIONS. DO NOT USE THIS PLAYPEN IF YOU CAN NOT EXACTLY FOLLOW THE INSTRUCTIONS THAT COME WITH IT. FAILURE TO FOLLOW THESE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

! Check this playpen regularly before using it, and DO NOT use it if any part is loose or missing or if there are any signs of damage. Do not substitute parts. Contact with us if replacement parts or additional instructions are needed.

PLAYARD WARNINGS

▲ WARNING!

FAILURE TO FOLLOW THESE WARNINGS, THE LABELS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

- ! The product, including side rails, must be fully erected prior to use.
- ! Ensure that the sides of this playpen are properly latched or locked in the appropriate position before placing a child in it.
- ! DO NOT use this playpen for a child who can climb out of it or who is taller than 90CM.
- ! Children can suffocate on soft bedding. DO NOT place pillows, comforters or an additional floor pad in this playpen.
- ! When child is able to pull to standing position, set mattress/ base to lower adjustment position and remove bumper pads, large toys, and other objects that could server as steps from climbing out
- ! Use ONLY mattress/ pad provided by manufacturer.
- ! Always provide the supervision necessary for the continued safety of your child. When used for playing, NEVER leave child unattended. Child MUST be under supervision at all times.
- ! To reduce the risk of SIDS(sudden infant death syndrome), pediatricians recommend healthy infants be placed on their back sleep, unless otherwise advised by your physician.
- ! NERVER use a water mattress with this product.
- ! NEVER refinish this product.

A WARNING!

FAILURE TO FOLLOW THESE WARNINGS, THE LABELS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH. ENSURE that all bassinet fabric lies FLAT and TAUGHT against the playard frame, and that the bassinet corners are secure with the hook-and-loop strips.

- ! DO NOT use this accessory if you cannot exactly follow the instructions that come with it.
- ! Remove this accessory when a child is in the playpen.
- ! DO NOT use this accessory for a child who can roll over or who has reached 22lbs.(10kgs)
- ! FALL HAZARD-Always check that the bassinet is securely locked on the frame by pulling upwards.

WARNING! SUFFOCATION HAZARD-Infants have suffocated:

• In gaps between extra padding and side of the bassinet/cradle and

On soft bedding

Use ONLY the pad provided by manufacturer. NEVER add a pillow, comforter, or another mattress for padding.

To reduce the risk of SIDS, pediatricians recommend healthy infants be placed on their backs to sleep, unless otherwise advised by your physician.

If a sheet is used with the pad, USE ONLY the one provided by the bassinet or cradle manufacturer or one specifically designed to fit the dimensions of the bassinet or cradle mattress. DO NOT place any cord, strap or similar item in or near this accessory that could become wrapped around a child's neck.

Check this accessory regularly before using it, and DO NOT use it if any part is loose or missing of if there are any signs of damage. DO NOT substitute parts. Contact the manufacturer if replacement parts or additional instructions are needed.

Children can suffocate on soft bedding. DO NOT place pillows, comforters or an additional mattress pad in this Accessory.

GERNERAL WARNINGS

- ! DO NOT leave a child unattended in this playpen.
- ! DO NOT use this playpen if you can not exactly follow the instructions that come with it.
- ! NEVER carry or move the play yard with child in it.
- ! AVOID SERIOUS INJURY by keep fingers clear of rail joints, top corners, and from any moving parts when assembling/ adjusting the product to prevent pinching and/or finger entrapment.
- ! ENSURE that the play yard is fully erected before each use. Check that:
- Four(4) top rails are completely LOCKED by pushing down on them;
- The center of the floor is completely PUSHED DOWN;
- The mattress is lying flat and is secured with all four(4) hook-and-look straps.
- ! NEVER use the play yard on uneven or unsafe surfaces.
- ! NEVER use near stoves, heaters or other heat sources.
- ! ALWAYS keep the play yard away from hazards that may injure your child.


- ! DO NOT change, tamper with or modify any part of this products.
- ! DO NOT use this product if it is damaged in any way or has missing parts.
- ! DO NOT allow children to climb into or out of the play yard, or to hang onto the outside of the play yard to avoid tipping the product.
- ! NEVER hang anything other than accessories that come with this product on this play yard as it could cause the product to become unstable.
- ! Extended exposure to weather could affect color.
- ! DO NOT, EXCEPT AS DESCRIPED IN THESE INSTRUCTIONS, MODIFY THIS PRODUCT OR DISASSEMBLE ANY PARTS. This includes adding any parts or accessories by other manufacturers as non-tested accessories can affect the safety of the product.
- ! This product is NOT intended for commercial use.
- ! A crib mobile is intended for visual stimulation and is not intended to be grasped by the child.
- ! If attached to the crib or playpen, remove when baby begins to push up on hands and knees. If so designed, mount on wall or ceiling clearly out of a standing baby's reach.
- ! Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Check frequently.
- ! Do not add additional strings or straps to attach to a crib or playpen.

LIST OF PARTS

Check that no parts are missing before setting up the playpen.

A. 1 Playpen E. Diaper changer
B. 1 Carrying bag F. Storage

C. 1 Foldable mattress
D. Bassinet
G.Turning toy bar
H.Music box

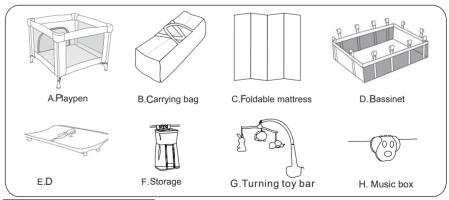


3. ASSEMBLY INSTRUCTIONS


STEP 1: OPENING OF THE PACK


Open the carrying bag (Fig.1) and take the playpen out. Detach the foldable mattress from the playpen by unfastening the self-fastening straps (Fig. 2) to release the playpen.

STEP 2: SECURING THE PLAYPEN

  a. Unfold the structure slightly to push the sides of the playpen apart (Fig. 3).






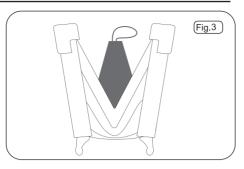


IMPORTANT


Start by unfolding the playpen by pushing the sides apart. The bottom of the playpen(in the centre) should be lowered last.


b.Follow the instructions illustrated in Fig.4a and Fig.4b on both sides at the same time

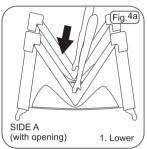

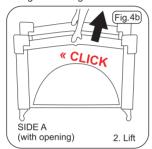

c.Follow the instructions illustrated in Fig. 4c and Fig. 4d on both sides at the same time.

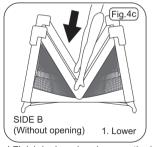

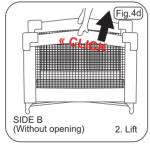

d.Finish by banging down on the bottom of the playpen(Fig .5) to secure the locking mechanism.

STEP 3: FITTING THE MATTRESS

Finally, slip the foldable mattress into the bottom of the playpen (Fig. 6).





4. FOLDING AND STORING THE PRODUCT

STEP 1: FOLDING THE PLAYPEN

 
a.Remove the mattress from the playpen (Fig. 7) and lift up the bottom with the help of the fabric pulling strap (Fig. 8).

 


 


 
b. Lift up rims A simultaneously while pressing the unlocking button underneath the rim(Fig.9). c. Lift up rims B simultaneously while pressing the unlocking button underneath the rim(Fig.10)

Each rim should buckle on both sides, as shown here(Fig. 11 and Fig.12).









IMPORTANT

If the rims of the playpen do not fold down completely, repeat the procedure shown in Fig.9 and Fig.10





STEP 2: STORING THE PLAYPEN

Once the playpen locking mechanisms have been released, fold it up completely and fit the mattress around the structure, securing it with the self-fastening straps(Fig.13), Slip the whole thing into the carrying bag (Fig. 14).

If the product is including a bassinet, pls refer to the following drawings to install it.

5. Install the bassinet



a.Before installing, remove the foldable mattress from the bottom of playard, place bassinet inside the playard and attach the 12 clips to the top rails. Fig.15

Make sure all 12 clips are securely attached to the top rails





b.Insert the metal tube together in the bottom of the bassinet as shown, MAKE SURE tubes are connected before installing the foldable mattress. Fig.16 Slip the foldable mattress into the bottom of the bassinet. Fig.17


6.DIAPER CHANGER ASSEMBLY

a. Unfold the diaper changer.

b.Insert the two tubes inside the diaper changer as shown.

c.Attach the 4 clips on the top long hand rails. Make sure all 4 clips are securely attached to the top long rails

When you put you baby on the diaper changer, Always use the harness to keep your baby in safe.

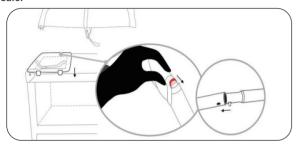



7.STORAGE 1 OR 2 ASSEMBLY

Attach the clips of the storage to the top rail.

Turning toy bar and music box assembly

Hanging the toys on the bracket hook, then put the bracket onto the short handrail

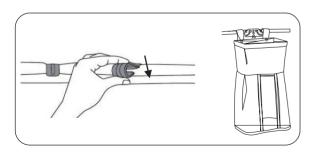

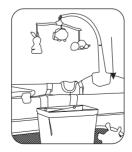

8. MAINTENANCE INSTRUCTIONS

You can extend the life of your playpen by taking good care of it, here is some advice.

- 1 Never immerse the playpen, just wipe down the different surfaces.
- 2 Clean with a sponge and soap or a gentle detergent. Air-dry, preferably away from sunlight.
- 3 Always store this product in a well-aired place.
- 4 Do not expose to sunlight for long periods of time.

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.

