






COSTWAY®

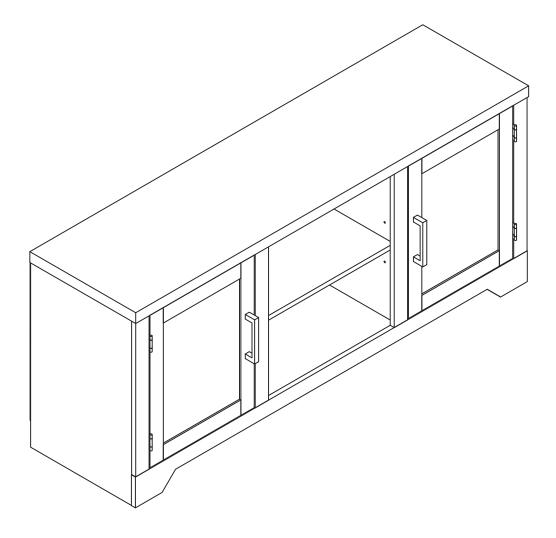

USER'S MANUAL

TV Cabinet HW63110

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first. Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com











FLOOR AREA

 
Contact Us!

Do NOT return this item.


Contact our friendly customer service department for help first.




Before You Start



- Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- Mork in a spacious area, preferably on a carpet close to where the unit will be used.
- ★ Keep the handtools close at hand. Do not use power tools to assemble your furniture.
 They may scratch or damage the parts.

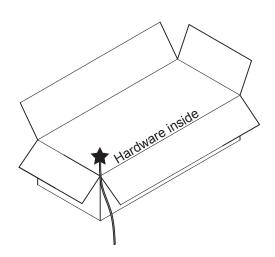


Parts and Hardware List Not actual size

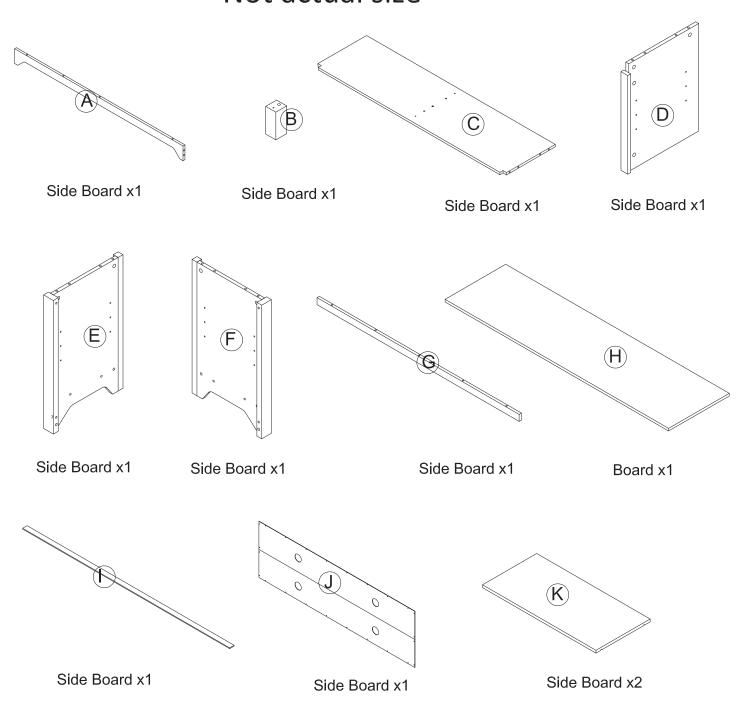




COSTWAY www.costway.com


Board Identification Not actual size

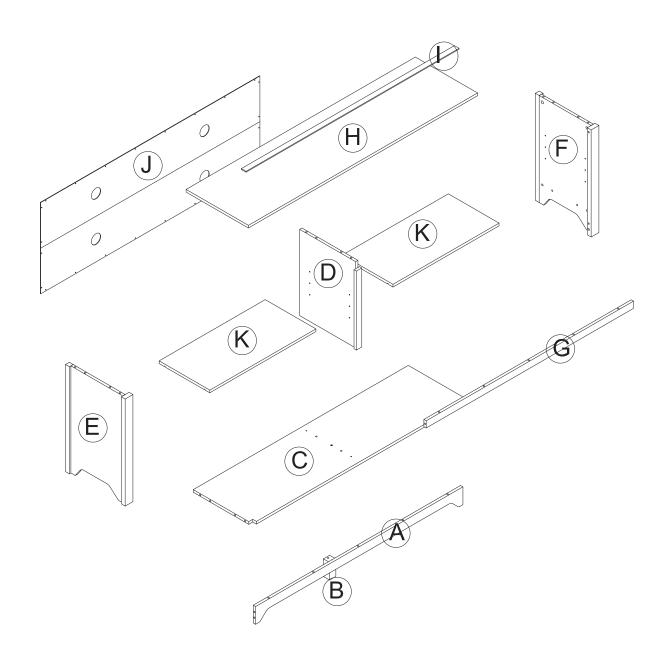



Parts and Hardware List Actual size

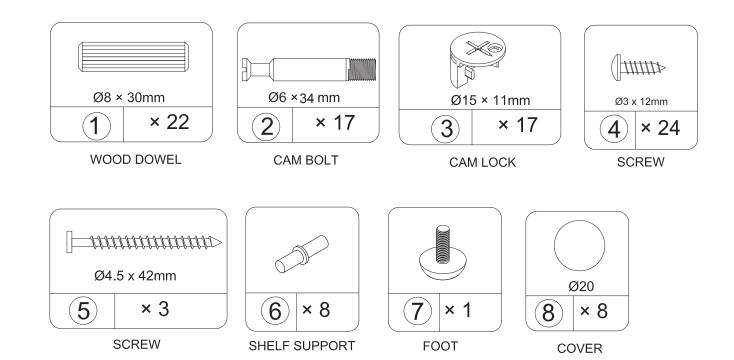


STEP 1

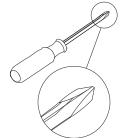

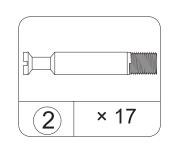

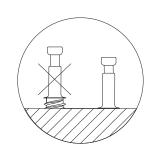


Insert the hardwaer2to C\E\F\H part

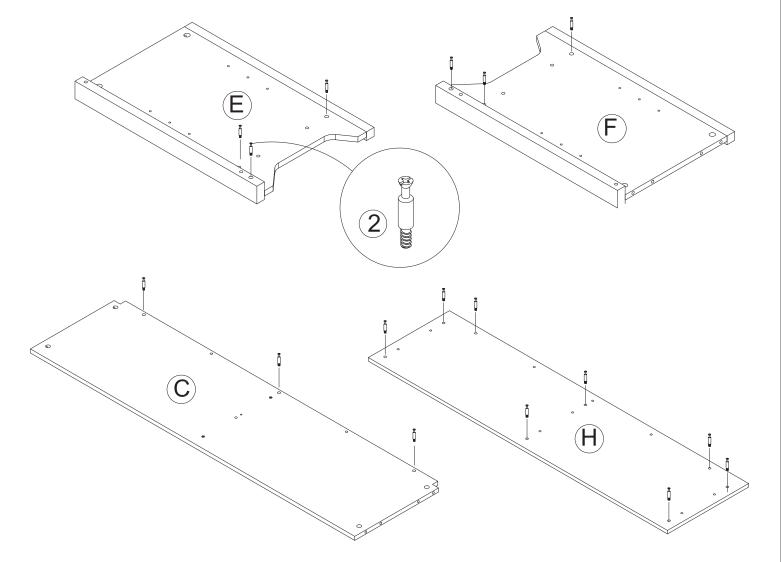


PRODUCT ASSEMBLY

STEP 2



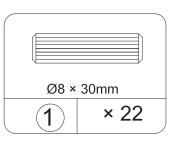



Insert the hardwaer 1 to A\B\C\D\E\F\G part

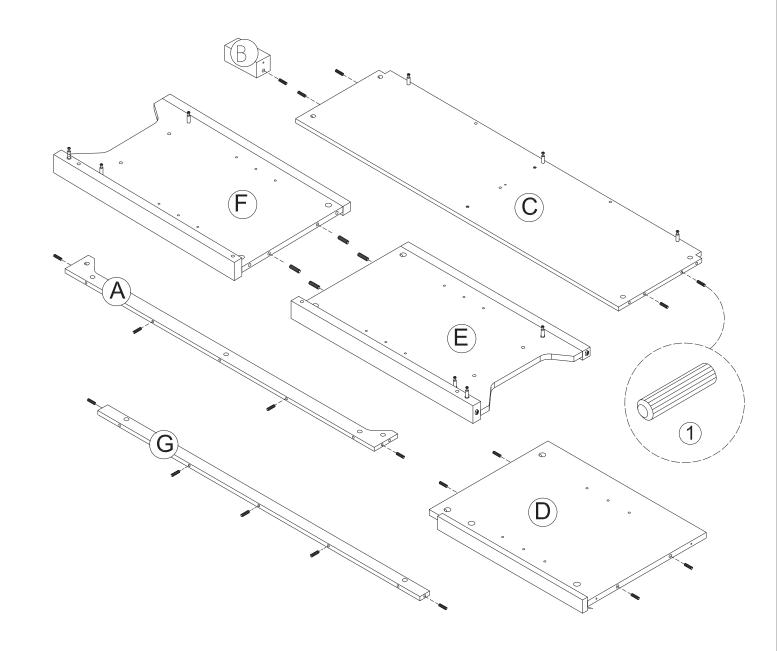


STEP 3



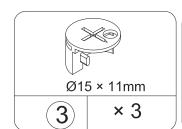


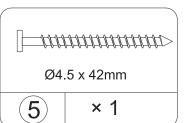

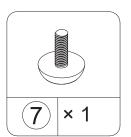


Fix the C part to the A part with the hardwaer 3.


Fix the C part to the B part with the hardwaer 5 6.

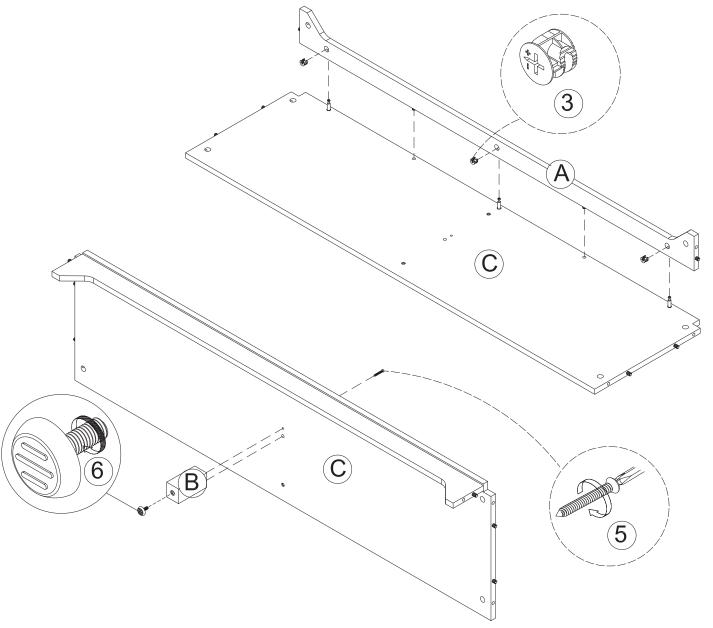


PRODUCT ASSEMBLY

STEP 4

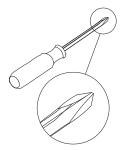


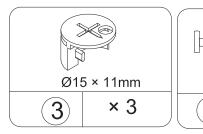

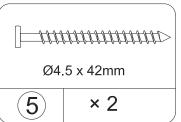



Fix the C part to the D part with the hardwaer ⑤.

Fix the C part to the F part with the hardwaer ③.

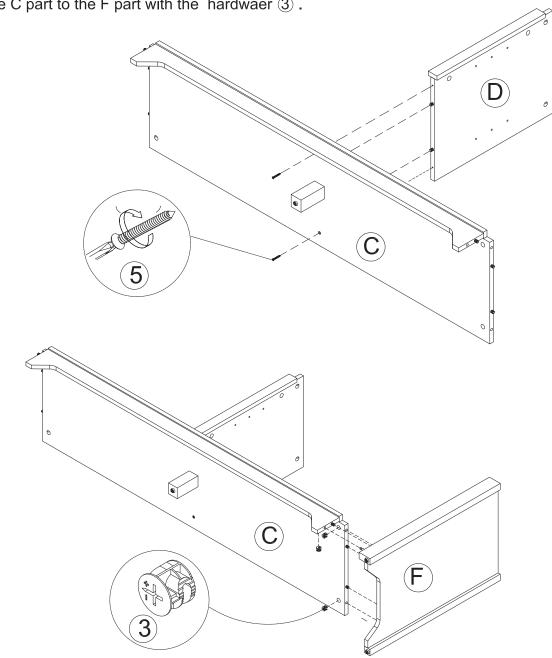


STEP 5

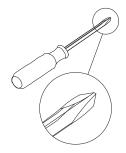

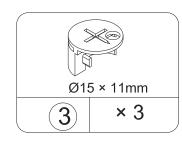


Fix the D\F part to the G part.


Fix the C\G part to the E part with the hardwaer \Im .

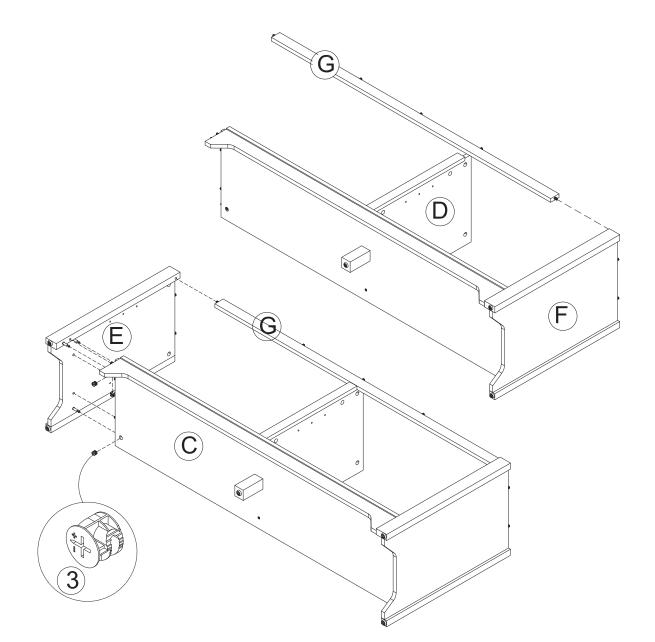

PRODUCT ASSEMBLY


STEP 6

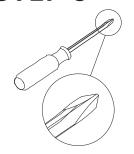

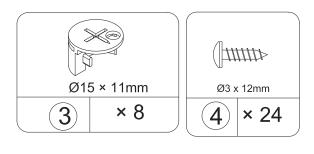


Fix the D\E\F\G part to the H part with the hardwaer $\ensuremath{\Im}$.


Fix the C\E\F\H part to the J part with the hardwaer ④.

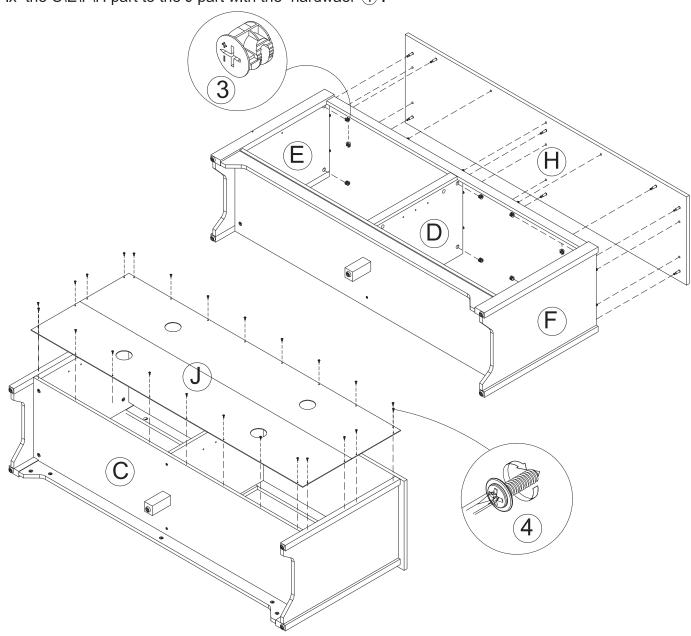

STEP 7

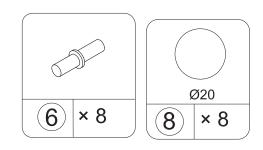

Fix the E\F\ part to the K part with the hardwaer ⑥.

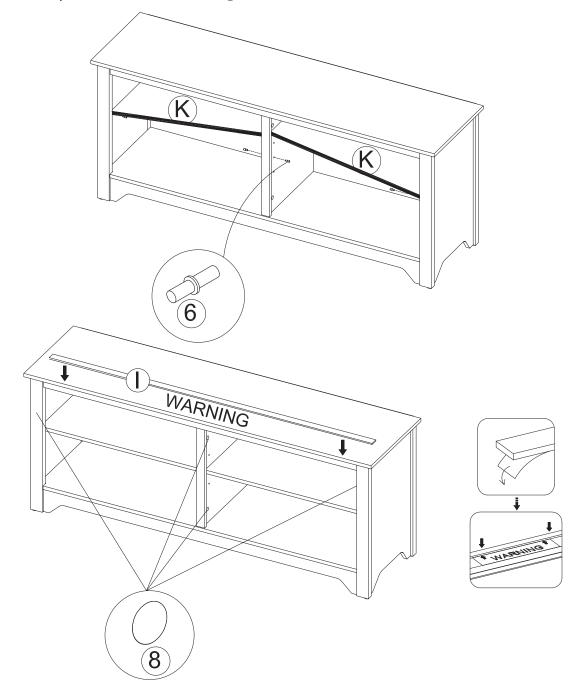

PRODUCT ASSEMBLY

Maximum Loads



A WARNING

This item is only suitable within the specified maximum load-bearing. Heavier loads than the indicated load capacity may cause instability, resulting in possible injuries.