

USER'S MANUAL
Baby Highchair
BB0484

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.




Before You Start

Please read all instructions carefully and keep it for future reference.


General Warnings:

- ⚠ **Danger!** Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.
- ⚠ The product must be installed and used under the supervision of an adult.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ Remove all Packaging, separate and count all parts and hardware before Installation.
- ⚠ Please ensure that all parts are correctly installed, incorrect Installation can lead to a Danger.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.


Parts list:

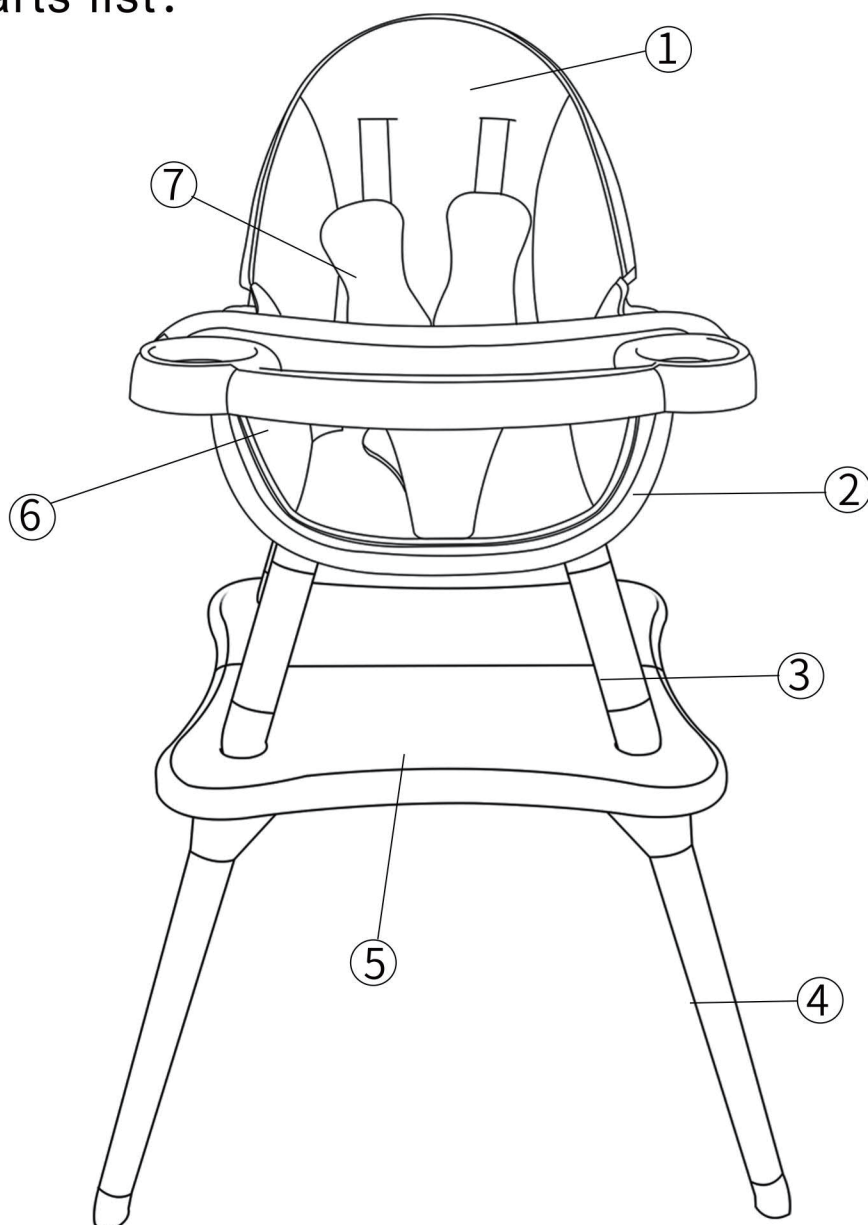


Please confirm the package and accessories are complete and make sure there is no missing parts.

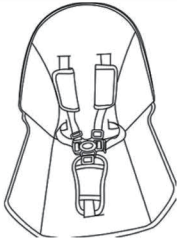


① Seat cover*1

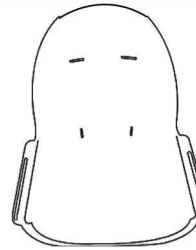


② Seat unit*1

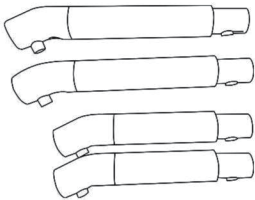


③ Front legs for chair*2
Rear legs for chair*2

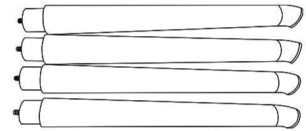


④ Front and rear legs
for table*4

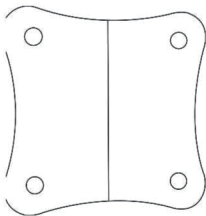

⑤ Half of table plate*2

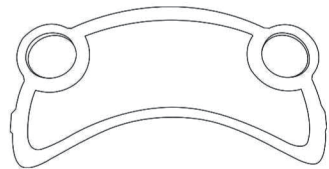

⑥ Tray with cover plate*1

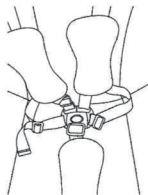


⑦ Five point harness
system*1




⑧ Bolts*4

Child chair and table version:

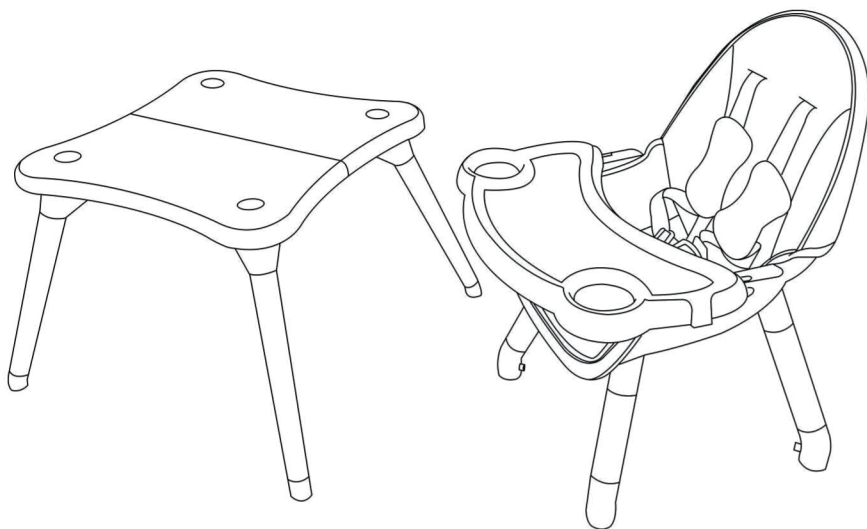


Assembly


1. Insert the front two legs into two front holes at the bottom of the seat unit until the pin clicks into place .
Insert the rear two legs in the same way.

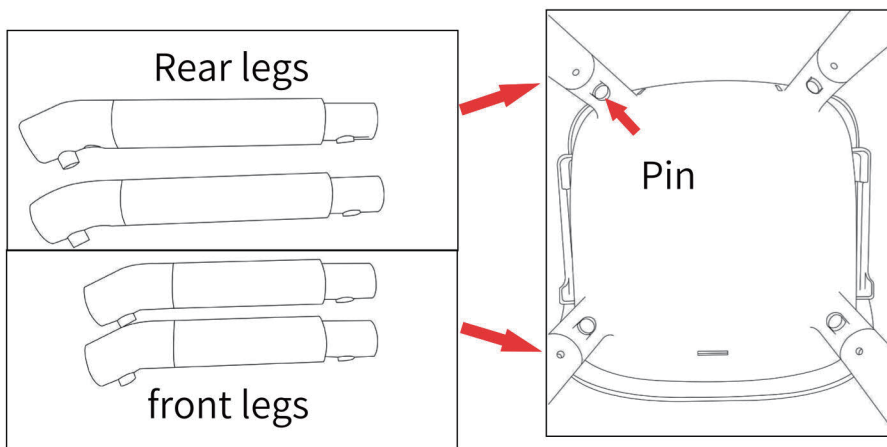


2. Connect the two half of table plates together as shown in below picture, then fix them with four bolts into four holes.

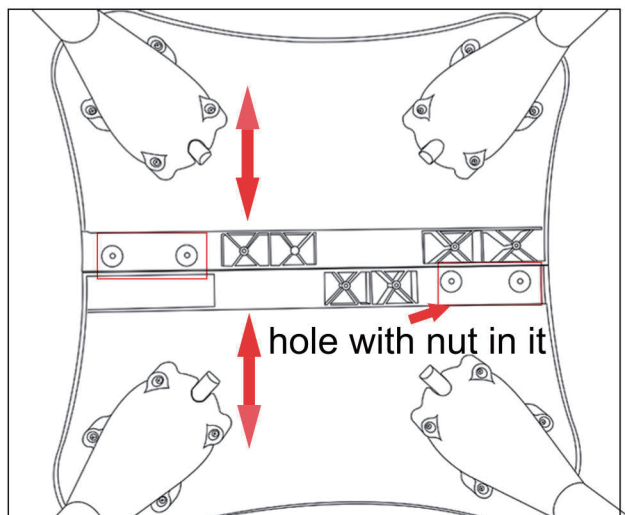



3. To assemble the four table legs, insert the leg into the hole at the bottom of table plate, please note that there is a nut in the hole, then screw the leg until it is fixed.

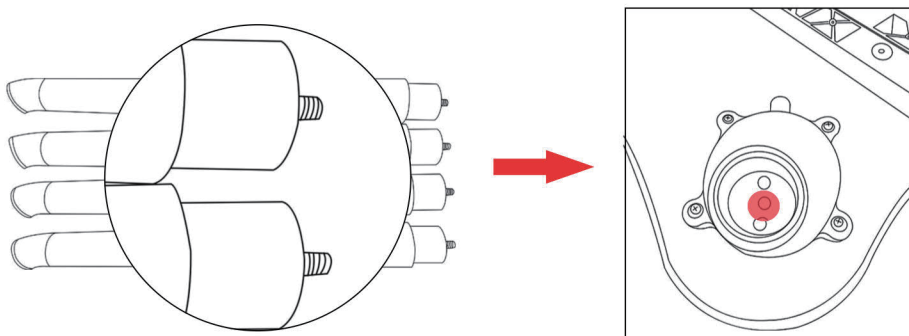


! If the foot of the table is in the wrong position after the table legs are installed, please follow the arrow to rotate.

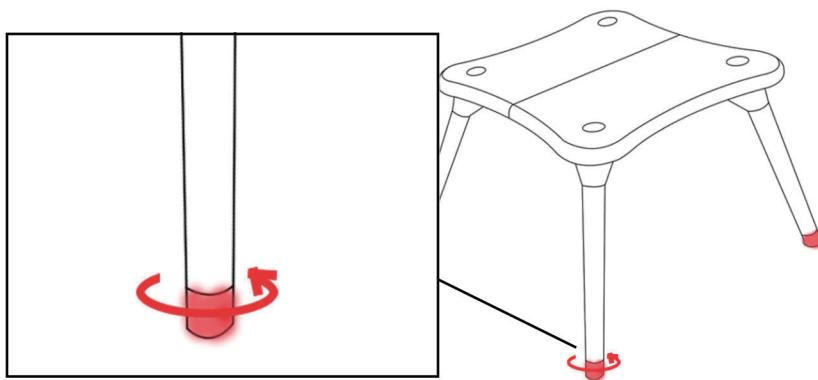

4. Put the seat cover on the seat unit, there are four slots in the backrest and slots at the bottom, to fix the safety belts, pass the end buckle of shoulder belts through the two upper slots, pass the end buckle of waist belts through the two lower slots, pass the end buckle of crotch belt through the bottom one.

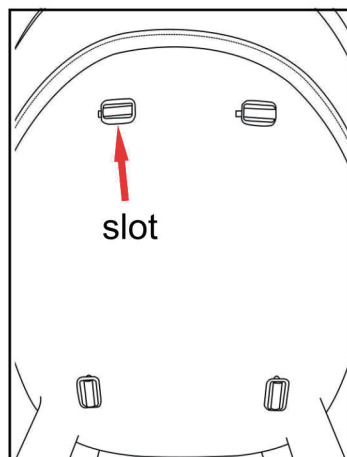
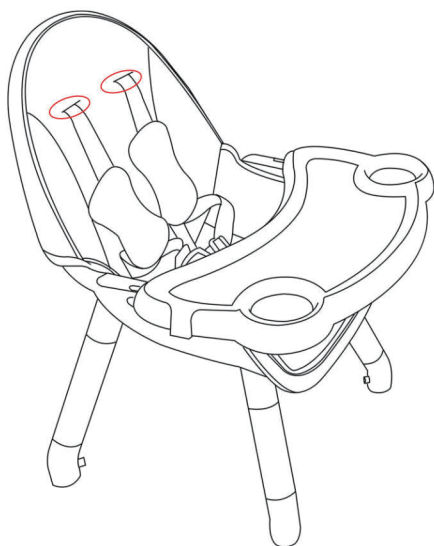


5.Position the tray over the armrests,holding the latch mechanism at both sides of the tray,at the same time sliding the tray onto the chair with the desired position, then release the latch and move the tray until a click sound is heard.

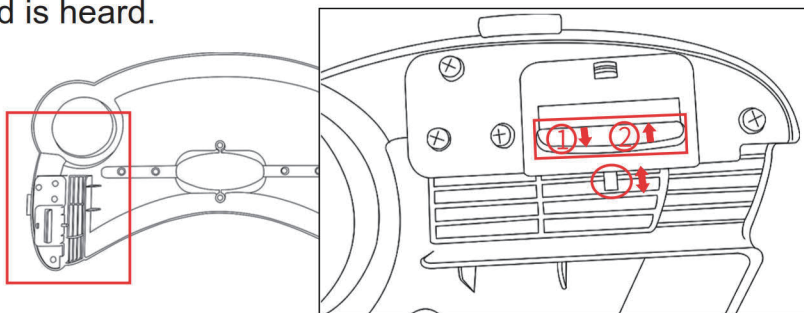


① Lock

② Hold the latch,unlock

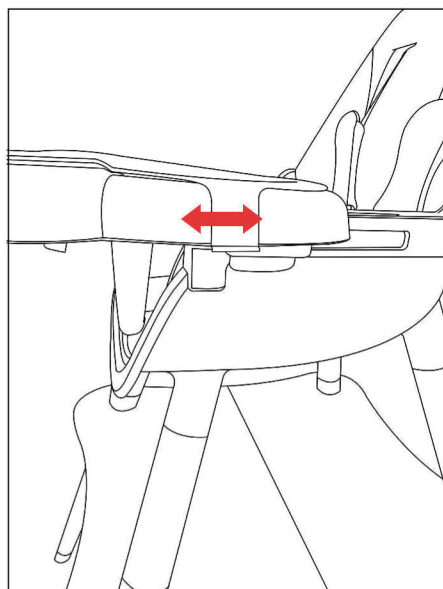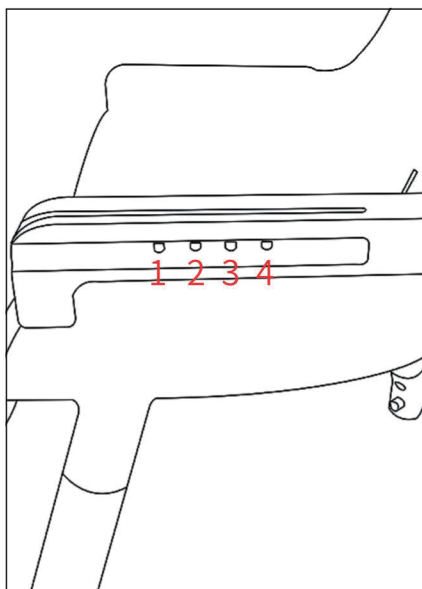


The tray can be set in four positions,using the latches at both sides to adjust the position.


6. In order to wash the tray, you may remove its cover plate by releasing its two catches and three block.

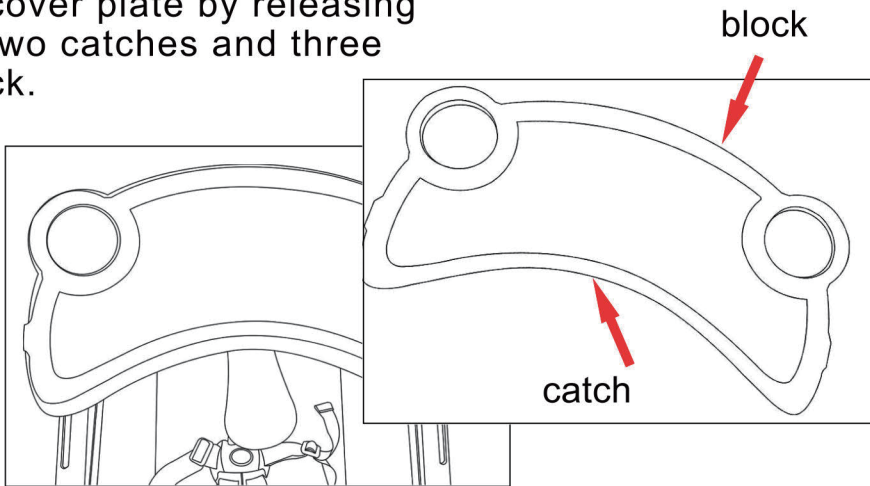

7. Connect the chair and table together to be a high chair, plug the four legs of chair into the four holes on the table until the pin clicks into place.

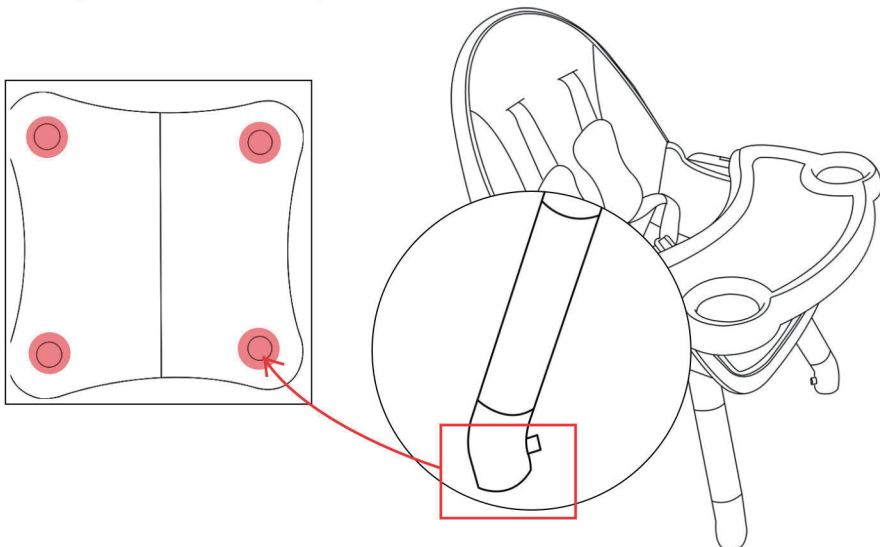

8. Feeding Highchair version can be separated into Child Chair and table function, there are four buttons under the table plate, press the button and leg will be released from the table.

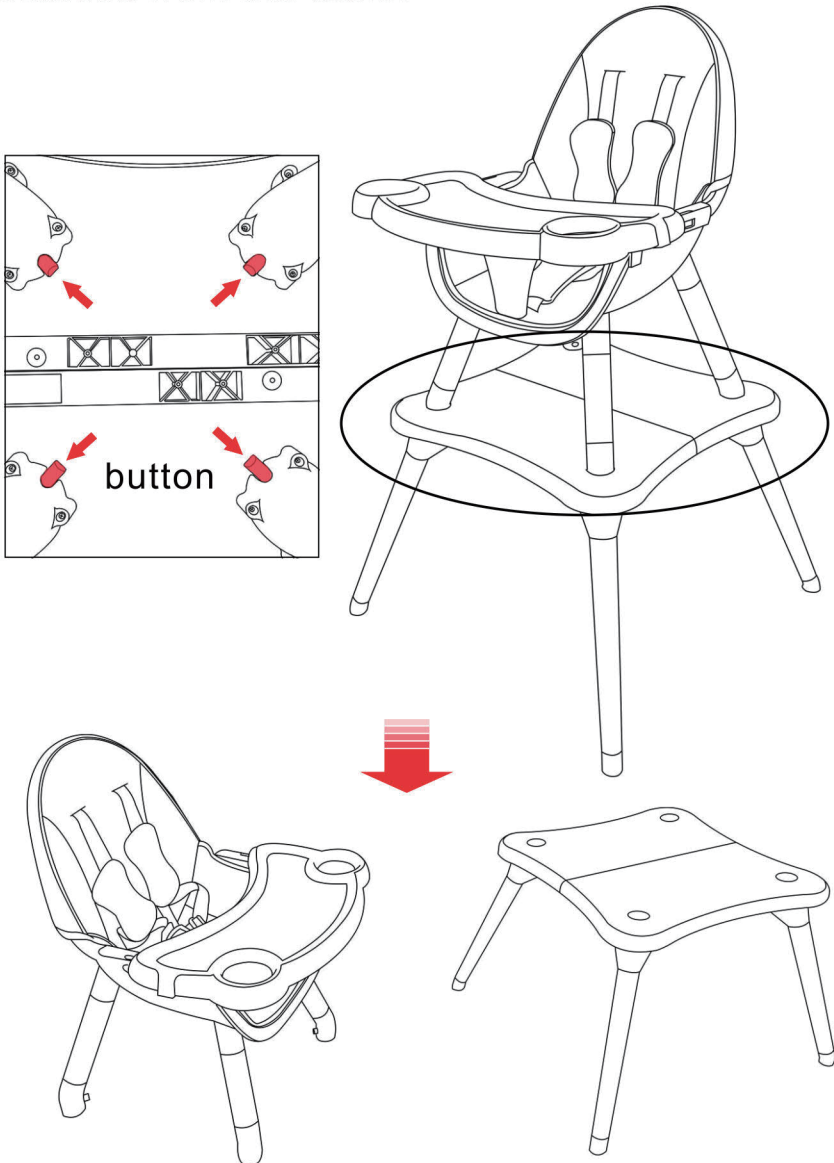

CAUTION

Read these instructions carefully before assembly and use and keep for future reference. The child may be hurt if you do not follow these instruction,

WARNING

- 1.Never leave the child unattended.
 - 2.High chair:Always use the restraint system.
 - 3.Falling hazard:Prevent your child from climbing on the product.
 - 4.Do not use the product unless all components are correctly fitted and adjusted.
 - 5.Be aware of the risk of open fires and other sources of strong heat in the vicinity of the product.
 - 6.Be aware of the risk of tilting when your child can push its feet against a table or any other structure.
 - 7.Always check the security and the stability of poduct before use.
 - 8.Make sure that any harness is correctly fitted.
 - 9.Do not move or lift the product while the child is inside.
 - 10.Do not use the product until the child can sit up unaided.
- Keep children away when assembling and disassembling the product to avoid injury.

11.Highchair is intended for children from 6 months to 3 years or a maximum weight of 15kg.

12.Position the highchair on a flat,even and horizontal floor and do not elevate the highchair on any structure or table.

13.Do not use the product if any part is broken,torn or missing.

14.Product located under a window could be used as a step by the child and cause the child to fall out of the window.

MAINTENANCE

The product requires regular maintenance to keep it in good working order.Regular check all parts of the product to ensure that they are operating correctly and for signs of wear or damage.

Moving parts may be lubricated with a light silicone oil. Do not use this product if any part is broken,torn or missing and use only spares provided by the manufacturer.Only replacement parts supplied or recommended by the manufacturer should be used.


CLEANING

1.Chair and table:Wash with clean and damp cloth and mild soap.

2.Seat cover and belts:Wash in hands.Do not bleach. Do not tumble-dry.Do not dry clean.

Harness system Adjustment

1.To buckle the safety belts,connect the shoulder and waist belts and then snap them into the crotch belts clasp. To unbuckle the safety belts,press the button in the middle of the clasp.

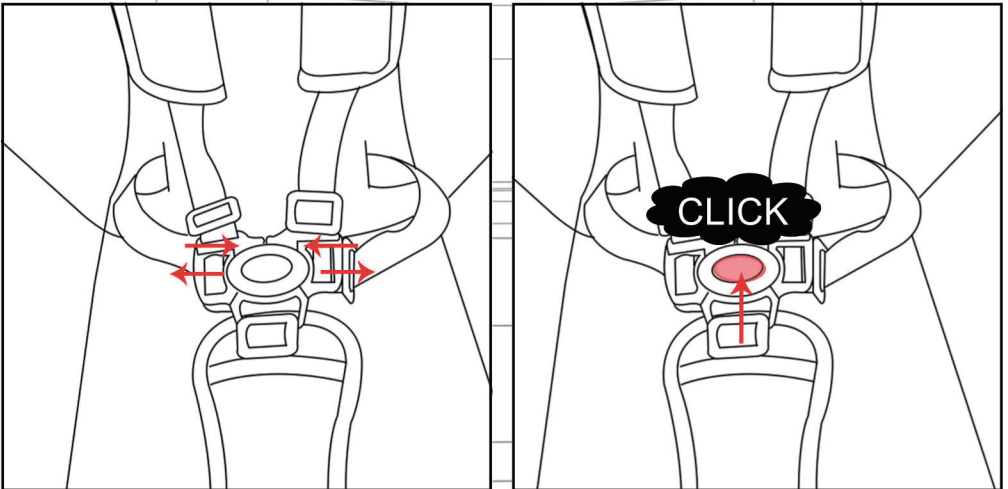

2.Sliding adjusters are fitted and should be carefully adjusted so the harness fits your child comfortably.

3.The safety belts can be removed for cleaning purposes by sliding the end buckle of belts through the five slots.

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us!
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

