 


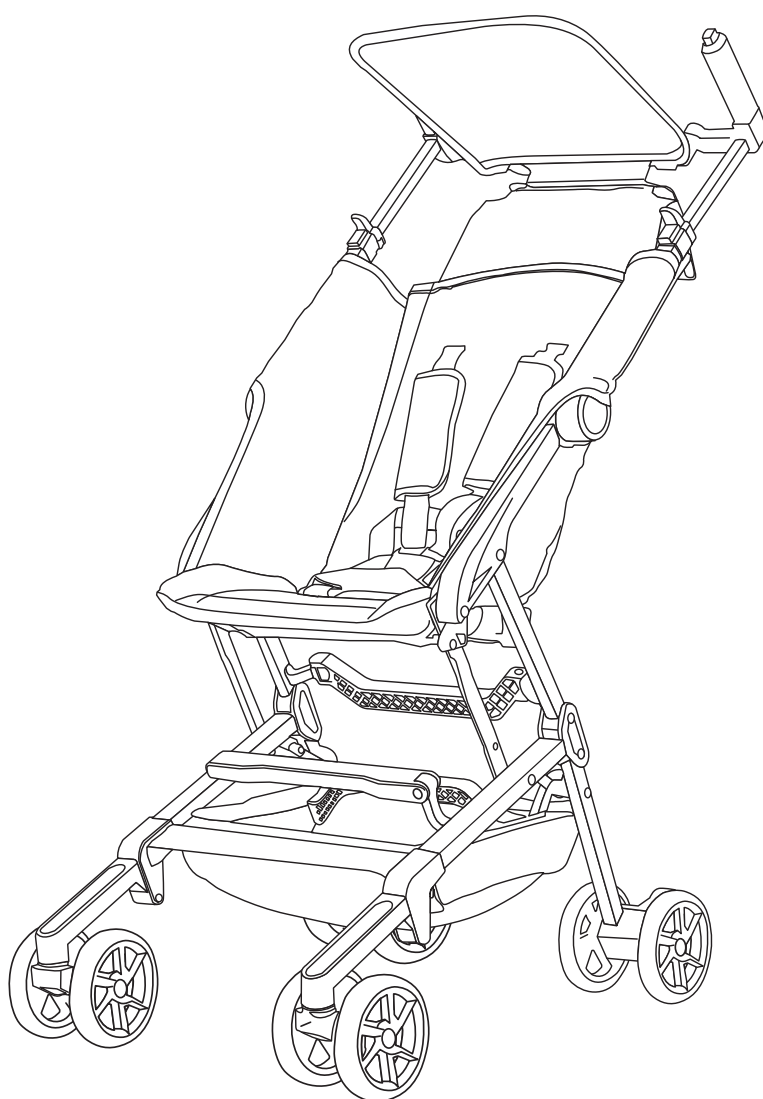

BB4831



Please read this owner's manual carefully and keep it in a safe place.

CLEANING & MAINTENANCE

TO AVOID SERIOUS INJURY, PLEASE DO A ROUTINE INSPECTION.

1. Never use force on folding or adjustable parts.
2. Ensure that all the devices are correctly engaged before use.
3. Regularly lubricate all moving parts with silicon spray only.
4. To clean plastic or cloth surface, use lukewarm water with mild detergent only. To clean metal surface, wipe clean with soft, damp cloth. Do not use abrasives or solvents.
5. Do not keep the stroller in the damp, cold or hot place.
6. Check the folding lock when not using. Please do not leave your stroller outside unprotected.
7. Regularly check unit to ensure no parts are loose or broken.

WARNING

Failure to follow these warnings and the assembly instructions could result in serious injury or death

1. Adult assembly is required. This stroller contains small parts, which are for adult assembly only. Keep small children away while assembling the stroller.
2. Remove protective material and plastic bags and dispose of them before assembling the stroller.
3. Stroller is suitable for children from 6 to 36 months.
4. Ensure that all locking devices are engaged before use. Check that the stroller or seat attachment devices are correctly engaged before use.
5. To avoid injury from falling or sliding out. ALWAYS use seat belt. After fastening buckles, adjust belts to get a snug fit around your child.
6. Stroller is for one child only per seat.
7. DO NOT use storage basket to carry children.
8. NEVER lift the stroller by the front tray.

WARNING

Failure to follow these warnings and the assembly instructions could result in serious injury or death

 
 
 
 
 
 
 
1. ALWAYS set the parking brake when placing child in or removing child from seating unit.
2. Open stroller away from the child before use.
3. DO NOT use the stroller when the road is not smooth.
DO NOT keep stroller near hot surfaces or other similar dangerous places.
4. NEVER leave child unattended in the stroller.
DO NOT allow child to crawl out under or over the front tray or stand in the stroller.
5. DO NOT lift stroller with child is inside.
6. The backrest should be adjusted by the adult.
7. Any accessories which are not approved by the manufacturer shall not be used.
8. To prevent a hazardous, unstable condition.
DO NOT hang or place items on the stroller handle, canopy or frame.

WARNING

Failure to follow these warnings and the assembly instructions could result in serious injury or death







1. This product is not suitable for running, skating or other similar activities.
2. ALWAYS use the crotch strap in combination with the waist belt.
3. Follow the washing instructions on the seat pad.
4. Use of the stroller with a child weighing more than 50 lbs on each seat could be unsafe.
5. To prevent a hazardous, unstable condition.
DO NOT place more than 4.4 lbs in basket.



UNFOLDING

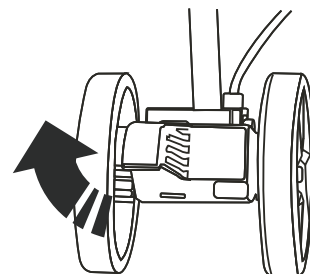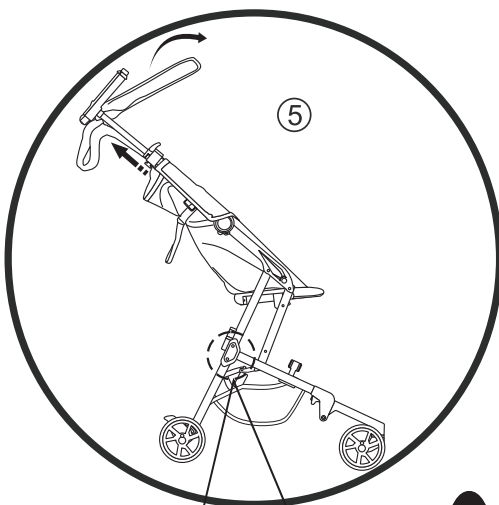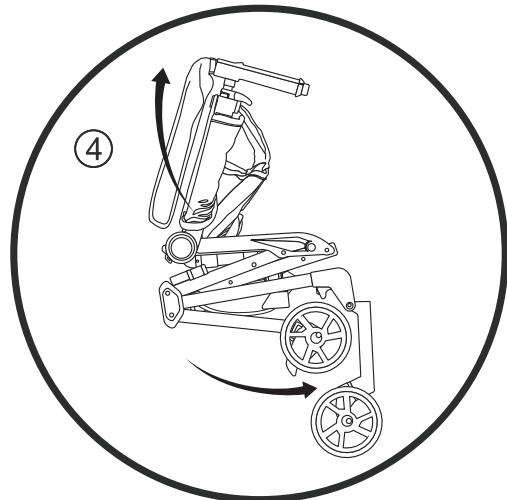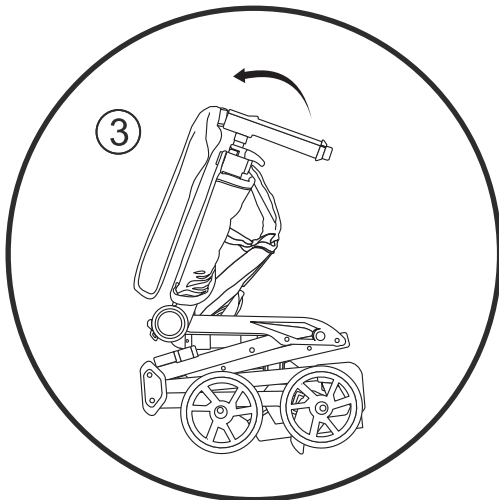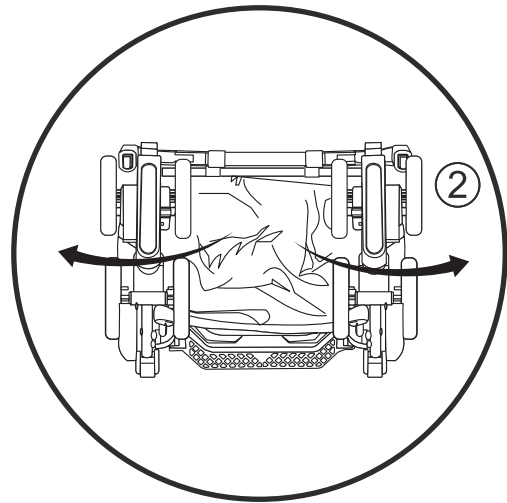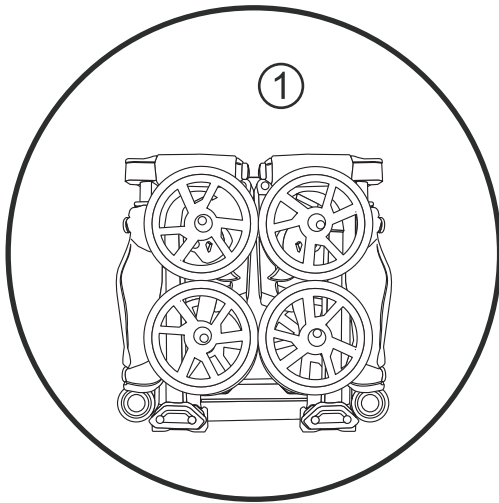








After opened the stroller, you must press down left button to release the lock.

        SEAT BELT

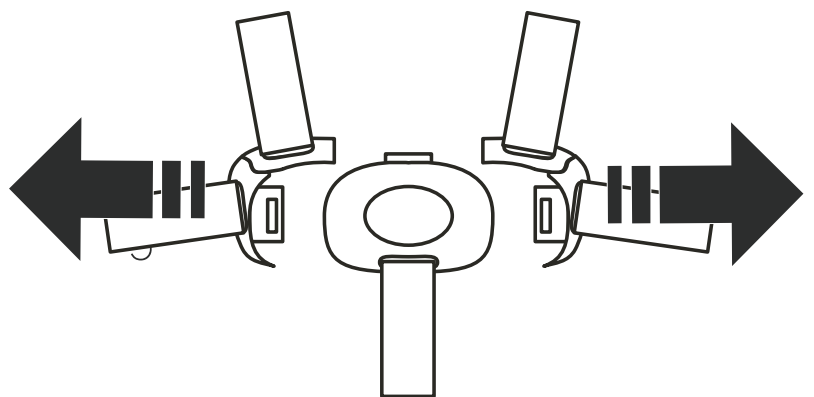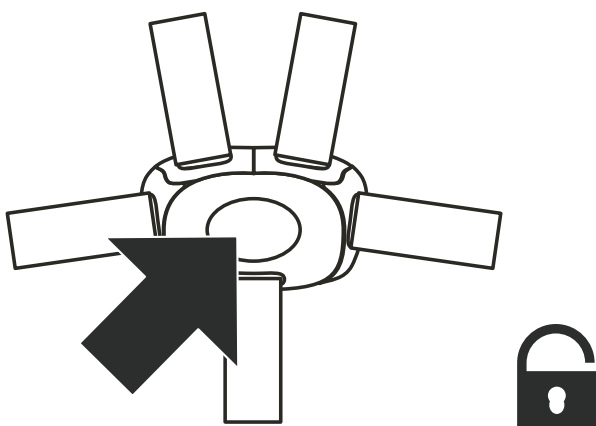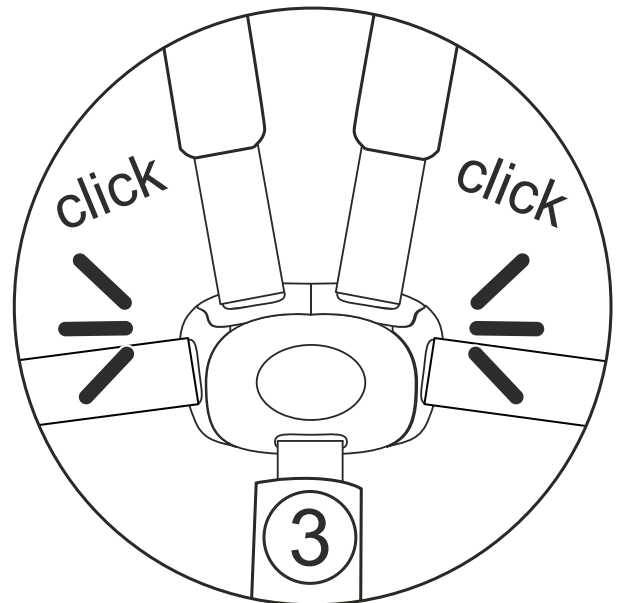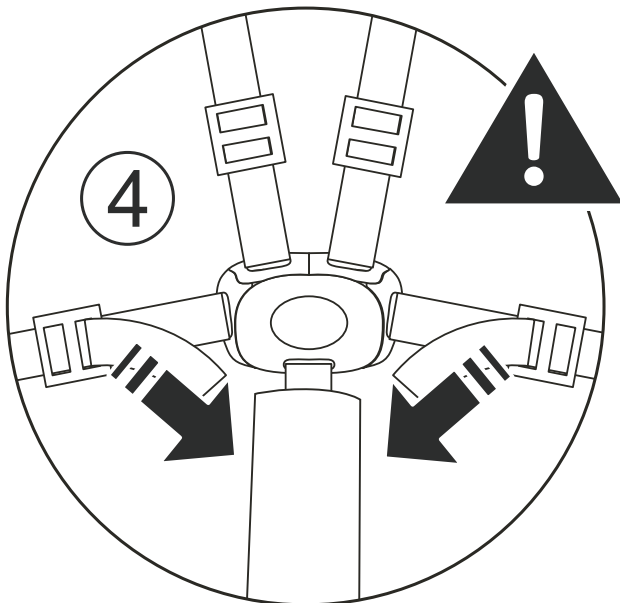
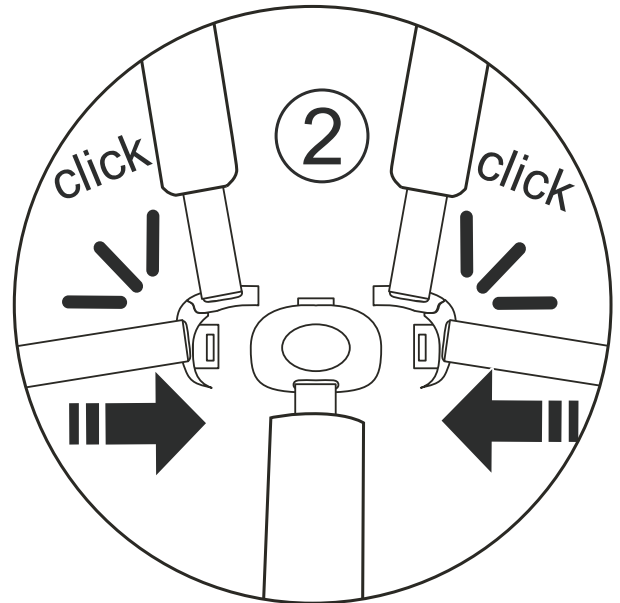
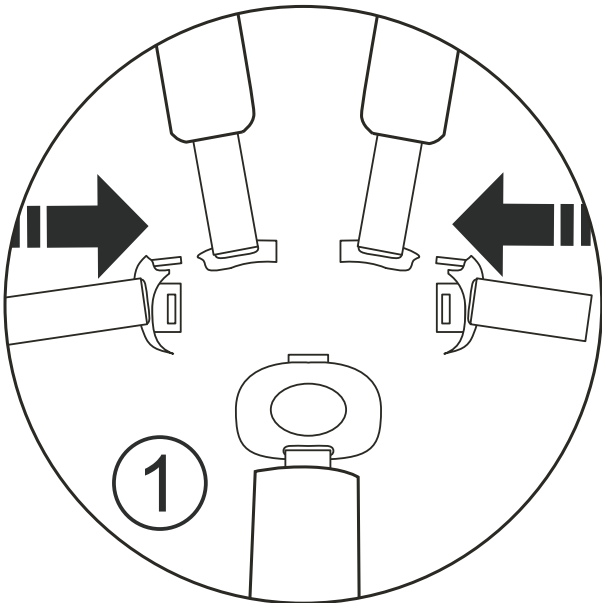


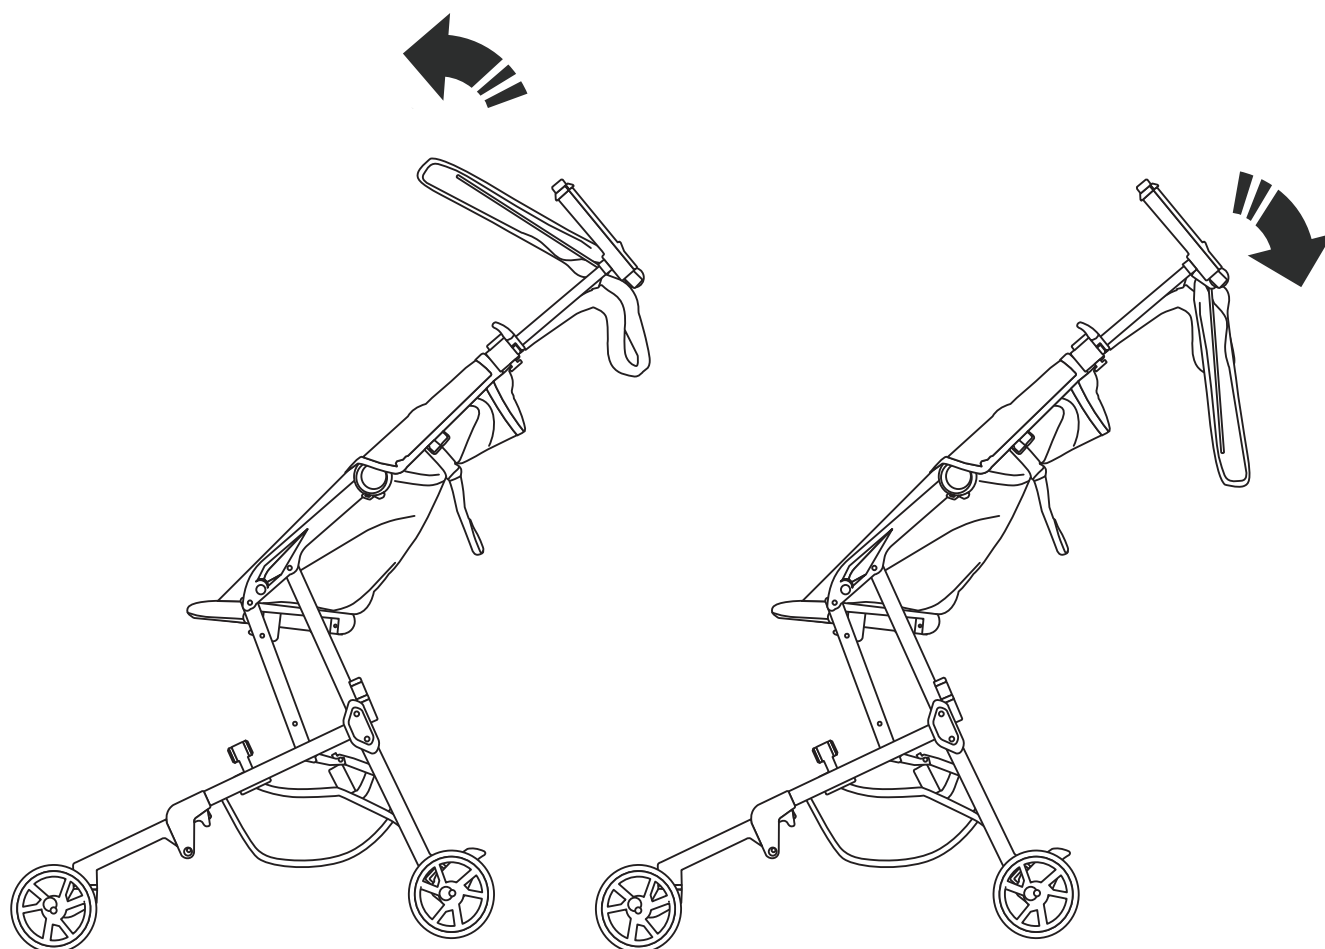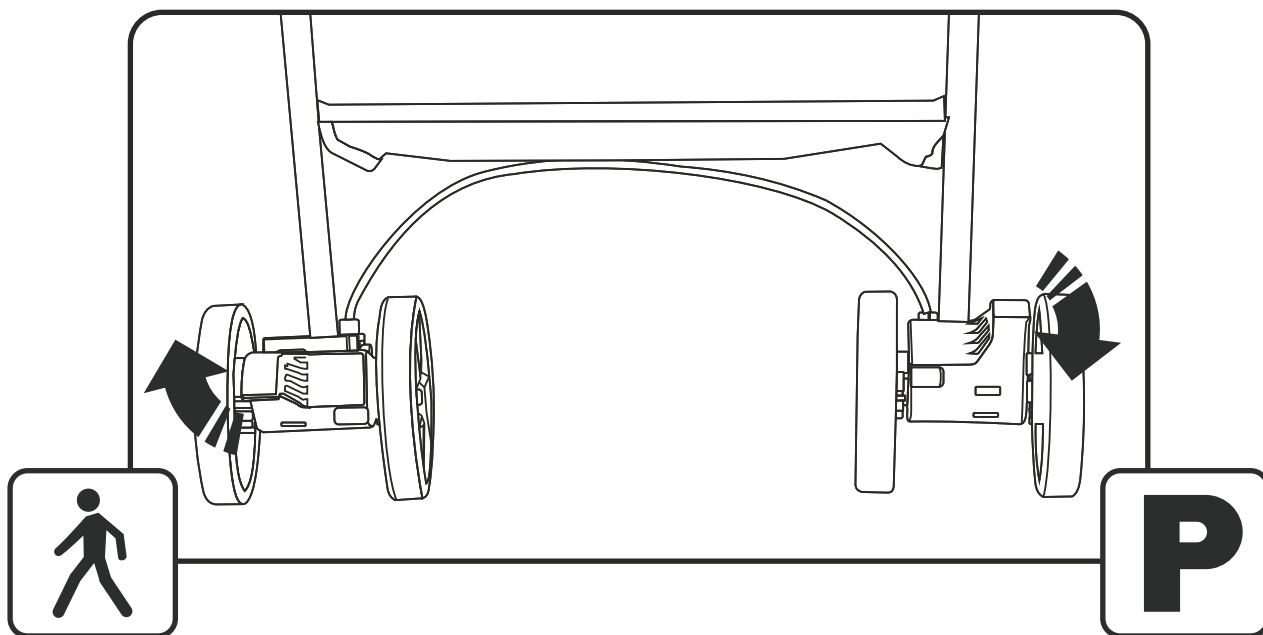


FOLDING

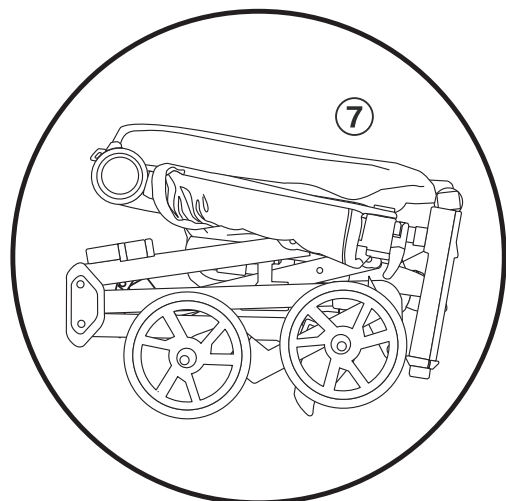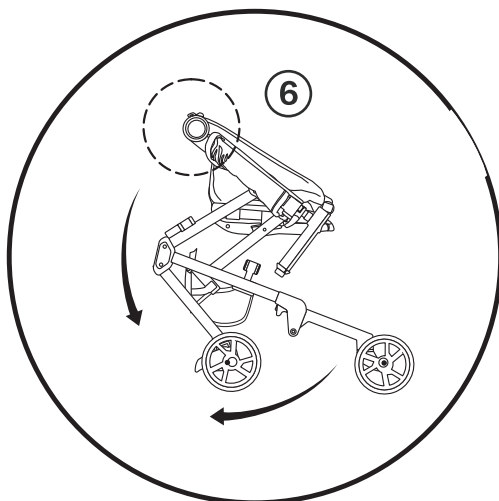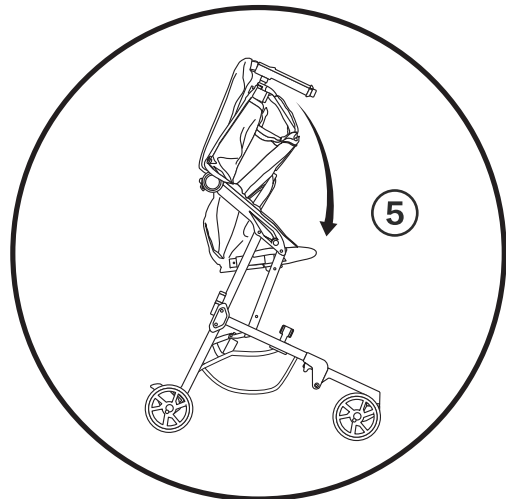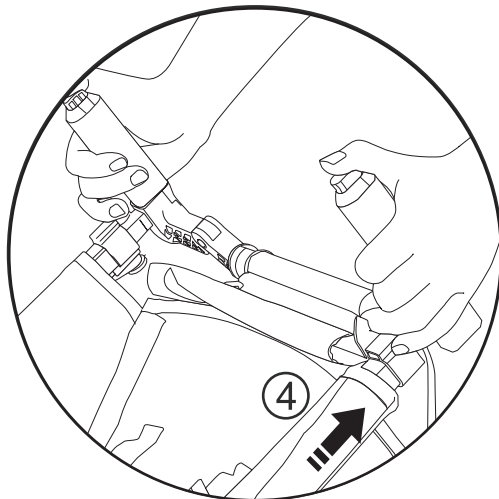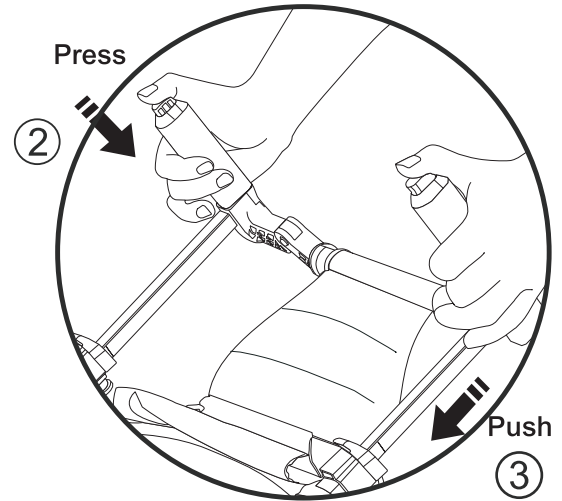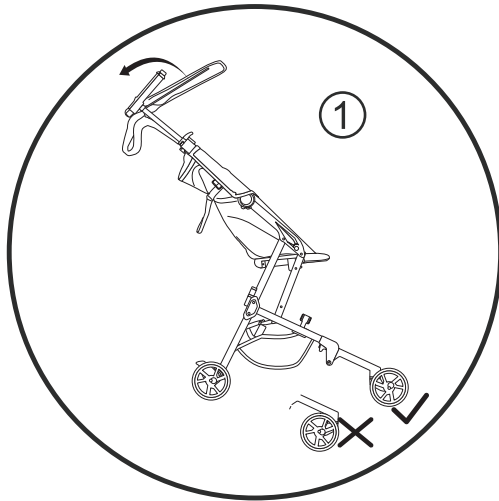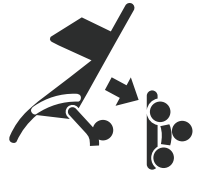       

FOLDING

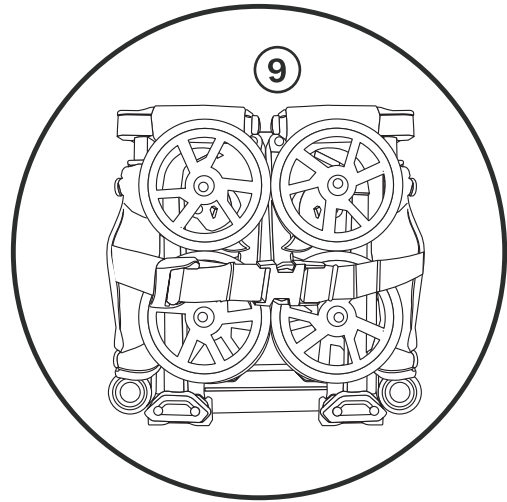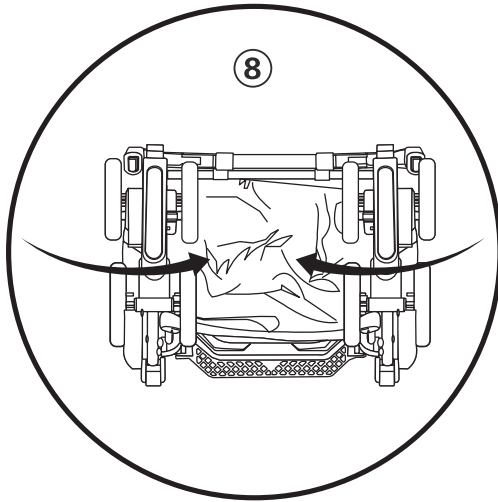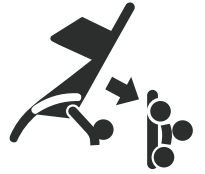   

Hand bag is optional accessories

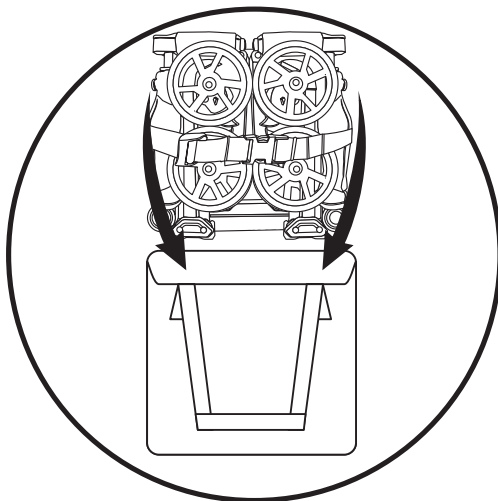 

baby
★
JOY