



TIPS:

Your suggestions and comments for Costway are really important to us!
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2018

Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office:Fontana

UK office:Ipswich



USER'S MANUAL

**Foot Spa
EP24120BL**

INSTRUCTIONS FOR USE:

1. Ensure that the unit is unplugged before filling with water. Fill with warm water to the MAX fill line located on the inside of the tub.
2. Place the unit on the floor in front of a chair. It is recommended to place the product on a towel.
3. Plug the unit into a 120V power supply.
4. Sit down and place your feet in the water.



5. To turn the unit on, press the power button. The roller/heat/bubble/red light function will start automatically.



6. To select the temperature, press the heat button. Keep pressing to reach the desired temperature (between 95°F to 109.4 °F)
Note: For best results always start with warm water in the footspa.



7. Select desired function like heat, bubble massage and rolling Rollers massage by function button, please press this button as following:
(1) 1 time Roller function; (2) 2 times Heat function (3) 3 times bubble function; (4) 4 times Roller+heat Function; (5) 5 times Heat+bubble function (6) 6 times heat+roller+bubble function

8. To turn the footspa off, press the on button again.
9. To empty: First, unplug the unit. Tip the unit, allowing water to pour out of the corner furthest from the control panel. DO NOT pour water over the control panel.

Maintenance

To Clean

Unplug the unit and allow it to cool before cleaning. Clean only with a soft, damp cloth.

- Never allow water or any other liquid to come into contact with the control switch.
- After cleaning, wipe surfaces with a dry cloth.
- Never use abrasives, detergents or cleaning agents.
- Periodically straighten the cord if it becomes twisted.

To Store

Unplug the appliance from the outlet and allow cooling.

- Store in its box or a clean, dry place.
- To avoid breakage, do not wrap the power cord around the unit.
- Do not hang the unit by the power cord.
- This appliance is designed for household use only.

Caution : Failure to follow these directions and warnings can result in serious injury and/or product damage.

- ⚠ Do not use this appliance in the bathroom, or near any open water sources.
- ⚠ Do not attempt to plug in and unplug the unit when your feet are inside the water.
- ⚠ Do not stand up on the unit; use it only when you are in a sitting position.
- ⚠ Do not switch on the appliance when you don't intend to use it.
- ⚠ Do not use the remover when without the roller head attached.

Warranty

The benefits conferred by this warranty are in addition to all implied warranties, other rights and remedies in respect of the product which the consumer has under the Trade Practices Act and similar State and Territory Laws.

The original purchaser of this foot spa is provided with the following warranty, subject to the following conditions.

We warrant this product for a period of 1 year from the date of purchase for all parts defective in workmanship or materials. The product or defective parts will be replaced free of charge.

WARRANTY CONDITIONS

1. This warranty is only valid for appliances used according to the manufacturer's instructions.
2. This appliance must not be modified or changed in any way.
3. Connection must be to the voltage requirements as specified in the ratings label located on the product.
4. The manufacturer does not accept liability for any direct or consequential damage, loss or other expense arising from misuse or incorrect installation and operation of the appliance.
5. Warranty will only be given where proof of purchase is provided, e.g. original invoice.
6. Not designed or warranted for industrial or commercial use.

RETAIN & FILE WITH YOUR RECEIPT.

Your Purchase Receipt/ Invoice is proof of date of purchase. You must be able to present it at the place of purchase to obtain a replacement or service under warranty.

We reserve the right to discontinue items, modify designs and change specifications without incurring obligation.

Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

After the expiry of the guarantee

After the expiry of the guarantee repairs can be carried by the competent dealer or repair service against the payment of the ensuing costs.

NOTED:

Technical data : 120 V 60Hz 450W