


COSTWAY[®]

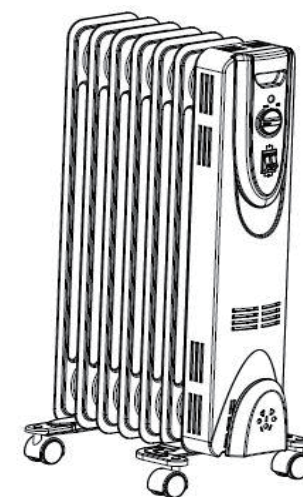

USER'S MANUAL

**1500W Oil Filled Radiator Heater
EP24688US**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

1500W Oil Filled Radiator Heater

IMPORTANT INSTRUCTIONS

When using heater, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following

- 1) Read all instructions before using this heater;
- 2) This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear;
- 3) Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended;
- 4) Always unplug heater when not in use;
- 5) If the power supply is damaged, it must be replaced by the manufacturer, its service agent or similarity qualified persons in order to avoid a hazard;
- 6) Do not use outdoors;
- 7) This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container;
- 8) Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over;
- 9) To disconnect heater, turn controls to off, then remove plug from outlet;
- 10) Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater;
- 11) To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked;
- 12) A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored;
- 13) Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons;
- 14) Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip);
- 15) **SAVE THESE INSTRUCTIONS.**


PLEASE READ AND SAVE THESE INSTRUCTIONS.

Thank you for choosing our heater. Please read this instruction carefully before using and keep it for future reference.

I Product characteristics

- 1.3 Heat settings; Max. 1500 watts;
2. Adjustable thermostat;
3. Overheating protection;
4. Safety tip-over switch;

II Product structure diagram

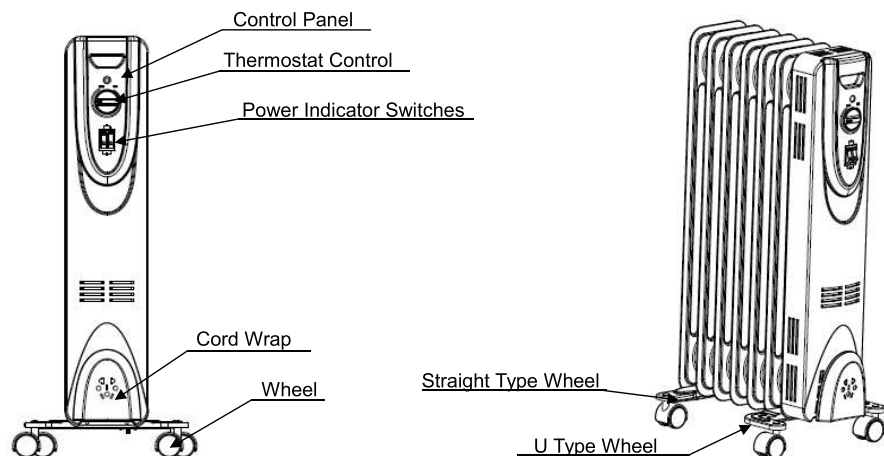

III Operation instruction

1. Assembly

NOTE: This heater is packed with two caster assemblies that must be installed between the radiator fins at each end of the base pipe to make the unit portable and operable. Do not use heater in any other orientation other than upright.

- a. Be sure the heater is unplugged and off.
- b. Keep cord out of the way by winding it around the cord wrap.
- c. Turn heater upside down and place the two metal U-shaped bolts over the base pipe, between the radiator fins on either end of the heater, so the screw threads extend beyond the pipe.
- d. Position assembly bracket so the two slots on the bracket line up with the two screws on the end of the heater.
- e. Set each assembly bracket over the threaded end of each U-shaped screw and fasten them securely in place with wing nuts.
- f. Turn the heater upright.

2. Operating instruction

3. Always unplug the heater and allow it to cool before handling.

Never pull the unit by the cord - use the handle. During the first few minutes of initial use, you may notice a slight odor. This is normal and will quickly disappear. Place the heater only on the floor. It radiates heat in all directions. Always leave ample space around it (3 feet / 0.9 m) so it is not too close to a wall.

- a. Plug the heater into a standard AC outlet.

CAUTION: Be sure that no other appliances are plugged into same circuit with the heater as a circuit overload could occur.

- b. There are 3 power levels indicated. Press switch I for power level 1 600W and switch II for power level 2 900W. When both switches are on this indicates power level 3 1500W.
- c. To set the desired temperature for the room, turn the temperature control knob clockwise to increase the temperature and counterclockwise to lower the temperature.
- d. When heater is no longer required, turn the temperature control knob to the lowest setting. Then switch off the power indicator switches.

Note: Once the heater has cooled wrap the cord into the cord wrap. Use the handle to move the heater to a new location and store in a cool dry location.

4. During season care:

- a. Before cleaning, be sure to turn off and unplug the heater;

- b. Carefully wipe the unit with a soft damp cloth. Please be very cautious near the motor and heating elements;
 - c. Do not immerse the heater in water;
 - d. Never use gasoline, benzene or thinner. This will damage the surface of the heater;
- After cleaning, be sure to completely dry the unit with a cloth or towel.
- Note: Do not use waxes or brush polish, since these will react with the heater, resulting in discoloration.

After season care:

- a. Store heater in a cool and dry location with power cord properly secured;
 - b. Please store the unit in its original carton or suitable container.
- Note: Do not attempt to repair or adjust any electrical or mechanical functions in this unit; do not remove knob parts from the heater.

IV Technical parameters

| Model # | Number of fins | Rated voltage(V) | Frequency (Hz) | Rated power input (W) : | Power input setting I (W) | Power input settingII (W) | Total power input setting III(W) |
|---------|----------------|------------------|----------------|-------------------------|---------------------------|---------------------------|----------------------------------|
| HD907-7 | 7 | 120 | 60 | 1500 | 600 | 900 | 1500 |

NO TROUBLESHOOTING INFORMATION

NO STORAGE INFORMATION

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us!
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2019
Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.

