

EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

ES

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

PL

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

US office: Fontana

 
UK office: Ipswich

AU office: Truganina

DE office: Hamburg

FR office: Saint Vigor d'Ymonville

PL office: Gdańsk

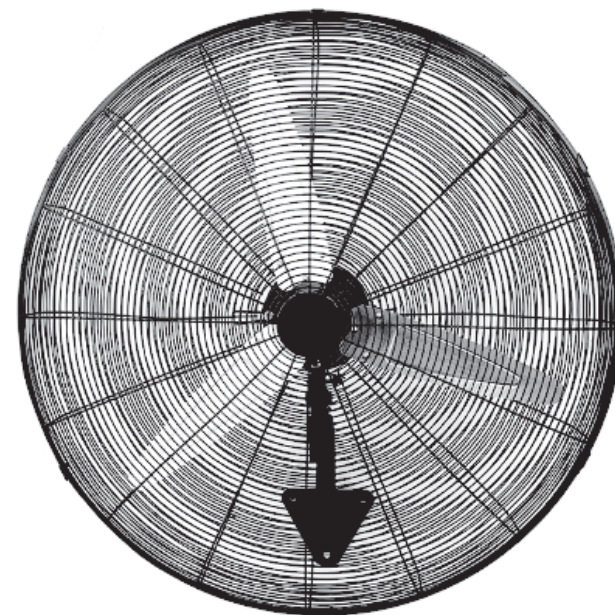

USER'S MANUAL

Wall Mounted Fan ES10116US

NOTES

Before use, please check if the rated voltage and rated frequency are in line with the local power supply, so as not to damage the fan motor.
Grounding screw should have good grounding.

SAFETY GUARD

Strictly prohibited to function in conductive dust or flammable, explosive or high humidity corrosive gases around the environment.

Before shifting position of the fan, power supply must be cut off, and blade in static position.

Avoid placing fan near curtain and small corners to enjoy maximum airflow.

Do not handle power plugs with wet hands, to avoid risk of electric shock.

When the fan is running, please do not insert your hands or other objects in the running blade.

Children of less than 3 years should be kept away unless continuously supervised.

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

This appliance can be used by children aged from 8 years and above and experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Young children should be supervised to ensure that they do not play with the appliance.

It is not recommended that ceiling fans and gas appliances be operated in the same room at the same time.

If the cord is damaged, it must be replaced by qualified personnel to avoid risk.

ASSEMBLY

Unscrew the screws on the fan body and mount the rear guard onto the fan body by fastening these screws.


Assemble the blade onto the motor shaft and fix it with the bolt on the blade.

Lock the front guard onto the rear guard.

Mount the fan onto the base tube and fix it by screws.

Mount the whole fan onto the wall with bolts.

Mount the control box onto the wall.

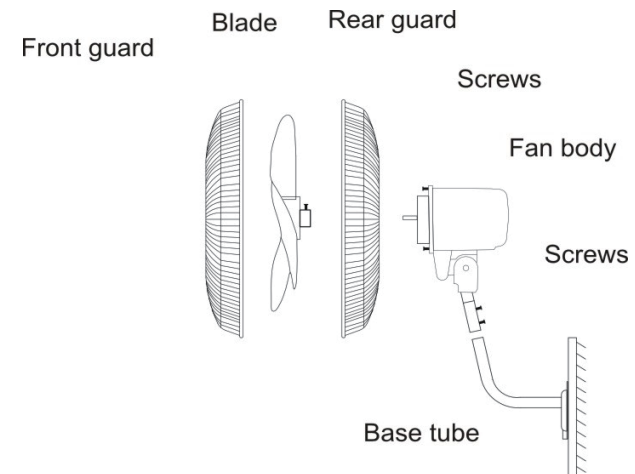

OPERATION

Plug the power cord into 110-120V AC.


Adjust the tilting angle to the required position.

Twist the switch on the control box to turn on or off the fan and select to different speeds.

0=Stop 1=Low speed

2=Medium speed 3=High speed

Swing function: Turn the ON/OFF switch for swing function.

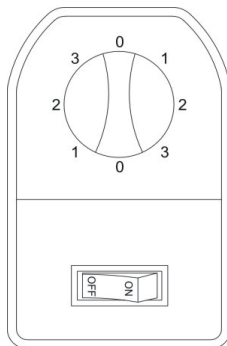

CARE AND STORAGE

Turn the control to OFF and unplug the fan before cleaning.

Use only soft, damp cloth to clean the fan.

Do not place the fan in water and never allow water to drip into the motor housing.

Do not use gasoline, paint thinner or other chemicals to clean the fan.

To clean the fan blade, remove the front grill and wipe the blade and grills.

Reassemble the fan by snapping the front grill into place.

Store the fan in its original box or cover the fan to protect it from dust.

Store it in a safe, cool, dry place.

DISPOSAL



Do not dispose the product or any other part of it as unsorted municipal waste.

Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.