


Instruction for use (HW57990)

Angle adjustment method

 
- You can choose the Angle you like from the six stages in the picture from ① to ⑥.
- When the return time is pushed forward by 90 degrees, You can reply to the flat.
- The free adjustment between ① (0 degree) and ⑥ (85 degrees) is adjusted to 17 degrees for each stage.

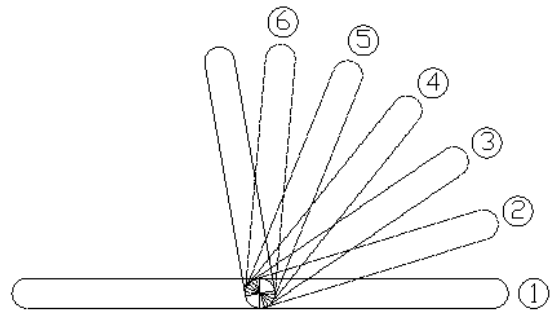

Don't jump on the product, otherwise you may get hurt and wear out the product.



Please be careful not to get hurt when children are in use.



Don't put it in an uneven place, or you may fall and damage the product.



Please use tatami in a flat place and place it on a carpet, in order to protect the floor surface.



Attention

- Don't fierce body moving in a product, otherwise it may fall down and slide.
- Please do not use backrest and seat cushion to play.
- Do not sit on the backrest or handrail of the product, otherwise it may fall off.
- To be safe, please do not reach the regulator with the adjustment Angle.
- Please don't open the zipper.
- Products should avoid direct sunlight and heat.
- If you are sensitive to the smell of the product, please place the product in a ventilated place. (the smell is not harmful.)