

 


COSTWAY®

Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana UK office: Ipswich AU office: Truganina

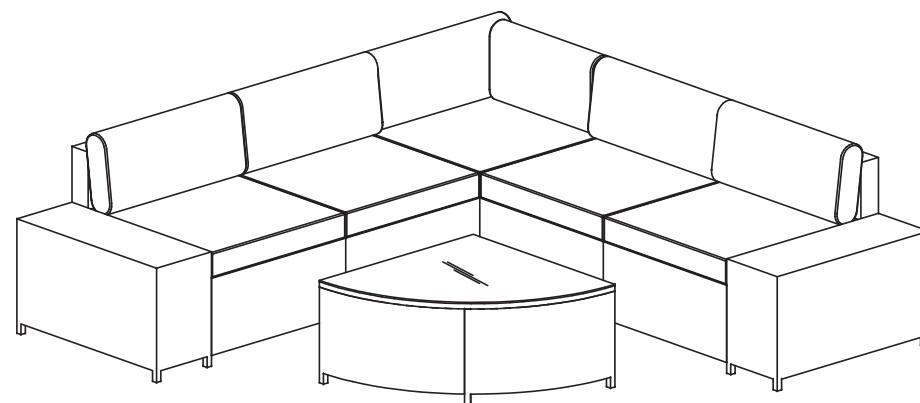

Contact Us !

Do NOT return this item.

Contact our friendly customer service department for help first.



US:cs.us@costway.com
UK:cs.uk@costway.com
AU:cs.au@costway.com

USER'S MANUAL

 
 
 
 
 
6 Pcs Wicker Conversation Sofa Set HW66413

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.




Before You Start

- ⚠ Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⚠ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⚠ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- ⚠ Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

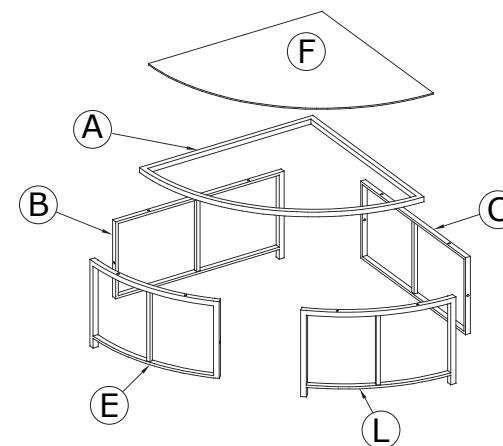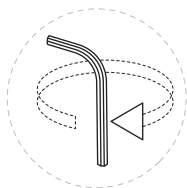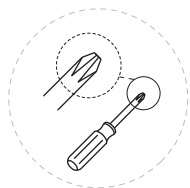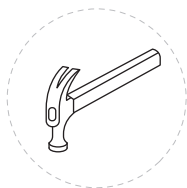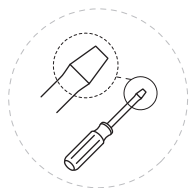


Coffee table x1

Part	A	B	C	L	E	F
Q.ty	1	1	1	1	1	1

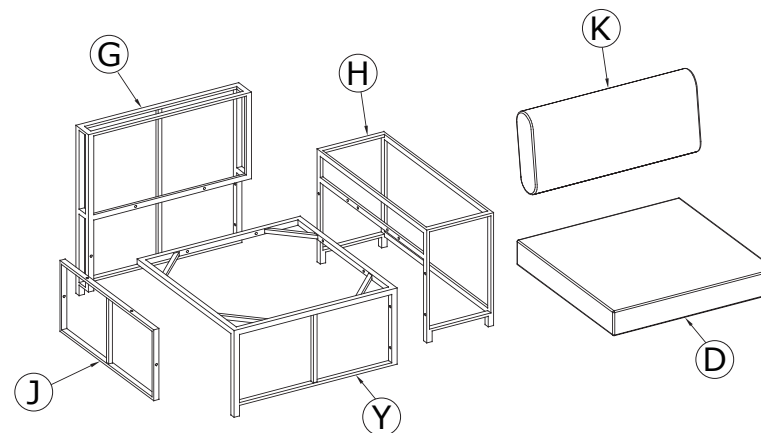 


Left side chair x1


Part	G	H	Y	J	K	D
Q.ty	1	1	1	1	1	1

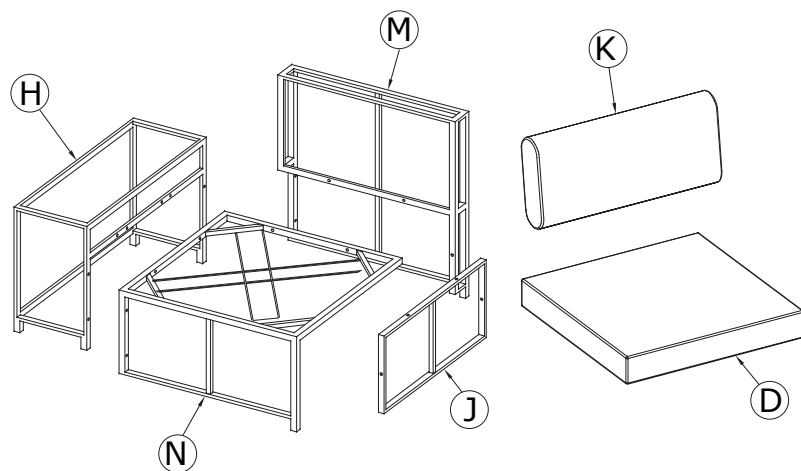 **Right side chair x1**

Part	H	J	K	D	M	N
Q.ty	1	1	1	1	1	1

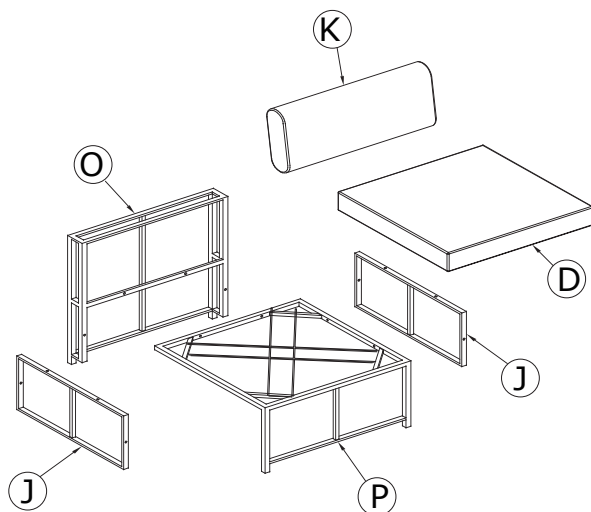 

 
 
**Armless chair x2**

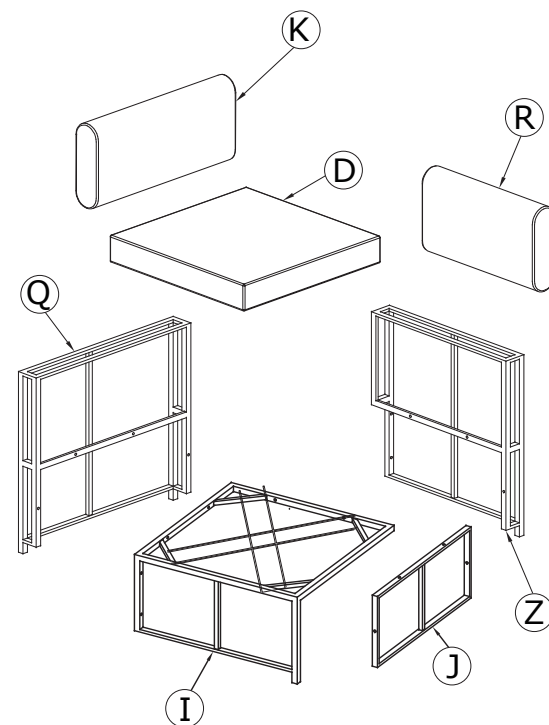Part	J	K	D	O	P
Q.ty	4	2	2	2	2

**Corner chair x1**

 
Part	I	J	K	D	Z	Q	R
Q.ty	1	1	1	1	1	1	1

SCREW LIST


1	2	3	4
			
Allen Wrench Q.ty 2	M6x35 Bolt Q.ty 68 PCS	M18 Washer Q.ty 68 PCS	C-Clip Q.ty 8 PCS

COFFEE TABLE X1

STEP 1


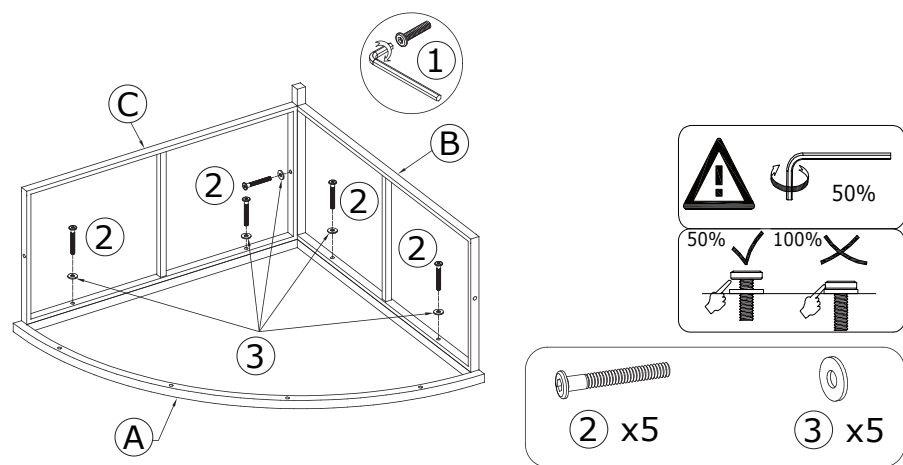


 STEP 2

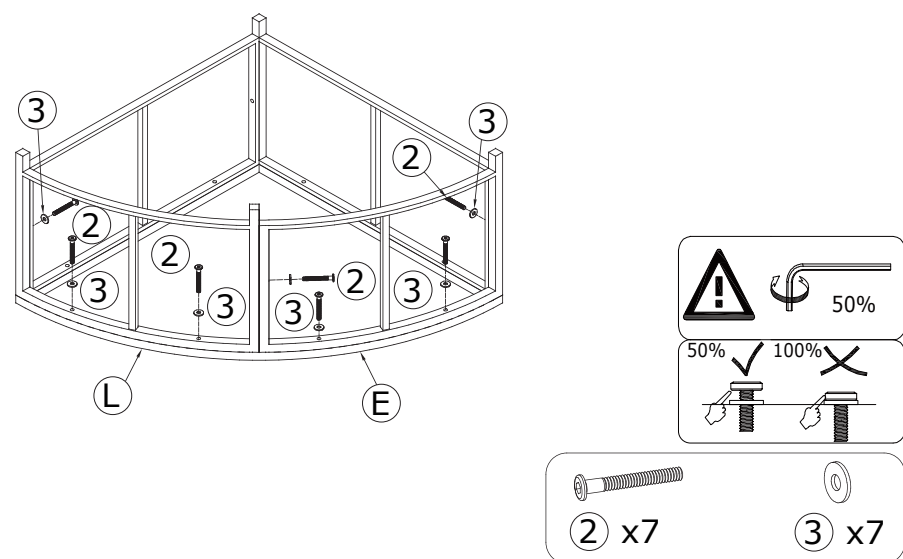


COFFEE TABLE X1

  STEP 3

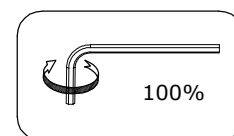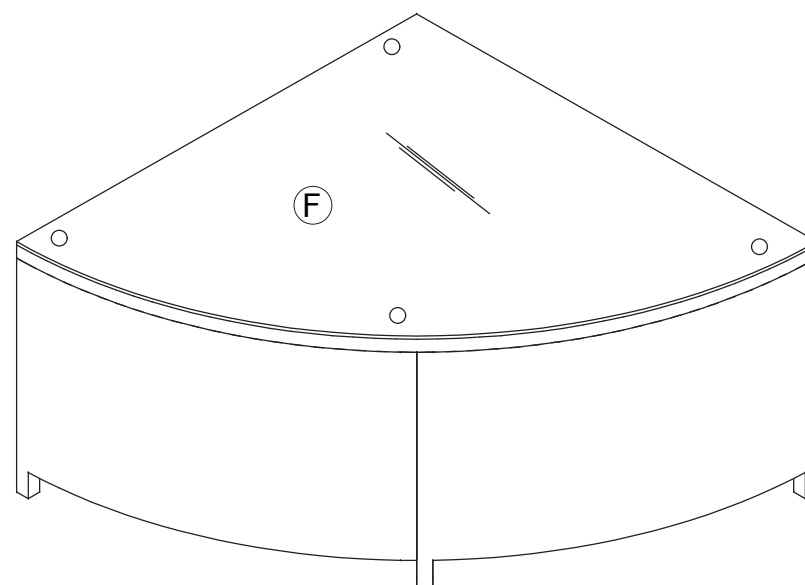


LEFT SIDE CHAIR X1

 STEP 1

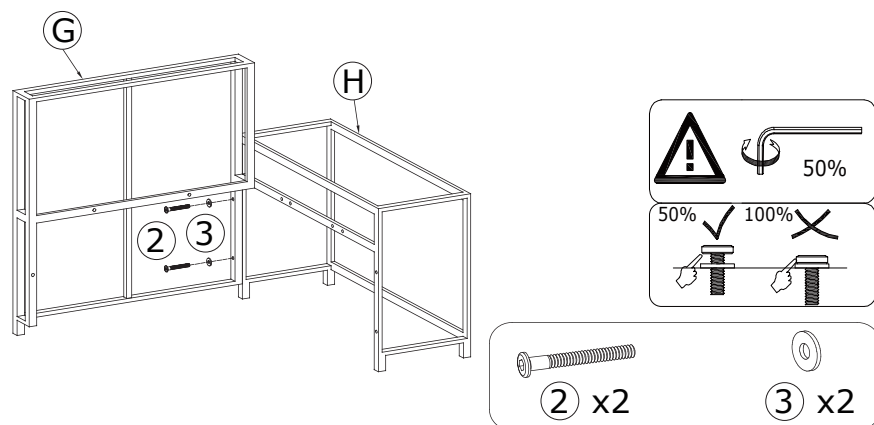


 STEP 2

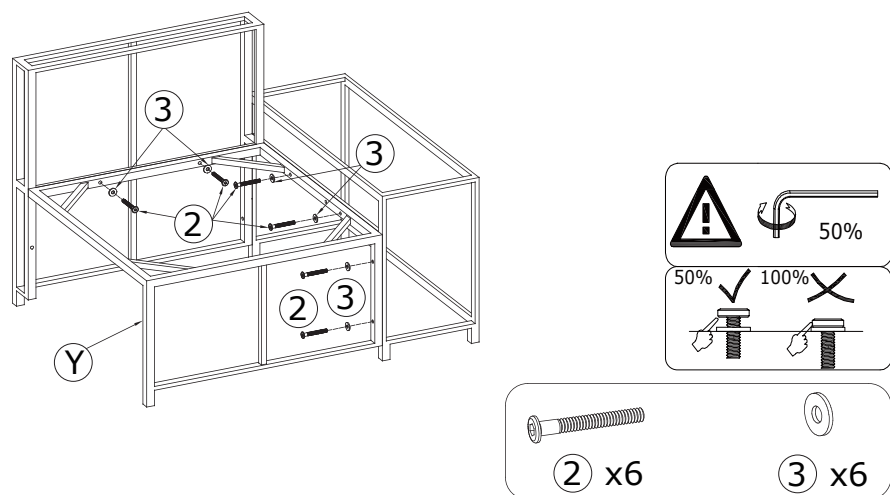


LEFT SIDE CHAIR X1

 STEP 3

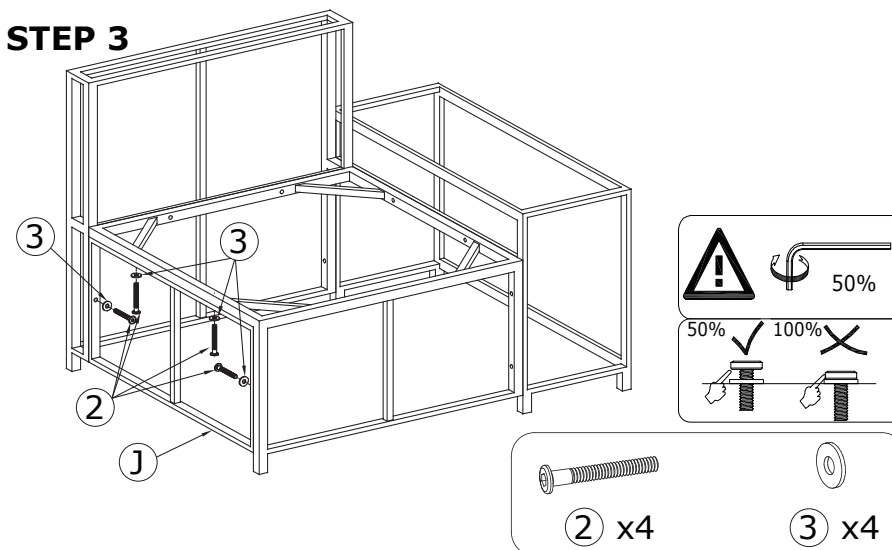


 STEP 4

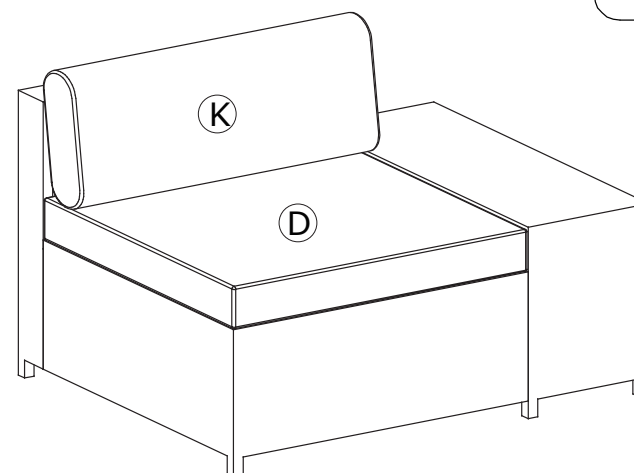


RIGHT SIDE CHAIR X1

 STEP 1

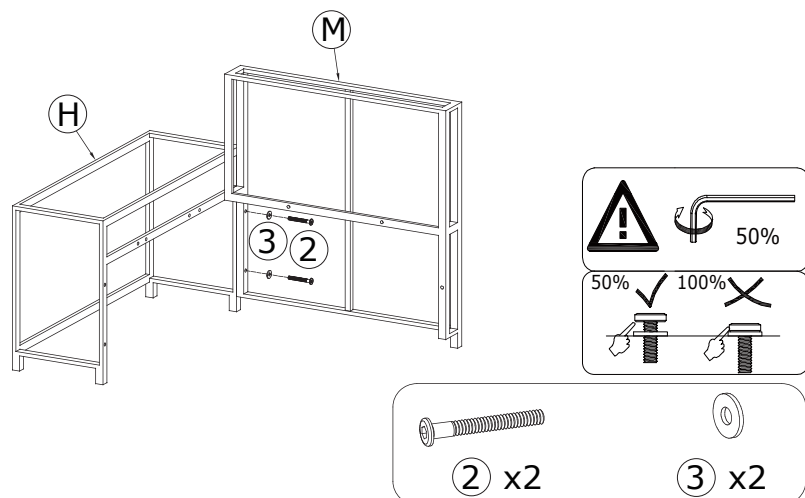


 STEP 2

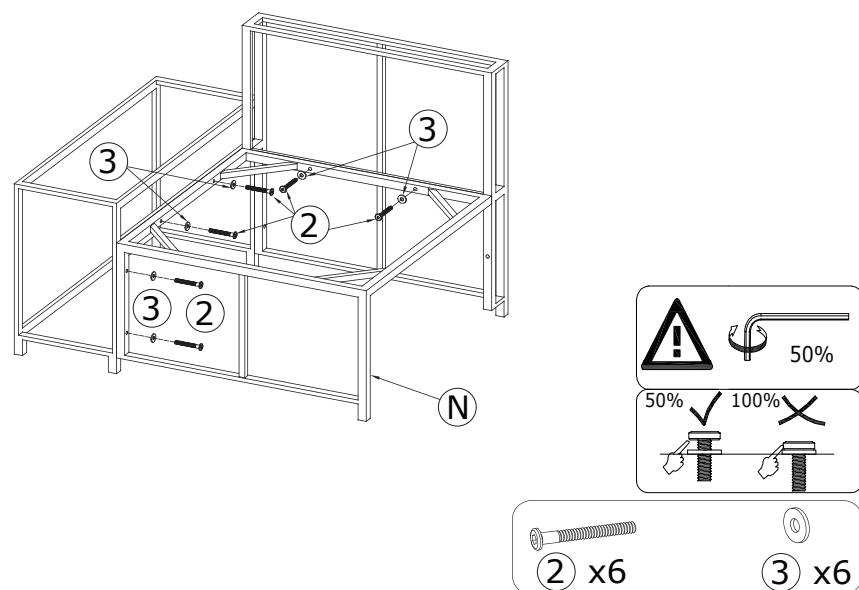


RIGHT SIDE CHAIR X1

 STEP 3

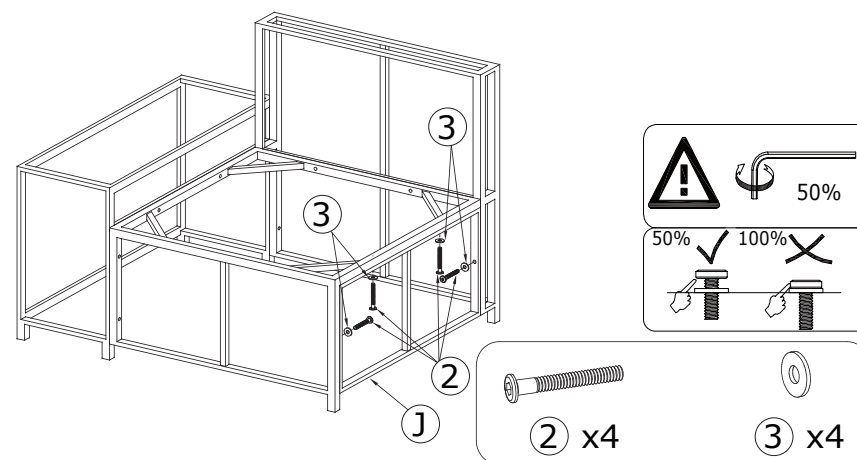


 STEP 4

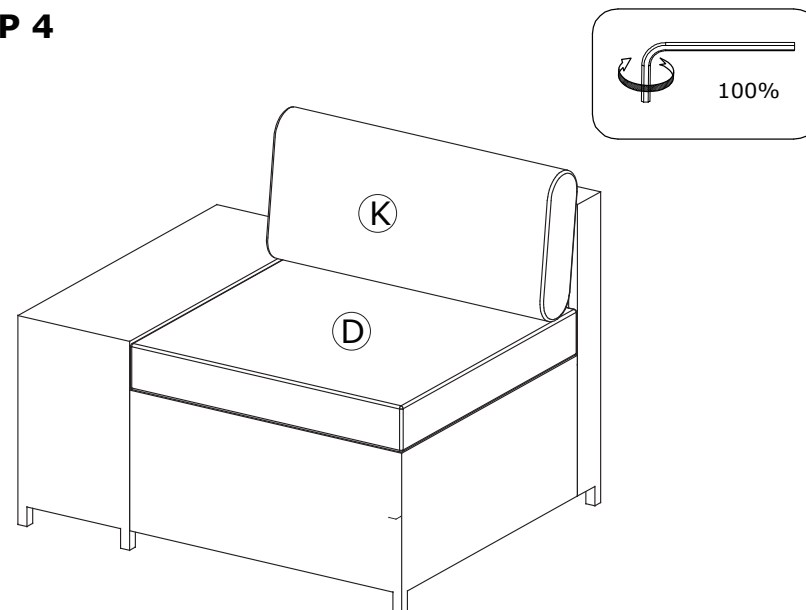


ARMLESS CHAIR X2

 STEP 1


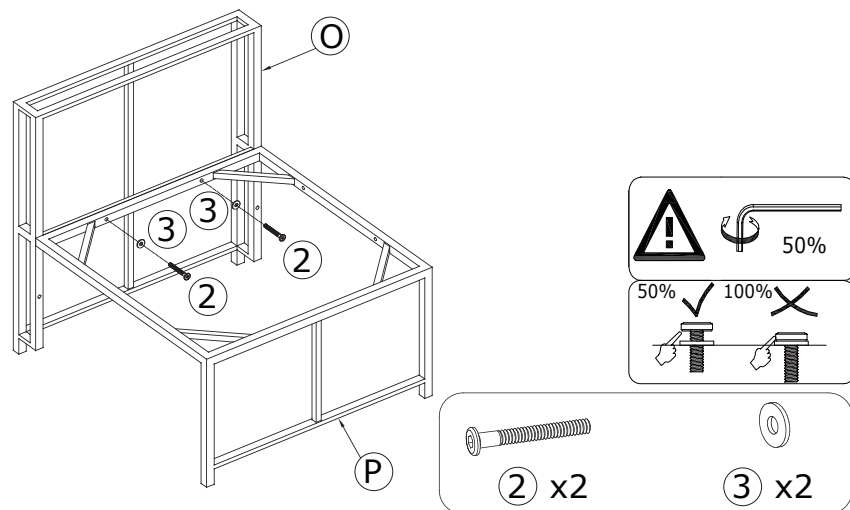


 STEP 2

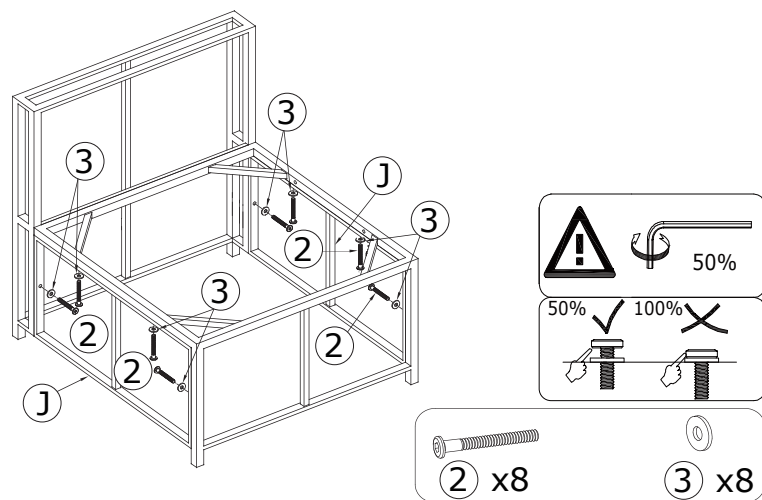


ARMLESS CHAIR X2

  STEP 3

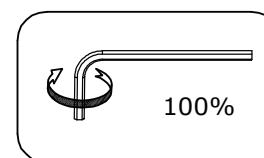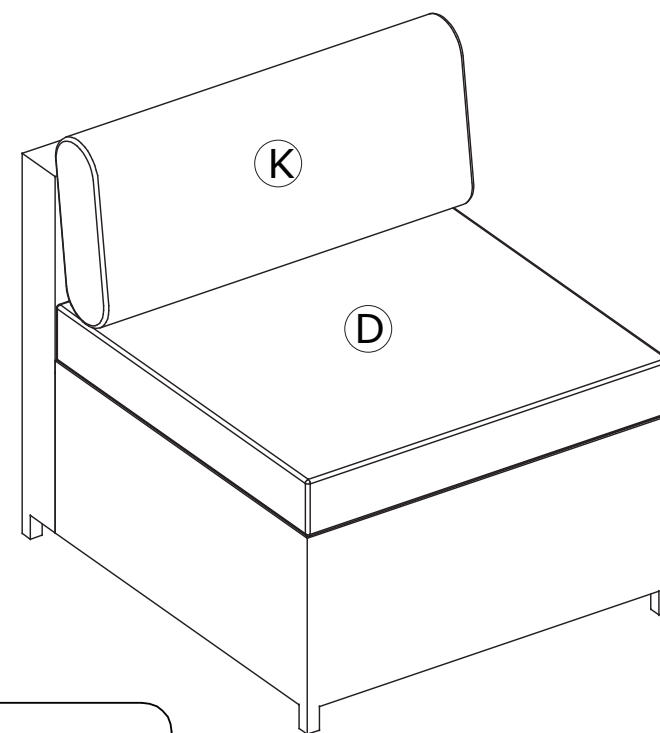


CORNER CHAIR X1


 
STEP 1

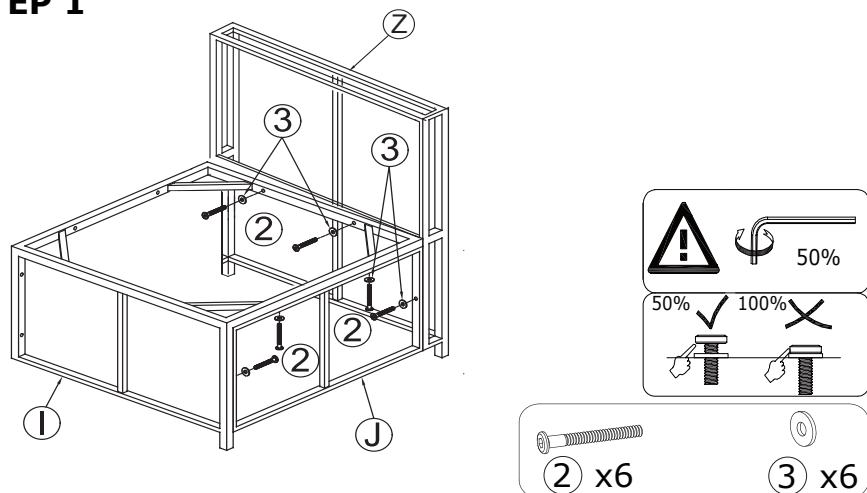


 STEP 2

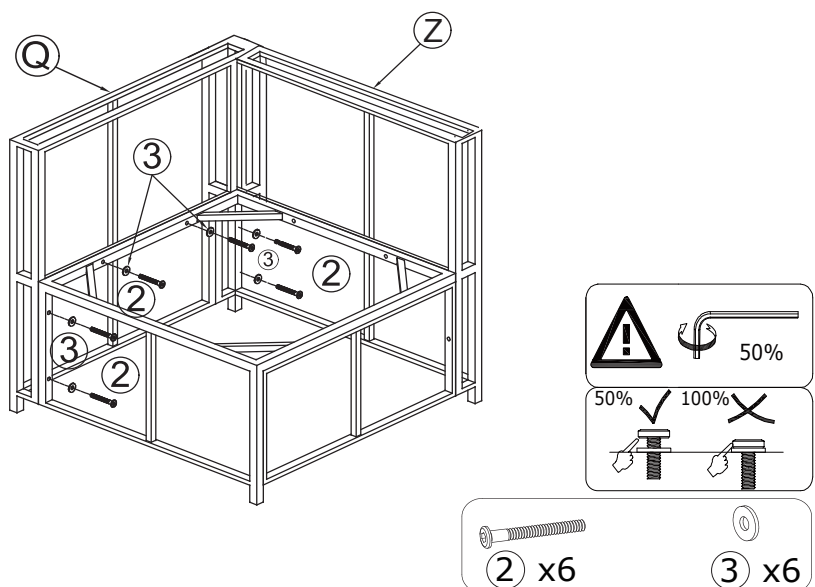


   STEP 3

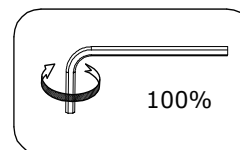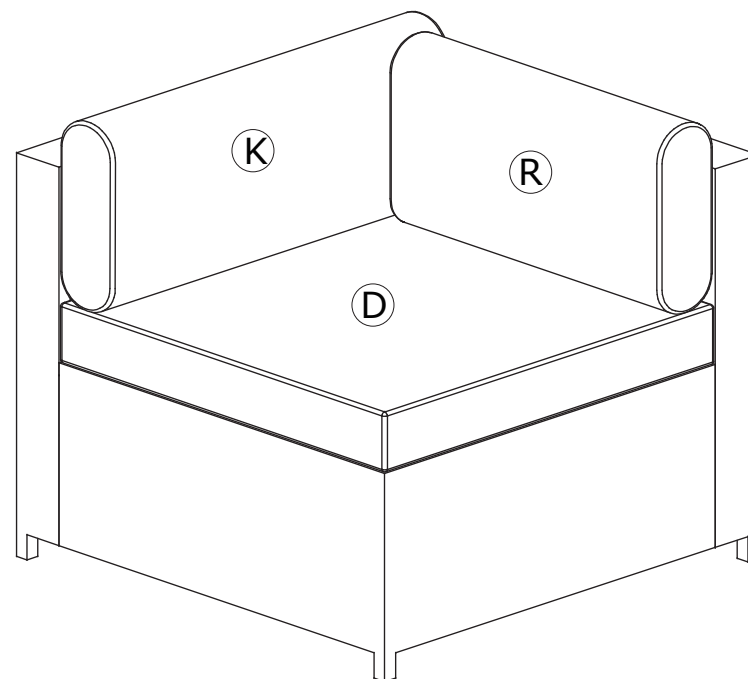

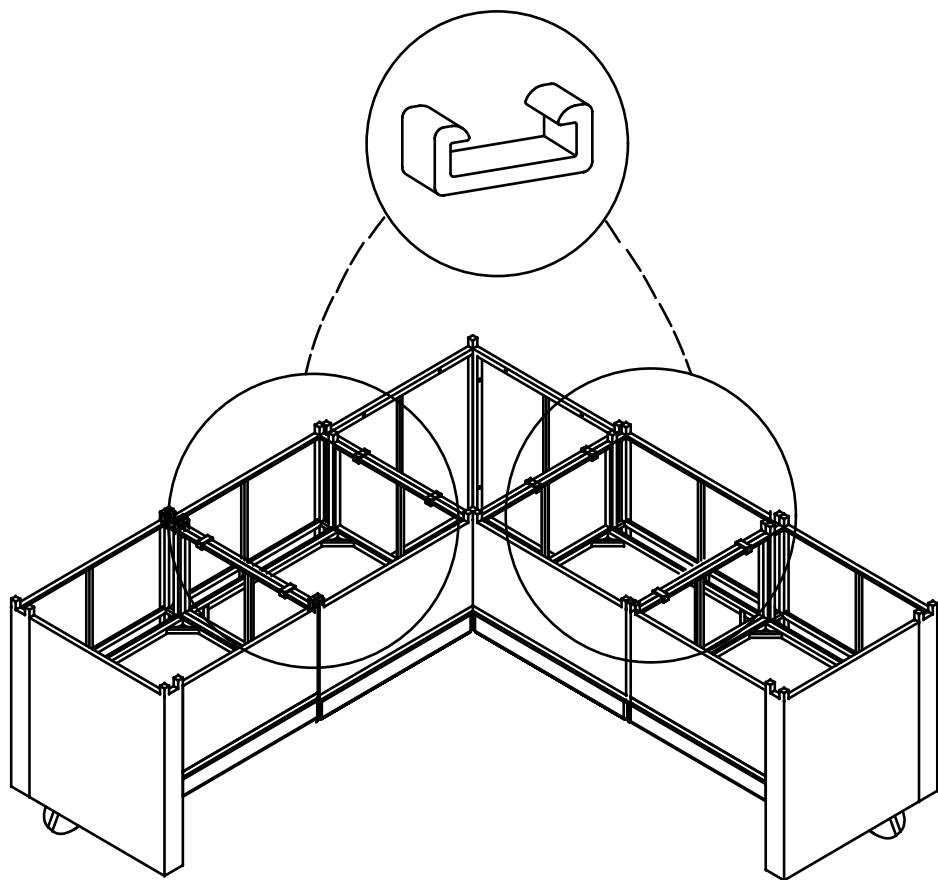

④ x 8

 

Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

Further advice about wood furniture care

Please protect your outdoor furniture with a cover when not in use since

Long-term sunlight exposure will result in the damage on the surface.

In addition to sunlight damage, wood and metal frame suffers when exposed to extremes in temperature and humidity.

Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.