









USER'S MANUAL

Metal Garden Bench HW66421




Before You Start

-  Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
-  Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
-  Work in a spacious area, preferably on a carpet close to where the unit will be used.
-  Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

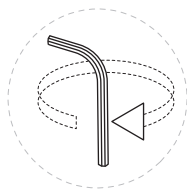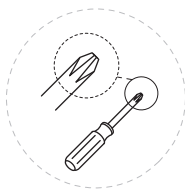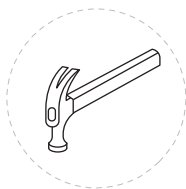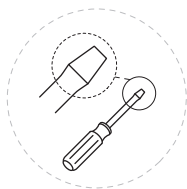


Board Identification


Not actual size

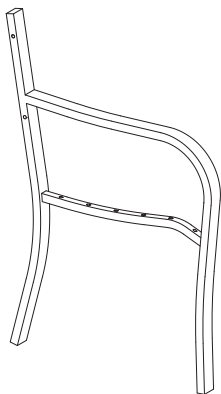

Arms x 2

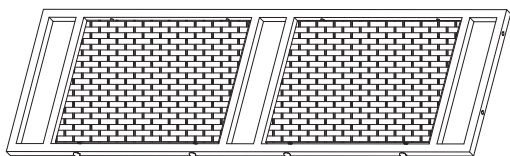


Back x 1

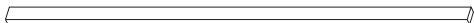

Seat slats x 6

Board Identification

Not actual size

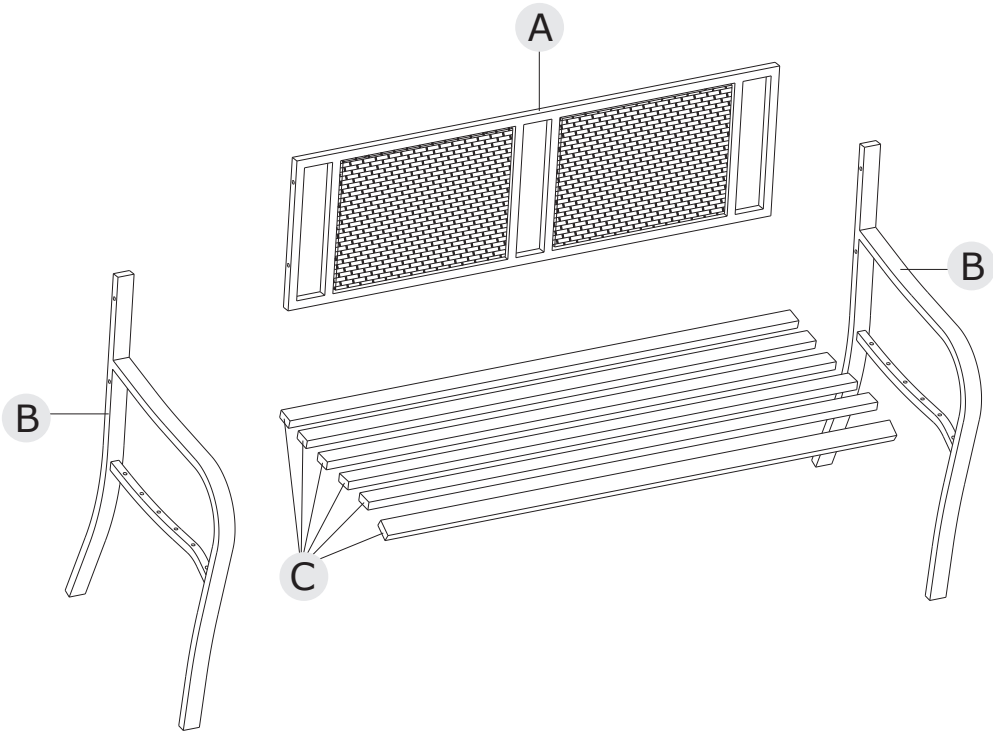

Hardware List

Actual size

BOLT

Ⓓ x 12



M6 x 35mm

BOLT


Ⓔ x 4



M6 x 55mm

WASHER


Ⓕ x 16

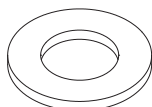

M6

ALLEN WRENCH

Ⓖ x 1

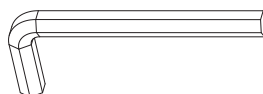


4 x 4

STEP 1 *PRODUCT ASSEMBLY*


Attach the seat slat **(C)** to the arm **(B)** by bolts **(D)** with washers **F** through the pre-drilled holes on the arm into the pre-welded nuts on the seat slat. Repeat step for the other side arm **(B)**.

IMPORTANT: *Do not tighten completely until assembly is completed.*

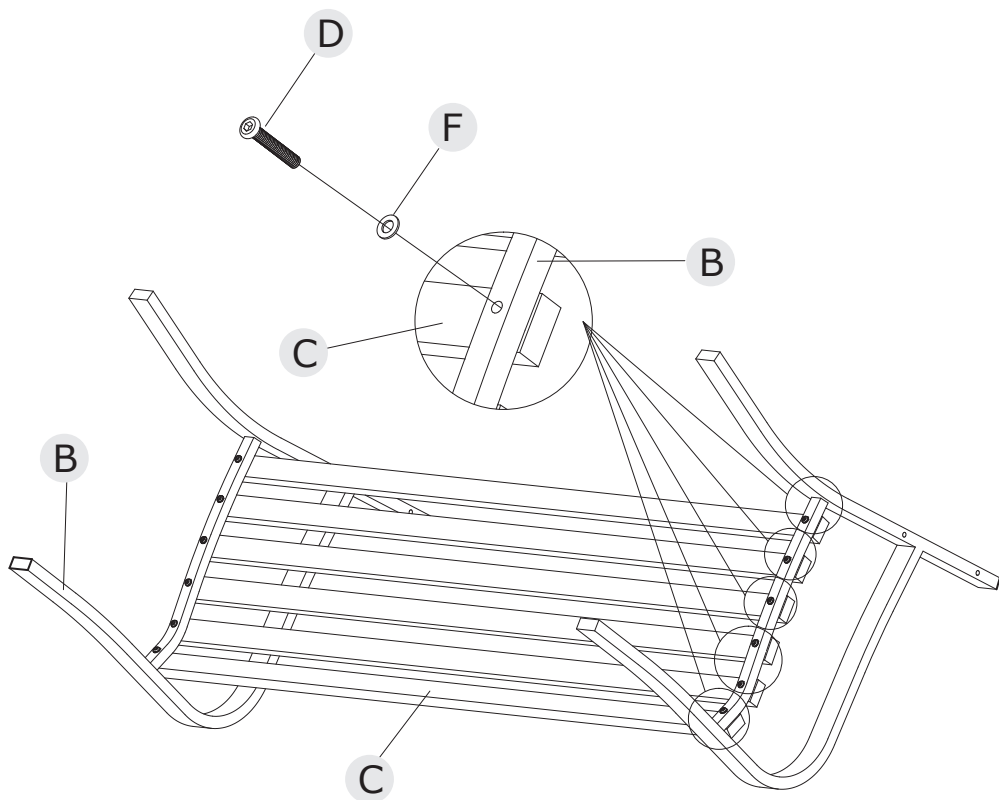


STEP 2*PRODUCT ASSEMBLY*

Attach the back (A) to the arm (B) by inserting bolts E with washers F through the pre-drilled holes on the arm into the pre-welded nuts on the back. Repeat step for the other side arm (B).

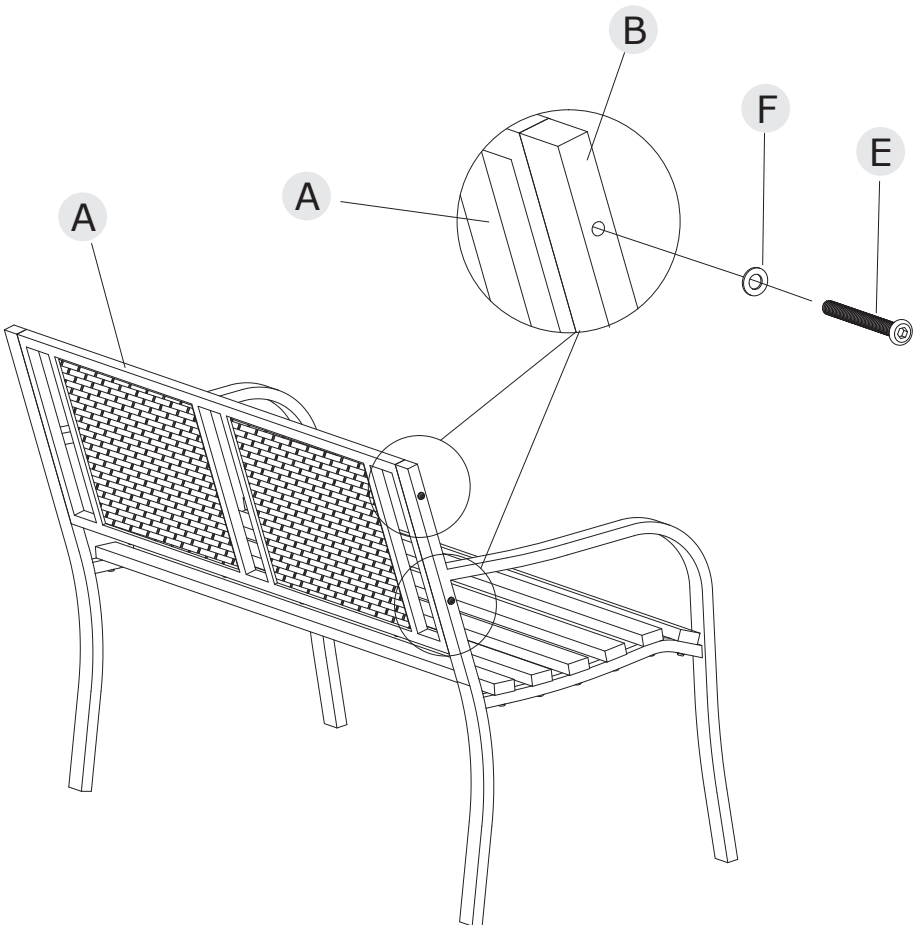


STEP 3 *PRODUCT ASSEMBLY*

Tighten all the bolts with the allen wrench ,
and turn the bench to the upright position.
Your bench is now ready for use, so relax & enjoy!

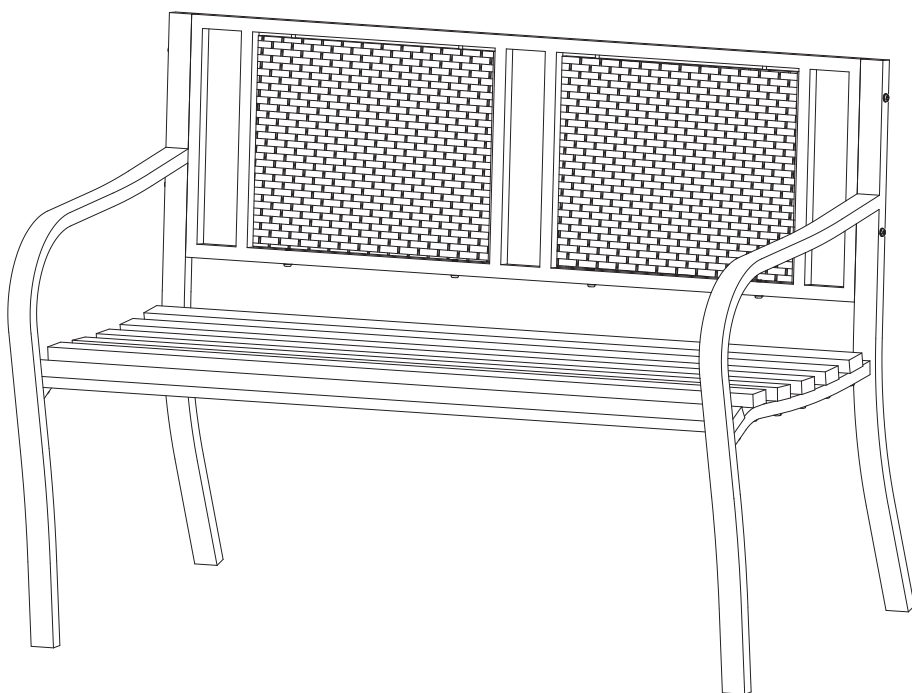

STEP 4*PRODUCT ASSEMBLY*

Maximum Loads

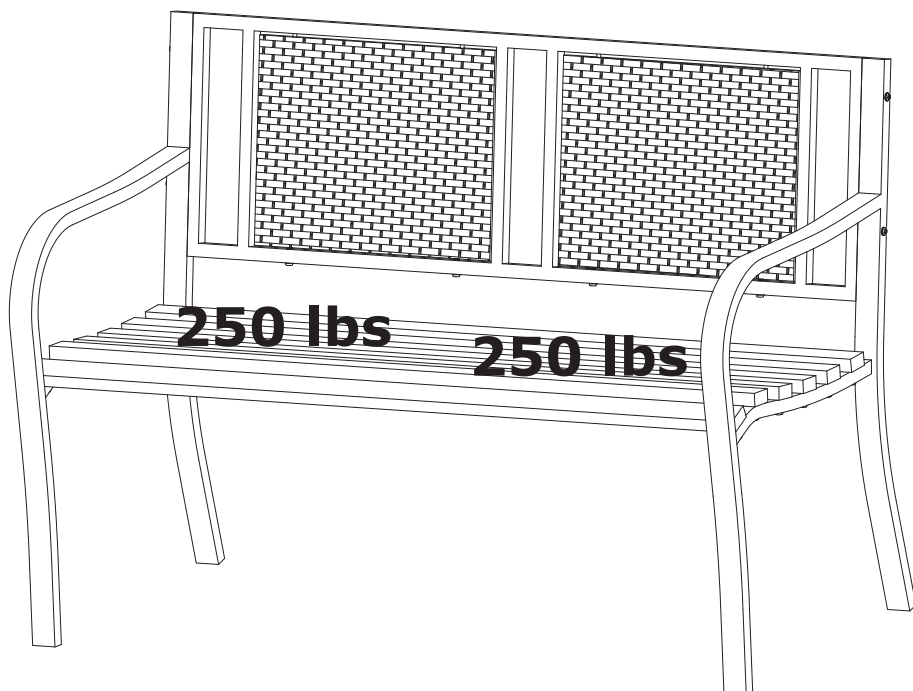

⚠ WARNING

This item is only suitable within the specified maximum load-bearing. Heavier loads than the indicated load capacity may cause instability, resulting in possible injuries.

Care and Maintenance

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment.

Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood.

It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.



Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana

UK office: Ipswich

AU office: Truganina



Contact Us !

Do NOT return this item.

Contact our friendly customer service department for help first.



US: cs.us@costway.com

UK: cs.uk@costway.com

AU: cs.au@costway.com