
# COSTWAY

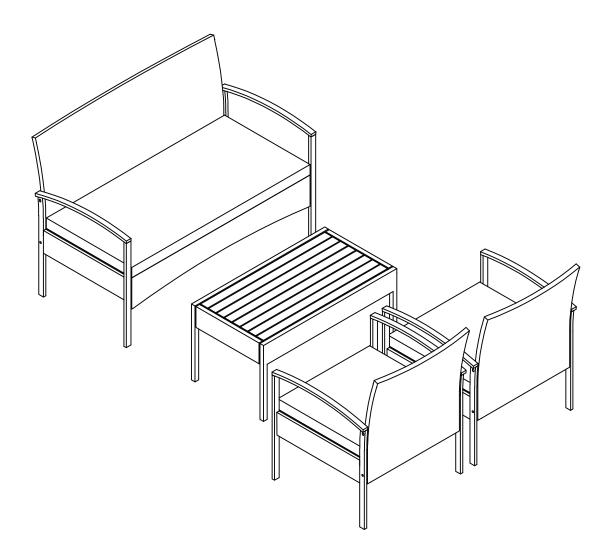

#### **USER'S MANUAL**

#### **4-Piece Wicker Conversation Set** HW67328

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

#### Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first. Replacements for missing or damaged parts will be shipped ASAP!

**Follow Costway** 













## **Contact Us!**

#### Do NOT return this item.

Contact our friendly customer service department for help first.





## **Before You Start**



- Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⚠ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⚠ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- Keep the handtools close at hand. Do not use power tools to assemble your furniture.

  They may scratch or damage the parts.

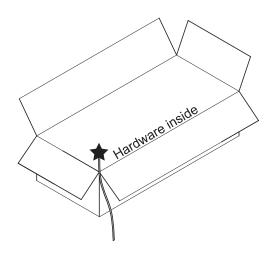

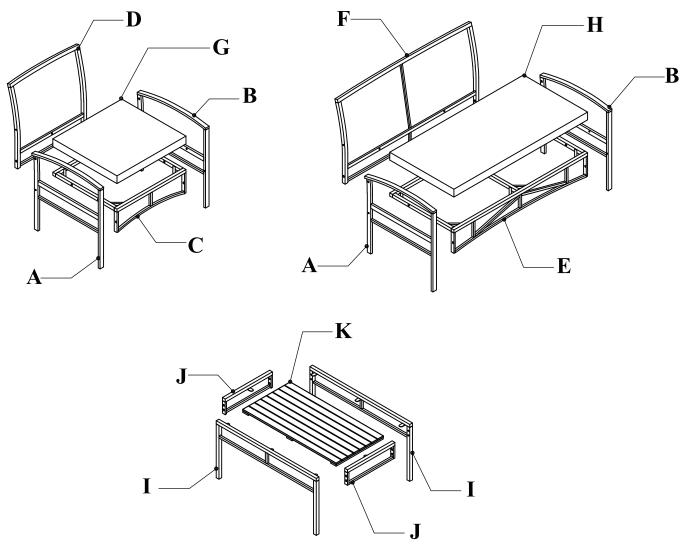

#### **Notice:**


- 1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 2. Place the item on a flat ground to adjust and make sure it remains stable.
- 3. Tighten up all screws with tools gradually.
- 4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- 5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 6. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

### Part & Hardware List

A		B	C
	Right Frame (3 pcs)	Left Frame (3 pcs)	Seat frame (2 pcs)
D		E	F
	Back frame (2 pcs)	Bench seat frame (1 pc)	Bench back frame (1 pc)
G		H	
	Seat cushion (2 pcs)	Bench cushion (1 pc)	Table leg frame (2 pcs)
J		K	
	Table Side frame (2 pcs)	Table top wood (1 pc)	Bolt M6 x 30 mm (26 pcs)
2			4
	Bolt M6 x 35 mm (16 pcs)	M6x1 Washers (42 pcs)	Allen key M4 (1 pc)


#### **STEP 1** (2 x Chair assembly)

Connect Back frame (D) & Seat frame (C) with Bolt (2) & Washer (3)

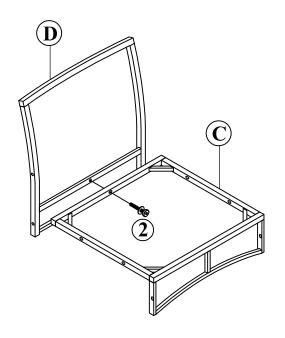


#### STEP 2

Connect part from Step 1 & Right frame (A) with Bolt (1), Bolt (2) & Washers (3)

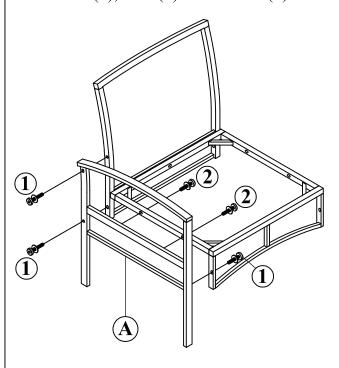


#### STEP 3

Connect part from Step 2 & Left frame (B) with Bolt (1) Bolt (2) & Washers (3)

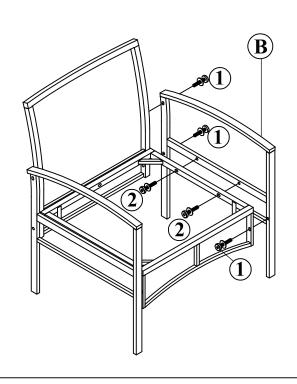


#### **STEP 4**

Put on Seat cushion (G) to complete single chair

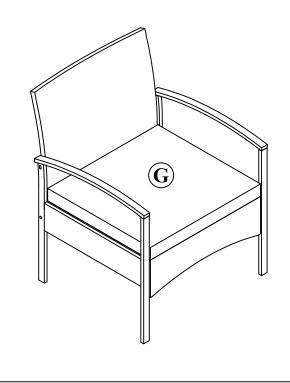


#### **STEP 5** (Bench assembly)

Connect Bench back frame (F) & Bench Seat frame (E) with Bolt (2) & Washers (3)

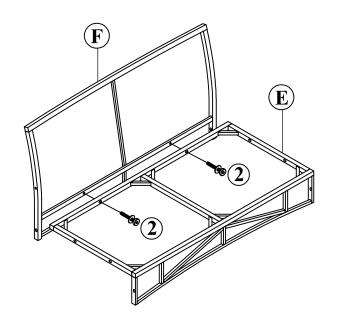


#### STEP 6

Connect part from Step 5 & Right frame (A) with Bolt (1), Bolt (2) & Washers (3)

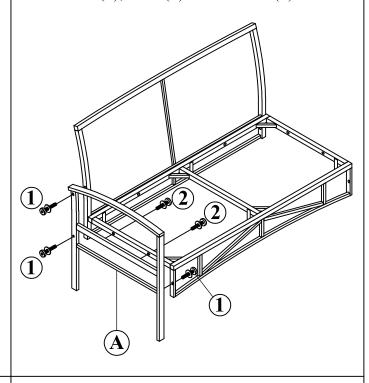


#### **STEP 7**

Connect part from Step 6 & Left frame (B) with Bolt (1) Bolt (2) & Washers (3)

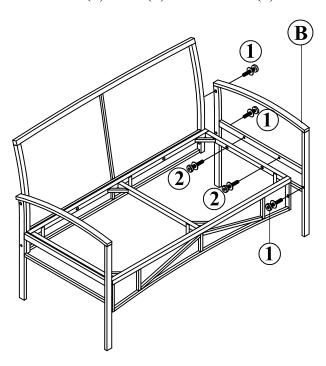


#### STEP 8

Put on Bench cushion (H) to complete Bench

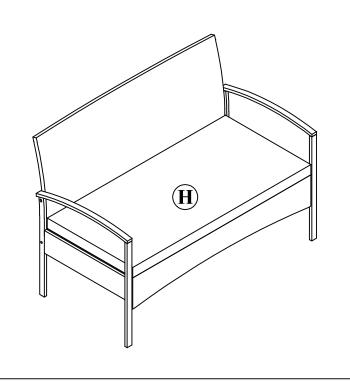


#### **STEP 9** ( Table assembly)

Connect Table leg frame (I) & Table side frame (J) with Bolt (1) & Washers (3)

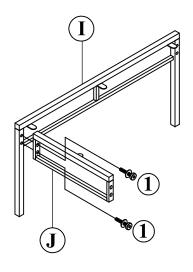


#### **STEP 10**

Connect part from Step 9 & Table side frame (J) with Bolt (1) & Washers (3)

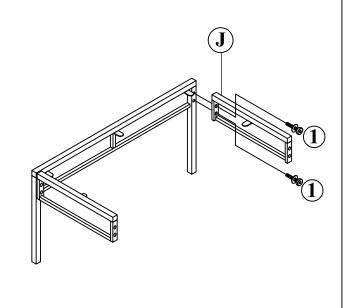


#### **STEP 11**

Connect part from Step 10 & Table leg frame (I) with Bolt (1) & Washers (3)

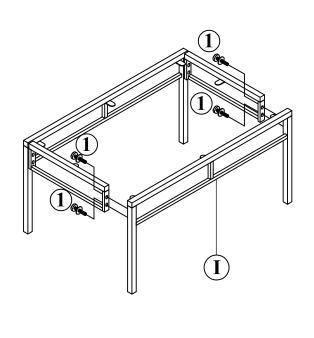

#### **STEP 12**

Put on Table top wood (K) to complete the Table

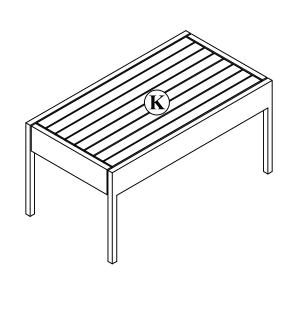

## **Care and Maintenance**

Use a soft, clean cloth that will not scratch the surface when dusting. Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

### Further advice about wood furniture care

Please protect your outdoor furniture with a cover when not in use since Long-term sunlight exposure will result in the damage on the surface.

In addition to sunlight damage, wood and metal frame suffers when exposed to extremes in temperature and humidity.

Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.

#### Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

**UK office: Ipswich** 



- \* Reward Points
- \* Exclusive Customer Service
- \* Personalized Recommendations
- \* Permanent Shopping Cart
- \* Order History



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.





