

USER'S MANUAL

61-Key Electronic Keyboard Piano MU70008

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

Please read all instructions carefully and keep it for future reference.

Warning!

Attention: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.



WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.


General Warnings:

- ⚠ The product must be installed and used under the supervision of an adult.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ Remove all packaging, separate and count all parts and hardware.
- ⚠ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.

Precautions

Read it carefully before proceeding.



- Only apply the designated power supply adaptor. Change it whenever it shows any wear and tear, or goes wrong.
- Neither disassemble the instrument nor make any change inside of it. In case of any anomalous function, stop using immediately and have it repaired by the qualified maintenance personnel.
- Make sure that the both are powered off when connecting the instrument with other amplifiers.
- Don't leave the volume working in maximum or in uncomfortable stage for long time.
- Keep the instrument away from the heats, which may result in the damage of the components.
- Stop any liquid, or other particles getting into the instrument, which may corrode the body or result in short circuit.
- Unplug the instrument before cleaning it and avoid using wet hands to plug or unplug it.
- Clean the instrument with a piece of dry and soft cloth without paint, alcohol or other chemical solvents.
- Turn off and unplug the instrument after performance or for a long time of leaving it unused.
- Warning! Do not get it close to the ear! Misuse may cause damage to hearing.
- The supply terminals are not to be short-circuited.
- The packing has to be kept since it contains important information.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Maximum Operating Temperature:40°C
- Direct plug-in adaptor is used as disconnect device, the disconnect device shall remain readily operable.
- Do not install this equipment in a confined space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
-  Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Warning: Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Caution: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

 
Warning: Excessive sound pressure from earphones and headphones can cause hearing loss.

Package Contents

- * 61-Key Electric Keyboard Piano with LCD Display X 1 pc
- * Keyboard Stand X 1 pc
- * Stool X 1 pc
- * Power Adaptor X 1 pc
- * Headphone X 1 pc
- * Microphone X 1 pc
- * Music Stand X 1 pc
- * Installation Manual X 1 pc


I. Panel Control and External Ports

● Top panel control

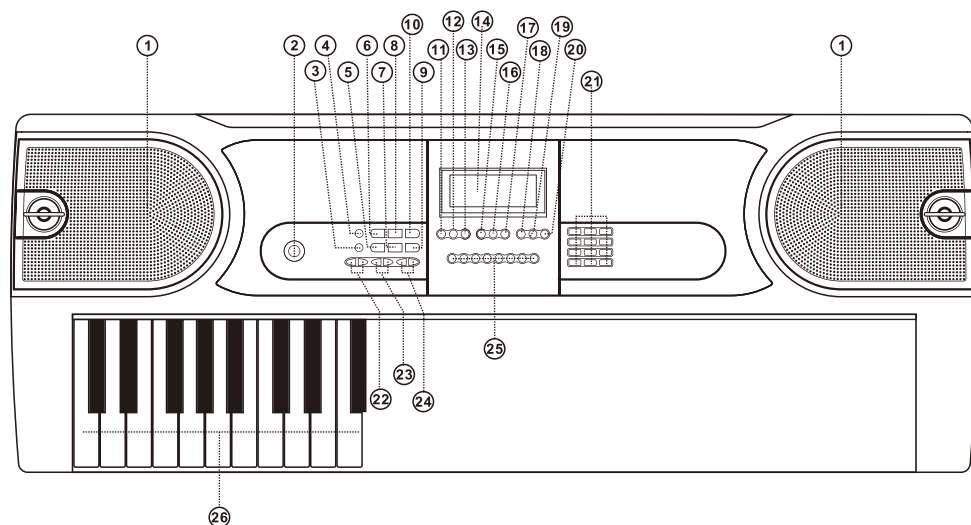

- | | | | |
|------------------|-----------------------|-------------|-----------------|
| ① Loudspeaker | ⑧ Sync | ⑮ One-Key | ⑳ Master Volume |
| ② Power | ⑨ Play | ⑯ Follow | ㉑ Accom volume |
| ③ Fingered chord | ⑩ Fill-in | ⑰ Ensemble | ㉒ Tempo |
| ④ Single chord | ⑪ Keyboard Percussion | ⑱ Timbre | ㉓ Percussions |
| ⑤ Record | ⑫ Sustain | ⑲ Rhythm | ㉔ Chord Zone |
| ⑥ Start/Stop | ⑬ Vibrato | ⑳ Demo Song | |
| ⑦ Program | ⑭ LCD screen | ㉕ Numbers | |

 ● External ports on the rear panel

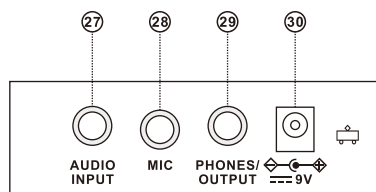


- ㉖ AUDIO INPUT
 ㉗ MIC
 ㉘ PHONES/OUTPUT
 ㉙ DC 9V

II. Performance Preparation

● Battery mounting

6 AA batteries can be used as the power supply for this keyboard. Open the cover of the battery jar at the bottom of the keyboard, check whether the positive and negative electrodes of the battery conforms to the indications, mount the batteries one by one, and then cover the battery jar.

 ※Low voltage due to long time use will cause low volume or timbre distortion. In this case, replace the battery immediately so as not to impact the performance effect. If the keyboard will be left idle for a long time, please remove the batteries, so as to protect the keyboard components from damage due to battery damp.

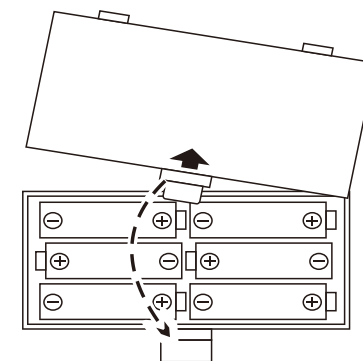

● AC/DC Power adaptor

A dedicated AC/DC power adaptor shall be used. Connect the output end of the adaptor to the power port on the rear panel of the keyboard, and then the other end to the power socket.

※(Note: the input voltage to the adaptor shall be compatible with the power supply voltage)

● Audio Output / External Headphone

◆Audio output: firstly, power off the keyboard and the external audio devices, secondly, connect one end of the audio cable to the PHONES/OUTPUT port on the rear panel of the keyboard, and then connect the other end to the audio input port of the audio devices.

◆Headphone connection: When connecting a headphone to the PHONES/OUTPUT port on the rear panel of the keyboard, the loudspeaker will be disenabled automatically. In this way, you can perform without disturbing others.

◆Caution! When using headphone, maintain at an appropriate volume to protect your hearing.

● Mic Input and Audio Input

◆Mic input: connect a microphone to the MIC port to sing while playing the keyboard.

◆The Keyboard is equipped with a stereo input function. Sound signals from mobile phone, MP3 player, computer and other audio devices can be input into the keyboard system for playing. Firstly turn off the Keyboard, then, connect one end of audio cable to the output port of an audio device, and the other end to the AUDIO INPUT port on the rear panel of the Keyboard, finally, power on the keyboard.

III. Basic Performance Method

When [Power ON/OFF] is pressed, LCD screen will turn on and show the current tone, tempo

and other status. Then you may operate the Keyboard as required.

● Master volume adjustment

Press [Master Vol +] or [Master Vol -] to turn up or turn down the master volume. Press [Master Vol +] and [Master Vol -] simultaneously to reset to the default value of "10".

By controlling the master volume the accomp volume can be controlled.

● Accomp volume adjustment

Press [Accomp Vol +] or [Accomp Vol -] to turn up or turn down the accomp volume. Press the [Accomp Vol +] and [Accomp Vol -] simultaneously to reset to the default value of "10".

● Tone selection

The Keyboard provides 255 tones, from "000" to "254", for your selection. When the keyboard is powered on, the Tone Selection function will be enabled automatically, and "TONE" will show on the screen. In the absence of screen, press [Timbre] to enable the tone selection function.

The Tone is defaulted to be "000", and it can be adjusted by pressing the corresponding number buttons or pressing the "+" / "-" button.

● Playing Percussion

This Keyboard provides 8 kinds of panel percussions. Press "Percussion" to play the corresponding percussion. Percussion instruments can be added to enhance the atmosphere as required.

This Keyboard provides 61 kinds of keyboard percussions. Press [Percussion] to turn the keyboard into percussion keyboard, and each key corresponds to one percussion instrument. Press this button again to disable the keyboard percussion function.

● Playing demonstration songs

This Keyboard has stored 24 demo songs, from "000" to "023", for your selection. Press [Demo Song], "SONG" will show on the screen, and demonstration songs will play in order. During playing process, press [Demo Song] to play the next demonstration song, and press [Start/Stop] to stop playing.

During the playing process, you can press the number buttons or the "+" / "-" buttons to select other demonstration song, and the selected demonstration song will play repeatedly.

IV. Auto Rhythm

● Rhythm selection

This Keyboard provides 255 rhythms, from "000" to "254", for your selection, and the rhythm is defaulted to be "000". Press [Rhythm], "RHYM" will show on the screen. Then press the number buttons or the "+" / "-" buttons to select other rhythms.

● Rhythm control

1. Rhythm enabling

◆ Press [start/stop] to start accomp rhythm.

◆ Under the enable state, Press [Sync], "SYN" will show on the screen. Then play any key in the chord key zone (the 1st-19th key, from left), the accomp rhythm will be activated.

2. Interlude

After the accomp rhythm is activated, press [Fill-in] to have a temporary rhythm play during the accomp rhythm.

3. Stop rhythm

◆ During the accomp rhythm, press [Start/Stop] to stop the accomp rhythm.

● Tempo adjustment

It tempo is defaulted to be 120 tempo/min, press [Tempo +] or [Tempo -] to increase or decrease the tempo speed. Press the two buttons simultaneously may reset to the default value of 120 tempo/min.

V. Auto Bass Chord

● Single chord


Single chord

Single Chord Fingering

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				

Fingered Chord Fingering (C Key)

 (The C key fingered chord fingering is as shown in the following figure, and the rest can be obtained by analogy)

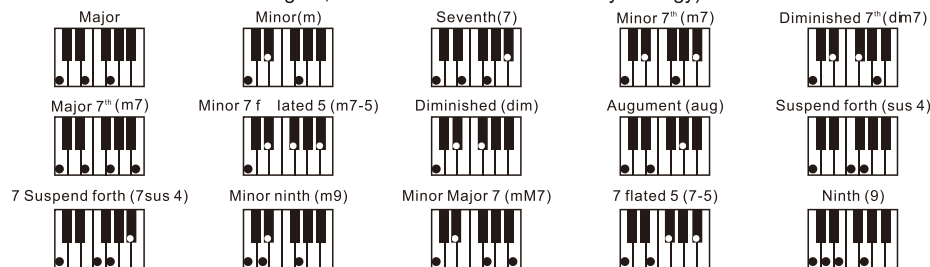

Under the state that the rhythm is activated, press [Single Chord]. After the "SIN" is showed on the screen, you can play a single chord on the keys in the chord zone of the keyboard. Press [Single] again, "SIN" will disappear from the screen, and the single chord function will be disenabled.

● Fingered chord

Under the state that the rhythm is activated, press [Fingered]. After the "FIN" is showed on the screen, you can play a figured chord on the keys in the chord zone of the keyboard. Press [Fingered Chord] again, "FIN" will disappear from the screen, and the fingered chord function will be disenabled.

VI. Effect Control

● Sustain function

Press [Sustain], "SUS" will show on the screen, and the sustain effect will be activated. Press this button again, "SUS" will disappear from the screen, and the sustain effect will be disenabled.

● Vibrato function

Press the [Vibrato] button, "VIB" will show on the screen, and the sustain effect will be activated. Press this button again, "VIB" will disappear from the screen, and the sustain effect will be disenabled.

VII. Recording and Rhythm Programming

● Recording

Press [Record] to enable the recording function, "REC" will show on the screen. Under this mode all playing notes will be recorded. When the storage is full, "REC" will flash on the screen, and recording will stop automatically.

◆ Press [Play] to playback the recorded notes, and "PLAY" will show on the screen. On completion of playback, "REC" will show on the screen. You can record a new rhythm, or you can press [Play] to playback the recorded rhythm.

◆ Press [Start/Stop] or press [Record] again to disenable the recording function, and all recorded rhythm will be removed.

● Rhythm programming

Press [Program] to enable the rhythm programming function, "PRG" will show on the screen, and the keyboard percussion will be activated. Under this mode, you can create custom rhythms by playing the corresponding percussion key.

◆ 32 percussions can be recorded at maximum, after that "PRG" will flash on the screen, and programming will stop automatically.

◆ Press [Play] to playback the programming rhythm.

◆ Press [Start/Stop] or press [Program] again to disenable the programing function, and all recorded rhythm will be removed.

VIII. Three-step Intelligent Training

● Training I: one key

Press [One Key] to enable the single key training function, "LEARN", "SONG" and the song number will show on the screen, and then press "+" / "-" button to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes, and the screen will show the correct notes.

After one song is finished, repeat the current song to be learned.

Press [Start/Stop] or press the [Single Key] button to disenable the training function.

● Training II: Follow

Press [Follow] to enable the follow function, "LEARN", "SONG" and the song number will show on the screen, and then press "+" / "-" button to select the song to be learned. With [Follow] training, you can learn by following the correctly playing notes. You can also learn by following the notes show on the screen, it will wait for you to play the correct note before it moves to the next one.

※ Notes: Under this state, the Keyboard plays only the correct notes, and gives no response to the wrong notes.

Press [Start/Stop] or press [Follow] to disenable the training function.

● Training III: Ensemble

Press [Ensemble] to enable the ensemble function, "LEARN", "SONG" and the song number will show on the screen, and then press "+" / "-" button to select the song to be learned.

The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble, and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note.

After one song is finished, repeat the current song to be learned.

Press the [Start/Stop] button or press [Ensemble] to disenable the training function.

Appendix Timbre Table

000-104	165 Long E-Bass 2	227 Edge Accordion 8
Refer to the unit panel	166 Violin 4	228 Acoustic Bass 10
105 Harp 6	167 Viola 4	229 Long E-Bass 4
106 String Ensemble 4	168 Cello 3	230 Violin 7
107 Trumpet 4	169 Long Harp 2	231 Edge Viola 9
108 Synth Brass 6	170 String Ensemble 6	232 Edge Cello 9
109 Alto Sax 5	171 Edge Trumpet 7	233 Harp 9
110 Clarinet 5	172 Synth Brass 7	234 Edge String 6
111 Lead Square 4	173 Alto Sax 8	235 Edge Trumpet 9
112 Vibrato Piano 4	174 Clarinet 8	236 Synth Brass 10
113 Vibrato Music Box 4	175 Lead Square 7	237 Alto Sax 12
114 Vibraphone 4	176 Long Piano 3	238 Clarinet 12
115 Edge Accordion 4	177 Long Music Box 2	239 Lead Square 10
116 Long Acoustic Bass 2	178 Vibrato Vibraphone 6	240 Long Piano 5
117 Long E-Bass 1	179 Vibrato Accordion 4	241 Long Music Box 4
118 Violin 3	180 Vibrato Acoustic Bass 3	242 Long Vibraphone 3
119 Viola 3	181 Vibrato E-Bass 3	243 Edge Accordion 9
120 Edge Cello 6	182 Violin 5	244 Acoustic Bass 11
121 Harp 7	183 Viola 5	245 Electric Bass 9
122 Edge String 4	184 Cello 4	246 Edge Violin 9
123 Edge Trumpet 4	185 Long Harp 3	247 Edge Viola 10
124 Edge Synth Brass 2	186 String Ensemble 7	248 Edge Cello 10
125 Alto Sax 6	187 Trumpet 5	249 Harp 10
126 Clarinet 6	188 Synth Brass 8	250 Edge String 7
127 Lead Square 5	189 Alto Sax 9	251 Edge Trumpet 10
128 Acoustic Grand Piano 4	190 Clarinet 9	252 Edge Synth Brass 6
129 Music Box 4	191 Lead Square 8	253 Edge Sax 4
130 Vibraphone 5	192 Acoustic Grand Piano 6	254 Edge Clarinet 4
131 Edge Accordion 5	193 Music Box 5	
132 Acoustic Bass 5	194 Vibraphone 6	
133 Electric Bass 6	195 Edge Accordion 7	
134 Edge Violin 6	196 Acoustic Bass 8	
135 Edge Viola 6	197 Electric Bass 8	
136 Edge Cello 7	198 Edge Violin 8	
137 Harp 8	199 Edge Viola 8	
138 Edge String 5	200 Cello 5	
139 Edge Trumpet 5	201 Long Harp 4	
140 Edge Synth Brass 3	202 String Ensemble 8	
141 Alto Sax 7	203 Trumpet 6	
142 Clarinet 7	204 Synth Brass 9	
143 Lead Square 6	205 Alto Sax 10	
144 Long Piano 2	206 Clarinet 10	
145 Vibrato Music Box 5	207 Lead Square 9	
146 Vibrato Vibraphone 4	208 Long Piano 4	
147 Vibrato Accordion 3	209 Long Music Box 3	
148 Acoustic Bass 6	210 Long Vibraphone 2	
149 Electric Bass 7	211 Accordion 3	
150 Edge Violin 7	212 Acoustic Bass 9	
151 Edge Viola 7	213 Long E-Bass 3	
152 Edge Cello 8	214 Violin 6	
153 Long Harp 1	215 Viola 6	
154 String Ensemble 5	216 Cello 6	
155 Edge Trumpet 6	217 Long Harp 5	
156 Edge Synth Brass 4	218 String Ensemble 9	
157 Edge Sax 3	219 Edge Trumpet 8	
158 Edge Clarinet 3	220 Edge Synth Brass 5	
159 Edge Square 4	221 Alto Sax 11	
160 Acoustic Grand Piano 5	222 Clarinet 11	
161 Vibrato Music Box 6	223 Edge Square 5	
162 Vibrato Vibraphone 5	224 Acoustic Grand Piano 7	
163 Edge Accordion 6	225 Music Box 6	
164 Acoustic Bass 7	226 Vibraphone 7	

Appendix Rhythm Table



000-125	178 Analog Ballad 2	232 Modern Country Pop 3
Refer to the unit panel	179 Show Tune 2	233 Medium Jazz 3
126 Blue Grass 5	180 68 Beat Blues 1	234 Love Song 3
127 Blue Grass 6	181 16 Beat Ballad 1	235 Jive 3
128 Slow Soul 2	182 68 Beat Ballad 1	236 Hully Gully 3
129 Bright Pop 1	183 Big Band Ballad 1	237 Hard Rock 3
130 Club Latin 2	184 West Shuffle	238 Country Ballad 3
131 Disco Chocolate 2	185 Calypso	239 8 Beat Modern 3
132 Disco Fox 2	186 Casa	240 Rumba 3
133 Disco Funk 2	187 Chrliston	241 Club Dance 3
134 Disco Hands 2	188 Detroit	242 USA March 3
135 Disco Latin 2	189 Dance Pop	243 UK Pop 4
136 Disco Party 2	190 Espag Nol	244 Pop New Age 3
137 Disco Samba 2	191 Fast Gospel	245 Dixie Jazz 3
138 Dixie Jazz 2	192 Ground Beat	246 Disco Samba 3
139 Pop New Age 2	193 Guad Dance	247 Disco Party 3
140 UK Pop 3	194 Modern Cha Cha	248 Disco Latin 3
141 USA March 2	195 Merengue	249 Disco Hands 3
142 Club Dance 2	196 Pasodobl	250 Disco Funk 3
143 Rumba 2	197 Rave	251 Disco Fox 3
144 8 Beat Modern 2	198 Sy Boogie	252 Disco Chocolate 3
145 Country Ballad 2	199 Seville	253 Club Latin 3
146 Hard Rock 2	200 Big Band Ballad 2	254 Bright Pop 2
147 Hully Gully 2	201 68 Beat Ballad 2	
148 Jive 2	202 16 Beat Ballad 2	
149 Love Song 2	203 68 Beat Blues 2	
150 Medium Jazz 2	204 Show Tune 3	
151 Modern Country Pop 2	205 Analog Ballad 3	
152 Modern R&B 2	206 Salsa 3	
153 Pasodoble 2	207 Jazz Rock 3	
154 Samba 3	208 Jazz Beat 4	
155 Samba 4	209 Jazz Beat 3	
156 Schlager Rock 3	210 Jazz Club 3	
157 Schlager Alp 1	211 Jazz Big Band 3	
158 Tarantella 2	212 Pub Piano 3	
159 Tijuana Beat 1	213 Swing Beat 2	
160 Electro Pop 2	214 Slow & Easy 3	
161 Fusion 2	215 Reggae 3	
162 Hip Beat 1	216 Rock Ballad 3	
163 Limbo Rock 2	217 R&B Ballad 3	
164 Acoustic Ballad 2	218 Piano Ballad 3	
165 Piano Ballad 2	219 Acoustic Ballad 3	
166 R&B Ballad 2	220 Limbo Rock 3	
167 Rock Ballad 2	221 Hip Beat 2	
168 Reggae 2	222 Fusion 3	
169 Slow & Easy 2	223 Electro Pop 3	
170 Swing Beat 1	224 Tijuana Beat 2	
171 Pub Piano 2	225 Tarantella 3	
172 Jazz Big Band 2	226 Schlager Alp 2	
173 Jazz Club 2	227 Schlager Rock 4	
174 Jazz Beat 1	228 Samba 5	
175 Jazz Beat 2	229 Samba 6	
176 Jazz Rock 2	230 Pasodoble 3	
177 Salsa 2	231 Modern R&B 3	

Assembly Instruction of Keyboard Stand


ATTENTION:ADULT ASSEMBLY REQUIRED

H TYPE STAND


A		X 1
B		X 2
C		X 1
D		X 2
E		X 2
F		X 8
G		X 2
H		X 4
I		X 4

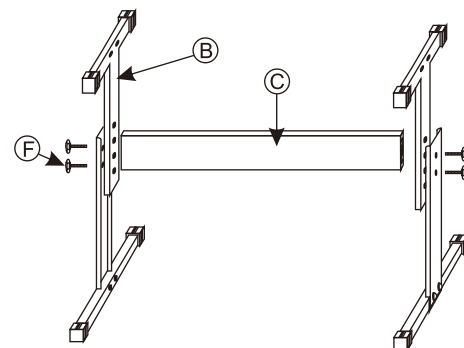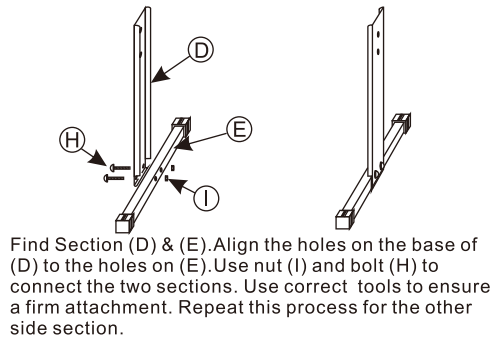  

 Attach Section (B) to (D) and (C) using the appropriate screw (F).Repeat this process for the other side section.

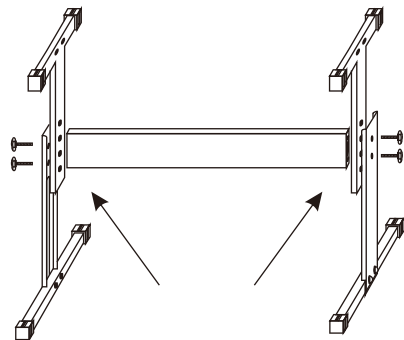

 Fastening screws (F) for adjusting to suitable height of keyboard legs.

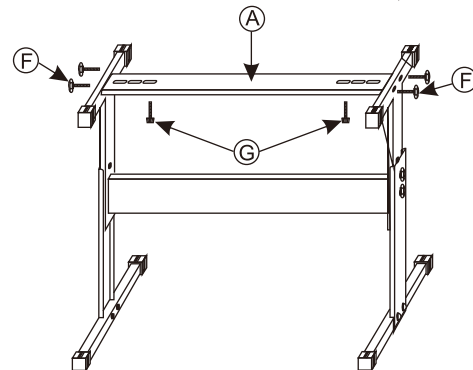

Attach two section (B) to section (A) using four (F) screws to create the upper section. Fastening screws(G)for fixing keyboard on stand.

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.

THANK
you

