


03

COSTWAY

COSTWAY

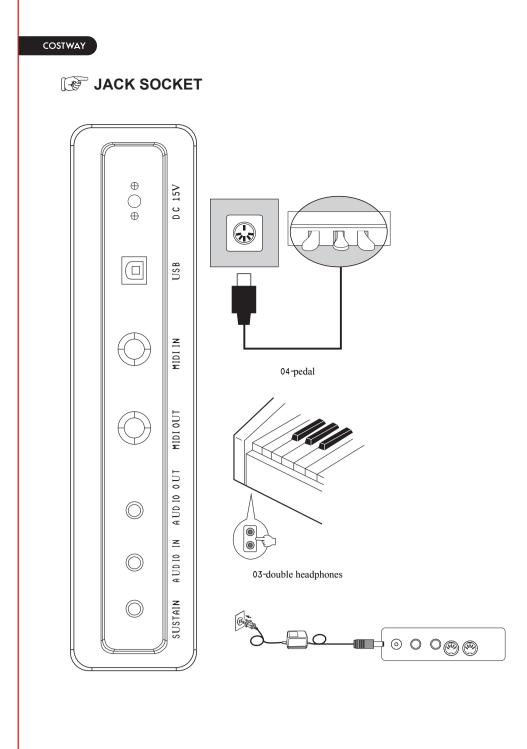

1. POWER LINE CONNECTION 1. When used according to the access power line, one end is inserted into the socket at the bottom of the piano operation plate. The other end is inserted into the 110V household power socket. 2. If you do not use this product for a long time, unplug the power cord and keep it properly. 2. AUDIO INPUT/OUTPUT PLUG 1. The audio output socket can be connected to large sound box equipment. 2. The audio input socket connects the external sound source to the electric piano for playback. 3. MIDI INPUT AND OUTPUT SOCKET

The MIDI interface of this digital piano can be connected to music equipment with MIDI. 4. USB TRANSPORT INTERFACE Use the USB port of this digital piano to connect to a computer. Through pre-installed music software on the computer, you can play the keyboard to perform music performance, composition, editing, storage and other functions. The edited music and the built-in accompaniment of the music software can be connected to the digital piano through the software for

5. DOUBLE HEADSET SOCKET Connecting the headset will automatically cut off the output of the built-in loudspeaker, so it won't disturb others when playing *This product has two headphone sockets, which can insert two headphones at the same time. Insert the end of the pedal line into the circular socket on the bottom of the piano, and you can connect the 3 pedal sound effects. In turn: weak tone,

playback, or play according to the accompaniment music.

posterior extension and portamento. **INSTALLATION**

8.8.8 digital display. USB port ———

Function Panel

1. switch the "power supply" switch to the on state, the display screen is lit up, and enter the normal playing state. 2. adjust the volume potentiometer and adjust the volume to the appropriate 3. play music on the keyboard. The choice of timbre

There are 480 timbres in this product (see TONE list). Please follow the following steps to select the desired timbre How to select tone color

1. Find the TONE you need in the timbre list and remember its timbre 2. Press the tone key to enter timbre mode. 3. Select the desired timbre by selecting the "+"/"-" key, the timbre number is (000-479).

The convenience of chord accompaniment The following steps describe how to use the chord functionality of this product. Before you begin, you should first select the rhythm you want to use and set the speed value.

Automatic accompaniment The choice of rhythm This product has 200 built-in rhythms (see the RHYTHM list), please follow the steps below to select the desired rhythm.

How to choose rhythm 1. Press the rhythm key to enter the rhythm mode. 2. Select the desired rhythm by selecting the "+"/"-" key, the rhythm number is (000-199). 3. Press the "start / stop" key to start playing the rhythm. 4. To stop the rhythm to play, and then press the "start / stop" key.

07

COSTWAY

13

COSTWAY

Synthetic chord accompaniment 1. Press the start / stop button to start broadcasting the currently selected 2. press the "chord" button to enter the chord state. If the chord mode of single multi-finger reuse conforms to the multi-finger chord playing method, the piano responds to the multi-finger chord; where the single-finger chord method is not in accordance with the multiple-finger chord method, the response is recognized according to the single-finger chord. 3. To play a chord, press different fingerings to perform different

Chord keyboard → —Keyboard melody -

performances on the accompaniment keyboard (1-22 keys from the left).

4. Press the "chord" button again to turn off the chord state.

Synchronous start You can set this product to start playing rhythmically while you play accompaniment on the keyboard. The following steps describe how to use Before you begin, you should first select the rhythm to use, set the speed value, and select the chord accompaniment.

Using synchronous startup 1. In the chord state, press the synchronize button to enter the synchronous 2. When you play the chord, the accompaniment will automatically start 3. To cancel synchronization, press the start / stop button.

Use of Music Library The built-in music library of this product contains 80 pieces of music (see list of demonstration songs), and the built-in music is used for playback and appreciation.

GtrFrtI

BrthNsel

Seshorel

BrdTwetl

TelRingl

Helicptl

Aplausel

GunShotl

YongGinl

ZhonRual

BiSounal

Zhengl

PiPal

uonal

ErHul

Bong Dil

AcoPino2

BrtPino2

ElcPino2

HnkPino2

RhoPino2

ChoPino2

Hrpchrd2

Clvchrd2

Celesta2

Glcknsp2

MusicBx2

Vibphon2

Marimba2

Xylopho2

TubBell2

Dulcime2

Kotol

The playing of music in a library 1. find the music to be played in the library list and record its number. 2. press the key of "DEMO" to enter the mode of demonstration song.

3. select the song by selecting the "+" "-" key Number (000-079) 4. Press the DEMO key or start / stop the key to stop playing to exit this The music will continue to play in order until you stop it. The use of keyboard strength tactile function When the keyboard of this product is opened for the strength tactile keyboard "strength" function, the relative volume of the electronic output music will vary

according to the intensity that the keyboard is pressed, and can play music with different volume and different feelings. 1. press the strength TOUCH button, and the strength touch function is 2. press "TOUCH" again and turn off the tactile function. When booting, it is automatically in the state of starting the strength tactile

The use of keyboard Drum instrument function Press the "Drum" button, switch the keyboard of the digital piano to the drum key board, press the DRUM button again, and turn off the function.

The use of Dual Voice function When using the Dual Voice function to play the keyboard, you can emit two different timbre at the same time, showing the resonance effect of the two musical instruments.

How to use Dual Voice function 1. first enter the timbre mode, choose a musical instrument as the main 2. press the "DUAL" button to enter the second timbre selection mode. 3. use the "+/-" button to select a musical instrument as the second timbre.

The use of keyboard split function Using the keyboard split function, you can assign two different timbre (main tone and split tone) to both ends of the keyboard, so that you can play one timbre with your left hand and another with your right hand to play an ensemble effect.

337

338

339

340

341

342

343

344

348

349

350

351

352

353

355

358

359

360

363

364

365

366

367

368

369

370

371

Left keyboard → — Right keyboard — \blacktriangleright

Use of metronome function Press the "metronome" button, the metronome function is activated, you can follow the beat sound to play. Press the metronome button again, and the metronome function is turned off. Please use the "Tempo" button and "+/-"button to set the speed.

Recording 1. Press the recording key to enter recording mode. 2. The maximum number of recordings is 250, and when the recording is full, there will be no room for new recording. 3. Each time you press this key, you erase the last memory, and re-enter

Play sound 1. Press the PLAY key to play the recorded notes and drums, and play them in the timbre selected for the recording at that time 2. Press the PLAY key, and if there is no previous memory value, no action

Transpose effect control 1. Press the "Transpose" key to enter the transposition control mode, and then press the "+" and "-" keys to set the range of transposition. 2. There are 13 segments (-6-+6) for the transposition control, and the power-on preset value is in the seventh segment. 3. In the transposition mode, press the "+" and "-" keys for more than one

second to continuously increase/decrease the transposition. MP3 function 1. Connect to the U disk and go directly into MP3 mode. 2. Select songs from MP3. Press the "+" "-" key to select the song.

3. Press the start / stop key to start and pause playback.

026 JazzGtr 027 CleanGtr 028 MutedGtr 029 OverGtr 030 DstorGtr 031 GtrHrmnc 032 AcoBass 033 ElecBass

APPENDIX

000 AcoPiano

001 BrtPiano

002 ElcPiano

003 HnkPiano

004 RhoPiano

005 ChoPiano

006 Hrpchord

007 Clvichrd

009 GIcknspl

010 MusicBox

011 Vibphone

012 Marimba

013 Xylophon 014 TubBells

015 Dulcimer

016 DrawOrg

017 PercOrg

018 RockOrg

019 ChurhOrg

020 ReedOrg

021 Accrdion

022 Harmnica

023 TangoAcc

024 NylonGtr

025 SteelGtr

034 BassPick

008 Celesta

047 Timpani 048 String1 049 String2 050 SynStr1 SynStr2 051 052 Choir Aah 053 VoiceOoh 054 SynVoice 055 OrchHit 056 Trumpet 057 Trombone 058 Tuba 059 MuteTrmp 060 FrnchHrn 061 BrassSec 062 SynBrss1 SynBrss2 063 064 SoprnSax 065 AltoSax 066 TenorSax 067 BariSax 068 Oboe 069 EngHorn

035 FretBass

036 SIpBass1

037 SIpBass2

038 SynBass1

040 Violin

042 Cello

043 CntrBass

044 TremoStr

046 OrchHarp

045 PizziStr

Viola

SvnBass2

039

041

COSTWAY 070 Bassoon 108 071 Clarinet 109 BagPipe 072 Piccolo 110 Fiddle 073 Flute 111 Shanai 074 Recorder 112 TinklBel 075 PanFlute 113 Agogo 076 BottBlow 114 SteelDrm 077 Shakuhac 115 WoodBlck 078 Whistle 116 TaikoDrm 079 Ccarina 117 MelodTom 080 Square 118 SynthDrm 081 Sawtooth 119 RevCymbI 082 Calliope 120 GtrFrt 083 Chiff 121 BrthNse 084 Charang 122 Seashore 085 Voice 123 BrdTweet 086 Fifths 124 TeleRing 087 125 Bas+Lead Helicopt 088 126 NewAge Applause 089 Warm 127 GunShot 091 129 Choir Zheng 092 Bowed 130 ZhongRua 093 131 Metallic Pi Pa 094 Halo 132 BigSouna 133 095 Sweep Suona 096 134 Er Hu Rain 135 097 Yue Hu Soundtrk 136 098 Di Zi Crystal 137 099 Bong Di Atmosphe 138 100 Koto Brights 139 Qu Di 101 Goblins 140 AcoPinol 102 Echoes 141 BrtPinol 103 Sci-Fi 142 ElcPino1 104 Sitar 143 HnkPino1 105 Banjo 144 RhoPino1 106 Shamisen 145 ChoPinol 107 Koto 12

184 TremoStl Clvchrd1 185 PizziStl Celestal 186 OrcHarp Glcknspl 187 Timpanil MusicBx1 188 String3 Vibphonl 189 String4 Marimbal 190 SynStr3 Xylopho1 191 SynStr4 TubBell1 192 ChoirAal Dulcime1 193 VoiceOhl DrawOrg1 194 SynVoicl PercOrg1 195 OrchHitl RockOrg1 196 Trumpetl 197 Trmbone ChuhOrg1 ReedOrg1 198 Tubal 199 MuteTrpl Accdion1 Harmnic1 200 FrmhHm 201 TangoAc1 BrasSecl 202 NylonGt1 SynBrss3 SteelGtl 203 SynBrss4 JazzGtr1 SoprSaxl CleanGt1 205 AltoSaxl 206 TenoSaxl MutedGt1 207 BariSaxl OverGtr1 208 Oboel DstorGt1 209 EngHornl GtrHrmn1 210 AcoBassl Bassoonl 211 Clarint1 EleBass1 212 Piccolol BassPik1 213 Flutel FreBass1 214 Recordrl SlpBass3 215 PaFlutel SlpBass4 216 BotBlowl SynBass3 217 ShakuhA1 SynBass4 218 Whistle1 Violinl 219 Ocarinal Violal 220 Squarel Cellol 221 Sawtootl CntBass

148

149

150

151

152

153

154

155

156

157

159

160

162

163

164

165

168

169

170

173

174

175

176

177

178

179

180

181

182

183

298 RockOrg2 299 ChuhOrg2 300 ReedOrg2 301 Accdion2 302 Harmnic2 303 TangoAc2 304 NylonGt2 305 SteelGt2 306 JazzGtr2 307 CleanGt2 308 MutedGt2 309 OverGtr2 310 DstorGt2 GtrHrmn2 311 312 AcoBass2 313 EleBass2 314 Basspik2 315 FreBass2 316 SlpBass5 317 SlpBass6 318 SvnBass5 SynBass6 320 Violin2 321 Viola2 322 Cello2 323 CntBass2 324 TremoSt2 325 PizziSt2 326 OrcHarp2 327 Timpani2 328 String5 String6 329 330 SynStr5 331 SynStr6 332 ChoirAa2 333 VoiceOh2 334 SynVoic2 335 OrchHit2

COSTWAY COSTWAY 412 BiSouna2 374 Trumpet2 Trmbone2 375 Sweep2 413 Suona2 376 414 Er Hu2 Tuba2 Rain2 MuteTrp2 377 415 YueHu2 Soundtk2 FrnhHrn2 378 Crrystal2 416 DiZi2 BrasSec2 379 Atmophe2 417 BongDi2 380 SynBrss5 418 Koto2 Brights2 381 SynBrss6 Goblins2 419 QuDi2 382 SoprrSax2 Echoes2 420 AcoPino3 AltoSax2 383 Sci-Fi2 421 BrtPino3 384 422 TenoSax2 Sitar2 ElcPino3 BariSax2 385 Banjo2 423 HnkPino3 386 Oboe2 Shamsen2 424 RhoPino3 387 EngHorn2 Koto2 425 ChoPino3 388 Kalimba2 426 Bassoon2 Hrpchrd3 389 Clarint2 BagPipe2 427 Clvchrd3 Piccolo2 390 Fiddle2 428 Celesta3 391 Flute2 Shanai2 429 Glcknsp3 392 Recordr2 TinkBel2 430 MusicBx3 393 431 Vibphon3 PaFlute2 Agogo2 394 BotBlow2 Shakuha2 WodBlck2 433 Xylopho3 396 Whistle2 TaikDrm2 434 TubBell3 397 MeloTom2 Ocarina2 435 Dulcime3 398 SvntDrm2 436 DrawOrg3 Square2 399 Recymbl2 437 Sawtoot2 PercOrg3 400 Caliope2 GtrFrt2 438 RockOrg 401 Chift2 BrthNse2 ChuhOrg3 439 402 Charang2 Seshore2 440 ReedOrg3 403 BrdTwet2 441 Voice2 Accdion3 404 Fifths2 Telring2 442 Harmnic3 BasLead2 405 Helicpt2 443 TangoAc3 406 NewAgge2 Aplause2 444 ylonGt3 407 GunShot2 Warm2 445 SteelGt3 408 YongGin2 Polysyn2 446 JazzGtr3 409 Choir2 Zheng2 447 CleanGt3 410 ZhonRua2 372 Bowed2 448 MutedGt3 411 PiPa2 373 Metalic2 449 OverGtr3 15

450 DstorGt3 451 GtrHrmn3 452 AcoBass3 453 EleBass3 BassPik3 454 455 FreBass3 456 SlpBass7 457 SlpBass8 SynBass7 458 459 SvnBass8 460 Violin3 461 Viola3 462 Cello3 463 CntBass3 464 TremoSt3 465 PizziSt3 466 OrcHarp3 467 Timpani3 468 String7 469 String8 470 471 SynStr8 472 ChoirAa3 473 VoiceOh3 474 SynVoic3 475 OrchHit3 476 Trumpet3 477 Trmbone3 478 Tuba3 479 MuteTrp3

COSTWAY **APPENDIX** RHYTHM 037 BritRock 000 50sPop 038 60sViRo 001 CoolPop 039 CharRock 002 GroovPop 040 60sPopRk 003 60sVinta 041 RkBilly 004 80sPop 005 RapPop 042 RkBoogie 043 RkChaCha 006 PopRock 007 60sSoul 044 RkClassi 008 70sSoul 045 RkShuffl 046 RockPop 009 Funk 010 16Shuff 047 RockRol 011 Twist 048 RockRol2 049 StrtRock 012 BritPop1 050 JazzRock 013 BritPop2 014 HardRk1 051 FastGosp 052 FolkRock 015 HardRk2 016 Fusion1 053 Skiffle 054 FuPoRock 017 Fusion2 055 ContRock 018 FunkShf1 056 AcouRock 019 FunkShf2 020 FusShufl 057 PopMambo 021 FusShuf2 058 LatPart 022 ClubPopl 059 Cumbia 023 ClubPop2 060 Parranda 024 16Pop1 061 Carnival 025 16Pop2 062 Bosanova 026 8Pop1 063 Mambo 064 Mambo2 027 8Pop2 028 8Soull 065 Bolero 029 8Soul2 066 Cumbia 067 LatnRock 030 8Rock1 031 8Rock2 068 DiscoLtn 032 Clas8Bet 069 Tijuana 070 Reggae 033 VintaGtr 034 Schltal 071 Salsa

035 60sRockN

036 StanROCH

111 DiscoFnk 074 Reggae12 075 Reggae16 112 DscoHand 113 DsCoPrty 076 70sChart 077 RomaBald 114 DscoSmba 078 90sCool 115 UKPop 079 AlpBall 116 ClubDnce 080 AlpBall2 117 ModernRB 081 EBallad 118 HipShffl 119 ChrlSton 082 Unpluggd 083 PopBalld 120 DiscoPop 121 DiscSoul 084 PopNewAg 085 8BModern 122 DiscTrot 086 CntryBld 123 EuroBeat 087 LoveSong 124 Rap 088 MdCnPop 125 Rave 089 ElecPop 126 Techno1 090 AcouBlld 127 Techno2 091 PianoBld 128 70DisFuk 092 RBBallad 129 DiscoPhi 093 RckBlld 130 DiscoHou 094 SlowEasy 131 80sDisco 132 SwingFoX 095 AnaBlld 096 SloRock1 133 SlowFox 097 SloRock2 134 OrganCha 098 SloRock3 135 OrganQui 099 SlowSoul 136 CatGrve 100 8BtAdria 137 DixieJzz 138 MedJazz 101 ClssPno 139 JazzBand 102 80sEPBad 103 80sByBad 140 JazzClub 104 70sDisc1 141 Ragtime 142 BndShfll 105 70sDisc2 143 BndShf12 106 FnkyDsco 144 BndShf13 107 SatNight 145 FastBnd1 108 ClubLtn 109 DscoChoc 146 stBnd2 147 FranSoul 110 DiscoFox

COSTWAY 148 JazzFunk 149 CIBigBad 150 Frenjazz 151 JumpJive 152 CountBad 153 CountTwo 154 Countryl 155 Country2 156 FingPick 157 CntryBot 158 NewCotry 159 EasCnt 160 70'sCntr 161 Hoedown 162 CouShuff 163 SchPolka 164 PolkaPop 165 BluGrsst 166 BluGrss2 167 BluGrss3 168 PopWltz 169 USAMarch 170 HullGull 171 Tarntla 172 LmboRock 173 SwaWaltz 174 PubPiano 175 JzzWltz1I 176 JzzWltz2 177 ShowTune 178 Polka 179 OberPoka 180 ParPolka 181 Waltz 182 ChaCha 183 Rumba 184 Jive

185 Pasodobl **DEMO** 186 Sambal 187 Samba2 188 SchlRck1 189 SchlRck2 003 Johny 190 FoxTrot 191 VieWaltz 005 Paradise 192 Tango1 006 Birthday 193 Tango2 007 Carmen 194 GerWaltz 008 Cavatina 195 Carnival 009 JingBell 196 OrgSamba 010 Silent 197 Reel 198 GayGordo 199 ScaWaltz 013 Susanna 027 TeaTwo 028 SleigRid 029 NoseRein 030 SileNigh 031 Dream 032 Clock 033 Humoresq 034 Frohlich 035 Canon

COSTWAY **APPENDIX** 037 Greensle 074 Dabiesha 000 HotelPac 038 Polka 001 Madness 075 HappYear 039 Arabesqu 002 Restaura 076 DreOfRiv 040 JockClub 077 ThePenhu 041 Transpor 004 Zimbada 078 HeartThr 042 Higher 079 Jasmine 043 TaihLake 044 August 045 CentGove 046 Tathagat 047 Aobaosha 048 YamiChxi 011 Christma 049 Jasmine 012 SaintsGo 050 Jaunty 051 GoodDay 014 MoonRive 052 Chidhood 015 ABCWord 053 ZiZhuTia 016 MerryChr 054 Auspicio 017 SixDucks 055 Journey 018 MaryLamb 019 Moonligh 056 FarPlace 057 PraiSong 020 AmeriRag 058 LookHome 021 CrazArms 059 Affordab 022 TearDrop 060 Chapeau 023 WaltOp64 061 024 PianSona Qinghai 062 SameSong 025 BlueDanu 063 RoadBend 026 TheCrave 064 Farewell 065 HappHome

066 PlaPeach

067 NewCetry

068 GaMeRose

069 KdLoSong

070 Dansolde

071 BeijTune

072 YiJiaMei

073 Rumanxil

036 Waltz

COSTWAY ITEMS INCLUDED 1PC MIDI line 1PC Power adapter Piano cover 1PC Foot Pedal 1PC 1PC 1PC Manual Headphone 1PC Music stand MUSICAL INSTRUMENT PARAMETERS

Keyboard: 88 key Pitch: \leq 3 tones. Voice range: A2-C5 Output power: >20W*2 Power parameters: DC 15V 50/60Hz Style Upright piano **PRECAUTIONS POWER SUPPLY**

This product can be powered by standard indoor wall sockets. Please only use the power cord specified in this product. When not in use, please turn off the power supply. When not in use for a long time, pull out the power cord and keep it properly.

MARKING MAP To ensure that you use this product safely and correctly, to prevent harm to users and others and financial damage, this manual and products are marked with a series of safety signs. The various signs and their meanings are as follows:

⚠ WARNING This sign indicates that there is a potential risk of death or serious injury if this mark is ignored and the product is mishandled. **⚠ BE CAREFUL**

This sign indicates that there is a potential danger of injury to personnel or other financial damage if this sign is ignored and the product is operated **EXAMPLE OF LOGO**

Black dots (•) indicate what must be observed. The diagrams in this

This triangle sign (\triangle) indicates what users should pay attention to. (The left picture shows a cautious electric shock) A circular sign (⊗) with an oblique line indicates prohibitions. The icons in or beside the logo indicate the contents specifically prohibited. (No

(The left picture shows that the power plug must be pulled out of the socket) **⚠ WARNING** Smoke, odor, overheating: When the product smokes, smells or overheats, there is a danger of fire and electric shock when it is used continually. In case of the above situation, the following operations should be performed immediately.

sign indicate the contents of the specific matters that must be observed.

1. turn of the power. 2. Pull the plug out of the power outlet. Contact us.

disassembly is allowed on the left)

Power cord: Improper use of power cord may cause fire and electric shock. The following precautions must be observed. The special power cord designated for this product must be used. The AC power supply with output voltage within the rated voltage range for household use must be used. Do not overload power sockets and extension lines.

The improper treatment of power line will lead to damage or breakage,

072 Calypso

073 GuadDanc

which will lead to fire and electric shock hazards. The following precautions must be observed. Do not place or heat heavy objects on power lines. Do not attempt to alter or bend the power cord too much. Do not twist or pull the power cord. If the power cord or plug is damaged, please replace the same type of Do not touch the power cord and plug with wet hands, otherwise there

is a danger of electric shock. Please use the power cord where it won't splash. Water is in danger of causing fire and electric shock. Never place vases or any other Container containing water on this product. Water is dangerous of causing fire and electric shock. • Do not allow minors to unplug and touch power lines or connection boards, minors do not have electricity safety common sense, there is a risk of electric shock.

⚠ BE CAREFUL • Improper use of power cord may cause fire and electric shock. The following precautions must be observed. Do not put the power cord near the furnace or other heat source. • Do not pull the power cord when unplugging the power socket, but must grasp the plug body. • The power cord plug must be inserted in the socket to the end.

 Make sure the power supply is off before connecting or disconnecting it. When thunderstorms occur or before traveling or other long-term departure, disconnect the power cord from the wall outlet. • Remove the power cord from the wall outlet at least once a year and clean the dust accumulated around the plug.

Do not burn down this product

Do not put this product in the fire. Otherwise, it will lead to the burning of wood products and the explosion of internal electronic components, which will cause fire and personnel injury.

Water and foreign bodies Water, other liquids and (metal sheets, etc.) entering this product are in danger of causing fire and electric shock. In case of the above situation, the following operations should be performed immediately. 1. turn off the powe. 2. If you are using a power cord for power Supply, unplug it from the wall

Don't dismantle and transform Do not dismantle or transform this product in any way. Otherwise, there is a risk of electric shock, scaldor other personal injury. All internal inspection, adjustment and maintenance operations should be entrusted to qualified technicians.

1. turn off the power.

Contact us.

This product is in danger of fire and electric shock after falling or being damaged by strong impact. In case of the above situation, the following operations should be performed immediately.

2. If you are using a power cord for power supply, unplug it from the wall 3. Contact your distributor.

children should pay special attention to it. Do not climb piano or bracket

Do not let anyone put plastic bags for this product on his head or in his mouth. Otherwise, there is a risk of asphyxia. Families with young Climbing on the piano body or its support is dangerous of overturning or damage. Families with young children should pay special attention to it. Do not place heavy objects on this product. Otherwise, the top of the product will be overweight, causing the product to overturn or drop objects on it, which will lead to the risk of injury. Correct assembly of scaffolds The incorrect installation of the bracket will cause the product to fall Over, and there is a risk of injury to the personnel. Therefore, it must be assembled in accordance with the instructions attached to the instructions to ensure that the product is properly mounted on

Don't play music long and loud. Pay special attention when using

headphones. Excessive volume can damage your hearing.

Avoid placing the product on an uneven surface or any other unstable

wall outlet and pull out all other cables and connecting wires.

the wall outlet, otherwise there is a risk of fire and electric shock.

Otherwise, it will lead to wire damage, fire and electric shock.

place. Otherwise, it will cause the product to fall down, which will lead to

Before moving this product, you must unplug the power cord plug from the

Clean this product

Before cleaning this product, you must unplug the power cord plug from

Connecting non-designated equipment or devices is dangerous of

Avoid placing this product in the following places. Otherwise, there is a

Where the product is exposed to direct sunlight, or any other place where

Only designated devices can be connected to the sockets of this product.

COSTWAY

the risk of injury.

Move this product

causing fire and electric shock.

danger of fire and electric shock. High temperature or dusty places.

Kitchen or other place with lampblack.

the product will produce high temperature.

Location selection