


170.00mm

165.00mm

### Setting Up the Canopy


#### 1 OPENING THE CANOPY FRAME

- With a person on each end, lift and partially pull the canopy frame apart.

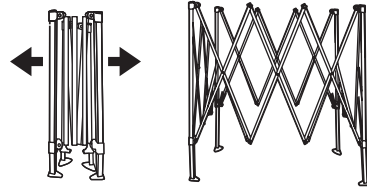


#### 2 ATTACHING THE CANOPY TOP

- Unfold the canopy top and place on top of the canopy frame.
- Secure the canopy top to the corners of the canopy frame using the Velcro connections.

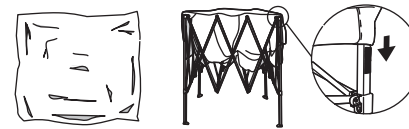


#### 3 LOCKING THE FRAME

- Finish attaching the large canopy inside the canopy frame using the Velcro fasteners.

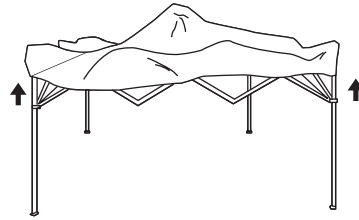


#### 4 ADJUSTING THE CANOPY HEIGHT

- Press the red button on each leg and raise or lower to adjust the canopy height.

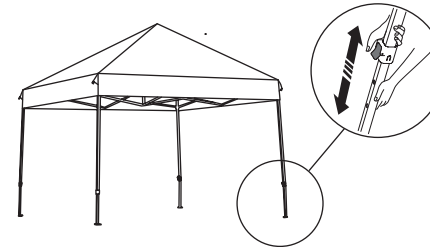

#### 5 SECURING THE CANOPY IN PLACE

- Insert a stake into the foot of each canopy leg.
- Measure out from each leg to a proper distance and secure four stakes to the ground. Tie the pre-attached ropes to the stakes in the ground. Ensure the rope has the proper tension by adjusting the plastic adjusters on the ropes.

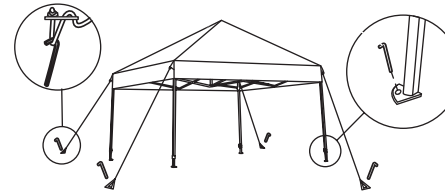

**WARNING** KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC



Take care not to pinch your fingers in the frame during setup and take down.  
Never set up or continue to use in any rain, wind, or storm conditions especially lightning storms.