



COSTWAY®

Please give us a chance to make it right and do better !

Contact our friendly customer service department for help first.
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana UK office: Ipswich AU office: Truganina



Contact Us !

Do NOT return this item.

Contact our friendly customer service department for help first.



US: cs.us@costway.com
UK: cs.uk@costway.com
AU: cs.au@costway.com

USER'S MANUAL

Inflatable Bouncer OP70733

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION, PLEASE READ AND KEEP FOR FUTURE REFERENCE.



Before You Start

Please read all instructions carefully and keep it for future reference.

Warnings:

Attention: For home use only.

Attention: The product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

Danger: Lack of attachment may cause a risk of tipping or falling hazard.

General Warnings:

- ⚠ The product must be installed and used under the supervision of an adult.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ Remove all packaging, separate and count all parts and hardware.
- ⚠ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- ⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during installation, and place the product always on a flat, steady and stable surface.
- ⚠ Please check and maintain it regularly, and the most important part needs to be suspended, fixed, or anchored to the ground.

! IMPORTANT

- 1.Keep these instructions for further reference.
- 2.Please read all of the safety rules before setting up.
- 3.We believe in safety first. Please follow all of the rules for your children's safety.

! WARNING!

ELECTRICALLY OPERATED PRODUCT

ADULT SUPERVISION REQUIRED. OPERATING BLOWER(AIR PUMP) NOT RECOMMENDED FOR CHILDREN UNDER 18 YEARS OF AGE. AS WITH ALL ELECTRIC PRODUCTS, PRECAUTIONS SHOULD BE OBSERVED DURING HANDING AND USE TO PREVENT ELECTRIC SHOCK.

 
! CAUTION:

- 1.NOT SUITABLE FOR ADULT USE.
- 2.MAXIMUM AGE 5 YEARS.MINMUM AGE 3 YEARS.
- 3.NOT SUITABLE FOR RENTAL OR COMMERCIAL USE.
- 4.TO BE USED ON SOFT GROUND ONLY.
- 5.ADLTS MUST NOT USE THIS PRODUCT.
- 6.ADLT SET-UP REQUIRED.
- 7.ADLT SUPERVISION REQUIRED.
- 8.ONLY FOR DOMESTIC USE.
- 9.ONLY FOR OUTDOOR USE.

Blower (Air Pump) is not included.

Set up instructions

1. Remove the Bouncer from the carry bag. Place the Bouncer on a level surface at least 2M/6.5FT from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
2. Check the ground where the Bouncer is to be inflated for any sharp objects or unusual by products. Do not install the Bouncer over concrete, asphalt or any hard surface.
3. Set up away from water and any potential fire hazards.
4. Set up as near to power source as possible. After stretching the air fill tube, position the blower(air pump) at the end of the tube. Push ground stakes for air blower through blower base holes firmly to the lawn ground. (Refer to picture 1)
5. Slide the end of the tube around the blower (air pump) nozzle and tighten the string.
6. The inflatable tube should be straight and untwisted. Reposition the blower(air pump) if necessary.
7. Make sure the blower(air pump) "on/off" switch is in the off position.
8. Plug the blower into an approved grounded outlet.

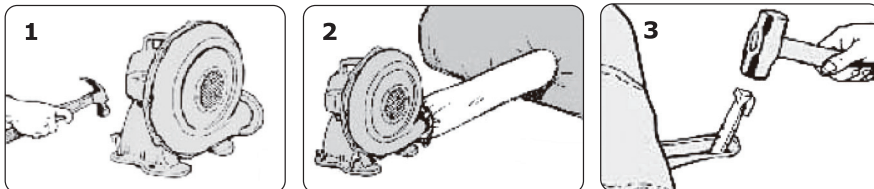

9. Keep the blower(air pump) and power cord away from water and moisture. If water contacts the blower(air pump), unplug the blower(air pump) power cord. Do not operate until the blower is completely dry.

10. Ensure the blower(air pump) is free from debris and securely sited to avoid tripping. To inflate the bouncer unit, (press the reset button on GFCI) turn the blower (air pump) "on/off" switch to on. The continual air-flow blower (air pump) must be left on at all times while the Bouncer is being used. (Refer to picture 2)

11. The Bouncer should take less than 2 minutes to inflate.

12. Ground support stakes are used for lawn ground surfaces. Hook stakes over loops in the Bouncer. To prevent overturn or lift during play, push stakes firmly into the soil. The stakes should be placed level with or under the ground in order to reduce tripping hazards. (Refer to picture 3)

13. To prevent overturning during play, periodically check that the ground stakes are securely in place. To anchor the product properly, ALWAYS anchor the product and blower with corresponding ground stakes before use.

 
14. Make sure the Bouncer is inflated fully and securely anchored before children enter to play.

15. Failure to do so will result in the product being unstable and can cause serious injuries. Use of this product when under-inflated or during deflation could cause serious injuries.

16. Always check for excessive air loss, and re-inflate before allowing play to continue. As the product remains inflated through constant air flow, air leakage from the seams is normal and necessary so the product does not over inflate.

Disassembly Instructions

1. Make sure all children exit the Bouncer.
2. Make sure the Bouncer is free of foreign objects.
3. Turn the blower (air pump) "on/off" switch to off.
4. Unplug the blower (air pump) power cord.
5. Loosen string and detach the inflatable tube from the blower.
6. Remove ground support stakes.
7. Let the Bouncer deflate entirely. It should deflate on its own within 5 minutes. (Refer to picture A)
8. Fold it in half, and then fold it in half 2 more times, parallel to the first fold. (Refer to picture B and C)
9. Tightly roll up from the opposite end of the inflation tube. (Refer to picture D and E)
10. Slip carry bag over the rolled-up Bouncer and plastic balls. (Refer to picture F)
11. Flip the bag and the Bouncer over, close the bag zipper. (Refer to picture G)
12. Store the Bouncer and the Blower in a dry place for future use.
13. Never leave either the Bouncer or the Blower outside in the rain when product is not in use.

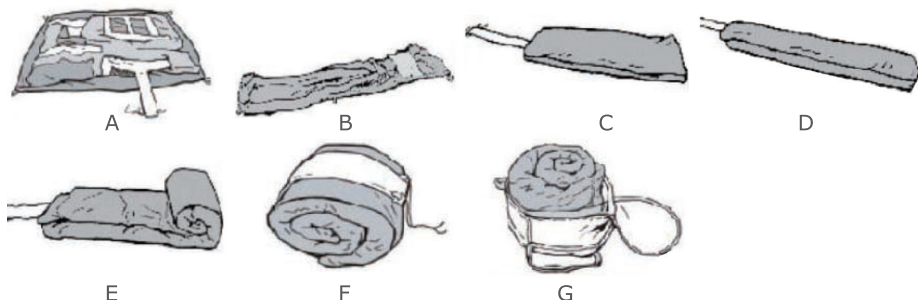

Maintenance

1. As this is an outdoor product, this inflatable bouncer is subject to wear and deterioration. Keep product properly maintained and watch for signs of fabric failure. Weak or torn surfaces must be repaired promptly.
2. Seasonal inspection and maintenance should be conducted to detect any damage to the Bouncer.
3. Tears or punctures on the jumping surface or other areas with laminated PVC materials can be repaired with the provided repair patches.
4. Areas other than these can be patched by hand with a needle and strong household thread.
5. The Bouncer can be wiped clean with a mild detergent. Keep water away from the blower (air pump) at all times. Do not store the Bouncer when wet. Store the product and the blower indoors in dry conditions when not in use.

Safety warning

1. Product is heavy. Use caution when lifting.
2. Failure to follow the specified instructions may result in serious injury.
3. Instruct children on proper use of this product. Do not use in a manner other than intended.
4. Adult installation and disassembly are required. When using an inflatable bouncer, adult supervision is always required to ensure that all play area are observed, and all activities and entrances on the bouncer are always unobstructed. Do not leave your children unattended when playing.

5.The Bouncer may not be used outside during raining and / or lightning conditions or if winds exceed 25 MPH (40km/h)

6.Sudden gusts of wind may lift the product off the ground.

The Bouncer shall be inflated with the electrical blower.

GFCI (Ground Fault Circuit Interrupter) device needs to be used. Do not use extension cord and keep the blower and power cord away from water.

7.Keep Bouncer at a safe distance (at least 2M/6.5FT) from fire, water, walls and other obstructions.

8.Ensure that there is 1.8M/6FT obstacle free zone around the product, including the slide and overhead. The maximum fall height for the inflatable products will be different according to the size of the products, for small size products, the height ranges from 35-40cm/ 14"-16" , for medium size of the products, the height ranges from 40-45cm/16"-18" , for large size products, the height ranges from 45-55cm/18"-22" . The suitable fall height will be adopted for the products according to the different size of the products.

9.Do not set up, use, or expose the Bouncer and Electric Blower to any adverse outdoor weather conditions, such as, but not limited to: rain, thunder, lightning, hail, snow, high winds, and tornadoes. Avoid setting up and operating Bouncer and Electric Blower anywhere that these products could be potentially exposed to water.

10.Do not set up the Bouncer on a slope or incline.

11.Warning: keep away from fire. Keep fabric clear from all flame and ignition sources.

12.Bouncers with slides should not be set up facing the sun as the glare may affect children sliding down.

13.The Bouncer must be fully inflated before any children are allowed inside.

14.The Bouncer must stay fully inflated until everyone is out.

15.To prevent it from overtuning or otherwise becoming a hazard, check on the Bouncer at regular intervals while in use.

16.Check stakes regularly during play to ensure they remain securely in the ground when using outdoors.

17.If the Bouncer begins to deflate, remove all children and check for disconnection of power cord or for power outage.

18.Keep children away from the blower (air pump).

19.To avoid injury, please ensure that the maximum occupancy is observed and controlled.

20.It is recommended to separate larger children from smaller children when playing with the Bouncer.

21.Ages and sizes of children playing in the Bouncer at the same time should be comparable. Not suitable for children under 3 years, small parts may be swallowed.

22. Individuals with head, neck, back or other muscular-skeletal injuries or disabilities, pregnant women, small infants and others who may be susceptible to injury from falls, bumps or bouncing are not permitted in the Bouncer.

23.To prevent choking, children may not enter the Bouncer while eating, drinking, or chewing anything in their mouth.

24.Shoes, eyeglasses, jewelry and any hard or sharp objects that may cause injury must be removed before entering the Bouncer. Loose or baggy clothing, or clothing containing long cords should not be worn whilst playing on this product. If the product comes with Mega Slide, wearing socks, long sleeves, and long trousers is needed to guarantee SAFETY.

25.Inappropriate activity is not permitted - No flipping, wrestling, running, or pushing allowed inside the Bouncer.

26.Do not bounce against the sides, near the entrance or (for models that include a slide) on the slide area.

27. Do not bounce on the edges, steps. Climbing or hanging on the walls, netting or exterior of the Bouncer is not allowed.

28. In case of injury, contact a physician immediately.

29. Do not drag on concrete or other rough surfaces.

30. The carrying bag is for packaging use only and is not a toy.

31. Unauthorised modifications to this product are not allowed.

32. Changes to the original toy shall be carried out according to the instructions of the manufacturer.

33. To reduce the risk of fire or electric shock, do not use the blower (air pump) with any solid-state speed control device.

34. Product should be regularly checked for potentially unsafe conditions such as damaged cord, plug, housing, or parts. If such damage is found, the Bouncer should not be used until properly repaired.

35. Keep pets off and away from the Bouncer and Blower. Do not attach items to the Bouncer that are not specifically designed for use with the inflatable device, such as, but not limited to, jump ropes, clotheslines, pet leashes, cables, and chains as they have the potential to cause strangulation hazard.

36. Keep the area around the product clean, and clear of objects, to prevent slips and falls.

37. Do not leave product inflated overnight.

38. Do not jump off the slide.

39. Do not grab or hang on to the arch while sliding. Doing so may damage or tear the arch and could cause injury.

 
 
40. Do not stand on the top of the slide, on the slide rails, or on the slide itself.

41. To avoid possible serious injury, the sliding path and landing area must be clear of all obstacles and other users before sliding.

42. Sit at the top of the slide with your feet pointing down the slide. Scoot forward and slide down feet first.

43. Only slide down feet first and never slide down head first to avoid the risk of a serious injury or death.

44. Children are required to slide down with proper posture (refer to the following pictures) when playing on the product with slide.

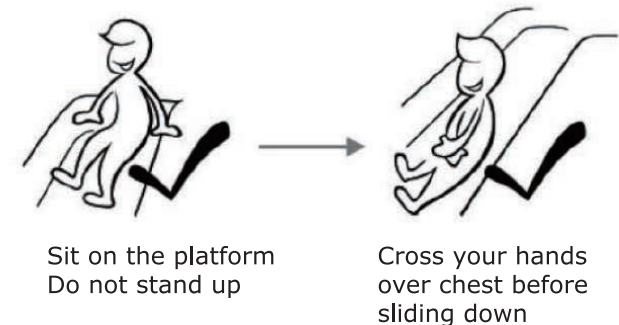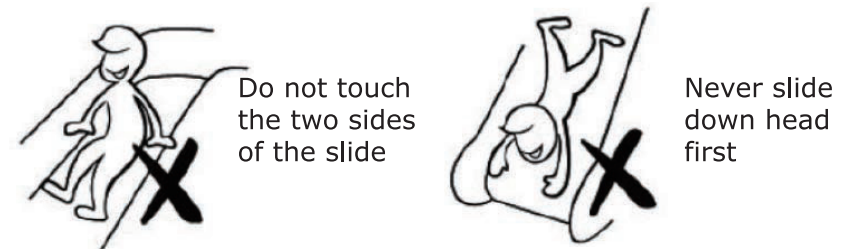

or

