

285x210mm



**TIPS:**

Your suggestions and comments for Costway are really important to us!  
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far  
February 24, 2018  
Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you  
**EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**





WHERE THERE IS COSTWAY THERE IS HOME



**USER'S MANUAL**  
**Shopping Cart**  
**TL34988BK/TL34988SL**

**Office**



**Sports**



**Decor**



**Baby**



**Electronics**



**Furniture**



**Outdoor**




**Toys**






WHERE THERE IS COSTWAY THERE IS HOME


**PRODUCT ASSEMBLY**

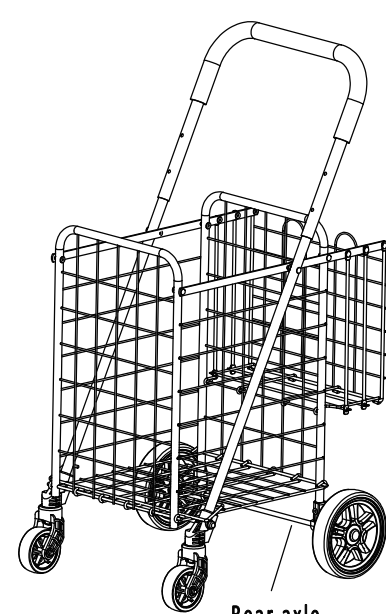

**1.**

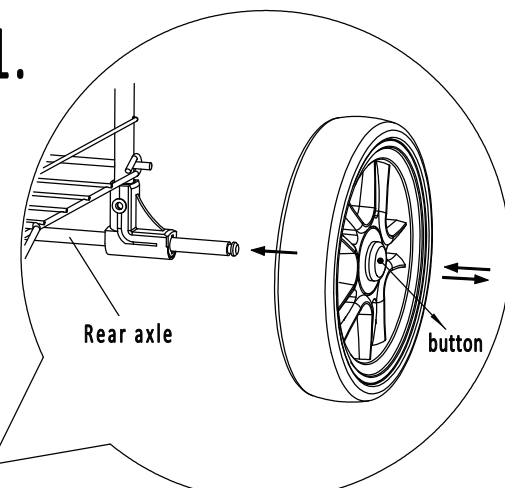

**2.**

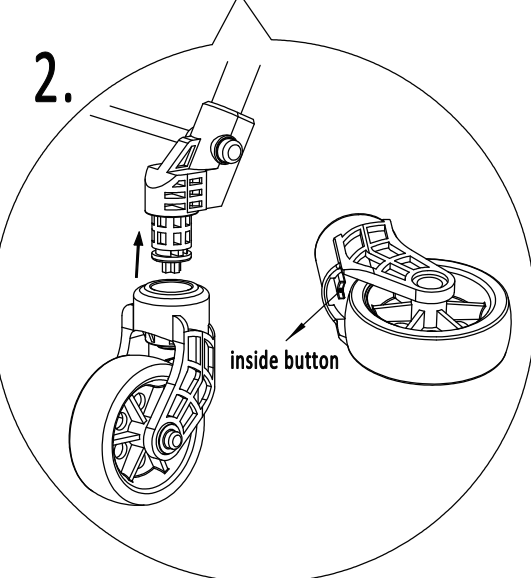

1. Once the back wheel is attached to axle, push the button in while gently pushing down then release the button and push up ensuring it snaps on.

2. Push the wheel into the front leg of cart until it "clicks" into place.

To remove the back wheels: simply push the button and slide wheels off.  
To remove the front swivel wheels: make sure push the inside button and slide wheels off.

**MADE IN CHINA**